

BMW 3-Series and Z4 (99-05) Includes 2006 325ci/330ci Coupe and Convertible models Haynes Online Manual.

5 Throttle cable - removal, installation and adjustment

Note:

On 2001 and later models, no throttle cable is used (the throttle is electronically motor-driven).

Removal

1 Unscrew the two screws, and remove the plastic cover from the top of the throttle body (see illustration).

5.1 Remove the screws and detach the cover



2 Use a pair a pliers to squeeze together the sides of the end fitting grommet, slide the grommet from the <u>throttle</u> lever and feed the cable through the slot in the lever (see illustration).

5.2 Squeeze together the sides of the grommet and push it out from the throttle lever



3 Pull the outer cable, then the rubber grommet, from the supporting bracket (see illustration).

5.3 Pull the outer cable, then the grommet, from the supporting bracket




- 4 Working inside the vehicle, release the retaining clips/screws, and withdraw the driver's side lower dash panel (see <u>Chapter 11</u>).
- 5 Disengage the inner throttle cable from the top of the throttle operating lever (see illustration).

5.5 Disengage the throttle cable end from the lever



6 Working under the dash, squeeze together the two retaining clips, and push the cable outer end fitting from the <u>firewall</u> (see illustration).

5.6 Throttle outer cable retaining clips

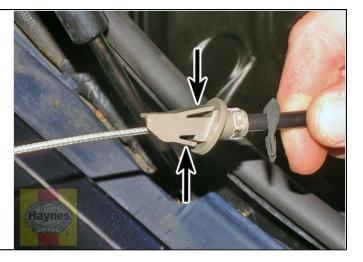

7 Note the correct routing, then free the cable from any retaining clips/grommets and maneuver it from the engine compartment.

Installation

8 Installation is a reversal of removal, ensuring that the cable is routed as before. Carry out the adjustment procedure as follows.

Adjustment

Note:

Vehicles equipped with automatic transmissions must have the throttle cable adjusted by a BMW dealer or suitably equipped specialist.

9 In order to accurately adjust the <u>throttle</u> cable, a specialized BMW diagnostic scan tool is required to establish the throttle potentiometer position expressed as a percentage. However, the basic position for manual transmission models can be established as follows, providing that a BMW dealer or suitably equipped specialist checks the setting afterwards.

- 10 Check that the accelerator pedal and throttle are in the idle position.
- 11 Rotate the knurled cable adjustment sleeve on the outer cable to eliminate freeplay in the cable.
- 12 Screw the sleeve a quarter of a turn to allow a little freeplay in the cable.
- 13 Have an assistant fully depress and hold the accelerator pedal, check that there is still 0.020-inch (0.5 mm) of <u>freeplay</u> at the <u>throttle</u> valve in the <u>throttle body</u>.

14 If necessary, turn the pedal full- throttle stop (screwed into the floor) to give the correct amount of <u>freeplay</u>. On some models, it will be necessary to loosen a locknut before the stop can be adjusted.

© 2024 Haynes Manuals, Inc. Contact us