Bill Acceptor
WBA-14/15-SS3B
WBA-24/25-SS3B

CHAPTER 8

Contents

Exploded View & Parts List

1. Entire unit
2. Acceptor unit
3. Transport unit
4. Frame unit
5. Cash box unit


Issue 2004-03

JAPAN CASHMACHINE CO., LTD.

Copyright © 1998-2004 Japan Cash Machine Co.Ltd. All rights reserved.

1. Entire unit

Exploded View

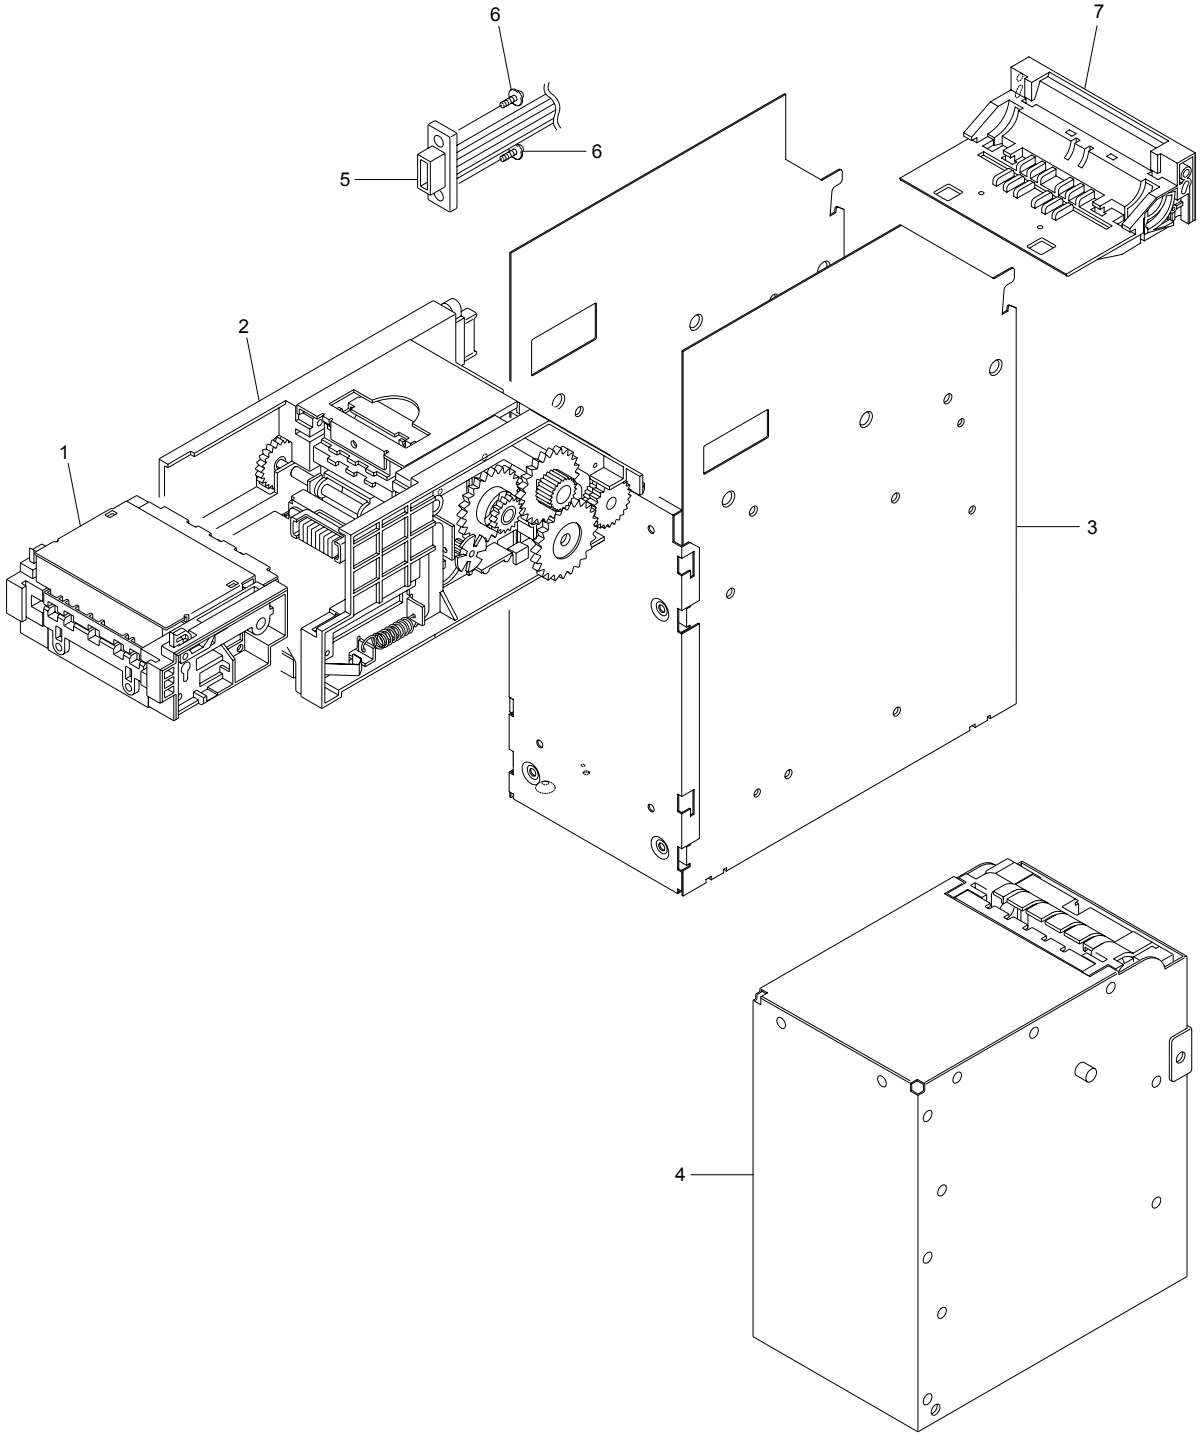


Parts List

No.	EDP No.	Parts No.	Description	Remarks
1	094288		N-SKD/WBA-SS2 ACCEPTOR UNIT IND	
2	096414		N-SKD/WBA-SS3B TRANSPORT UNIT NEW	
3	093889		WBA-SSB FRAME UNIT	
4	093891		WBA-SS2B CASH BOX(1000) UNIT	
5	062897		843-05-03 REMOVAL CONNECTOR	
6	046996		M3 X 10 SCREW WITH WASHER	
7	097430		WBA-SS TRANSPORT BASE ASSY	


2. Acceptor unit

Exploded View (1x Acceptor Head)

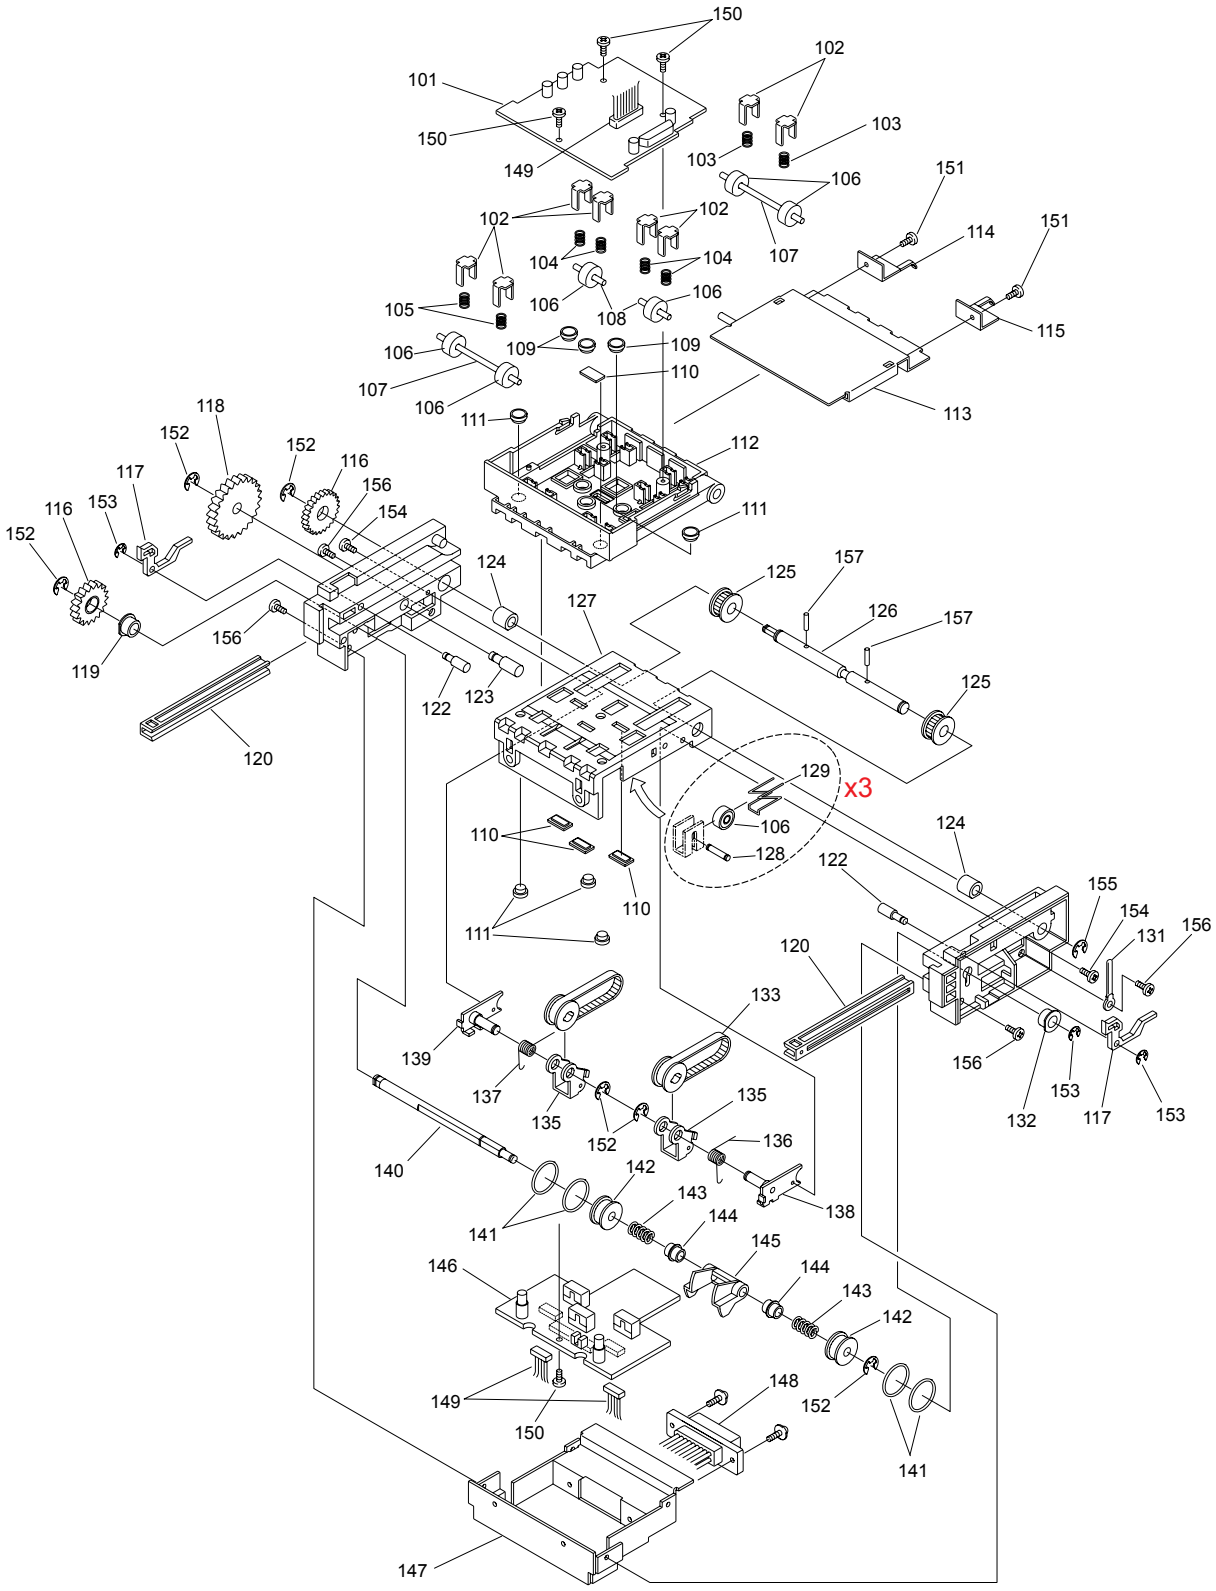

2. Acceptor unit

Exploded View (2x Acceptor Head)

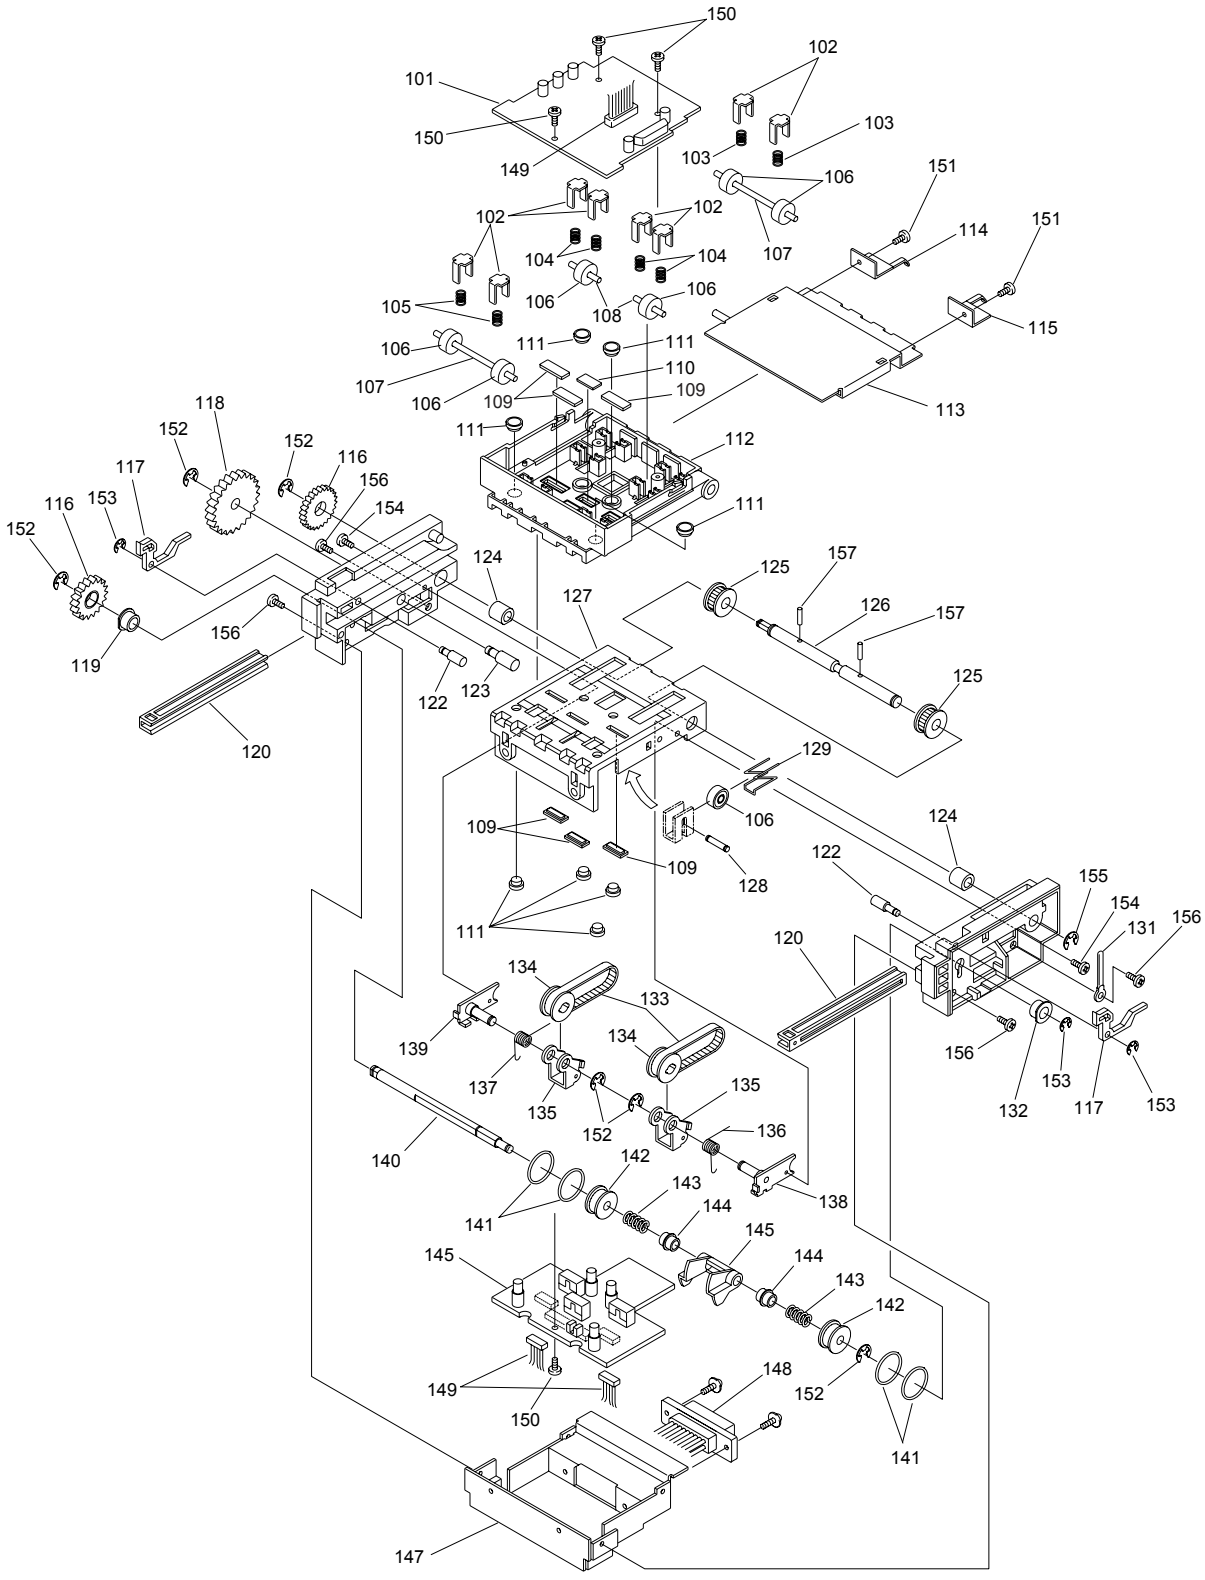


Parts List


No.	EDP No.	Parts No.	Description	Remarks
101	070161	HK-943-840-06-03B-01	SENSOR	
102	052518	0943RE0118	SP STOPER	
103	052637	0943CS0101	TR SPRING	
104	026082	CS-7V01	HEAD ROLLER SPRING	
105	052639	0943CS0103	TR SPRING 2	
106	052522	0943RE0126A	VH ROLLER	
107	052589	0943SH0104A	P ROLLER SHAFTL	
108	052590	0943SH0105A	P ROLLER SHAFTS	
109	040343	RE-7AJ03	REFLECTIVE SENSOR LENS	
110	040343	RE-7AJ03	REFLECTIVE SENSOR LENS	
111	040342	RE-7AJ04A	SENSOR BUSH (dia.5)	
112	054623	0943RE0101E	GUIDE A (FOT)	
113	052466	0943PT0102B	V TOP COVER	
114	053623	0943PT0109C	EARTH PLATE SPRING L	
115	053624	0943PT0108C	EARTH PLATE SPRING R	
116	026105	RE-7V07	GEAR (1)	
117	052517	0943RE0117	CATCH	
118	052516	0943RE0115	GEAR VH	
119	052512	0943RE0111	BUSH dia.5	
120	070728	0664RE0101	BILL GUIDE 82	
121	052506	0943RE0102C	GUIDE B	
122	052593	0943ST0103A	CATCH STUD	
123	052592	0943ST0101A	GEAR STUD	
124	052508	0943RE0107	BUSH A	
125	052514	0943RE0113A	PULLEY W5 A	
126	070745	0664SH0101A	VM SHAFT	
127	054624	0943RE0104C	GUIDE D (FOT)	
128	052591	0943SH0107A	HD ROLLER SHAFT	
129	052657	0943KS0103D	HDR SPRING	
130	052507	0943RE0103C	GUIDE C	
131	045854	CS-1	COATING CLIP	
132	052513	0943RE0112	BUSH dia.3	
133	052585	45MXL4.8V	TIMING BELT	
134	052515	0943RE0114A	PULLEY W5 B	
135	053634	0943AS0102B	ROLLER GUIDE AS	
136	070760	0664KS0101	VT SPRING R	
137	070763	0664KS0102	VT SPRING L	
138	070761	0664AS0102	G FIT PLATE R AS	
139	070764	0664AS0101	G FIT PLATE L AS	
140	052587	0943SH0101A	OL ROLLER SHAFT	
141	081620		O RING P11(EPDM70)	
142	052509	0943RE0108	OL ROLLER	
143	052638	0943CS0102	VL SPRING	
144	052511	0943RE0110	SPRING COLLAR A	
145	052510	0943RE0109A	LEVER VH	
146	092833	HK-943-840-06-02D-01	(UNDER)	
147	052465	0943PT0101A	V UNDER COVER	
148	052676	840-05-02A	RELAY HARNESS2	
149	054618	840-05-16A	SENSOR HARNESS(OP TYPE)	
150	055413		2.6X6 BIND P TIGHT (BLACK)	
151	023755		2.6X4 SCREW WITH WASHER	
152	003707		ERING dia.3 SUS	
153	003705		ERING dia.2 SUS	
154	054706		2.6X7 SCREW WITH WASHER	
155	003708		ERING dia.4 SUS	
156	046975		3X6 SCREW WITH WASHER	
157	038938		2X10 PARALLEL PIN	

3. Transport unit


Exploded View 1

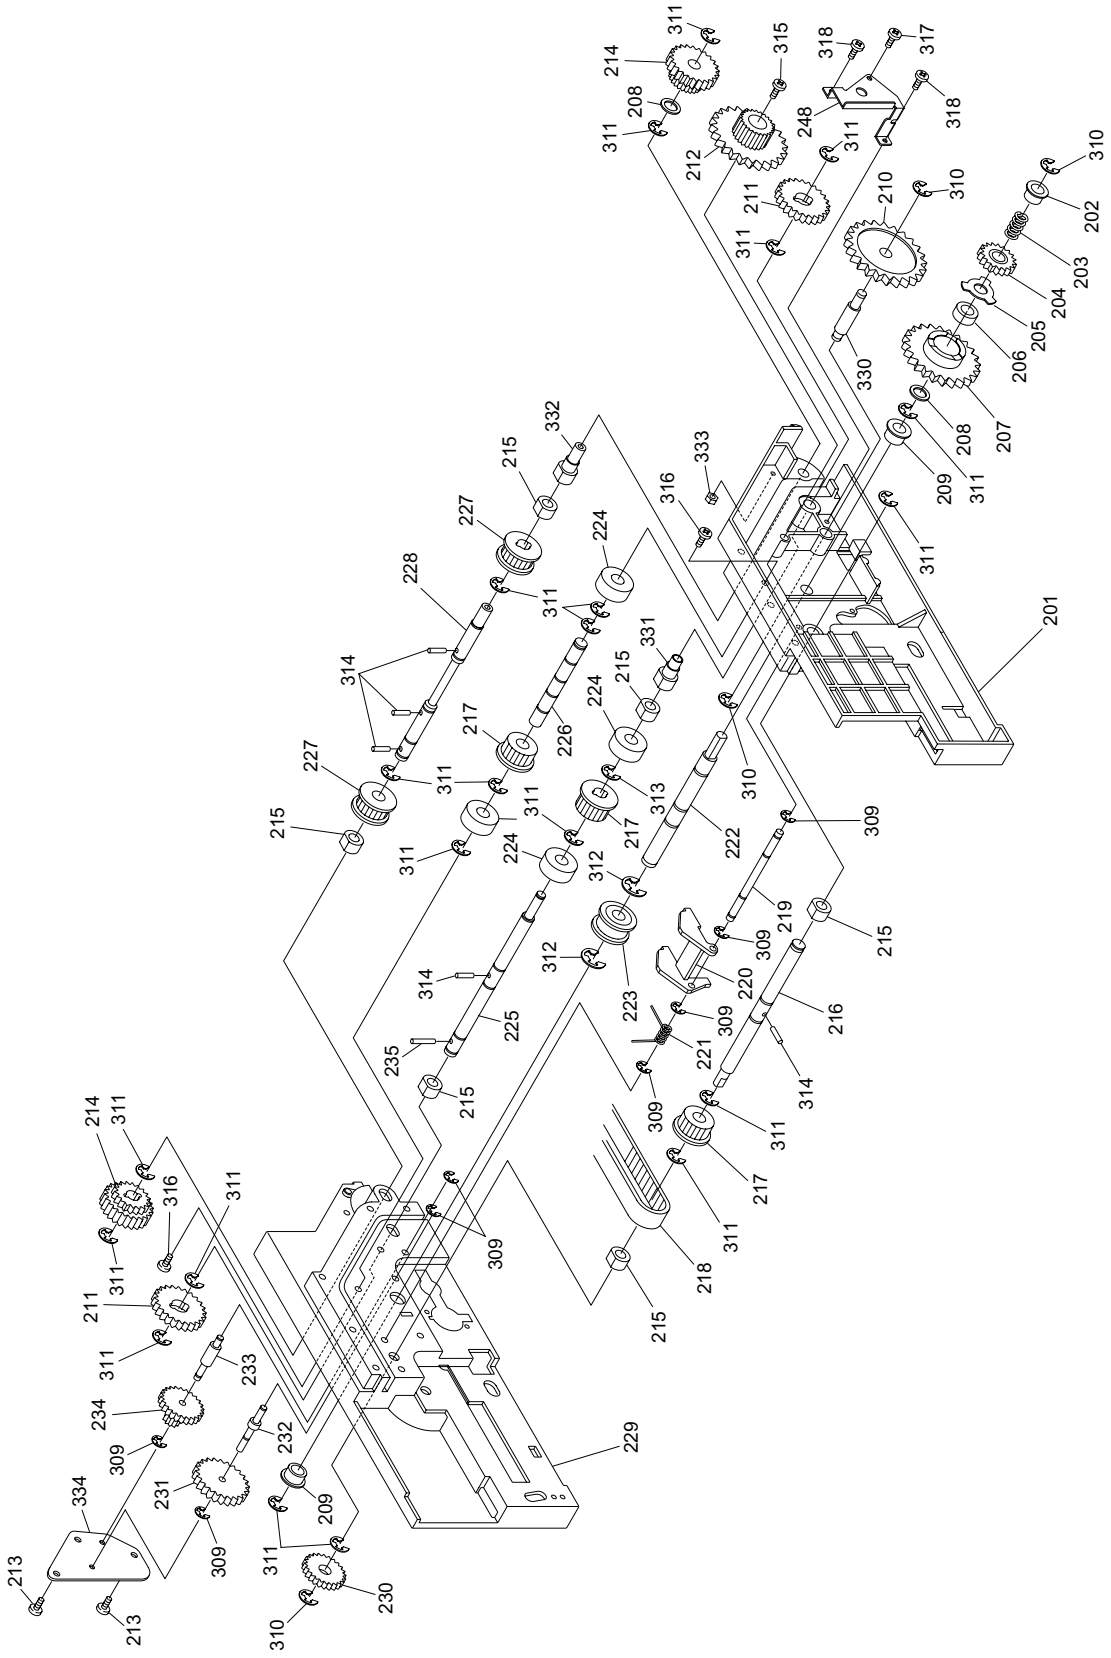

Exploded View 2

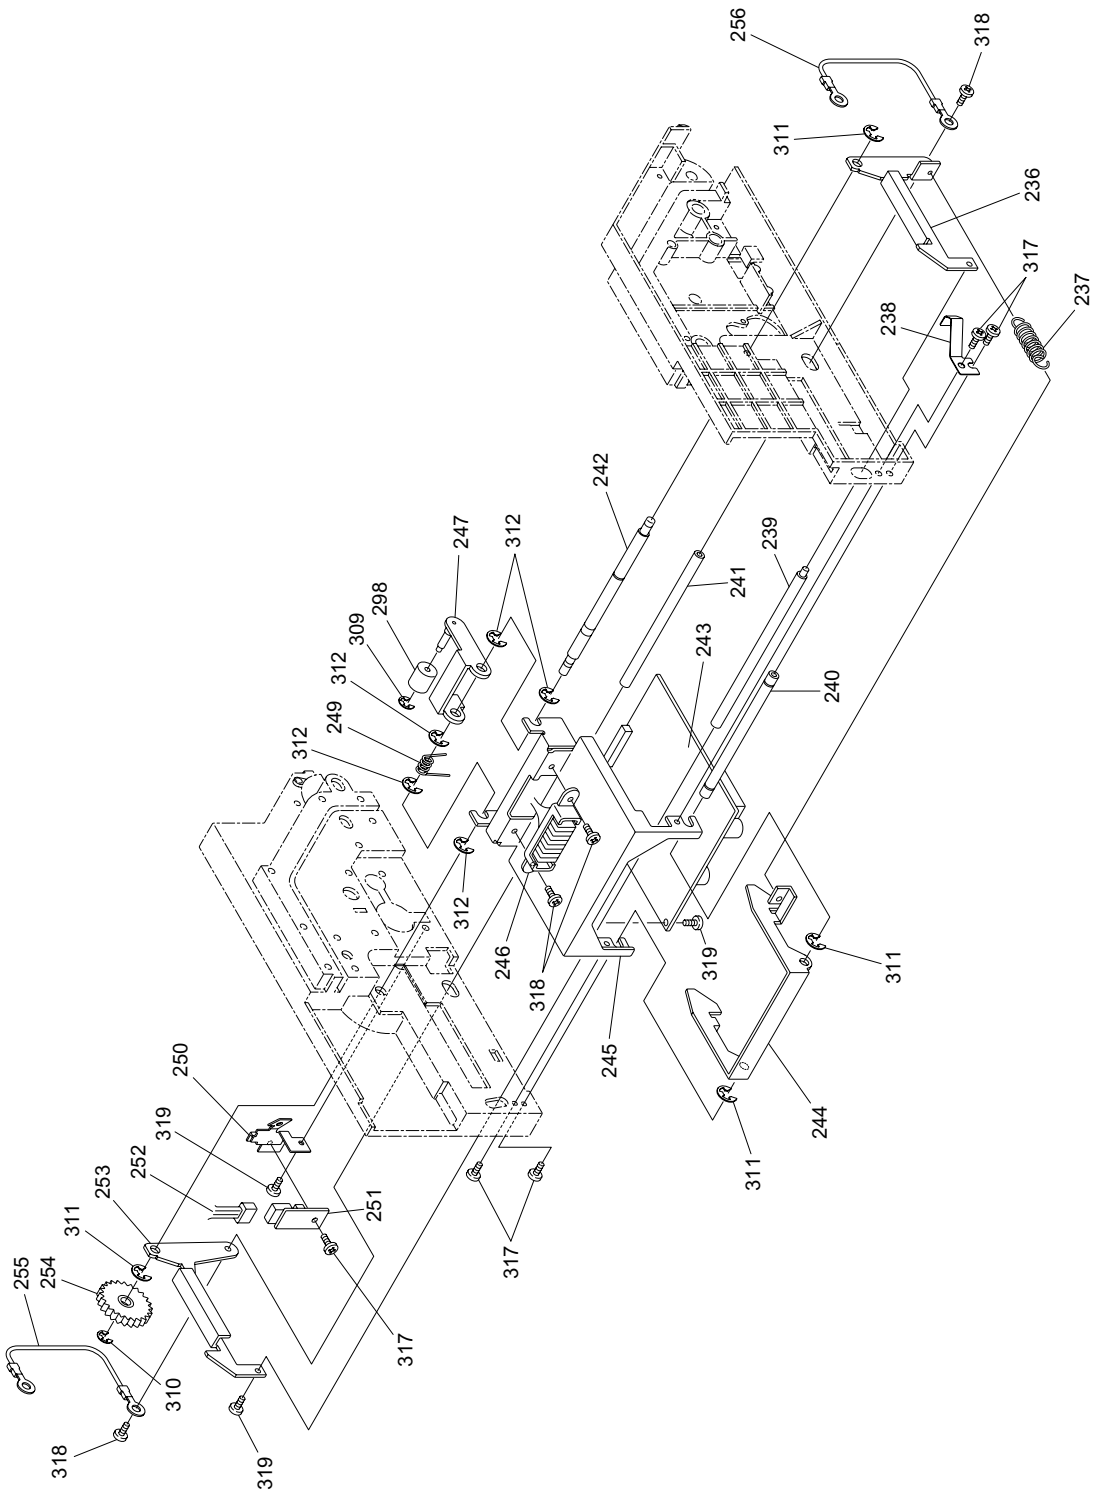

Exploded View3

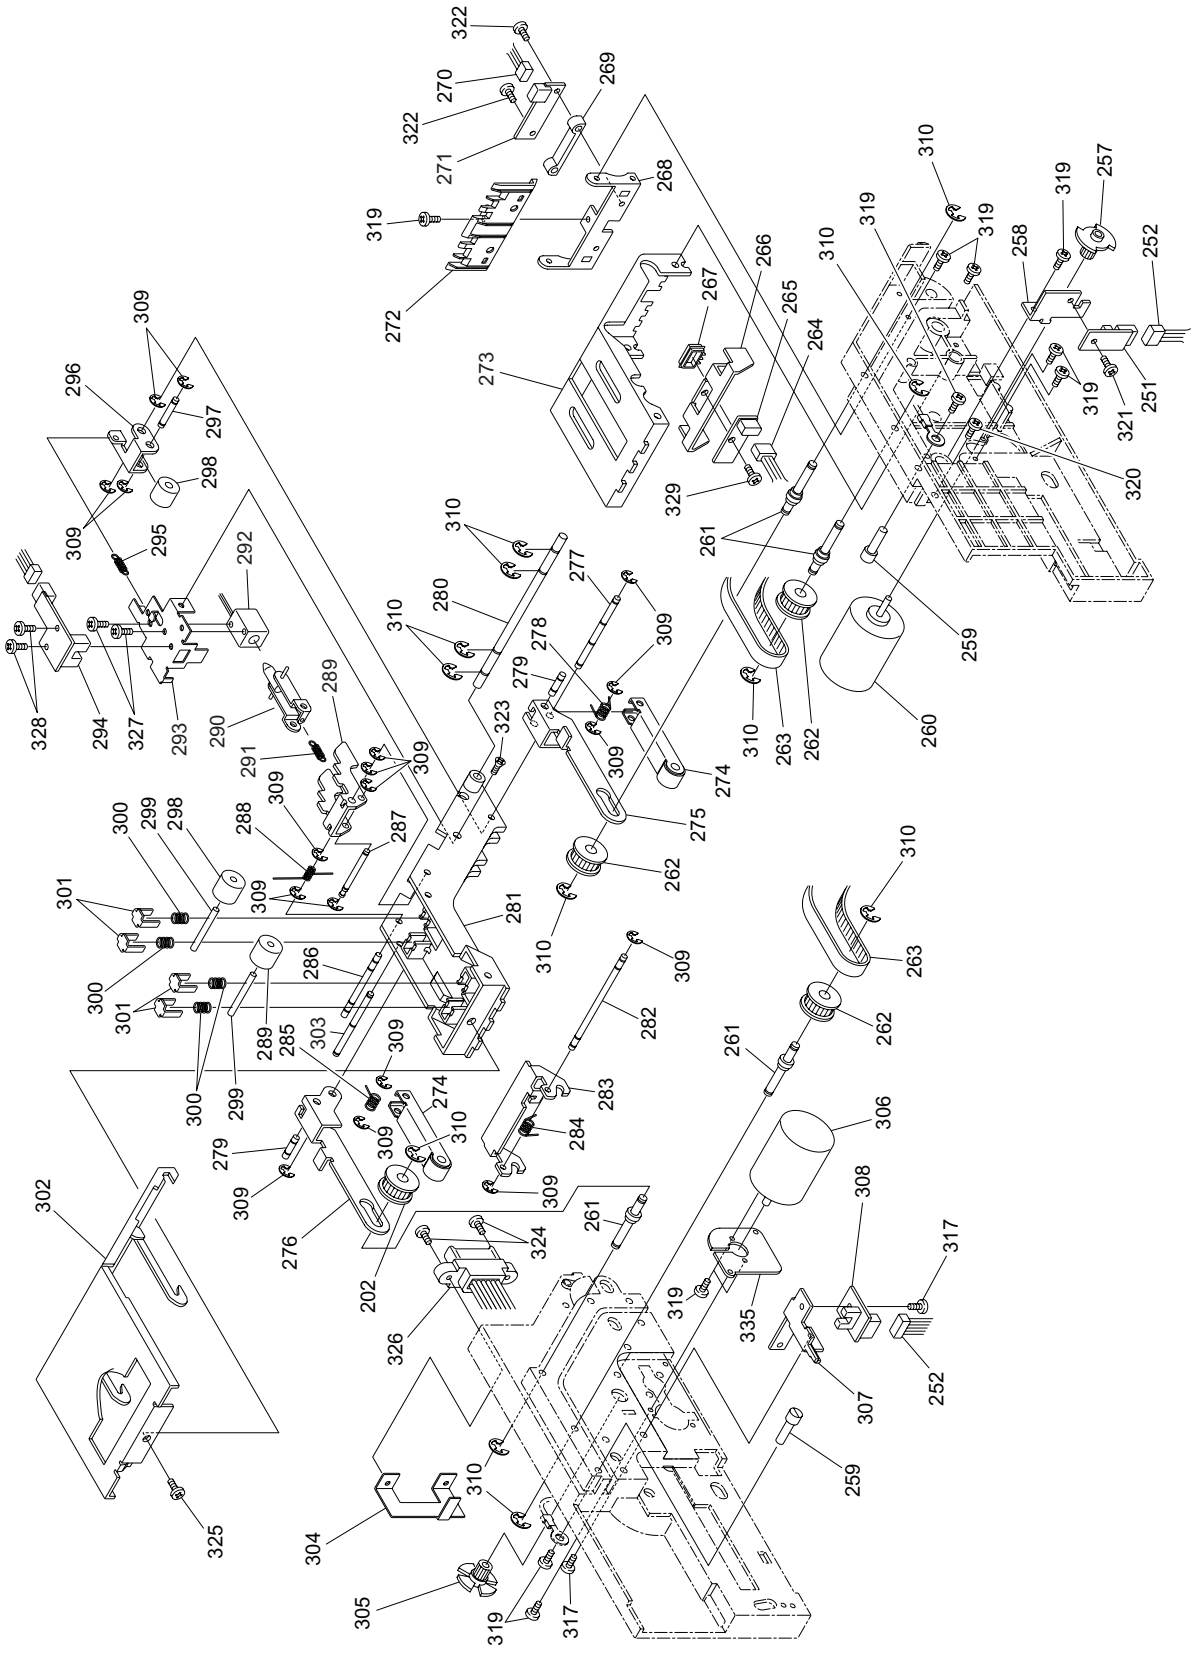


No.	EDP No.	Parts No.	Description	Remarks
201	094143	4038AS0204	T GUIDE B3 ASSY	
202	052533	0943RE0208A	SPRING COLLER B	
203	070721	0664CS0201	G SPRING	
204	034853	REO-08	GEAR	
205	052485	0943PT0219B	GEAR W PLATE	
206	092824	OWC612GXRZ	MINI ONE WAY CLUTCH	
207	092864	0943RE0230	GEAR OV (N)	
208	052487	0943PT0221	W PLATE 0.6	
209	052561	0943RE0508	BUSH dia.6B	
210	070736	0664RE0203	ST GEAR 2 82	
211	052537	0943RE0212	ST TR GEAR 1	
212	070735	0664RE0202	ST GEAR 1 82	
213	063250		2.6X6 BINDING P TIGHT	
214	052539	0943RE0214	ST TR GEAR 2	
215	094281	MR106ZZS	BEARING(STAINLESS)	
216	052595	0943SH0202B	F PULLEY SHAFT	
217	034850	REO-05	PULLEY	
218	052586	126MXL9.5V	TIMING BELT	
219	052600	0943SH0207A	FIN L SHAFT	
220	052545	0943RE0225A	LEVER	
221	052645	0943KS0207	FIN SPRING	
222	070753	0664SH0203A	GEAR SHAFT	
223	052540	0943RE0216	V ROLLER 2	
224	052535	0943RE0210B	T ROLLER	
225	094282	4038SH0201	PULLEY SHAFT1 S3	
226	052612	0943BE0204C	TR PULLEY BEAM	
227	052514	0943RE0113A	PULLEY W5 A	
228	094283	4038SH0202	PULLEY SHAFT2 S3	
229	094142	4038RE0201	T GUIDE A3	
230	026105	RE-7V07	GEAR (1)	
231	052542	0943RE0219	TR GEAR 2	
232	094286	4038ST0201	TR GEAR STUDA S3	
233	059784	0943ST0210A	ST GEAR STUD 4	
234	052544	0943RE0224B	TR GEAR 3	
235	052606	0943SH0214	GEAR PIN	
236	052473	0943PT0204B	VU CATCH R	
237	052647	E-633	SPRING (NO.2149)	
238	052491	0943PT0226B	SP PLATE	
239	052609	0943BE0201A	V CATCH BEAM	
240	052610	0943BE0202B	TR CATCH BEAM	
241	052611	0943BE0203A	V CATCH BEAM 2	
242	052594	0943SH0201B	CATCH SHAFT	
243	070730		664-843-06-08-01 25CPU EPRO	
244	052474	0943PT0205B	TRU CATCH	
245	052467	0943AS0202D	PCB COVER AS	
246	052675	840-05-01A	RELAY HARNESS	
247	052471	0943AS0205	VP ARM TR2 ASSY	
248	094146	4038PT0203	BOX G BLK	
249	052644	0943KS0206	SVT SPRING C	
250	052476	0943PT0207C	TR P HOLDER	
251	052671		KI980-JC	
252	052680	840-05-06	STACKER SENSOR HARNESS 1	
253	052472	0943PT0203B	VU CATCH L	
254	052541	0943RE0218	TR GEAR 1	
255	053677	840-05-12	FG HARNESS1	
256	053678	840-05-13	FG HARNESS2	
257	052543	0943RE0222A	GEAR STMO	
258	052477	0943PT0208A	ST P HOLDER	
259	096404	0943ST0203C	CATCH STUD	
260	070731	664-840-05-04A-01	TRANSPORT MOTOR	
261	052613	0943ST0202B	PULLEY STUD	

No.	EDP No.	Parts No.	Description	Remarks
262	052515	0943RE0114A	PULLEY W5 B	
263	052584	144MXL4.8V	TIMING BELT	
264	052681	840-05-07	STACKER SENSOR HARNESS2	
265	052670		KR979-JC	
266	052478	0943PT0210B	F OUT S HOLDER	
267	052532	0943RE0207A	RE SENSER COVER	
268	094280	4038PT0204	B STOPER PLATE82	
269	052530	0943RE0205A	SPACER	
270	052682	840-05-08	STACKER SENSOR HARNESS3	
271	052673		KI982-JC	
272	052664	0943RE0221E	F OUT GUIDE	
273	096406	0943RE0203E	T GUIDE C	
274	053635	0943AS0204D	VP ARM TR ASSY	
275	052489	0943PT0223A	STOPPER R	
276	052488	0943PT0222B	STOPPER L	
277	052605	0943SH0213A	PR ARM SHAFT	
278	052641	0943KS0203	SVT SPRING R	
279	052608	0943SH0216A	VP ARM PIN	
280	052599	0943SH0206A	TR GD SHAFT	
281	096407	0943RE0204F	T GUIDE D	
282	052601	0943SH0209A	C CATCH SHAFT	
283	052481	0943PT0215B	COVER CATCH	
284	052643	0943KS0205	TRC SPRING	
285	052642	0943KS0204	SVT SPRING L	
286	052603	0943SH0211B	SOL LEVER SHAFT	
287	052602	0943SH0210B	SOL L SHAFT	
288	052640	0943KS0201	SOL SPRING	
289	058120	0943PT0234B	SOL LEVER 2	
290	058121	0943AS0206A	SOL LINK ASSY	
291	058117	0943TS0201	LINK SPRING 10GF	
292	058206		943-840-05-09A-02	
293	058119	0943PT0235A	SOL HOLDER 2	
294	058205		KI1044-JC	
295	052656	E-601	E-601 SPRING (NO.2069)	
296	052479	0943PT0212A	PR ARM	
297	052604	0943SH0212A	PR ROLLER PIN	
298	034851	REO-06B	ROLLER	
299	052607	0943SH0215	ROLLER PIN	
300	052637	0943CS0101	TR SPRING	
301	052518	0943RE0118	SP STOPER	
302	052468	0943AS0203B	TR COVER ASSY	
303	058118	0943SH0217A	SOL LEVER SHAFT	
304	052490	0943PT0224A	CN STOPER	
305	052534	0943RE0209A	GEAR MO	
306	070733	664-840-05-05A-01	STACKER MOTOR	
307	052480	0943PT0214A	FIN S HOLDER	
308	052674		KI1102-JC	
309	003705		ERING dia.2 SUS	
310	003707		ERING dia.3 SUS	
311	003708		ERING dia.4 SUS	
312	003709		ERING dia.5 SUS	
313	003719		5103-21 CS TYPE SNAP RING	
314	038938		2X10 PARALLEL PIN	
315	014915		2.6X5 SCREW WITH WASHER	
316	053008		3X6 TP SCREW	
317	046975		3X6 SCREW WITH WASHER	
318	003611		3X8 SCREW WITH WAHSHER	
319	005555		2.6X6 SCREW WITH WASHER	
320	055370		3X10 P TIGHT	
321	006014		3X4 PAN HEAD	
322	005582		2.6X8 PAN HEAD	

No.	EDP No.	Parts No.	Description	Remarks
323	006021		2.6X4 FLAT HEAD VIS	
324	046996		3X10 SCREW WITH WASHER	
325	005332		3X5 FLAT HEAD VIS	
326	060436	843-05-01	REMOVALE CONNECTOR	
327	005683		2X4 SCREW WITH WASHER	
328	003585		2.6X4 SCREW WITH WASHER	
329	061331		2.6X6 PAN HEAD	
330	070756	0664ST0201ST	GEAR STUD 2 82	
331	094284	4038BU0201	ST GEAR BUSH1 S3	
332	094285	4038BU0202	ST GEAR BUSH2 S3	
333	014189		M3 FLANGE NUT	
334	094144	4038PT0201	G GUIDE SS	
335	094145	4038PT0202	MOTOR SPACER	

4. Frame unit


Exploded View

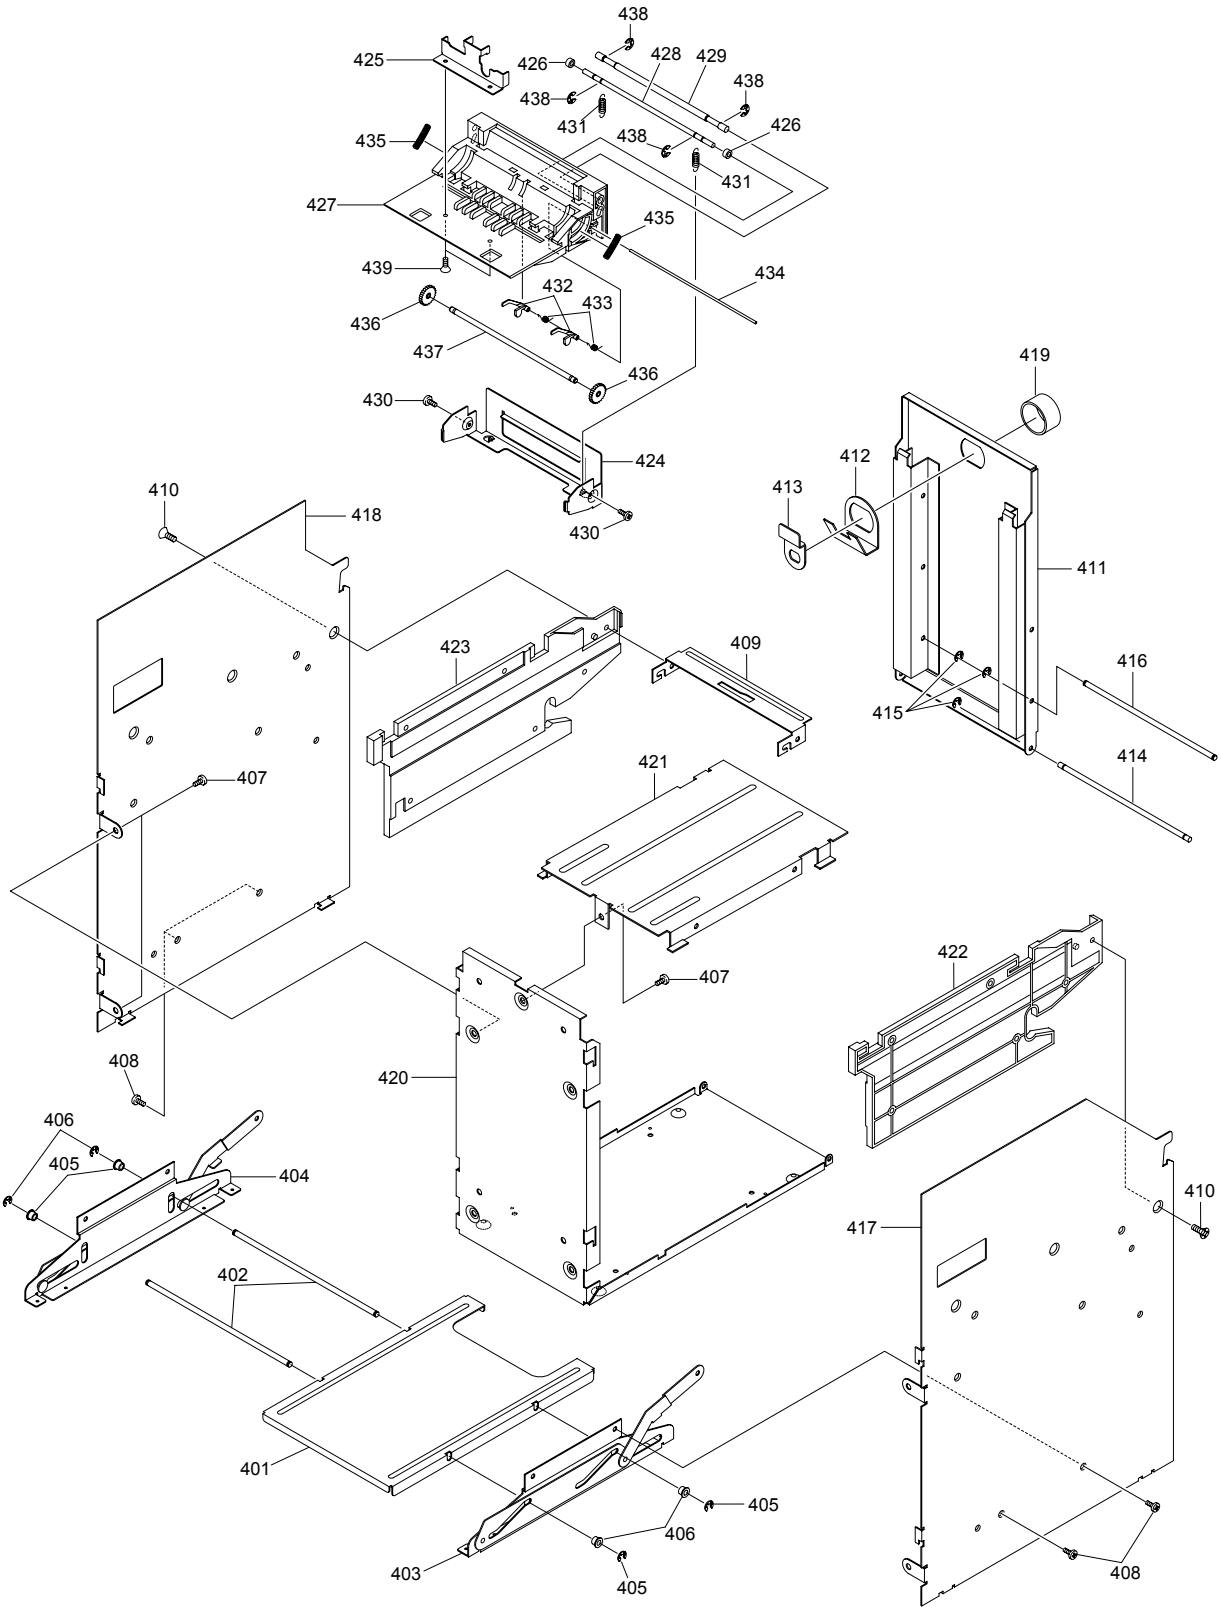


No.	EDP No.	Parts No.	Description	Remarks
401	093868	4027PT0108	SSB BOX BASE	
402	093877	4027SH0102	SSB BOX BASE SHAFT	
403	093862	4027AS0101	SSB CRANK R ASSY	
404	093863	4027AS0102	SSB CRANK L ASSY	
405	093878	4027RO0101	SSB BOX BASE ROLLER	
406	003706		E RING 2.5 SUS	
407	005332		3X5 FLAT HEAD VIS CM	
408	025205		3X5 BINDING CR	
409	093870	4027PT0110A	SSB LOCK BRACKETING	
410	003600		3X5 PAN HEAD SCREW	
411	093864	4027AS0103	SSB DOOR ASSY	
412	093875	4027PT0117	SSB LOCK COVER	
413	093873	4027PT0115	SSB TONGUE	
414	093884	4027SH0106	SSB DOOR FULCRUM SHAFT	
415	003707		E RING	
416	093876	4027SH0101	SSB DOOR SHAFT	
417	093865	4027PT0101B	SSB FRAME R	
418	093866	4027PT0102B	SSB FRAME L	
419	039398		CO22-7T01 SLEEVE	
420	093867	4027PT0103A	SSB DOWN BASE	
421	093869	4027PT0109A	SSB TRANSFER UNIT BASE	
422	093860	4027RE0102A	SSB SIDE PLATE R	
423	093861	4027RE0103A	SSB SIDE PLATE L	
424	093871	4027PT0113	SSB TRANSFER UNIT LEVER	
425	093874	4027PT0116	SSB BRACKET	
426	052192		4X2 SPACER	
427	093859	4027RE0101	SS TRANSFER UNIT	
428	093879	4027SH0103A	SSB LEVER SHAFT	
429	093881	4027SH0104A	SSB TRANSFER UNIT SH	
430	058274		2.6X5 TAPPING P TIGHT	
431	018079		E-629 SPRING(NO.2097)	
432	052548	0943RE0303B	BOX LEVER	
433	052650	0943KS0301	FL SPRING	
434	052621	0943SH0302B	BOX LEVER SHAFT	
435	052648	0943CS0301A	FG SPRING	
436	077566	0664AS0301	STAND GEAR 82NEO	
437	093883	4027SH0105	S GEAR SHAFT	
438	003707		ERING dia.3 SUS	
439	005332		3X5 FLAT HEAD VIS	

5. Cash box unit

Exploded View 1

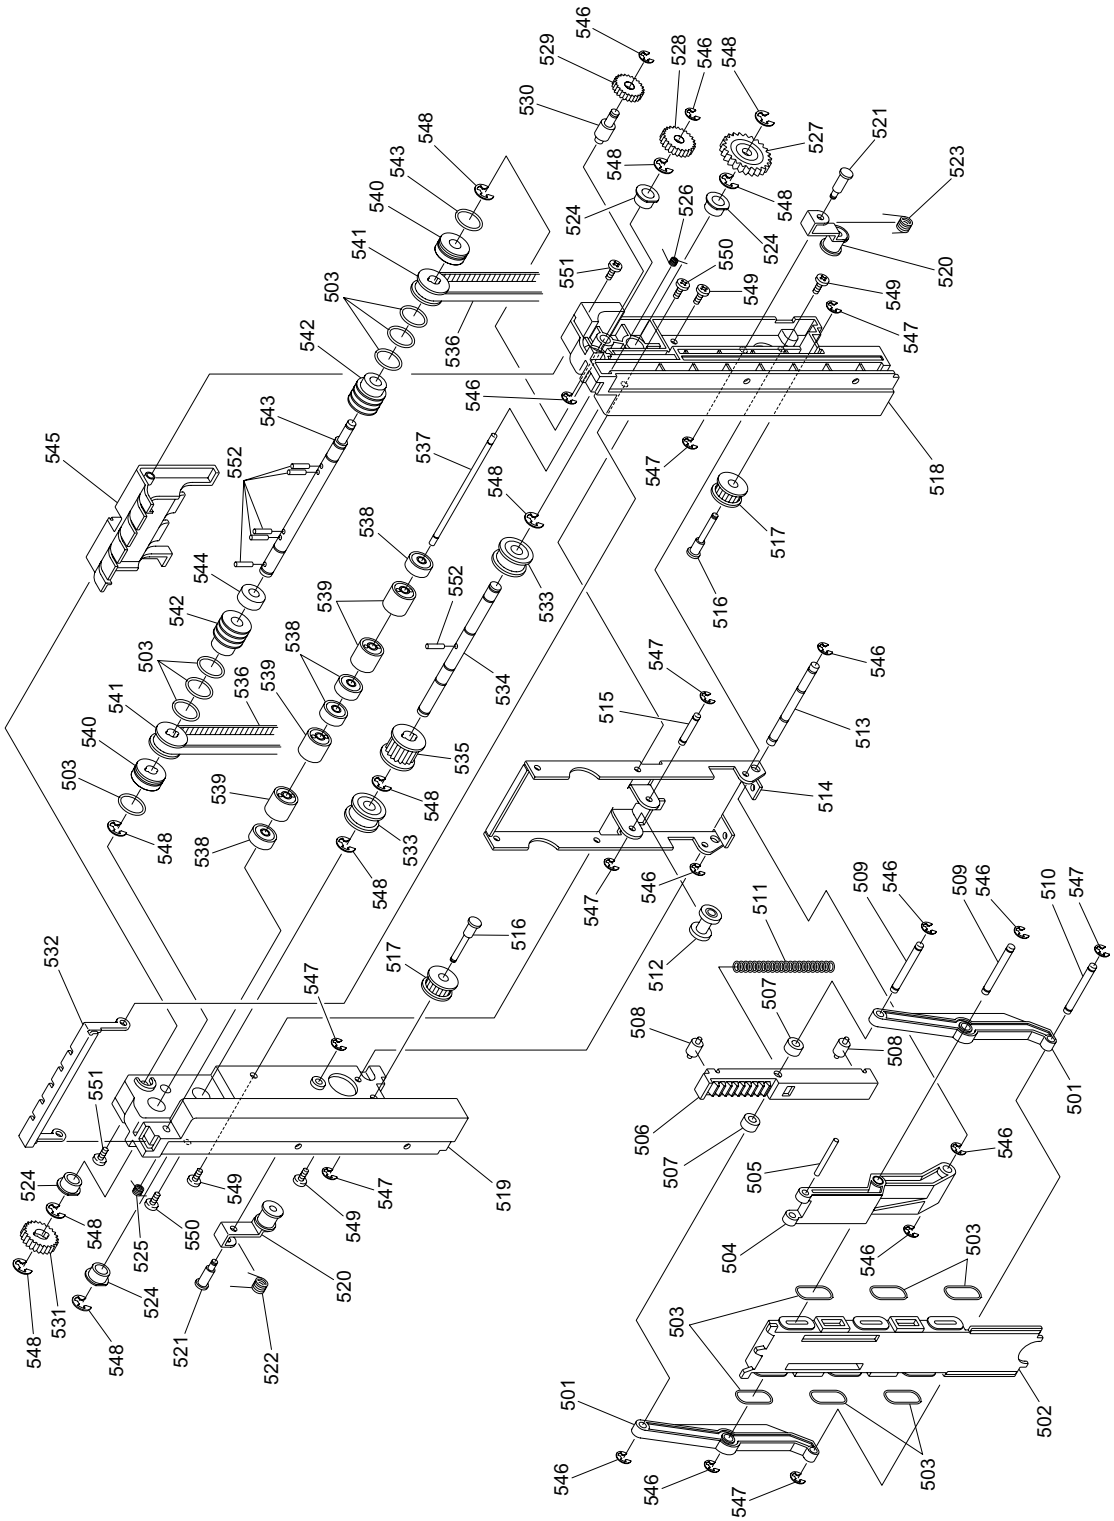

Exploded View 2

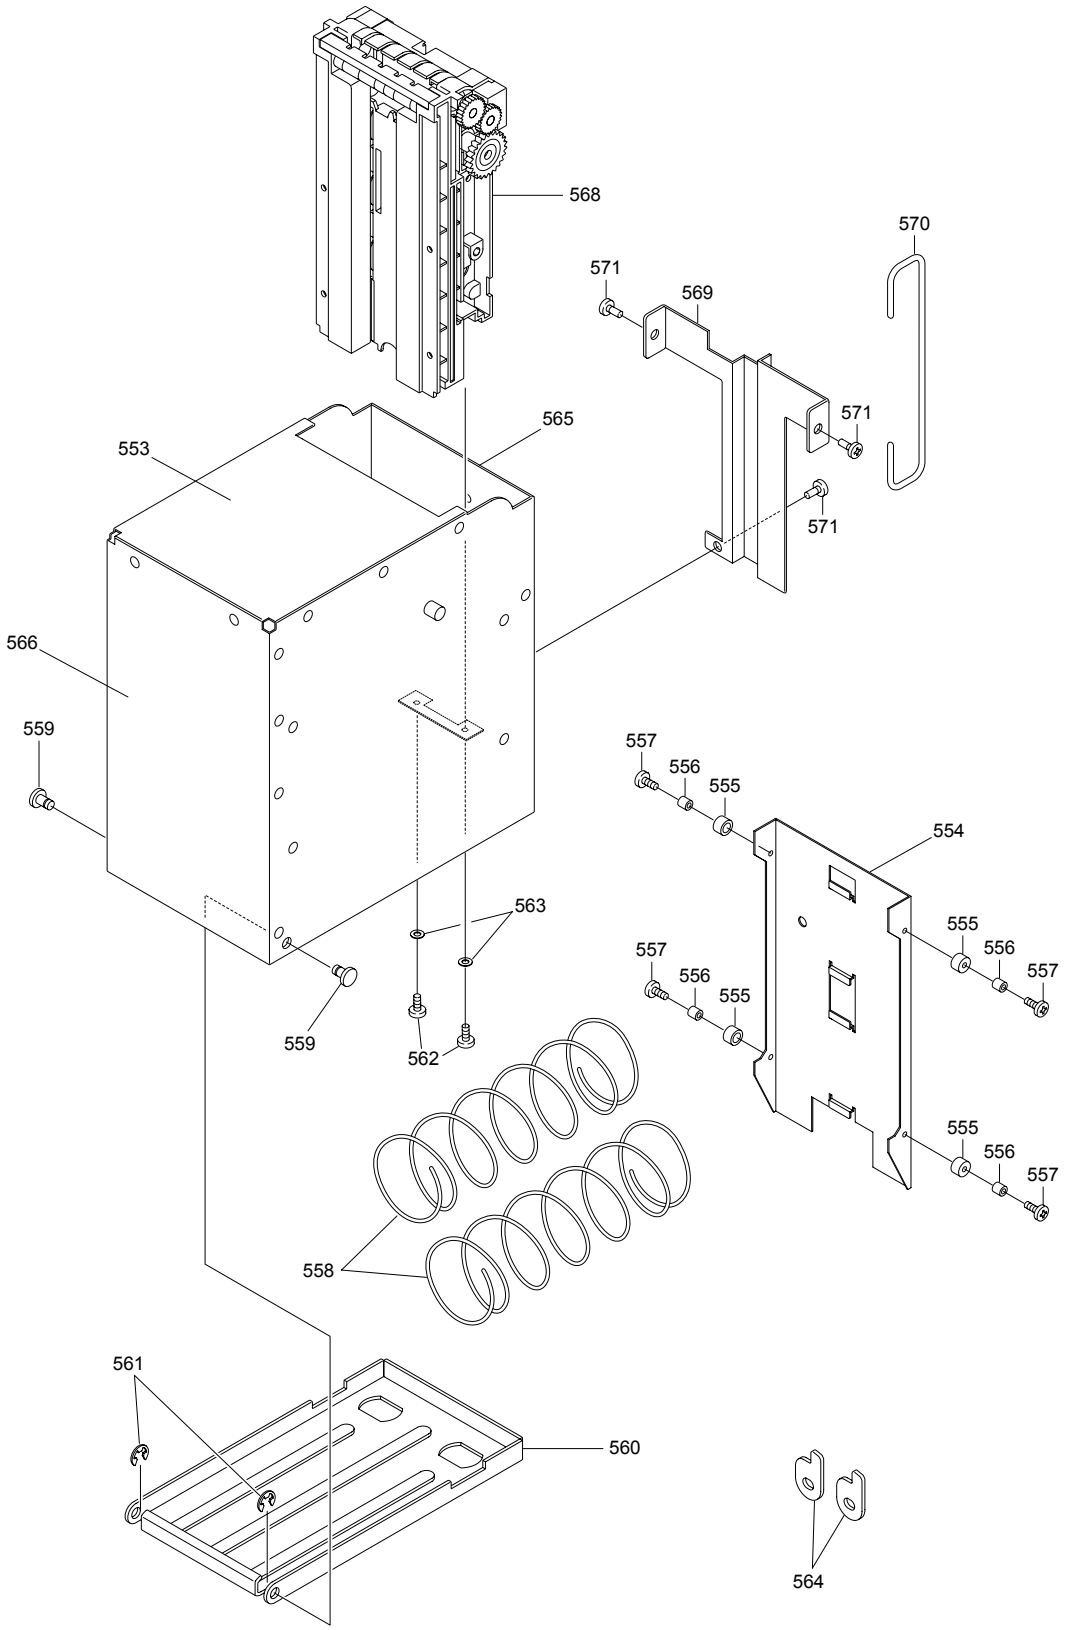

Parts List

No.	EDP No.	Parts No.	Description	Remarks
501	070741	0664RE0504	PUSH LINK 2 82	
502	070740	0664RE0503A	PUSH PLATE 82	
503	081620		O RING P11(EPDM70)	
504	052557	0943RE0504B	PUSH LINK 1	
505	070749	0664SH0504	U ARM PIN 82	
506	052560	0943RE0507C	PU RUCK	
507	052580	0943RE0515B	ARM ROLLER 1	
508	052631	0943BE0502A	R RO PIN	
509	070748	0664SH0503	U R SHAFT 82	
510	070750	0664SH0505	L ARM SHAFT 82	
511	052651	0943CS0501	PU SPRING	
512	052579	0943RE0514C	R GUIDE ROLLER	
513	052628	0943SH0506A	L ARM SHAFT	
514	052503	0943PT0501E	PU BASE	
515	052626	0943SH0504A	G RO SHAFT	
516	052634	0943ST0504A	PULLEY STUD	
517	052515	0943RE0114A	PULLEY W5 B	
518	070739	0664RE0502	PU GUIDE R 82	
519	070738	0664RE0501	PU GUIDE L 82	
520	053633	0943AS0501A	B VP ARM ASSY	
521	052633	0943ST0502B	ARM STUD	
522	052653	0943KS0502	PVT SPRING L	
523	052652	0943KS0501	PVT SPRING R	
524	052561	0943RE0508	BUSH dia.6B	
525	052654	0943KS0503	PR SPRING R	
526	052655	0943KS0504	PR SPRING L	
527	052582	0943RE0518C	PU GEAR 2	
528	052547	0943RE0302	STAND GEAR	
529	052581	0943RE0517	PU GEAR 1	
530	052632	0943ST0501A	GEAR STUD	
531	018184	SBC-0216	GEAR (Z16)	
532	052504	0943PT0502B	PR COVER	
533	052578	0943RE0512B	V ROLLER	
534	070747	0664SH0502	GEAR SHAFT 82	
535	052563	0943RE0510C	RUCK GEAR	
536	052583	150MXL4.8V	TIMING BELT	
537	052625	0943SH0503A	ROLLER SHAFT	
538	026108	RE-7V10	ROLLER	
539	034851	REO-06B	ROLLER	
540	052562	0943RE0509B	B OL PULLEY	
541	052514	0943RE0113A	PULLEY W5 A	
542	034849	REO-04	PULLEY	
543	070746	0664SH0501	PULLEY SHAFT 82	
544	052577	0943RE0511A	PULLEY COLLAR	
545	052558	0943RE0505G	PU COVER	
546	003707		ERING dia.3 SUS	
547	003705		ERING dia.2 SUS	
548	003708		ERING dia.4 SUS	
549	005555		2.6X6 SCREW WITH WASHER	
550	026071		2.6X8 TAPPING NO.2 CLASS	
551	053011		2.6X14 SCREW WITH WASHER	
552	038938		2X10 PARALLEL PIN	
553	072549	4003AS0103	BOXFRAME FWD ASSY	
554	072553	4003PT0109	STRIKE PLATE	
555	038936		C-405 DUAL CONTROL SPACER	
556	032379		3X5.5 SPACER	
557	073152		3X8 BINDING	
558	072559	4003CS0101A	BOX SPRING 1.4	
559	093885	4003SH0301A	SSB BOX DOOR ST	
560	072550	4003PT0104	BOX DOOR	
561	003706		ERING dia.2.5 SUS	

No.	EDP No.	Parts No.	Description	Remarks
562	046975		3X6 SCREW WITH WASHER	
563	006026		3X6X0.5 WASHER (SM) FLAT	
564	052505	0943PT0504	TANG B	
565	093858	4003AS0302	BOXFRAME TYPE SSB ASSY	
566	072548	4003AS0102	BOXFRAME DOWN ASSY	
568	070717		N-SKD/WBA-SS2 PUSHER	
569	093872	4027PT0114	SSB BOX HANDLE COVER	
570	067084	0943PE0801	A IT HANDLE	
571	040464		AD-42 RIVET	