WBA-12/13-SS
WBA-22/23-SS
WBA-24/25-SS2

CHAPTER 8

Contents

Exploded View & Parts List

1. Entire unit 8-2
   Exploded View
   Parts List
2. Acceptor unit 8-4
   Exploded View (1 x Acceptor Head)
   Exploded View (2 x Acceptor Head)
   Parts List
3. Transport unit 8-8
   Exploded View
   Parts List
4. Frame unit 8-14
   Exploded View
   Parts List
5. Cash box unit 8-16
   Exploded View
   Parts List


Issue 2004-06-1

JAPAN CASHMACHINE CO., LTD.

Copyright © 1998-2004 Japan Cash Machine Co.Ltd. All rights reserved.

1. Entire unit

Exploded View 1

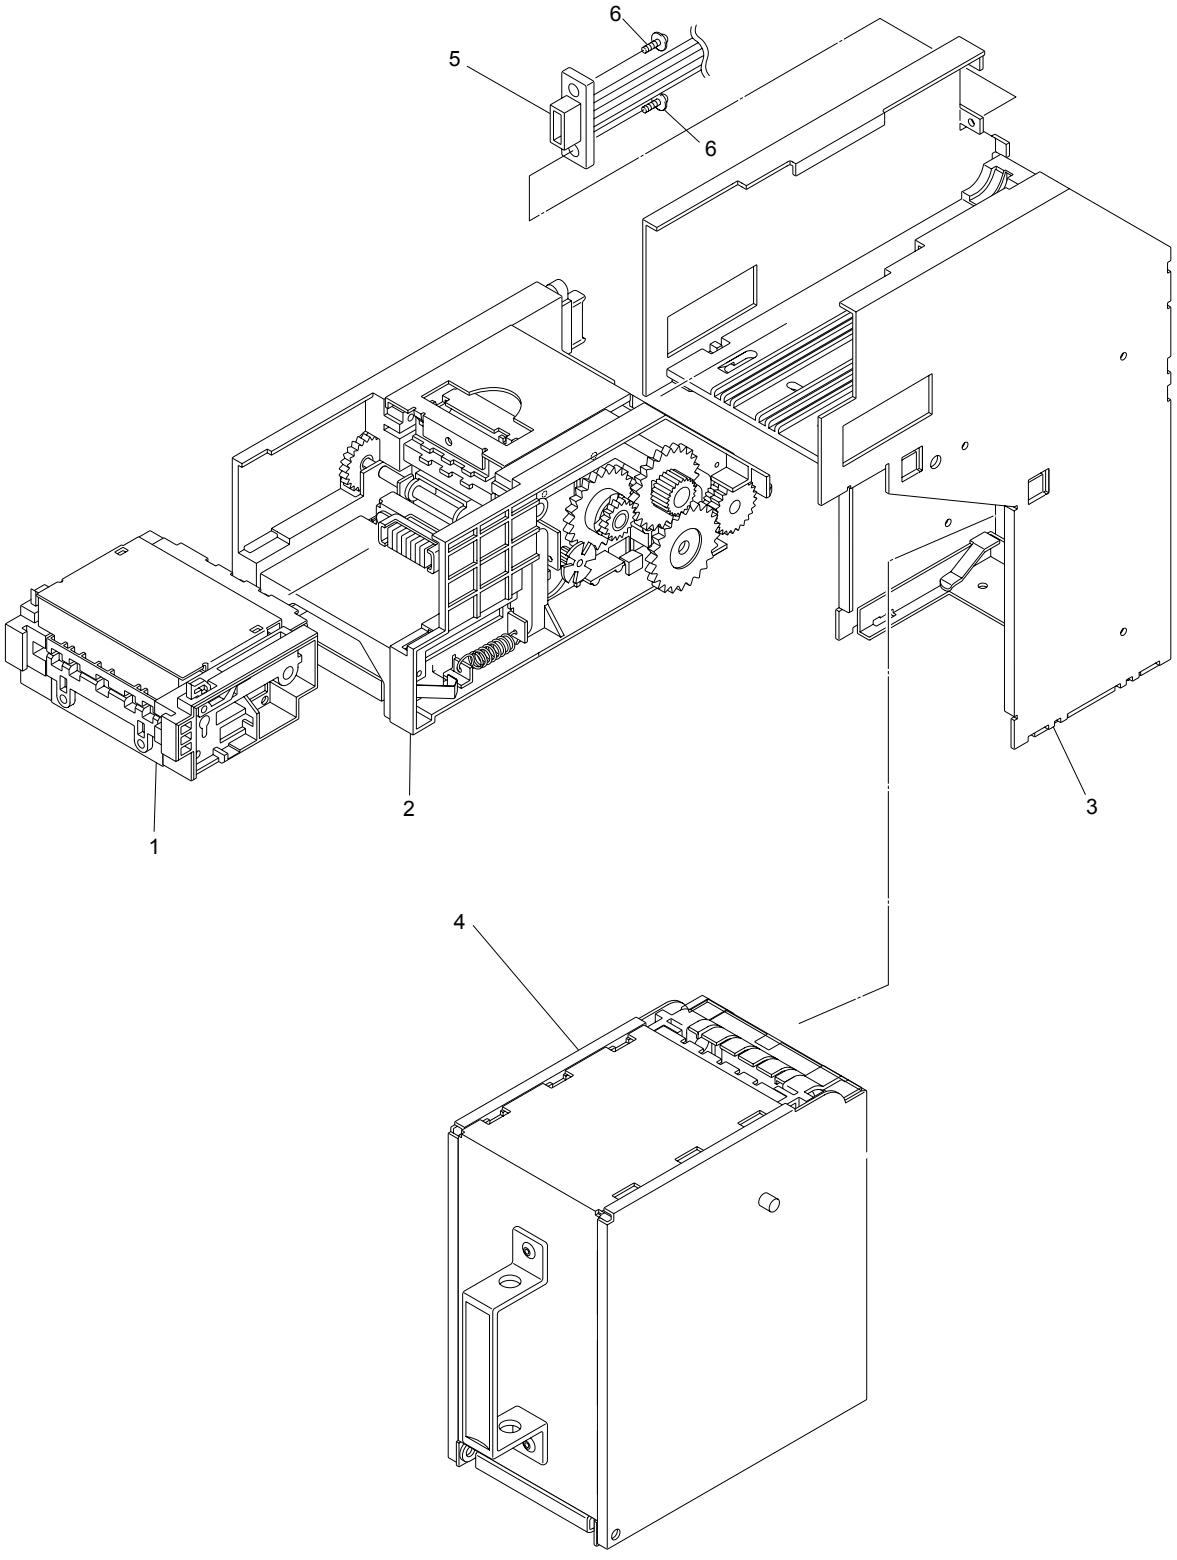


Parts List


NO.	EDP#	Description	Models
1	052457	WBA-1X-SS ACCEPTOR UNIT 67TYPE	WBA-12/13
	077085	WBA-1X-SS ACCEPTOR UNIT 77TYPE	WBA-12/13
	055568	WBA-2X-SS ACCEPTOR UNIT 67TYPE	WBA-22/23
	054613	WBA-2X-SS ACCEPTOR UNIT 71TYPE	WBA-22/23
	054630	WBA-2X-SS ACCEPTOR UNIT 77TYPE	WBA-22/23
	054632	WBA-2X-SS ACCEPTOR UNIT 81TYPE	WBA-22/23
	077619	WBA-24/25-SS2 ACCEPTOR UNIT 82 TYPE	WBA-24/25
2	066844	WBA-12/22-SS TRANSPORT UNIT	WBA-12/22-SS
	066845	WBA-13/23-SS TRANSPORT UNIT	WBA-13/23-SS
	075364	WBA-24-SS2 TRANSPORT UNITWBA-24-SS2	
	075365	WBA-25-SS2 TRANSPORT UNITWBA-25-SS2	
3	058850	WBA-SS FRAME UNITWBA-12/13/22/23-SS	
	076858	WBA-SS2 FRAME UNIT WBA-24/25-SS2	
4	057278	WBA-SS CASH BOX (OEM handle)	WBA-12/13/22/23-SS
	053445	WBA-SS CASH BOX (standard)WBA-12/13/22/23-SS	
	067704	WBA-SS CASH BOX (JCM handle)	WBA-12/13/22/23-SS
	087941	WBA-SS2 CASH BOX (JCM handle）	WBA-24/25-SS2
	072243	WBA-SS2 CASH BOX (standard)WBA-24/25-SS2	
5	062897	843-05-03 REMOVAL CONNECTOR	Standard
	060455	843-05-02 REMOVAL CONNECTOR	OEM harness
6	046996	M3 X 10 SCREW WITH WASHER	

2. Acceptor unit

Exploded View 2 (1x Acceptor Head)

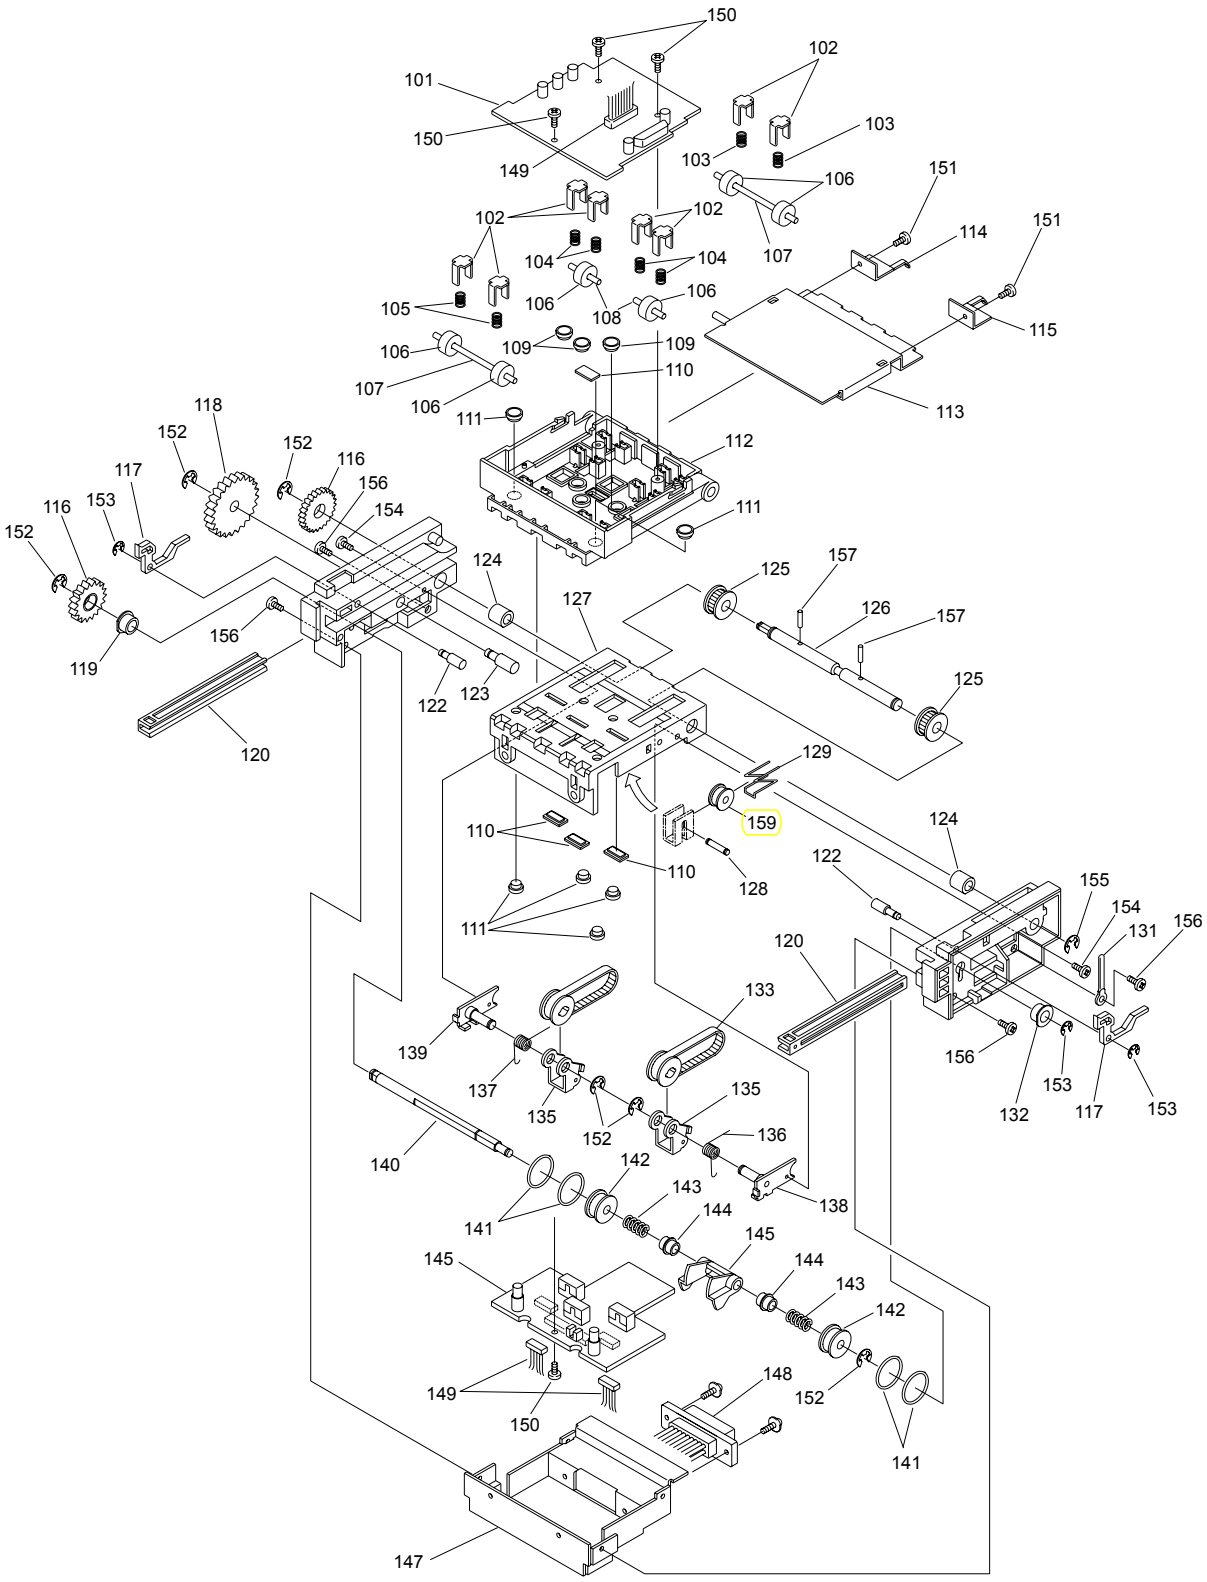

Exploded View 3 (2x Acceptor Head)

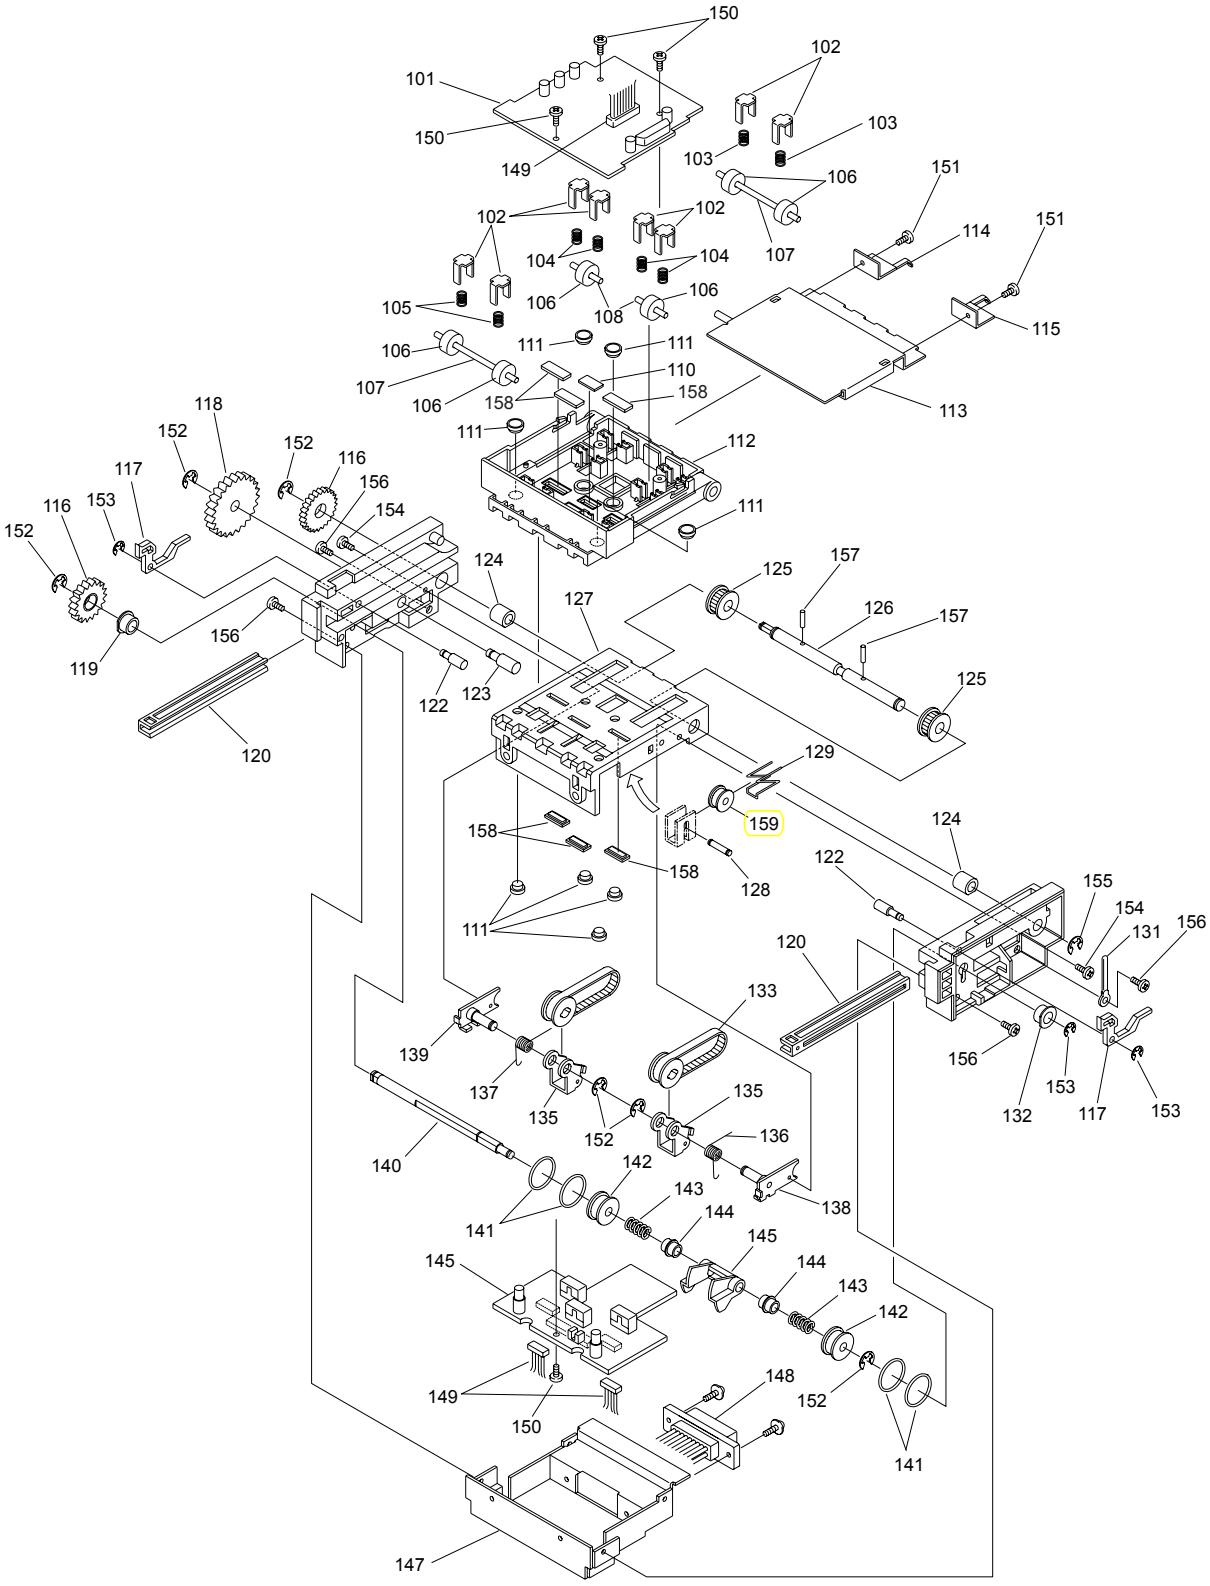


Parts List

NO.	EDP#	PARTS NO.	Description	Models
101	070160	HK-943-840-06-09B-01	SENSOR	WBA-12/13-SS
	070161	HK-943-840-06-03B-01	SENSOR	WBA-22/23/24/25-SS/SS2
102	052518	0943RE0118	SP STOPER	
103	052637	0943CS0101	TR SPRING	
104	026082	CS-7V01	HEAD ROLLER SPRING	
105	052639	0943CS0103	TR SPRING 2	
106	052522	0943RE0126A	VH ROLLER	
107	052589	0943SH0104A	P ROLLER SHAFTL	
108	052590	0943SH0105A	P ROLLER SHAFTS	
109	052524	0943RE0130C	BUSH(LED)	WBA-12/13-SS
	040343	RE-7AJ03	REFLECTIVE SENSOR LENS	WBA-22/23/24/25-SS/SS2
110	052523	0943RE0129	BUSH(RE)	WBA-12/13-SS
	040343	RE-7AJ03	REFLECTIVE SENSOR LENS	WBA-22/23/24/25-SS/SS2
111	040342	RE-7AJ04A	SENSOR BUSH (dia.5)	
112	052520	0943RE0124I	GUIDE A (MG)	WBA-12/13-SS
	054623	0943RE0101E	GUIDE A (FOT)	WBA-22/23/24/25-SS/SS2
113	052466	0943PT0102B	V TOP COVER	
114	053623	0943PT0109C	EARTH PLATE SPRING L	
115	053624	0943PT0108C	EARTH PLATE SPRING R	
116	026105	RE-7V07	GEAR (1)	
117	052517	0943RE0117	CATCH	
118	052516	0943RE0115	GEAR VH	
119	052512	0943RE0111	BUSH dia.5	
120	052519	0943RE0123D	BILL GUIDE 67	
	054625	0943RE0121	BILL GUIDE 71	
	054631	0943RE0120	BILL GUIDE 77	
	054633	0943RE0119	BILL GUIDE 81	
121	052506	0943RE0102C	GUIDE B	
122	052593	0943ST0103A	CATCH STUD	
123	052592	0943ST0101A	GEAR STUD	
124	070727	0664RE0205	ST GEAR BUSH 3	
125	052514	0943RE0113A	PULLEY W5 A	
126	070745	0664SH0101A	VM SHAFT	
127	052521	0943RE0125E	GUIDE D (MG)	WBA-12/13-SS
	054624	0943RE0104C	GUIDE D (FOT)	WBA-22/23/24/25-SS/SS2
128	052591	0943SH0107A	HD ROLLER SHAFT	
129	052657	0943KS0103D	HDR SPRING	
130	052507	0943RE0103C	GUIDE C	
131	045854	CS-1	COATING CLIP	
132	052513	0943RE0112	BUSH dia.3	
133	052585	45MXL4.8V	TIMING BELT	
134	052515	0943RE0114A	PULLEY W5 B	
135	053634	0943AS0102B	ROLLER GUIDE AS	
136	070760	0664KS0101	VT SPRING R	
137	070763	0664KS0102	VT SPRING L	
138	070761	0664AS0102	G FIT PLATE R ASSY	
139	070764	0664AS0101	G FIT PLATE L ASSSY	
140	052587	0943SH0101A	OL ROLLER SHAFT	
141	034864	P11	O RING	
142	052509	0943RE0108	OL ROLLER	
143	052638	0943CS0102	VL SPRING	
144	052511	0943RE0110	SPRING COLLAR A	
145	052510	0943RE0109A	LEVER VH	
146	070158	HK-943-840-06-08C-01	SENSOR	WBA-12/13-SS
	070159	HK-943-840-06-02C-01	SENSOR	WBA-22/23/24/25-SS/SS2


NO.	EDP#	PARTS NO.	Description	Models
147	052465	0943PT0101A	V UNDER COVER	
148	052676	840-05-02A	RELAY HARNESS2	
149	052677	840-05-03	SENSOR HARNESS	WBA-12/13-SS
	054618	840-05-16A	SENSOR HARNESS(OP TYPE)	WBA-22/23/24/25-SS/SS2
150	055413		2.6X6 BIND P TIGHT (BLACK)	
151	023755		2.6X4 SCREW WITH WASHER	
152	003707		ERING dia.3 SUS	
153	003705		ERING dia.2 SUS	
154	054706		2.6X7 SCREW WITH WASHER	
155	003708		ERING dia.4 SUS	
156	046975		3X6 SCREW WITH WASHER	
157	038938		2X10 PARALLEL PIN	
158	040343	RE-7AJ03	REFLECTIVE SENSOR LENS	
159	092815	0943RE0132	MG ROLLER	

3. Transport unit


Exploded View 4

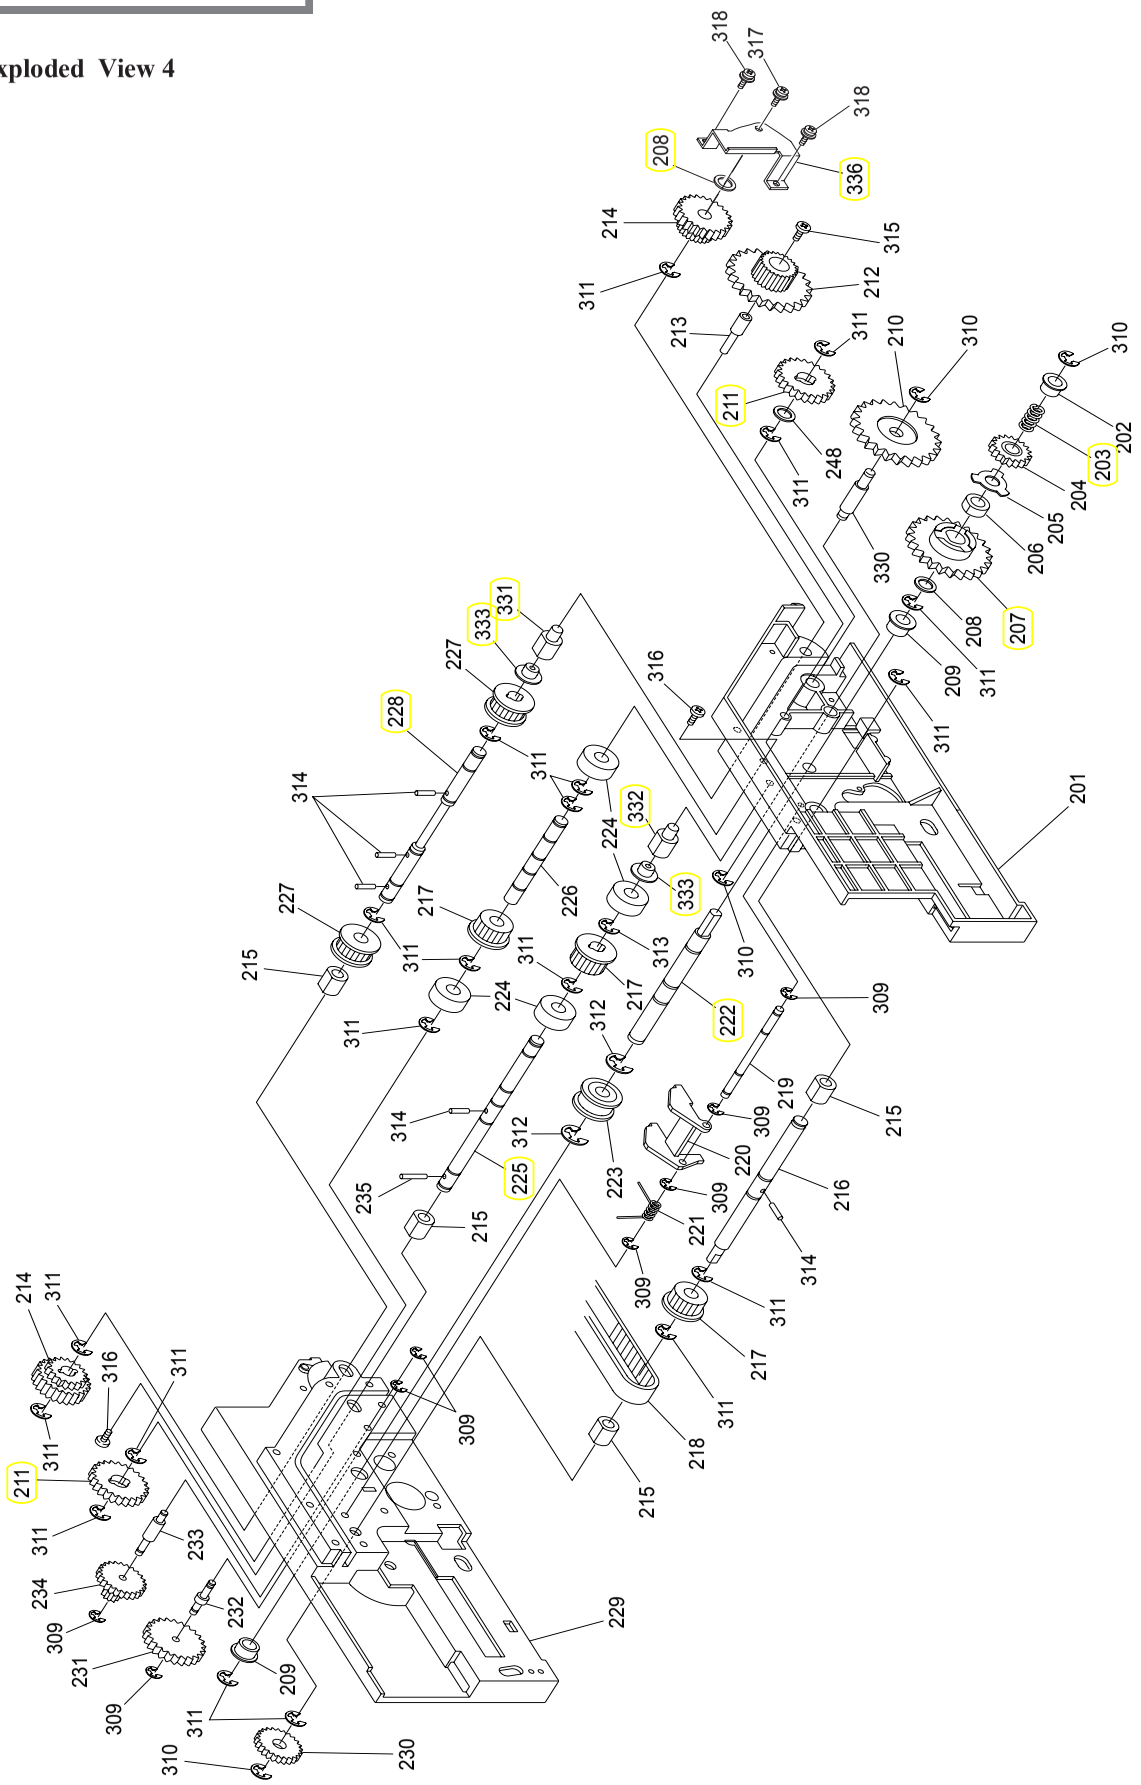

Exploded View 5

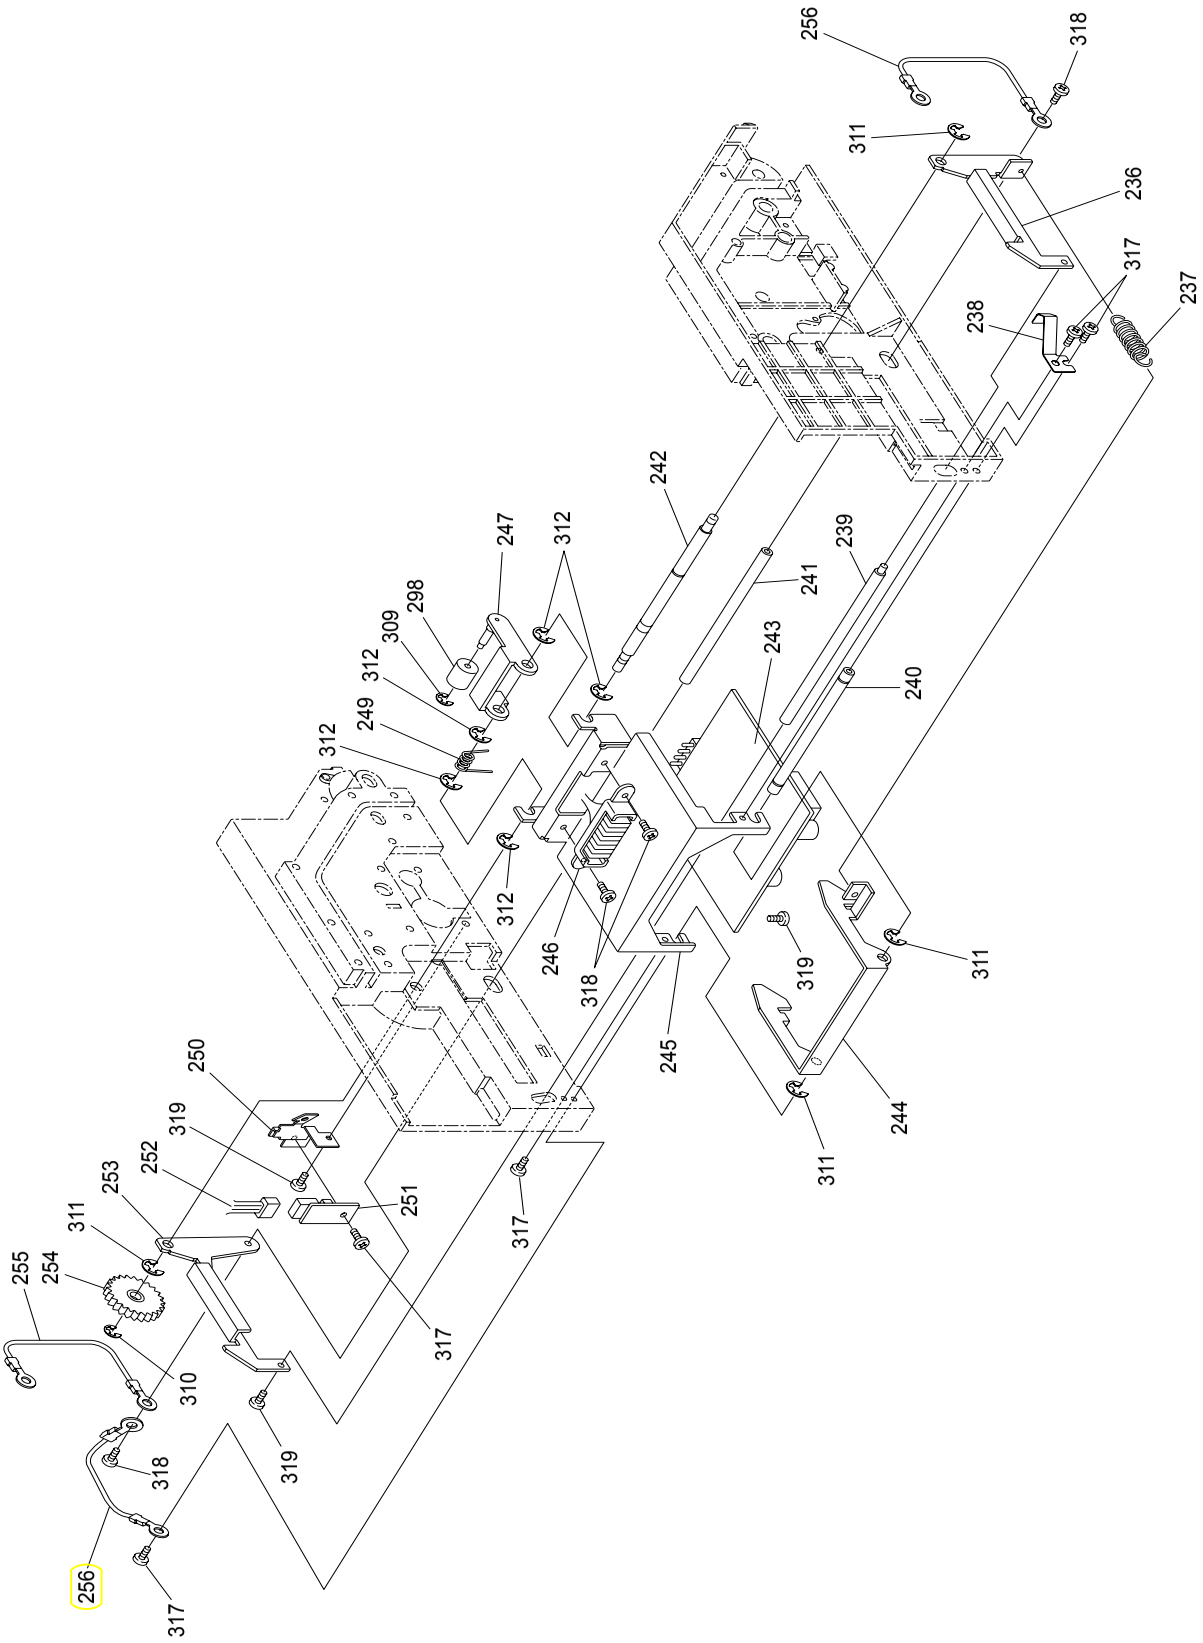

Exploded View 6

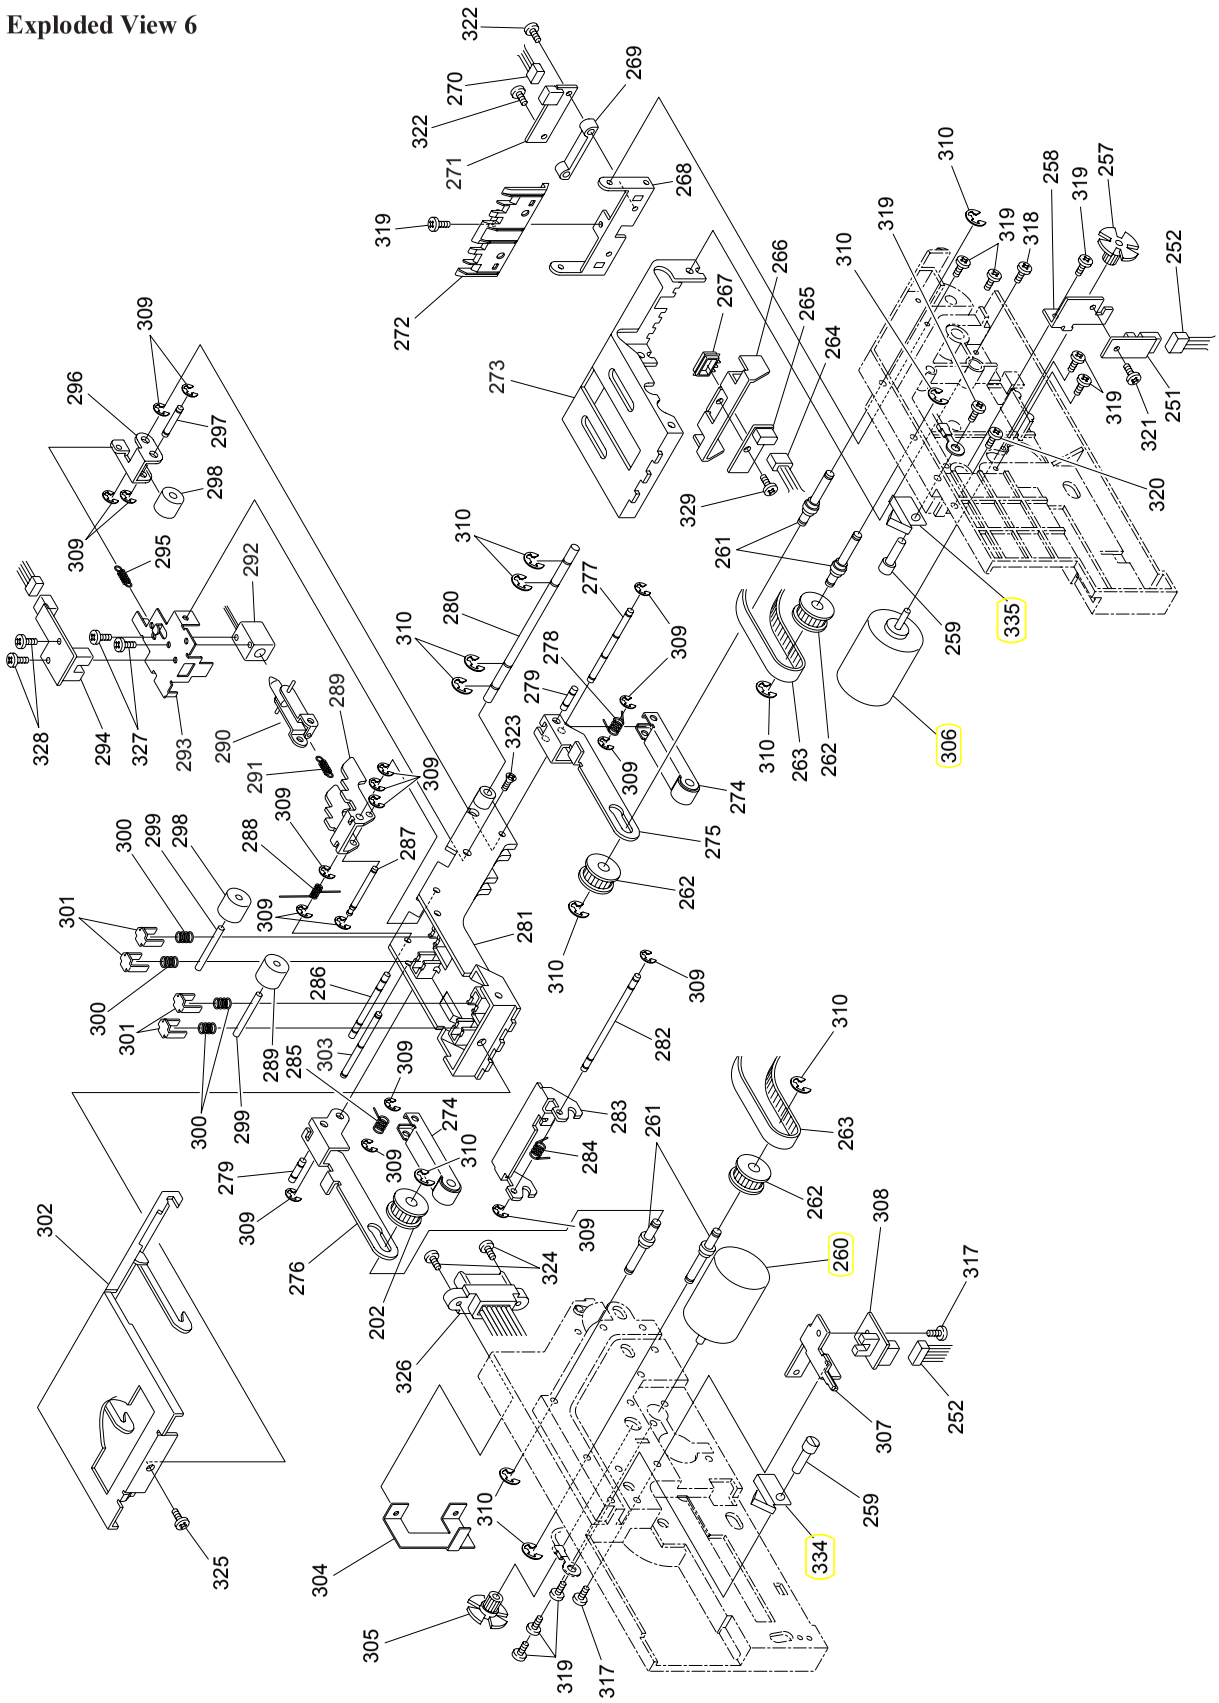

Parts List


NO.	EDP#	PARTS NO.	Description	Models
201	053806	0943RE0226D	T GUIDE E	WBA-12/13/22/23-SS
	070737	0664RE0204	T GUIDE E 82	WBA-24/25-SS2
202	052533	0943RE0208A	SPRING COLLER B	
203	070721	0664CS0201	G SPRING	
204	034853	REO-08	GEAR	
205	052485	0943PT0219B	GEAR W PLATE	
206	092824	OWC-612GXRZ	MINIATURE ONE WAY CLUTCH	
207	092864	0943RE0230	GEAR OV (N)	
208	052487	0943PT0221	W PLATE 0.6	
209	052561	0943RE0508	BUSH dia.6B	
210	052538	0943RE0213A	ST GEAR 2	WBA-12/13/22/23-SS
	070736	0664RE0203	ST GEAR 2 82	WBA-24/25-SS2
211	071234	0664RE0206	ST TR GEAR 82 NEO	
212	052536	0943RE0211A	ST GEAR 1	WBA-12/13/22/23-SS
	070735	0664RE0202	ST GEAR 1 82	WBA-24/25-SS2
213	052615	0943ST0204F	ST GEAR STUD 1	
214	052539	0943RE0214	ST TR GEAR 2	
215	052508	0943RE0107	BUSH A	
216	052595	0943SH0202B	F PULLEY SHAFT	
217	034850	REO-05	PULLEY	
218	052586	126MXL9.5V	TIMING BELT	
219	052600	0943SH0207A	FIN L SHAFT	
220	052545	0943RE0225A	LEVER	
221	052645	0943KS0207	FIN SPRING	
222	070753	0664SH0203A	GEAR SHAFT	
223	052540	0943RE0216	V ROLLER 2	
224	052535	0943RE0210B	T ROLLER	
225	070754	0664SH0201	PULLEY SHAFT 1 82	
226	052612	0943BE0204C	TR PULLEY BEAM	
227	052514	0943RE0113A	PULLEY W5 A	
228	096732	0943SH0218	PULLEY SHAFT 2 82A	
229	052526	0943RE0201G	T GUIDE A	WBA-12/13/22/23-SS
	070729	0664RE0201	T GUIDE A 82	WBA-24/25-SS2
230	026105	RE-7V07	GEAR (1)	
231	052542	0943RE0219	TR GEAR 2	
232	059783	0943ST0209A	ST GEAR STUD 3	
233	059784	0943ST0210A	ST GEAR STUD 4	
234	052544	0943RE0224B	TR GEAR 3	
235	052606	0943SH0214	GEAR PIN	
236	052473	0943PT0204B	VU CATCH R	
237	052647	E-633	SPRING (NO.2149)	
238	052491	0943PT0226B	SP PLATE	
239	052609	0943BE0201A	V CATCH BEAM	
240	052610	0943BE0202B	TR CATCH BEAM	
241	052611	0943BE0203A	V CATCH BEAM 2	
242	052594	0943SH0201B	CATCH SHAFT	
243	070163	HK-943-843-06-01	12CPU	WBA-12/22-SS
	070157	HK-943-843-06-02	13CPU	WBA-13/23-SS
	070722	664-843-06-08-02	24CPU FLASH	WBA-24-SS2
	070730	664-843-06-08-01	25CPU EPROM	WBA-25-SS2
244	052474	0943PT0205B	TRU CATCH	
245	052467	0943AS0202D	PCB COVER AS	
246	052675	840-05-01A	RELAY HARNESS	
247	052471	0943AS0205	VP ARM TR2 ASSY	
248	052486	0943PT0220A	W PLATE 0.2	WBA-12/13/22/23-SS only
249	052644	0943KS0206	SVT SPRING C	

NO.	EDP#	PARTS NO.	Description	Models
250	052476	0943PT0207C	TR P HOLDER	
251	052671		KI980-JC	
252	052680	840-05-06	STACKER SENSOR HARNESS 1	
253	052472	0943PT0203B	VU CATCH L	
254	052541	0943RE0218	TR GEAR 1	
255	053677	840-05-12	FG HARNESS1	
256	053678	840-05-13	FG HARNESS2	
257	052543	0943RE0222A	GEAR STMO	
258	052477	0943PT0208A	ST P HOLDER	
259	096404	0943ST0203C	CATCH STUD	
260	070731	664-840-05-04A-01	TRANSPORT MOTOR UNIT	
261	052613	0943ST0202B	PULLEY STUD	
262	052515	0943RE0114A	PULLEY W5 B	
263	052584	144MXL4.8V	TIMING BELT	
264	052681	840-05-07	STACKER SENSOR HARNESS2	
265	052670		KR979-JC	
266	052478	0943PT0210B	F OUT S HOLDER	
267	052532	0943RE0207A	RE SENSER COVER	
268	094280	4038PT0204	B STOPER PLATE 82	
269	052530	0943RE0205A	SPACER	
270	052682	840-05-08	STACKER SENSOR HARNESS3	
271	052673		KI982-JC	
272	052664	0943RE0221E	F OUT GUIDE	
273	096406	0943RE0203E	T GUIDE C	
274	053635	0943AS0204D	VP ARM TR ASSY	
275	052489	0943PT0223A	STOPPER R	
276	052488	0943PT0222B	STOPPER L	
277	052605	0943SH0213A	PR ARM SHAFT	
278	052641	0943KS0203	SVT SPRING R	
279	052608	0943SH0216A	VP ARM PIN	
280	052599	0943SH0206A	TR GD SHAFT	
281	096407	0943RE0204F	T GUIDE D	
282	052601	0943SH0209A	C CATCH SHAFT	
283	052481	0943PT0215B	COVER CATCH	
284	052643	0943KS0205	TRC SPRING	
285	052642	0943KS0204	SVT SPRING L	
286	052603	0943SH0211B	SOL LEVER SHAFT	
287	052602	0943SH0210B	SOL L SHAFT	
288	052640	0943KS0201	SOL SPRING	
289	058120	0943PT0234B	SOL LEVER 2	
290	058121	0943AS0206A	SOL LINK ASSY	
291	058117	0943TS0201	LINK SPRING 10GF	
292	070166		943-840-05-09A-02(HK)	WBA-12/13/22/23-SS
	058206		943-840-05-09A-02	WBA-24/25-SS2
293	058119	0943PT0235A	SOL HOLDER 2	
294	058205		KI1044-JC	
295	052656	E-601	SPRING (NO.2069)	
296	052479	0943PT0212A	PR ARM	
297	052604	0943SH0212A	PR ROLLER PIN	
298	034851	REO-06B	ROLLER	
299	052607	0943SH0215	ROLLER PIN	
300	052637	0943CS0101	TR SPRING	
301	052518	0943RE0118	SP STOPER	
302	052468	0943AS0203B	TR COVER ASSY	
303	058118	0943SH0217A	SOL LEVER SHAFT	
304	052490	0943PT0224A	CN STOPER	

NO.	EDP#	PARTS NO.	Description	Models
305	052534	0943RE0209B	GEAR MO	
306	070733	664-840-05-05A-01	STACKER MOTOR UNIT	
307	052480	0943PT0214A	FIN S HOLDER	
308	052674		KI1102-JC	
309	003705		ERING dia.2 SUS	
310	003707		ERING dia.3 SUS	
311	003708		ERING dia.4 SUS	
312	003709		ERING dia.5 SUS	
313	003719	5103-21	CS TYPE SNAP RING	
314	038938		2X10 PARALLEL PIN	
315	014915		2.6X5 SCREW WITH WASHER	
316	053008		3X6 TP SCREW	
317	046975		3X6 SCREW WITH WASHER	
318	003611		3X8 SCREW WITH WAHSHER	
319	005555		2.6X6 SCREW WITH WASHER	
320	055370		3X10 P TIGHT	
321	006014		3X4 PAN HEAD	
322	005582		2.6X8 PAN HEAD	
323	006021		2.6X4 FLAT HEAD VIS	
324	046996		3X10 SCREW WITH WASHER	
325	005332		3X5 FLAT HEAD VIS	
326	060436	843-05-01	REMOVALE CONNECTOR	
327	005683		2X4 SCREW WITH WASHER	
328	003585		2.6X4 SCREW WITH WASHER	
329	061331		2.6X6 PAN HEAD	
330	052616	0943ST0205A	ST GEAR STUD 2	WBA-12/13/22/23-SS
	070756	0664ST0201ST	GEAR STUD 2 82	WBA-24/25-SS2
331	096730	0943ST0211	ST GEAR BUSH 2	
332	070758	0664BU0202	ST GEAR BUSH 2	
333	070727	0664RE0205	ST GEAR BUSH 3	
334	096408	0943PT0236	COVER GROUD L	
335	096409	0943PT0237	COVER GROUD R	
336	094146	4038PT0203	BOX G BLK	

4. Frame unit

Exploded View 7

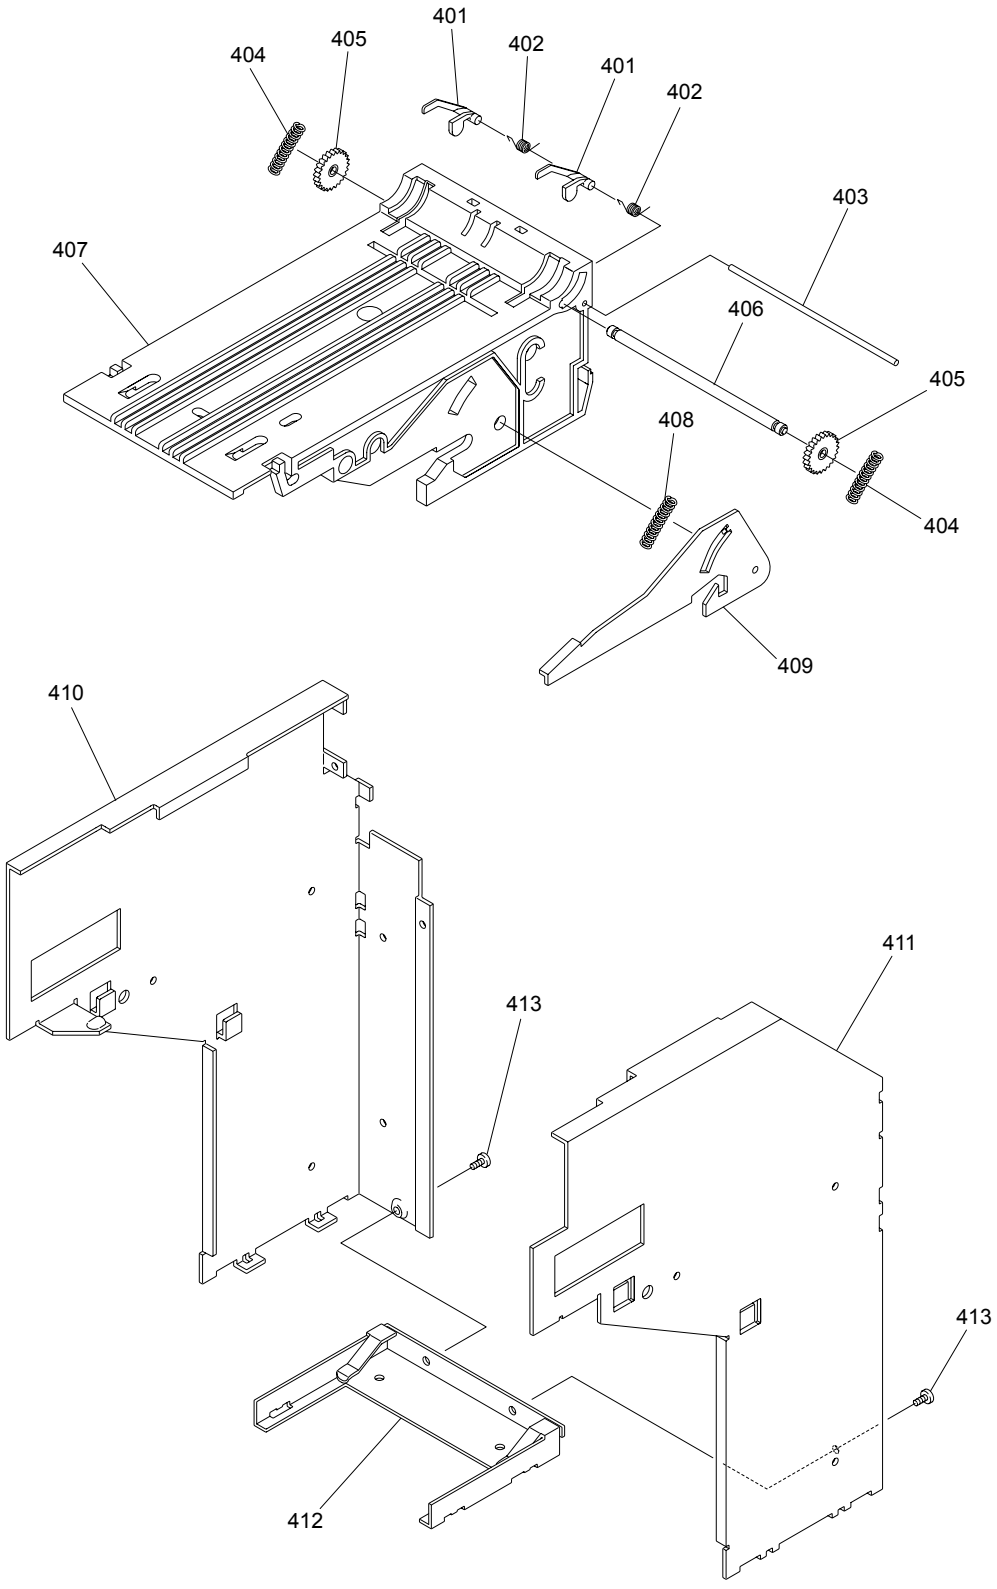


Parts List


NO.	EDP#	PATS NO.	Description	Models
401	052548	0943RE0303B	BOX LEVER	
402	052650	0943KS0301	FL SPRING	
403	052621	0943SH0302B	BOX LEVER SHAFT	
404	052648	0943CS0301A	FG SPRING	
405	052547	0943RE0302	STAND GEAR	WBA-12/13/22/23-SS
	077566	0664AS0301	STAND GEAR 82NEO	WBA-24/25-SS2
406	052620	0943SH0301A	S GEAR SHAFT	
407	052546	0943RE0301E	TR STAND	WBA-12/13/22/23-SS
	070766	0664RE0301	TR STAND 82	WBA-24/25-SS2
408	052649	0943CS0302	BL SPRING	
409	052492	0943AS0301F	BOX LEVER ASSY	
410	052494	0943PT0302I	RIGHT FREAME	
411	053807	0943PT0305E	LEFT FREAME (2)	
412	052495	0943PT0303A	FREAME BASE	
413	003601		3X6 SCREW	

5. Cash box unit

Exploded View 8

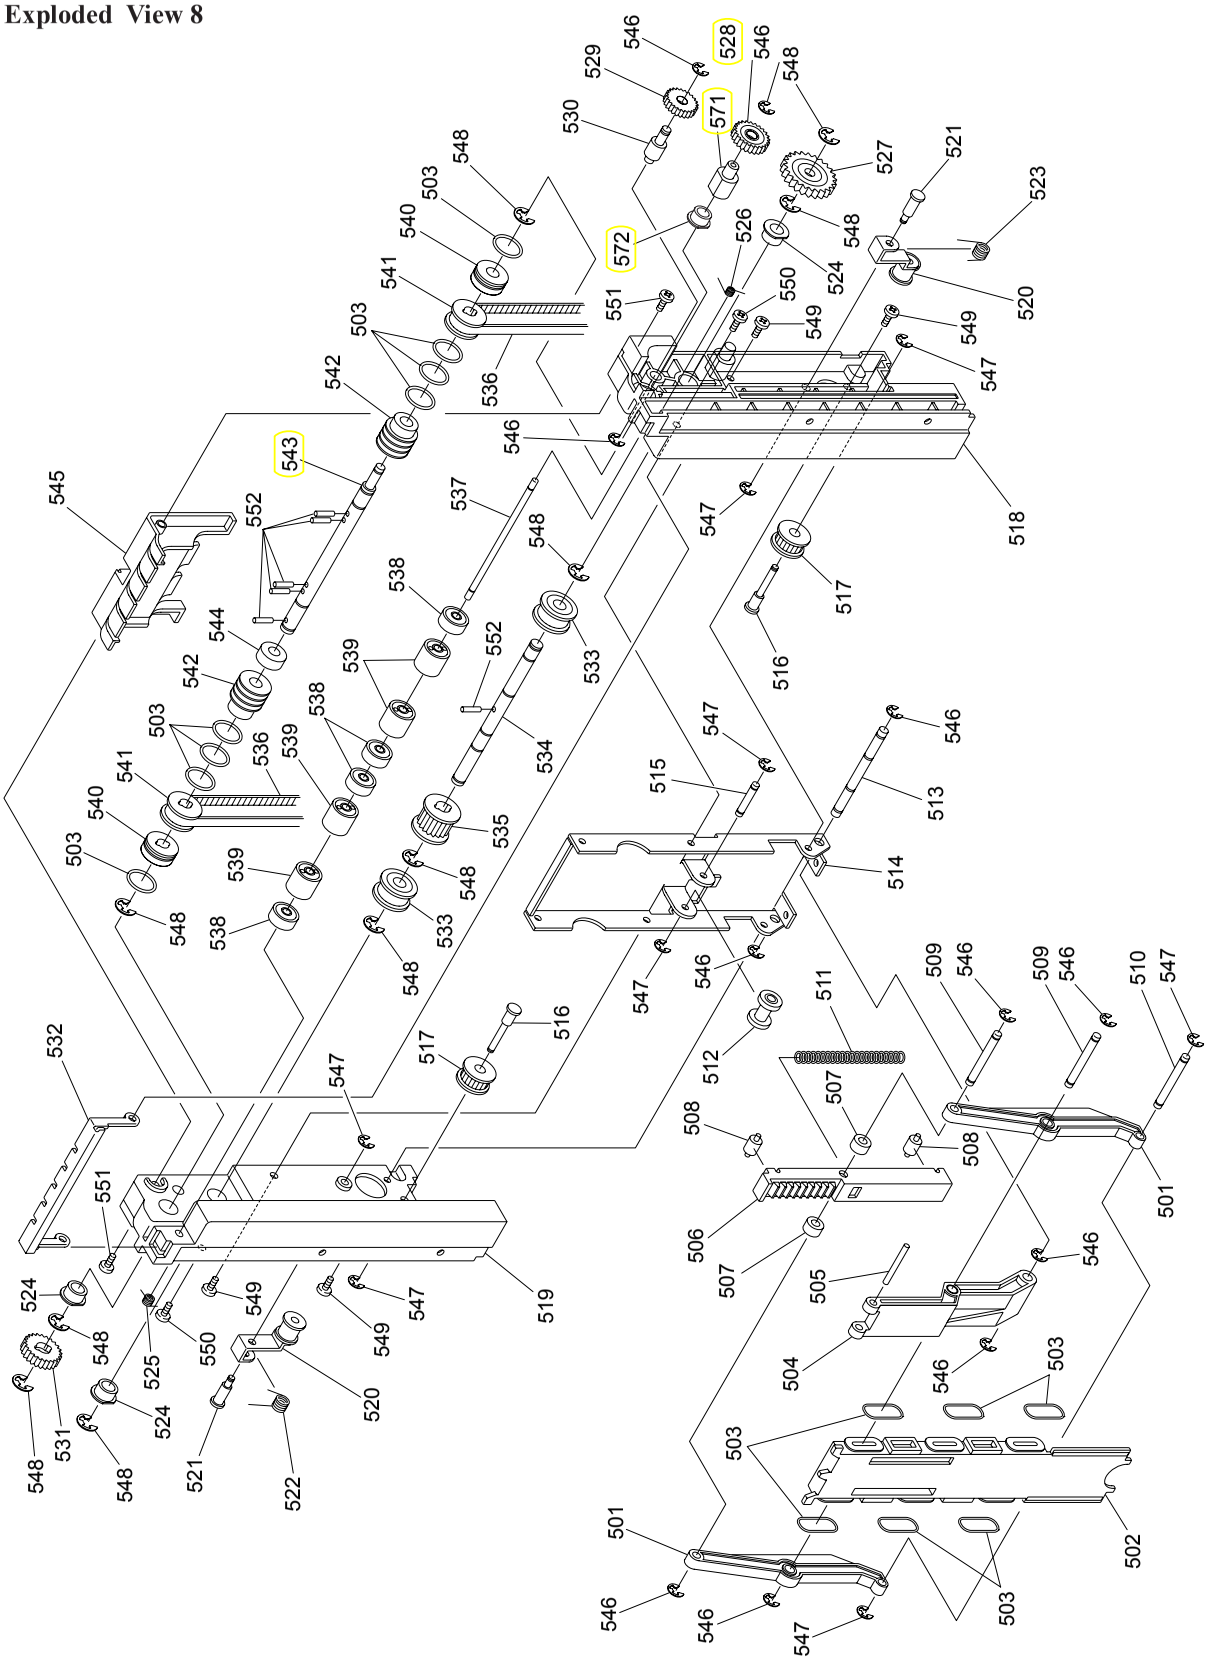

Exploded View 9

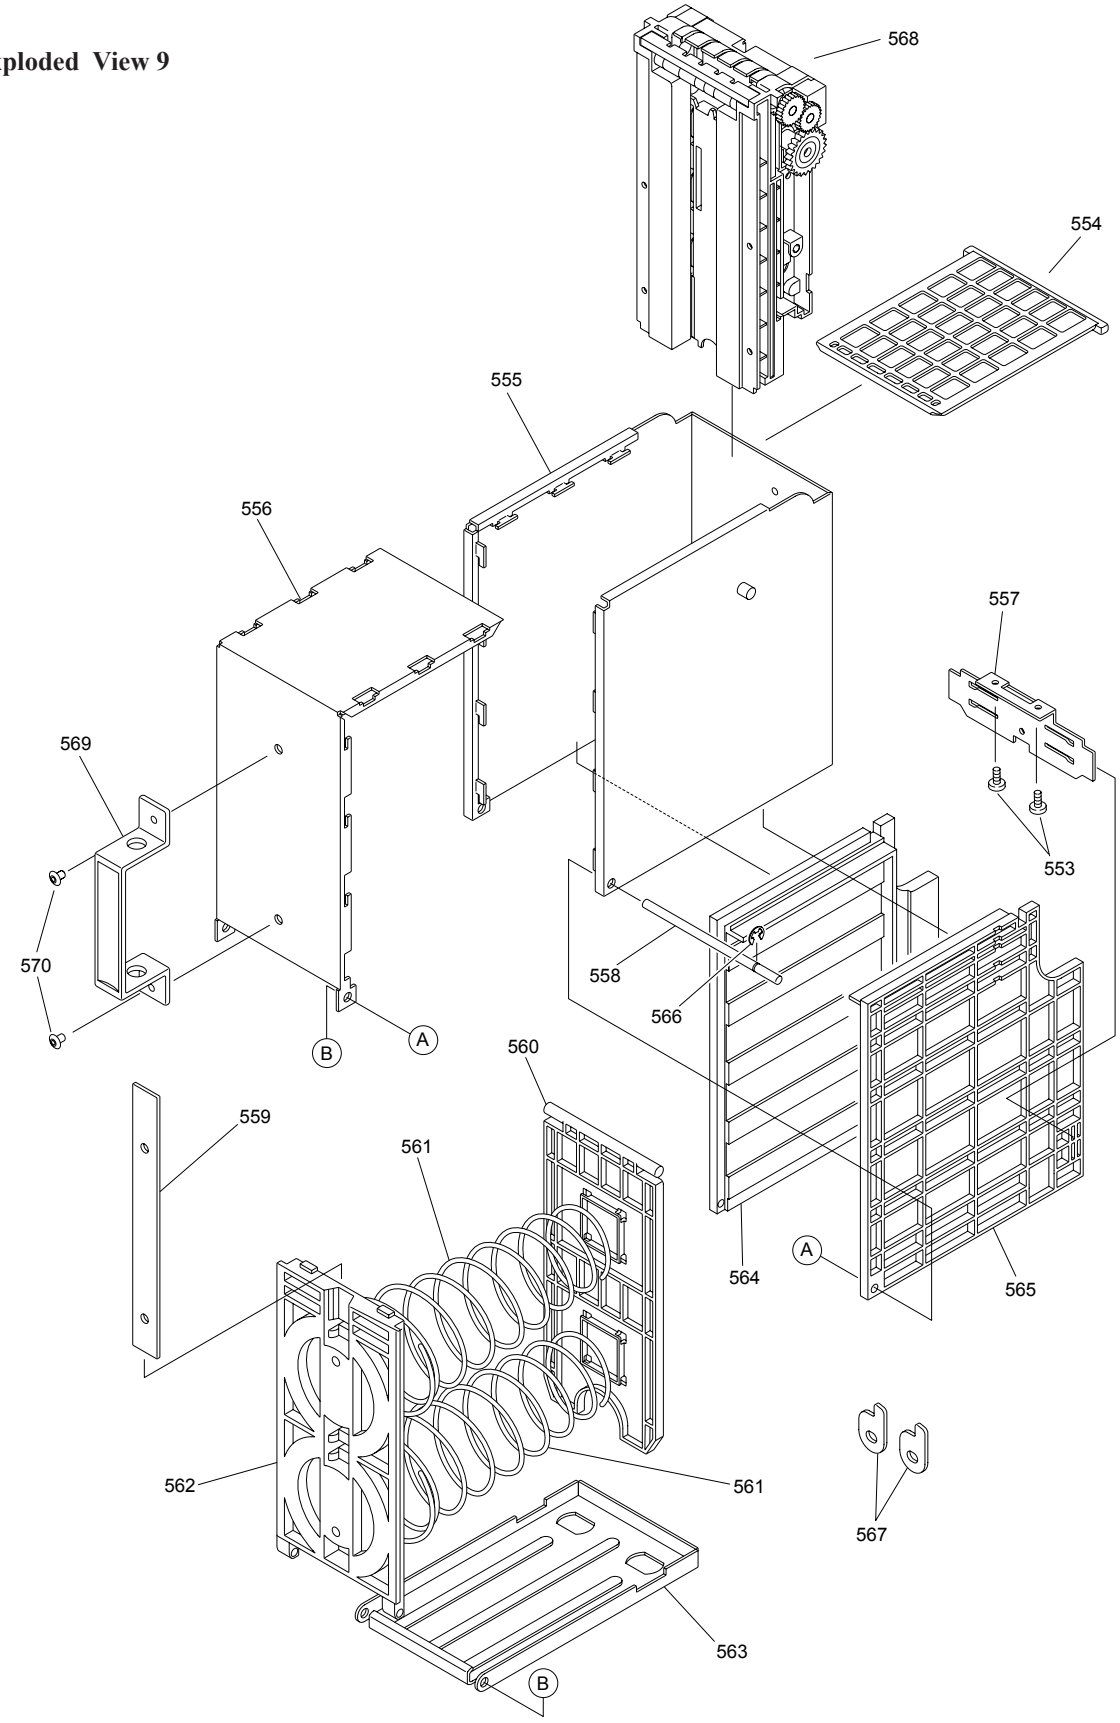

Parts List

NO.	EDP#	PARTS NO.	Description	*Models*
501	052559	0943RE0506A	PUSH LINK 2	WBA-12/13/22/23-SS
	070741	0664RE0504	PUSH LINK 2 82	WBA-24/25-SS2
502	052556	0943RE0503D	PUSH PLATE	WBA-12/13/22/23-SS
	070740	0664RE0503A	PUSH PLATE 82	WBA-24/25-SS2
503	034864	P11	O RING	
504	052557	0943RE0504B	PUSH LINK 1	
505	052629	0943SH0507	U ARM PIN	WBA-12/13/22/23-SS
	070749	0664SH0504	U ARM PIN 82	WBA-24/25-SS2
506	052560	0943RE0507C	PU RUCK	
507	052580	0943RE0515B	ARM ROLLER 1	
508	052631	0943BE0502A	R RO PIN	
509	052627	0943SH0505A	U R SHAFT	WBA-12/13/22/23-SS
510	052630	0943SH0508A	L ARM SHAFT	WBA-12/13/22/23-SS
	070750	0664SH0505	L ARM SHAFT 82	WBA-24/25-SS2
511	052651	0943CS0501	PU SPRING	
512	052579	0943RE0514C	R GUIDE ROLLER	
513	052628	0943SH0506A	L ARM SHAFT	
514	052503	0943PT0501E	PU BASE	
515	052626	0943SH0504A	G RO SHAFT	
516	052634	0943ST0504A	PULLEY STUD	
517	052515	0943RE0114A	PULLEY W5 B	
518	052555	0943RE0502F	PU GUIDE R	WBA-12/13/22/23-SS
	070739	0664RE0502	PU GUIDE R 82	WBA-24/25-SS2
519	052554	0943RE0501G	PU GUIDE L	WBA-12/13/22/23-SS
	070738	0664RE0501	PU GUIDE L 82	WBA-24/25-SS2
520	053633	0943AS0501A	B VP ARM ASSY	
521	052633	0943ST0502B	ARM STUD	
522	052653	0943KS0502	PVT SPRING L	
523	052652	0943KS0501	PVT SPRING R	
524	052561	0943RE0508	BUSH dia.6B	
525	052654	0943KS0503	PR SPRING R	
526	052655	0943KS0504	PR SPRING L	
527	052582	0943RE0518C	PU GEAR 2	
528	070743	0664RE0506	ST GEAR N	
529	052581	0943RE0517	PU GEAR 1	
530	052632	0943ST0501A	GEAR STUD	
531	018184	SBC-0216	GEAR (Z16)	
532	052504	0943PT0502B	PR COVER	
533	052578	0943RE0512B	V ROLLER	
534	052624	0943SH0502B	GEAR SHAFT	WBA-12/13/22/23-SS
	070747	0664SH0502	GEAR SHAFT 82	WBA-24/25-SS2
535	052563	0943RE0510C	RUCK GEAR	
536	052583	150MXL4.8V	TIMING BELT	
537	052625	0943SH0503A	ROLLER SHAFT	
538	026108	RE-7V10	ROLLER	
539	034851	REO-06B	ROLLER	
540	052562	0943RE0509B	B OL PULLEY	
541	052514	0943RE0113A	PULLEY W5 A	
542	034849	REO-04	PULLEY	
543	070746	0664SH0501	PULLEY SHAFT 82	
544	052577	0943RE0511A	PULLEY COLLAR	
545	052558	0943RE0505G	PU COVER	
546	003707		ERING dia.3 SUS	
547	003705		ERING dia.2 SUS	

NO.	EDP#	PATS NO.	Description	Models
548	003708		ERING dia.4 SUS	
549	005555		2.6X6 SCREW WITH WASHER	
550	026071		2.6X8 TAPPING NO.2 CLASS	
551	053011		2.6X14 SCREW WITH WASHER	
552	038938		2X10 PARALLEL PIN	
553	046975		3X6 SCREW WITH WASHER	
554	052552	0943RE0404G	BOX CN PLATE	
555	052496	0943AS0401G	BOX COVER ASSY	
556	052497	0943PT0402D	BOX COVER 2	
557	052500	0943PT0405B	TANG CATCH	
558	052622	0943SH0401B	BOX PIN	
559	052499	0943PT0404	HN PLATE	
560	052553	0943RE0405F	RECEIVE PLATE	
561	034869	LB-02-C	RECEIVING PLATE SPRING	
562	052551	0943RE0403G	SPRING HOLDER	
563	052498	0943PT0403F	BOX OP COVER	
564	052549	0943RE0401F	BOX FREAME L	
565	052550	0943RE0402F	BOX FREAME R	
566	003706		ERING dia.2.5 SUS	
567	052505	0943PT0504	TANG B	
568	069979		WBA-SS BOX PUSHER UNIT	WBA-12/13/22/23-SS
	090376		WBA-SS2 BOX PUSHER UNIT	WBA-24/25-SS2
569	056758	0943PT0701	HANDLE A	
570	056762	AD-SSH-64	RIVET	
571	070752	0664BU0501	ST GEAR BUSH 4	
572	070744	0664RE0507	ST GEAR BUSH 5	