LynxDrive_ControlSystems_001

Execution time	Computer name	Language
3/26/2024 11:50:51 AM	IRRIGATION	en-US
Operating system	Screen dimension	Duration
Windows 10 64bit	3640x1920	36.2m
Run configuration name	Username	
TestRun	NSN	
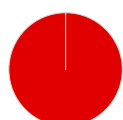
■ 1 x Failed

Total warnings	Total errors
0	1

Table of Contents

Global Parameters:

AppProcessID:

SETUP

0ms

ControlSystems_LSM

ControlSystems_LSM

36.2m

Test Control Systems: For LSM platform Lynx Drive

StationLevelTest

Rows: **304**

36.2m

StationLevelTest

Data Row: **1**

51.14s

Station: 1-1-1

StationAccessRow: Row 1

StationRowName: Station row 1

Name: ~!@#$%^&*()_+<>?:"|

NameRow: Name row 1

Area: G

AreaRowName: Area row 1

Hole: 1

HoleRowName: Hole row 1

Tag: 1

TagRowName: Tag row 1

NOS: -1

NOSRowName: Number of Sprinklers row

LSM Address: 1D84A1

AddRowName: LSMAddress row 1

LSM Offset: 2

OffsetRowName: LSMOffset row 1

Wire Path: 4251

WPRowName: Wire Path row 1

Sprinkler Model: 730

Nozzle Model: 33

Arc: 361

Pressure: -1

Num Sprinklers: 151

Nozzle Flow: 301

Back Flow: 301

Sta Flow: -1

Precip Rate: -1

Pattern: Tirangle

Sprinkler Spacing: 201

Row Spacing: 201

📄 PopulateColumn

28.43s ⊤

Time	Level	Category	Message

Time	Level	Category	Message
00:00.055	Info	Data	Current variable values: $cmWPRowName = 'Wire Path row 1', $cmWPValue = '4251', $cmOffsetRowName = 'LSMOffset row 1', $cmOffsetVal = '2', $cmAddRowName = 'LSMAddress row 1', $cmAddVal = '1D84A1', $cmNOSRowName = 'Number of Sprinklers row', $cmNOSVal = '-1', $cmTagRowName = 'Tag row 1', $cmHoleRowName = 'Hole row 1', $cmHoelVal = '1', $cmAreaRowName = 'Area row 1', $cmAreaVal = 'G', $cmNameRow = 'Name row 1', $cmNameVal = '~!@#$%^&*()_+<>?:"|', $cmStationVal = '1-1-1', $cmStationRowName = 'Station row 1', $cmStationAccessRow = 'Row 1'

📄 SidePanel

22.69s ⤒

Time	Level	Category	Message
00:28.483	Info	Data	Current variable values: $cmSprinklerModel = '730', $cmNozzleModel = '33', $cmArc = '361', $cmPressure = '-1', $cmNumSprinklers = '151', $cmNozzleFlow = '301', $cmBackFlow = '301', $cmStaFlow = '-1', $cmPrecipRate = '-1', $cmPattern = 'Tirangle', $cmSprinklerSpacing = '201', $cmRowSpacing = '201'

⚙ StationLevelTest

Data Row: **2**

42.67s ⤒

Station: 1-1-2

StationAccessRow: Row 2

StationRowName: Station row 2

Name: `1234567890-=[];',./

NameRow: Name row 2

Area: G

AreaRowName: Area row 2

Hole: 1

HoleRowName: Hole row 2

Tag: 1

TagRowName: Tag row 2

NOS: 251

NOSRowName: Number of Sprinklers row

LSM Address: 1D8498

AddRowName: LSMAddress row 2

LSM Offset: -1

OffsetRowName: LSMOffset row 2

Wire Path: 1001

WPRowName: Wire Path row 2

Sprinkler Model: 730

Nozzle Model: 33

Arc: -1

Pressure: 101

Num Sprinklers: -1

Nozzle Flow: -1

Back Flow: -1

Sta Flow: 501

Precip Rate: 101

Pattern: Tirangle

Sprinkler Spacing: -1

Row Spacing: -1

📄 PopulateColumn

21.22s ⬆

Time	Level	Category	Message

Time	Level	Category	Message
00:51.176	Info	Data	Current variable values:
			$cmWPRowName = 'Wire Path row 2', $cmWPValue = '1001', $cmOffsetRowName = 'LSMOffset row 2', $cmOffsetVal = '-1', $cmAddRowName = 'LSMAddress row 2', $cmAddVal = '1D8498', $cmNOSRowName = 'Number of Sprinklers row', $cmNOSVal = '251', $cmTagRowName = 'Tag row 2', $cmHoleRowName = 'Hole row 2', $cmHoelVal = '1', $cmAreaRowName = 'Area row 2', $cmAreaVal = 'G', $cmNameRow = 'Name row 2', $cmNameVal = '`1234567890-=[];',./', $cmStationVal = '1-1-2', $cmStationRowName = 'Station row 2', $cmStationAccessRow = 'Row 2'

📄 SidePanel

21.45s ⊤

Time	Level	Category	Message
01:12.392	Info	Data	Current variable values:
			$cmSprinklerModel = '730', $cmNozzleModel = '33', $cmArc = '-1', $cmPressure = '101', $cmNumSprinklers = '-1', $cmNozzleFlow = '-1', $cmBackFlow = '-1', $cmStaFlow = '501', $cmPrecipRate = '101', $cmPattern = 'Tirangle', $cmSprinklerSpacing = '-1', $cmRowSpacing = '-1'

⚙ **StationLevelTest**

Data Row: **3**   40.12s ⊤

Station: 1-1-3

StationAccessRow: Row 3

StationRowName: Station row 3

Name: Sta 3

NameRow: Name row 3

Area: G

AreaRowName: Area row 3

Hole: 1

HoleRowName: Hole row 3

Tag: 1

TagRowName: Tag row 3

NOS: 1

NOSRowName: Number of Sprinklers row

LSM Address: 1D8492

AddRowName: LSMAddress row 3

LSM Offset: 1

OffsetRowName: LSMOffset row 3

Wire Path: 1001

WPRowName: Wire Path row 3

Sprinkler Model: 730

Nozzle Model: 33

Arc: 90

Pressure: 50

Num Sprinklers: 1

Nozzle Flow: 22

Back Flow: 10

Sta Flow: 22

Precip Rate: 0.57

Pattern: Tirangle

Sprinkler Spacing: 65

Row Spacing: 0

📄 PopulateColumn

19.04s ⊤

Time	Level	Category	Message

Time	Level	Category	Message
01:33.844	Info	Data	Current variable values:
			$cmWPRowName = 'Wire Path row 3', $cmWPValue = '1001', $cmOffsetRowName = 'LSMOffset row 3', $cmOffsetVal = '1', $cmAddRowName = 'LSMAddress row 3', $cmAddVal = '1D8492', $cmNOSRowName = 'Number of Sprinklers row', $cmNOSVal = '1', $cmTagRowName = 'Tag row 3', $cmHoleRowName = 'Hole row 3', $cmHoelVal = '1', $cmAreaRowName = 'Area row 3', $cmAreaVal = 'G', $cmNameRow = 'Name row 3', $cmNameVal = 'Sta 3', $cmStationVal = '1-1-3', $cmStationRowName = 'Station row 3', $cmStationAccessRow = 'Row 3'

📄 SidePanel

21.08s ⊤

Time	Level	Category	Message
01:52.887	Info	Data	Current variable values:
			$cmSprinklerModel = '730', $cmNozzleModel = '33', $cmArc = '90', $cmPressure = '50', $cmNumSprinklers = '1', $cmNozzleFlow = '22', $cmBackFlow = '10', $cmStaFlow = '22', $cmPrecipRate = '0.57', $cmPattern = 'Tirangle', $cmSprinklerSpacing = '65', $cmRowSpacing = '0'

⚙ **StationLevelTest**

Data Row: **4**

39.84s ⊤

Station: 1-1-4

StationAccessRow: Row 4

StationRowName: Station row 4

Name: Sta 4

NameRow: Name row 4

Area: G

AreaRowName: Area row 4

Hole: 1

HoleRowName: Hole row 4

Tag: 1

TagRowName: Tag row 4

NOS: 1

NOSRowName: Number of Sprinklers row

LSM Address: 1D849F

AddRowName: LSMAddress row 4

LSM Offset: 1

OffsetRowName: LSMOffset row 4

Wire Path: 1001

WPRowName: Wire Path row 4

Sprinkler Model: 730

Nozzle Model: 33

Arc: 45

Pressure: 50

Num Sprinklers: 1

Nozzle Flow: 22

Back Flow: 10

Sta Flow: 22

Precip Rate: 0.57

Pattern: Tirangle

Sprinkler Spacing: 65

Row Spacing: 0

📄 PopulateColumn

18.73s ⊤

Time	Level	Category	Message

02:13.970	Info	Data	Current variable values:

$cmWPRowName = 'Wire Path row 4', $cmWPValue = '1001', $cmOffsetRowName = 'LSMOffset row 4', $cmOffsetVal = '1', $cmAddRowName = 'LSMAddress row 4', $cmAddVal = '1D849F', $cmNOSRowName = 'Number of Sprinklers row', $cmNOSVal = '1', $cmTagRowName = 'Tag row 4', $cmHoleRowName = 'Hole row 4', $cmHoelVal = '1', $cmAreaRowName = 'Area row 4', $cmAreaVal = 'G', $cmNameRow = 'Name row 4', $cmNameVal = 'Sta 4', $cmStationVal = '1-1-4', $cmStationRowName = 'Station row 4', $cmStationAccessRow = 'Row 4' |

📄 SidePanel

21.1s　⬆

Time	Level	Category	Message
02:32.704	Info	Data	Current variable values:

$cmSprinklerModel = '730', $cmNozzleModel = '33', $cmArc = '45', $cmPressure = '50', $cmNumSprinklers = '1', $cmNozzleFlow = '22', $cmBackFlow = '10', $cmStaFlow = '22', $cmPrecipRate = '0.57', $cmPattern = 'Tirangle', $cmSprinklerSpacing = '65', $cmRowSpacing = '0' |

⚙ **StationLevelTest**

Data Row:　**5**　　　　　　　　　　39.67s　⬆

Station: 1-1-5

StationAccessRow: Row 5

StationRowName: Station row 5

Name: Sta 5

NameRow: Name row 5

Area: G

AreaRowName: Area row 5

Hole: 1

HoleRowName: Hole row 5

Tag: 1

TagRowName: Tag row 5

NOS: 1

NOSRowName: Number of Sprinklers row

LSM Address: 1000EF

AddRowName: LSMAddress row 5

LSM Offset: 1

OffsetRowName: LSMOffset row 5

Wire Path: 1001

WPRowName: Wire Path row 5

Sprinkler Model: 730

Nozzle Model: 33

Arc: 360

Pressure: 50

Num Sprinklers: 1

Nozzle Flow: 22

Back Flow: 10

Sta Flow: 22

Precip Rate: 0.57

Pattern: Tirangle

Sprinkler Spacing: 56

Row Spacing: 0

📄 PopulateColumn

18.94s

Time	Level	Category	Message

Time	Level	Category	Message
02:53.812	Info	Data	Current variable values:

$cmWPRowName = 'Wire Path row 5', $cmWPValue = '1001', $cmOffsetRowName = 'LSMOffset row 5', $cmOffsetVal = '1', $cmAddRowName = 'LSMAddress row 5', $cmAddVal = '1000EF', $cmNOSRowName = 'Number of Sprinklers row', $cmNOSVal = '1', $cmTagRowName = 'Tag row 5', $cmHoleRowName = 'Hole row 5', $cmHoelVal = '1', $cmAreaRowName = 'Area row 5', $cmAreaVal = 'G', $cmNameRow = 'Name row 5', $cmNameVal = 'Sta 5', $cmStationVal = '1-1-5', $cmStationRowName = 'Station row 5', $cmStationAccessRow = 'Row 5'

📄 SidePanel

20.73s ⊤

Time	Level	Category	Message
03:12.749	Info	Data	Current variable values:

$cmSprinklerModel = '730', $cmNozzleModel = '33', $cmArc = '360', $cmPressure = '50', $cmNumSprinklers = '1', $cmNozzleFlow = '22', $cmBackFlow = '10', $cmStaFlow = '22', $cmPrecipRate = '0.57', $cmPattern = 'Tirangle', $cmSprinklerSpacing = '56', $cmRowSpacing = '0'

⚙️ **StationLevelTest**

Data Row: **6**   41.11s ⊤

Station: 1-1-6

StationAccessRow: Row 6

StationRowName: Station row 6

Name: Sta 6

NameRow: Name row 6

Area: G

AreaRowName: Area row 6

Hole: 1

HoleRowName: Hole row 6

Tag: 1

TagRowName: Tag row 6

NOS: 1

NOSRowName: Number of Sprinklers row

LSM Address: 100144

AddRowName: LSMAddress row 6

LSM Offset: 1

OffsetRowName: LSMOffset row 6

Wire Path: 1001

WPRowName: Wire Path row 6

Sprinkler Model: 730

Nozzle Model: 33

Arc: 360

Pressure: 50

Num Sprinklers: 1

Nozzle Flow: 22

Back Flow: 10

Sta Flow: 22

Precip Rate: 0.57

Pattern: Tirangle

Sprinkler Spacing: 65

Row Spacing: 0

📄 PopulateColumn

20s ⬆

Time	Level	Category	Message

Time	Level	Category	Message
03:33.486	Info	Data	Current variable values:

$cmWPRowName = 'Wire Path row 6', $cmWPValue = '1001', $cmOffsetRowName = 'LSMOffset row 6', $cmOffsetVal = '1', $cmAddRowName = 'LSMAddress row 6', $cmAddVal = '100144', $cmNOSRowName = 'Number of Sprinklers row', $cmNOSVal = '1', $cmTagRowName = 'Tag row 6', $cmHoleRowName = 'Hole row 6', $cmHoelVal = '1', $cmAreaRowName = 'Area row 6', $cmAreaVal = 'G', $cmNameRow = 'Name row 6', $cmNameVal = 'Sta 6', $cmStationVal = '1-1-6', $cmStationRowName = 'Station row 6', $cmStationAccessRow = 'Row 6'

📄 SidePanel

21.1s ⊤

Time	Level	Category	Message
03:53.491	Info	Data	Current variable values:

$cmSprinklerModel = '730', $cmNozzleModel = '33', $cmArc = '360', $cmPressure = '50', $cmNumSprinklers = '1', $cmNozzleFlow = '22', $cmBackFlow = '10', $cmStaFlow = '22', $cmPrecipRate = '0.57', $cmPattern = 'Tirangle', $cmSprinklerSpacing = '65', $cmRowSpacing = '0'

⚙️ **StationLevelTest**

Data Row: **7**   40.44s ⊤

Station: 1-1-7

StationAccessRow: Row 7

StationRowName: Station row 7

Name: Sta 7

NameRow: Name row 7

Area: G

AreaRowName: Area row 7

Hole: 1

HoleRowName: Hole row 7

Tag: 1

TagRowName: Tag row 7

NOS: 1

NOSRowName: Number of Sprinklers row

LSM Address: 1000C6

AddRowName: LSMAddress row 7

LSM Offset: 1

OffsetRowName: LSMOffset row 7

Wire Path: 1001

WPRowName: Wire Path row 7

Sprinkler Model: 730

Nozzle Model: 33

Arc: 360

Pressure: 50

Num Sprinklers: 1

Nozzle Flow: 22

Back Flow: 10

Sta Flow: 22

Precip Rate: 0.57

Pattern: Tirangle

Sprinkler Spacing: 65

Row Spacing: 0

📄 PopulateColumn

19.59s ⤒

Time	Level	Category	Message

Time	Level	Category	Message
04:14.592	Info	Data	Current variable values:

$cmWPRowName = 'Wire Path row 7', $cmWPValue = '1001', $cmOffsetRowName = 'LSMOffset row 7', $cmOffsetVal = '1', $cmAddRowName = 'LSMAddress row 7', $cmAddVal = '1000C6', $cmNOSRowName = 'Number of Sprinklers row', $cmNOSVal = '1', $cmTagRowName = 'Tag row 7', $cmHoleRowName = 'Hole row 7', $cmHoelVal = '1', $cmAreaRowName = 'Area row 7', $cmAreaVal = 'G', $cmNameRow = 'Name row 7', $cmNameVal = 'Sta 7', $cmStationVal = '1-1-7', $cmStationRowName = 'Station row 7', $cmStationAccessRow = 'Row 7'

📄 SidePanel

20.85s ⫯

Time	Level	Category	Message
04:34.186	Info	Data	Current variable values:

$cmSprinklerModel = '730', $cmNozzleModel = '33', $cmArc = '360', $cmPressure = '50', $cmNumSprinklers = '1', $cmNozzleFlow = '22', $cmBackFlow = '10', $cmStaFlow = '22', $cmPrecipRate = '0.57', $cmPattern = 'Tirangle', $cmSprinklerSpacing = '65', $cmRowSpacing = '0'

⚙ **StationLevelTest**

Data Row: **8**   40.7s ⫯

Station: 1-1-8

StationAccessRow: Row 8

StationRowName: Station row 8

Name: Sta 8

NameRow: Name row 8

Area: G

AreaRowName: Area row 8

Hole: 1

HoleRowName: Hole row 8

Tag: 1

TagRowName: Tag row 8

NOS: 1

NOSRowName: Number of Sprinklers row

LSM Address: 10013E

AddRowName: LSMAddress row 8

LSM Offset: 1

OffsetRowName: LSMOffset row 8

Wire Path: 1001

WPRowName: Wire Path row 8

Sprinkler Model: 730

Nozzle Model: 33

Arc: 360

Pressure: 50

Num Sprinklers: 1

Nozzle Flow: 22

Back Flow: 10

Sta Flow: 22

Precip Rate: 0.57

Pattern: Tirangle

Sprinkler Spacing: 65

Row Spacing: 0

📄 PopulateColumn

20.11s ⬆

Time	Level	Category	Message

Time	Level	Category	Message
04:55.036	Info	Data	Current variable values:

$cmWPRowName = 'Wire Path row 8', $cmWPValue = '1001', $cmOffsetRowName = 'LSMOffset row 8', $cmOffsetVal = '1', $cmAddRowName = 'LSMAddress row 8', $cmAddVal = '10013E', $cmNOSRowName = 'Number of Sprinklers row', $cmNOSVal = '1', $cmTagRowName = 'Tag row 8', $cmHoleRowName = 'Hole row 8', $cmHoelVal = '1', $cmAreaRowName = 'Area row 8', $cmAreaVal = 'G', $cmNameRow = 'Name row 8', $cmNameVal = 'Sta 8', $cmStationVal = '1-1-8', $cmStationRowName = 'Station row 8', $cmStationAccessRow = 'Row 8'

📄 SidePanel

20.59s ⬆

Time	Level	Category	Message
05:15.144	Info	Data	Current variable values:

$cmSprinklerModel = '730', $cmNozzleModel = '33', $cmArc = '360', $cmPressure = '50', $cmNumSprinklers = '1', $cmNozzleFlow = '22', $cmBackFlow = '10', $cmStaFlow = '22', $cmPrecipRate = '0.57', $cmPattern = 'Tirangle', $cmSprinklerSpacing = '65', $cmRowSpacing = '0'

⚙ StationLevelTest

Data Row: **9**   39.37s ⬆

Station: 1-1-9

StationAccessRow: Row 9

StationRowName: Station row 9

Name: Sta 9

NameRow: Name row 9

Area: G

AreaRowName: Area row 9

Hole: 1

HoleRowName: Hole row 9

Tag: 1

TagRowName: Tag row 9

NOS: 1

NOSRowName: Number of Sprinklers row

LSM Address: 10015B

AddRowName: LSMAddress row 9

LSM Offset: 1

OffsetRowName: LSMOffset row 9

Wire Path: 1001

WPRowName: Wire Path row 9

Sprinkler Model: 730

Nozzle Model: 33

Arc: 360

Pressure: 50

Num Sprinklers: 1

Nozzle Flow: 22

Back Flow: 10

Sta Flow: 22

Precip Rate: 0.57

Pattern: Tirangle

Sprinkler Spacing: 65

Row Spacing: 0

📄 PopulateColumn

18.77s ⤒

Time	Level	Category	Message

Time	Level	Category	Message
05:35.736	Info	Data	Current variable values:

$cmWPRowName = 'Wire Path row 9', $cmWPValue = '1001', $cmOffsetRowName = 'LSMOffset row 9', $cmOffsetVal = '1', $cmAddRowName = 'LSMAddress row 9', $cmAddVal = '10015B', $cmNOSRowName = 'Number of Sprinklers row', $cmNOSVal = '1', $cmTagRowName = 'Tag row 9', $cmHoleRowName = 'Hole row 9', $cmHoelVal = '1', $cmAreaRowName = 'Area row 9', $cmAreaVal = 'G', $cmNameRow = 'Name row 9', $cmNameVal = 'Sta 9', $cmStationVal = '1-1-9', $cmStationRowName = 'Station row 9', $cmStationAccessRow = 'Row 9'

📄 SidePanel

20.6s ⤒

Time	Level	Category	Message
05:54.506	Info	Data	Current variable values:

$cmSprinklerModel = '730', $cmNozzleModel = '33', $cmArc = '360', $cmPressure = '50', $cmNumSprinklers = '1', $cmNozzleFlow = '22', $cmBackFlow = '10', $cmStaFlow = '22', $cmPrecipRate = '0.57', $cmPattern = 'Tirangle', $cmSprinklerSpacing = '65', $cmRowSpacing = '0'

⚙️ StationLevelTest

Data Row: **10**   39.04s ⤒

Station: 1-1-10

StationAccessRow: Row 10

StationRowName: Station row 10

Name: Sta 10

NameRow: Name row 10

Area: G

AreaRowName: Area row 10

Hole: 1

HoleRowName: Hole row 10

Tag: 1

TagRowName: Tag row 10

NOS: 1

NOSRowName: Number of Sprinklers row

LSM Address: 1000C9

AddRowName: LSMAddress row 10

LSM Offset: 1

OffsetRowName: LSMOffset row 10

Wire Path: 1001

WPRowName: Wire Path row 10

Sprinkler Model: 730

Nozzle Model: 33

Arc: 360

Pressure: 50

Num Sprinklers: 1

Nozzle Flow: 22

Back Flow: 10

Sta Flow: 22

Precip Rate: 0.57

Pattern: Tirangle

Sprinkler Spacing: 65

Row Spacing: 0

📄 PopulateColumn

18.4s ⤒

Time	Level	Category	Message

Time	Level	Category	Message
06:15.107	Info	Data	Current variable values:

$cmWPRowName = 'Wire Path row 10', $cmWPValue = '1001', $cmOffsetRowName = 'LSMOffset row 10', $cmOffsetVal = '1', $cmAddRowName = 'LSMAddress row 10', $cmAddVal = '1000C9', $cmNOSRowName = 'Number of Sprinklers row', $cmNOSVal = '1', $cmTagRowName = 'Tag row 10', $cmHoleRowName = 'Hole row 10', $cmHoelVal = '1', $cmAreaRowName = 'Area row 10', $cmAreaVal = 'G', $cmNameRow = 'Name row 10', $cmNameVal = 'Sta 10', $cmStationVal = '1-1-10', $cmStationRowName = 'Station row 10', $cmStationAccessRow = 'Row 10'

📄 SidePanel

20.63s ⤒

Time	Level	Category	Message
06:33.511	Info	Data	Current variable values:

$cmSprinklerModel = '730', $cmNozzleModel = '33', $cmArc = '360', $cmPressure = '50', $cmNumSprinklers = '1', $cmNozzleFlow = '22', $cmBackFlow = '10', $cmStaFlow = '22', $cmPrecipRate = '0.57', $cmPattern = 'Tirangle', $cmSprinklerSpacing = '65', $cmRowSpacing = '0'

⚙ **StationLevelTest**

Data Row: **11** 40.98s ⤒

Station: 1-1-11

StationAccessRow: Row 11

StationRowName: Station row 11

Name: Sta 11

NameRow: Name row 11

Area: G

AreaRowName: Area row 11

Hole: 1

HoleRowName: Hole row 11

Tag: 1

TagRowName: Tag row 11

NOS: 1

NOSRowName: Number of Sprinklers row

LSM Address: 100192

AddRowName: LSMAddress row 11

LSM Offset: 1

OffsetRowName: LSMOffset row 11

Wire Path: 1001

WPRowName: Wire Path row 11

Sprinkler Model: 730

Nozzle Model: 33

Arc: 360

Pressure: 50

Num Sprinklers: 1

Nozzle Flow: 22

Back Flow: 10

Sta Flow: 22

Precip Rate: 0.57

Pattern: Tirangle

Sprinkler Spacing: 65

Row Spacing: 0

📄 PopulateColumn

19.03s ⬆

Time	Level	Category	Message

06:54.150	Info	Data	Current variable values:
			$cmWPRowName = 'Wire Path row 11', $cmWPValue = '1001', $cmOffsetRowName = 'LSMOffset row 11', $cmOffsetVal = '1', $cmAddRowName = 'LSMAddress row 11', $cmAddVal = '100192', $cmNOSRowName = 'Number of Sprinklers row', $cmNOSVal = '1', $cmTagRowName = 'Tag row 11', $cmHoleRowName = 'Hole row 11', $cmHoelVal = '1', $cmAreaRowName = 'Area row 11', $cmAreaVal = 'G', $cmNameRow = 'Name row 11', $cmNameVal = 'Sta 11', $cmStationVal = '1-1-11', $cmStationRowName = 'Station row 11', $cmStationAccessRow = 'Row 11'

📄 SidePanel

21.95s ⤒

Time	Level	Category	Message
07:13.184	Info	Data	Current variable values:
			$cmSprinklerModel = '730', $cmNozzleModel = '33', $cmArc = '360', $cmPressure = '50', $cmNumSprinklers = '1', $cmNozzleFlow = '22', $cmBackFlow = '10', $cmStaFlow = '22', $cmPrecipRate = '0.57', $cmPattern = 'Tirangle', $cmSprinklerSpacing = '65', $cmRowSpacing = '0'

⚙️ **StationLevelTest**

Data Row: **12**   40.04s ⤒

Station: 1-1-12

StationAccessRow: Row 12

StationRowName: Station row 12

Name: Sta 12

NameRow: Name row 12

Area: G

AreaRowName: Area row 12

Hole: 1

HoleRowName: Hole row 12

Tag: 1

TagRowName: Tag row 12

NOS: 1

NOSRowName: Number of Sprinklers row

LSM Address: 1000B0

AddRowName: LSMAddress row 12

LSM Offset: 1

OffsetRowName: LSMOffset row 12

Wire Path: 1001

WPRowName: Wire Path row 12

Sprinkler Model: 730

Nozzle Model: 33

Arc: 360

Pressure: 50

Num Sprinklers: 1

Nozzle Flow: 22

Back Flow: 10

Sta Flow: 22

Precip Rate: 0.57

Pattern: Tirangle

Sprinkler Spacing: 65

Row Spacing: 0

📄 PopulateColumn

19.07s ⬆

Time	Level	Category	Message

Time	Level	Category	Message
07:35.137	Info	Data	Current variable values:

$cmWPRowName = 'Wire Path row 12', $cmWPValue = '1001', $cmOffsetRowName = 'LSMOffset row 12', $cmOffsetVal = '1', $cmAddRowName = 'LSMAddress row 12', $cmAddVal = '1000B0', $cmNOSRowName = 'Number of Sprinklers row', $cmNOSVal = '1', $cmTagRowName = 'Tag row 12', $cmHoleRowName = 'Hole row 12', $cmHoelVal = '1', $cmAreaRowName = 'Area row 12', $cmAreaVal = 'G', $cmNameRow = 'Name row 12', $cmNameVal = 'Sta 12', $cmStationVal = '1-1-12', $cmStationRowName = 'Station row 12', $cmStationAccessRow = 'Row 12'

📄 SidePanel

20.96s ⤒

Time	Level	Category	Message
07:54.209	Info	Data	Current variable values:

$cmSprinklerModel = '730', $cmNozzleModel = '33', $cmArc = '360', $cmPressure = '50', $cmNumSprinklers = '1', $cmNozzleFlow = '22', $cmBackFlow = '10', $cmStaFlow = '22', $cmPrecipRate = '0.57', $cmPattern = 'Tirangle', $cmSprinklerSpacing = '65', $cmRowSpacing = '0'

⚙ **StationLevelTest**

Data Row: **13**   40.34s ⤒

Station: 1-1-13

StationAccessRow: Row 13

StationRowName: Station row 13

Name: Sta 13

NameRow: Name row 13

Area: G

AreaRowName: Area row 13

Hole: 1

HoleRowName: Hole row 13

Tag: 1

TagRowName: Tag row 13

NOS: 1

NOSRowName: Number of Sprinklers row

LSM Address: 100299

AddRowName: LSMAddress row 13

LSM Offset: 1

OffsetRowName: LSMOffset row 13

Wire Path: 1001

WPRowName: Wire Path row 13

Sprinkler Model: 730

Nozzle Model: 33

Arc: 360

Pressure: 50

Num Sprinklers: 1

Nozzle Flow: 22

Back Flow: 10

Sta Flow: 22

Precip Rate: 0.57

Pattern: Tirangle

Sprinkler Spacing: 56

Row Spacing: 0

📄 PopulateColumn

19.24s   ⊤

Time	Level	Category	Message

| 08:15.179 | Info | Data | Current variable values:

$cmWPRowName = 'Wire Path row 13', $cmWPValue = '1001', $cmOffsetRowName = 'LSMOffset row 13', $cmOffsetVal = '1', $cmAddRowName = 'LSMAddress row 13', $cmAddVal = '100299', $cmNOSRowName = 'Number of Sprinklers row', $cmNOSVal = '1', $cmTagRowName = 'Tag row 13', $cmHoleRowName = 'Hole row 13', $cmHoelVal = '1', $cmAreaRowName = 'Area row 13', $cmAreaVal = 'G', $cmNameRow = 'Name row 13', $cmNameVal = 'Sta 13', $cmStationVal = '1-1-13', $cmStationRowName = 'Station row 13', $cmStationAccessRow = 'Row 13' |

📄 SidePanel

21.1s ⤒

Time	Level	Category	Message
08:34.418	Info	Data	Current variable values: $cmSprinklerModel = '730', $cmNozzleModel = '33', $cmArc = '360', $cmPressure = '50', $cmNumSprinklers = '1', $cmNozzleFlow = '22', $cmBackFlow = '10', $cmStaFlow = '22', $cmPrecipRate = '0.57', $cmPattern = 'Tirangle', $cmSprinklerSpacing = '56', $cmRowSpacing = '0'

⚙ **StationLevelTest**

Data Row: **14**   39.48s ⤒

Station: 1-1-14

StationAccessRow: Row 14

StationRowName: Station row 14

Name: Sta 14

NameRow: Name row 14

Area: G

AreaRowName: Area row 14

Hole: 1

HoleRowName: Hole row 14

Tag: 1

TagRowName: Tag row 14

NOS: 1

NOSRowName: Number of Sprinklers row

LSM Address: 10029D

AddRowName: LSMAddress row 14

LSM Offset: 1

OffsetRowName: LSMOffset row 14

Wire Path: 1001

WPRowName: Wire Path row 14

Sprinkler Model: 730

Nozzle Model: 33

Arc: 360

Pressure: 50

Num Sprinklers: 1

Nozzle Flow: 22

Back Flow: 10

Sta Flow: 22

Precip Rate: 0.57

Pattern: Tirangle

Sprinkler Spacing: 65

Row Spacing: 0

📄 PopulateColumn

18.52s ⤒

Time	Level	Category	Message

Time	Level	Category	Message
08:55.525	Info	Data	Current variable values:

$cmWPRowName = 'Wire Path row 14', $cmWPValue = '1001', $cmOffsetRowName = 'LSMOffset row 14', $cmOffsetVal = '1', $cmAddRowName = 'LSMAddress row 14', $cmAddVal = '10029D', $cmNOSRowName = 'Number of Sprinklers row', $cmNOSVal = '1', $cmTagRowName = 'Tag row 14', $cmHoleRowName = 'Hole row 14', $cmHoelVal = '1', $cmAreaRowName = 'Area row 14', $cmAreaVal = 'G', $cmNameRow = 'Name row 14', $cmNameVal = 'Sta 14', $cmStationVal = '1-1-14', $cmStationRowName = 'Station row 14', $cmStationAccessRow = 'Row 14'

📄 SidePanel

20.96s ⤒

Time	Level	Category	Message
09:14.049	Info	Data	Current variable values:

$cmSprinklerModel = '730', $cmNozzleModel = '33', $cmArc = '360', $cmPressure = '50', $cmNumSprinklers = '1', $cmNozzleFlow = '22', $cmBackFlow = '10', $cmStaFlow = '22', $cmPrecipRate = '0.57', $cmPattern = 'Tirangle', $cmSprinklerSpacing = '65', $cmRowSpacing = '0'

⚙ **StationLevelTest**

Data Row: **15**   39.92s ⤒

Station: 1-1-15

StationAccessRow: Row 15

StationRowName: Station row 15

Name: Sta 15

NameRow: Name row 15

Area: G

AreaRowName: Area row 15

Hole: 1

HoleRowName: Hole row 15

Tag: 1

TagRowName: Tag row 15

NOS: 1

NOSRowName: Number of Sprinklers row

LSM Address: 100241

AddRowName: LSMAddress row 15

LSM Offset: 1

OffsetRowName: LSMOffset row 15

Wire Path: 1001

WPRowName: Wire Path row 15

Sprinkler Model: 730

Nozzle Model: 33

Arc: 360

Pressure: 50

Num Sprinklers: 1

Nozzle Flow: 22

Back Flow: 10

Sta Flow: 22

Precip Rate: 0.57

Pattern: Tirangle

Sprinkler Spacing: 65

Row Spacing: 0

📄 PopulateColumn

19.42s

Time	Level	Category	Message

Time	Level	Category	Message
09:35.011	Info	Data	Current variable values:

$cmWPRowName = 'Wire Path row 15', $cmWPValue = '1001', $cmOffsetRowName = 'LSMOffset row 15', $cmOffsetVal = '1', $cmAddRowName = 'LSMAddress row 15', $cmAddVal = '100241', $cmNOSRowName = 'Number of Sprinklers row', $cmNOSVal = '1', $cmTagRowName = 'Tag row 15', $cmHoleRowName = 'Hole row 15', $cmHoelVal = '1', $cmAreaRowName = 'Area row 15', $cmAreaVal = 'G', $cmNameRow = 'Name row 15', $cmNameVal = 'Sta 15', $cmStationVal = '1-1-15', $cmStationRowName = 'Station row 15', $cmStationAccessRow = 'Row 15'

📄 SidePanel

20.49s ⬆

Time	Level	Category	Message
09:54.435	Info	Data	Current variable values:

$cmSprinklerModel = '730', $cmNozzleModel = '33', $cmArc = '360', $cmPressure = '50', $cmNumSprinklers = '1', $cmNozzleFlow = '22', $cmBackFlow = '10', $cmStaFlow = '22', $cmPrecipRate = '0.57', $cmPattern = 'Tirangle', $cmSprinklerSpacing = '65', $cmRowSpacing = '0'

⚙ StationLevelTest

Data Row: **16** 40.75s ⬆

Station: 1-1-16

StationAccessRow: Row 16

StationRowName: Station row 16

Name: Sta 16

NameRow: Name row 16

Area: G

AreaRowName: Area row 16

Hole: 1

HoleRowName: Hole row 16

Tag: 1

TagRowName: Tag row 16

NOS: 1

NOSRowName: Number of Sprinklers row

LSM Address: 1000E0

AddRowName: LSMAddress row 16

LSM Offset: 1

OffsetRowName: LSMOffset row 16

Wire Path: 1001

WPRowName: Wire Path row 16

Sprinkler Model: 730

Nozzle Model: 33

Arc: 360

Pressure: 50

Num Sprinklers: 1

Nozzle Flow: 22

Back Flow: 10

Sta Flow: 22

Precip Rate: 0.57

Pattern: Tirangle

Sprinkler Spacing: 65

Row Spacing: 0

📄 PopulateColumn

19.77s ⬆

Time	Level	Category	Message

Time	Level	Category	Message
10:14.930	Info	Data	Current variable values:

$cmWPRowName = 'Wire Path row 16', $cmWPValue = '1001', $cmOffsetRowName = 'LSMOffset row 16', $cmOffsetVal = '1', $cmAddRowName = 'LSMAddress row 16', $cmAddVal = '1000E0', $cmNOSRowName = 'Number of Sprinklers row', $cmNOSVal = '1', $cmTagRowName = 'Tag row 16', $cmHoleRowName = 'Hole row 16', $cmHoelVal = '1', $cmAreaRowName = 'Area row 16', $cmAreaVal = 'G', $cmNameRow = 'Name row 16', $cmNameVal = 'Sta 16', $cmStationVal = '1-1-16', $cmStationRowName = 'Station row 16', $cmStationAccessRow = 'Row 16'

📄 SidePanel

20.98s ⌅

Time	Level	Category	Message
10:34.698	Info	Data	Current variable values:

$cmSprinklerModel = '730', $cmNozzleModel = '33', $cmArc = '360', $cmPressure = '50', $cmNumSprinklers = '1', $cmNozzleFlow = '22', $cmBackFlow = '10', $cmStaFlow = '22', $cmPrecipRate = '0.57', $cmPattern = 'Tirangle', $cmSprinklerSpacing = '65', $cmRowSpacing = '0'

⚙ **StationLevelTest**

Data Row: **17** 42.95s ⌅

Station: 1-1-17

StationAccessRow: Row 17

StationRowName: Station row 17

Name: Sta 17

NameRow: Name row 17

Area: G

AreaRowName: Area row 17

Hole: 1

HoleRowName: Hole row 17

Tag: 1

TagRowName: Tag row 17

NOS: 1

NOSRowName: Number of Sprinklers row

LSM Address: 10021B

AddRowName: LSMAddress row 17

LSM Offset: 1

OffsetRowName: LSMOffset row 17

Wire Path: 1001

WPRowName: Wire Path row 17

Sprinkler Model: 730

Nozzle Model: 33

Arc: 360

Pressure: 50

Num Sprinklers: 1

Nozzle Flow: 22

Back Flow: 10

Sta Flow: 22

Precip Rate: 0.57

Pattern: Tirangle

Sprinkler Spacing: 65

Row Spacing: 0

📄 PopulateColumn

20.14s   ⊤

Time	Level	Category	Message

Time	Level	Category	Message
10:55.683	Info	Data	Current variable values:

$cmWPRowName = 'Wire Path row 17', $cmWPValue = '1001', $cmOffsetRowName = 'LSMOffset row 17', $cmOffsetVal = '1', $cmAddRowName = 'LSMAddress row 17', $cmAddVal = '10021B', $cmNOSRowName = 'Number of Sprinklers row', $cmNOSVal = '1', $cmTagRowName = 'Tag row 17', $cmHoleRowName = 'Hole row 17', $cmHoelVal = '1', $cmAreaRowName = 'Area row 17', $cmAreaVal = 'G', $cmNameRow = 'Name row 17', $cmNameVal = 'Sta 17', $cmStationVal = '1-1-17', $cmStationRowName = 'Station row 17', $cmStationAccessRow = 'Row 17'

📄 SidePanel

22.81s ⤒

Time	Level	Category	Message
11:15.827	Info	Data	Current variable values:

$cmSprinklerModel = '730', $cmNozzleModel = '33', $cmArc = '360', $cmPressure = '50', $cmNumSprinklers = '1', $cmNozzleFlow = '22', $cmBackFlow = '10', $cmStaFlow = '22', $cmPrecipRate = '0.57', $cmPattern = 'Tirangle', $cmSprinklerSpacing = '65', $cmRowSpacing = '0'

⚙ StationLevelTest

Data Row: **18** 40.18s ⤒

Station: 1-1-18

StationAccessRow: Row 18

StationRowName: Station row 18

Name: Sta 18

NameRow: Name row 18

Area: G

AreaRowName: Area row 18

Hole: 1

HoleRowName: Hole row 18

Tag: 1

TagRowName: Tag row 18

NOS: 1

NOSRowName: Number of Sprinklers row

LSM Address: 100220

AddRowName: LSMAddress row 18

LSM Offset: 1

OffsetRowName: LSMOffset row 18

Wire Path: 1001

WPRowName: Wire Path row 18

Sprinkler Model: 730

Nozzle Model: 33

Arc: 360

Pressure: 50

Num Sprinklers: 1

Nozzle Flow: 22

Back Flow: 10

Sta Flow: 22

Precip Rate: 0.57

Pattern: Tirangle

Sprinkler Spacing: 65

Row Spacing: 0

📄 PopulateColumn

19.79s

Time	Level	Category	Message

Time	Level	Category	Message
11:38.639	Info	Data	Current variable values:

$cmWPRowName = 'Wire Path row 18', $cmWPValue = '1001', $cmOffsetRowName = 'LSMOffset row 18', $cmOffsetVal = '1', $cmAddRowName = 'LSMAddress row 18', $cmAddVal = '100220', $cmNOSRowName = 'Number of Sprinklers row', $cmNOSVal = '1', $cmTagRowName = 'Tag row 18', $cmHoleRowName = 'Hole row 18', $cmHoelVal = '1', $cmAreaRowName = 'Area row 18', $cmAreaVal = 'G', $cmNameRow = 'Name row 18', $cmNameVal = 'Sta 18', $cmStationVal = '1-1-18', $cmStationRowName = 'Station row 18', $cmStationAccessRow = 'Row 18'

📄 SidePanel

20.39s ⭱

Time	Level	Category	Message
11:58.427	Info	Data	Current variable values:

$cmSprinklerModel = '730', $cmNozzleModel = '33', $cmArc = '360', $cmPressure = '50', $cmNumSprinklers = '1', $cmNozzleFlow = '22', $cmBackFlow = '10', $cmStaFlow = '22', $cmPrecipRate = '0.57', $cmPattern = 'Tirangle', $cmSprinklerSpacing = '65', $cmRowSpacing = '0'

⚙️ StationLevelTest

Data Row: **19**   40.22s ⭱

Station: 1-1-19

StationAccessRow: Row 19

StationRowName: Station row 19

Name: Sta 19

NameRow: Name row 19

Area: G

AreaRowName: Area row 19

Hole: 1

HoleRowName: Hole row 19

Tag: 1

TagRowName: Tag row 19

NOS: 1

NOSRowName: Number of Sprinklers row

LSM Address: 100218

AddRowName: LSMAddress row 19

LSM Offset: 1

OffsetRowName: LSMOffset row 19

Wire Path: 1001

WPRowName: Wire Path row 19

Sprinkler Model: 730

Nozzle Model: 33

Arc: 360

Pressure: 50

Num Sprinklers: 1

Nozzle Flow: 22

Back Flow: 10

Sta Flow: 22

Precip Rate: 0.57

Pattern: Tirangle

Sprinkler Spacing: 65

Row Spacing: 0

📄 PopulateColumn

19.43s

Time	Level	Category	Message

Time	Level	Category	Message
12:18.821	Info	Data	Current variable values: $cmWPRowName = 'Wire Path row 19', $cmWPValue = '1001', $cmOffsetRowName = 'LSMOffset row 19', $cmOffsetVal = '1', $cmAddRowName = 'LSMAddress row 19', $cmAddVal = '100218', $cmNOSRowName = 'Number of Sprinklers row', $cmNOSVal = '1', $cmTagRowName = 'Tag row 19', $cmHoleRowName = 'Hole row 19', $cmHoelVal = '1', $cmAreaRowName = 'Area row 19', $cmAreaVal = 'G', $cmNameRow = 'Name row 19', $cmNameVal = 'Sta 19', $cmStationVal = '1-1-19', $cmStationRowName = 'Station row 19', $cmStationAccessRow = 'Row 19'

📄 SidePanel

20.79s ⊤

Time	Level	Category	Message
12:38.251	Info	Data	Current variable values: $cmSprinklerModel = '730', $cmNozzleModel = '33', $cmArc = '360', $cmPressure = '50', $cmNumSprinklers = '1', $cmNozzleFlow = '22', $cmBackFlow = '10', $cmStaFlow = '22', $cmPrecipRate = '0.57', $cmPattern = 'Tirangle', $cmSprinklerSpacing = '65', $cmRowSpacing = '0'

⚙ **StationLevelTest**

Data Row: **20**   40s ⊤

Station: 1-1-20

StationAccessRow: Row 20

StationRowName: Station row 20

Name: Sta 20

NameRow: Name row 20

Area: G

AreaRowName: Area row 20

Hole: 1

HoleRowName: Hole row 20

Tag: 1

TagRowName: Tag row 20

NOS: 1

NOSRowName: Number of Sprinklers row

LSM Address: 1001CA

AddRowName: LSMAddress row 20

LSM Offset: 1

OffsetRowName: LSMOffset row 20

Wire Path: 1001

WPRowName: Wire Path row 20

Sprinkler Model: 730

Nozzle Model: 33

Arc: 360

Pressure: 50

Num Sprinklers: 1

Nozzle Flow: 22

Back Flow: 10

Sta Flow: 22

Precip Rate: 0.57

Pattern: Tirangle

Sprinkler Spacing: 65

Row Spacing: 0

📄 PopulateColumn

19.06s

Time	Level	Category	Message

12:59.044	Info	Data	Current variable values:
			$cmWPRowName = 'Wire Path row 20', $cmWPValue = '1001', $cmOffsetRowName = 'LSMOffset row 20', $cmOffsetVal = '1', $cmAddRowName = 'LSMAddress row 20', $cmAddVal = '1001CA', $cmNOSRowName = 'Number of Sprinklers row', $cmNOSVal = '1', $cmTagRowName = 'Tag row 20', $cmHoleRowName = 'Hole row 20', $cmHoelVal = '1', $cmAreaRowName = 'Area row 20', $cmAreaVal = 'G', $cmNameRow = 'Name row 20', $cmNameVal = 'Sta 20', $cmStationVal = '1-1-20', $cmStationRowName = 'Station row 20', $cmStationAccessRow = 'Row 20'

📄 SidePanel

20.94s   ⊤

Time	Level	Category	Message
13:18.109	Info	Data	Current variable values:
			$cmSprinklerModel = '730', $cmNozzleModel = '33', $cmArc = '360', $cmPressure = '50', $cmNumSprinklers = '1', $cmNozzleFlow = '22', $cmBackFlow = '10', $cmStaFlow = '22', $cmPrecipRate = '0.57', $cmPattern = 'Tirangle', $cmSprinklerSpacing = '65', $cmRowSpacing = '0'

⚙ **StationLevelTest**

Data Row: **21**   39.38s   ⊤

Station: 1-1-21

StationAccessRow: Row 21

StationRowName: Station row 21

Name: Sta 21

NameRow: Name row 21

Area: G

AreaRowName: Area row 21

Hole: 1

HoleRowName: Hole row 21

Tag: 1

TagRowName: Tag row 21

NOS: 1

NOSRowName: Number of Sprinklers row

LSM Address: 1001B5

AddRowName: LSMAddress row 21

LSM Offset: 1

OffsetRowName: LSMOffset row 21

Wire Path: 1001

WPRowName: Wire Path row 21

Sprinkler Model: 730

Nozzle Model: 33

Arc: 360

Pressure: 50

Num Sprinklers: 1

Nozzle Flow: 22

Back Flow: 10

Sta Flow: 22

Precip Rate: 0.57

Pattern: Tirangle

Sprinkler Spacing: 56

Row Spacing: 0

📄 PopulateColumn

18.85s ⬆

Time	Level	Category	Message

Time	Level	Category	Message
13:39.048	Info	Data	Current variable values:

$cmWPRowName = 'Wire Path row 21', $cmWPValue = '1001', $cmOffsetRowName = 'LSMOffset row 21', $cmOffsetVal = '1', $cmAddRowName = 'LSMAddress row 21', $cmAddVal = '1001B5', $cmNOSRowName = 'Number of Sprinklers row', $cmNOSVal = '1', $cmTagRowName = 'Tag row 21', $cmHoleRowName = 'Hole row 21', $cmHoelVal = '1', $cmAreaRowName = 'Area row 21', $cmAreaVal = 'G', $cmNameRow = 'Name row 21', $cmNameVal = 'Sta 21', $cmStationVal = '1-1-21', $cmStationRowName = 'Station row 21', $cmStationAccessRow = 'Row 21'

📄 SidePanel

20.52s ⤒

Time	Level	Category	Message
13:57.900	Info	Data	Current variable values:

$cmSprinklerModel = '730', $cmNozzleModel = '33', $cmArc = '360', $cmPressure = '50', $cmNumSprinklers = '1', $cmNozzleFlow = '22', $cmBackFlow = '10', $cmStaFlow = '22', $cmPrecipRate = '0.57', $cmPattern = 'Tirangle', $cmSprinklerSpacing = '56', $cmRowSpacing = '0'

⚙ StationLevelTest

Data Row: **22**   39.38s ⤒

Station: 1-1-22

StationAccessRow: Row 22

StationRowName: Station row 22

Name: Sta 22

NameRow: Name row 22

Area: G

AreaRowName: Area row 22

Hole: 1

HoleRowName: Hole row 22

Tag: 1

TagRowName: Tag row 22

NOS: 1

NOSRowName: Number of Sprinklers row

LSM Address: 10021A

AddRowName: LSMAddress row 22

LSM Offset: 1

OffsetRowName: LSMOffset row 22

Wire Path: 1001

WPRowName: Wire Path row 22

Sprinkler Model: 730

Nozzle Model: 33

Arc: 360

Pressure: 50

Num Sprinklers: 1

Nozzle Flow: 22

Back Flow: 10

Sta Flow: 22

Precip Rate: 0.57

Pattern: Tirangle

Sprinkler Spacing: 65

Row Spacing: 0

📄 PopulateColumn

18.53s ⤒

Time	Level	Category	Message

14:18.425	Info	Data	Current variable values:
			$cmWPRowName = 'Wire Path row 22', $cmWPValue = '1001', $cmOffsetRowName = 'LSMOffset row 22', $cmOffsetVal = '1', $cmAddRowName = 'LSMAddress row 22', $cmAddVal = '10021A', $cmNOSRowName = 'Number of Sprinklers row', $cmNOSVal = '1', $cmTagRowName = 'Tag row 22', $cmHoleRowName = 'Hole row 22', $cmHoelVal = '1', $cmAreaRowName = 'Area row 22', $cmAreaVal = 'G', $cmNameRow = 'Name row 22', $cmNameVal = 'Sta 22', $cmStationVal = '1-1-22', $cmStationRowName = 'Station row 22', $cmStationAccessRow = 'Row 22'

📄 SidePanel

20.84s ⊤

Time	Level	Category	Message
14:36.959	Info	Data	Current variable values:
			$cmSprinklerModel = '730', $cmNozzleModel = '33', $cmArc = '360', $cmPressure = '50', $cmNumSprinklers = '1', $cmNozzleFlow = '22', $cmBackFlow = '10', $cmStaFlow = '22', $cmPrecipRate = '0.57', $cmPattern = 'Tirangle', $cmSprinklerSpacing = '65', $cmRowSpacing = '0'

⚙ **StationLevelTest**

Data Row: **23**　　　　　　　　　　　　　　　　　　　　39.49s ⊤

Station: 1-1-23

StationAccessRow: Row 23

StationRowName: Station row 23

Name: Sta 23

NameRow: Name row 23

Area: G

AreaRowName: Area row 23

Hole: 1

HoleRowName: Hole row 23

Tag: 1

TagRowName: Tag row 23

NOS: 1

NOSRowName: Number of Sprinklers row

LSM Address: 1001BD

AddRowName: LSMAddress row 23

LSM Offset: 1

OffsetRowName: LSMOffset row 23

Wire Path: 1001

WPRowName: Wire Path row 23

Sprinkler Model: 730

Nozzle Model: 33

Arc: 360

Pressure: 50

Num Sprinklers: 1

Nozzle Flow: 22

Back Flow: 10

Sta Flow: 22

Precip Rate: 0.57

Pattern: Tirangle

Sprinkler Spacing: 65

Row Spacing: 0

📄 PopulateColumn

18.55s ⬆

Time	Level	Category	Message

14:57.808	Info	Data	Current variable values:
			$cmWPRowName = 'Wire Path row 23', $cmWPValue = '1001', $cmOffsetRowName = 'LSMOffset row 23', $cmOffsetVal = '1', $cmAddRowName = 'LSMAddress row 23', $cmAddVal = '1001BD', $cmNOSRowName = 'Number of Sprinklers row', $cmNOSVal = '1', $cmTagRowName = 'Tag row 23', $cmHoleRowName = 'Hole row 23', $cmHoelVal = '1', $cmAreaRowName = 'Area row 23', $cmAreaVal = 'G', $cmNameRow = 'Name row 23', $cmNameVal = 'Sta 23', $cmStationVal = '1-1-23', $cmStationRowName = 'Station row 23', $cmStationAccessRow = 'Row 23'

📄 SidePanel

20.93s ⬆

Time	Level	Category	Message
15:16.364	Info	Data	Current variable values:
			$cmSprinklerModel = '730', $cmNozzleModel = '33', $cmArc = '360', $cmPressure = '50', $cmNumSprinklers = '1', $cmNozzleFlow = '22', $cmBackFlow = '10', $cmStaFlow = '22', $cmPrecipRate = '0.57', $cmPattern = 'Tirangle', $cmSprinklerSpacing = '65', $cmRowSpacing = '0'

⚙ StationLevelTest

Data Row: **24**   38.82s ⬆

Station: 1-1-24

StationAccessRow: Row 24

StationRowName: Station row 24

Name: Sta 24

NameRow: Name row 24

Area: G

AreaRowName: Area row 24

Hole: 1

HoleRowName: Hole row 24

Tag: 1

TagRowName: Tag row 24

NOS: 1

NOSRowName: Number of Sprinklers row

LSM Address: 1001D6

AddRowName: LSMAddress row 24

LSM Offset: 1

OffsetRowName: LSMOffset row 24

Wire Path: 1001

WPRowName: Wire Path row 24

Sprinkler Model: 730

Nozzle Model: 33

Arc: 360

Pressure: 50

Num Sprinklers: 1

Nozzle Flow: 22

Back Flow: 10

Sta Flow: 22

Precip Rate: 0.57

Pattern: Tirangle

Sprinkler Spacing: 65

Row Spacing: 0

📄 PopulateColumn

18.15s

Time	Level	Category	Message

Time	Level	Category	Message
15:37.300	Info	Data	Current variable values:

$cmWPRowName = 'Wire Path row 24', $cmWPValue = '1001', $cmOffsetRowName = 'LSMOffset row 24', $cmOffsetVal = '1', $cmAddRowName = 'LSMAddress row 24', $cmAddVal = '1001D6', $cmNOSRowName = 'Number of Sprinklers row', $cmNOSVal = '1', $cmTagRowName = 'Tag row 24', $cmHoleRowName = 'Hole row 24', $cmHoelVal = '1', $cmAreaRowName = 'Area row 24', $cmAreaVal = 'G', $cmNameRow = 'Name row 24', $cmNameVal = 'Sta 24', $cmStationVal = '1-1-24', $cmStationRowName = 'Station row 24', $cmStationAccessRow = 'Row 24'

📄 SidePanel

20.67s ⊤

Time	Level	Category	Message
15:55.448	Info	Data	Current variable values:

$cmSprinklerModel = '730', $cmNozzleModel = '33', $cmArc = '360', $cmPressure = '50', $cmNumSprinklers = '1', $cmNozzleFlow = '22', $cmBackFlow = '10', $cmStaFlow = '22', $cmPrecipRate = '0.57', $cmPattern = 'Tirangle', $cmSprinklerSpacing = '65', $cmRowSpacing = '0'

⚙ **StationLevelTest**

Data Row: **25**   40.05s ⊤

Station: 1-1-25

StationAccessRow: Row 25

StationRowName: Station row 25

Name: Sta 25

NameRow: Name row 25

Area: G

AreaRowName: Area row 25

Hole: 1

HoleRowName: Hole row 25

Tag: 1

TagRowName: Tag row 25

NOS: 1

NOSRowName: Number of Sprinklers row

LSM Address: 100264

AddRowName: LSMAddress row 25

LSM Offset: 1

OffsetRowName: LSMOffset row 25

Wire Path: 1001

WPRowName: Wire Path row 25

Sprinkler Model: 730

Nozzle Model: 33

Arc: 360

Pressure: 50

Num Sprinklers: 1

Nozzle Flow: 22

Back Flow: 10

Sta Flow: 22

Precip Rate: 0.57

Pattern: Tirangle

Sprinkler Spacing: 65

Row Spacing: 0

📄 PopulateColumn

19.39s

Time	Level	Category	Message

Time	Level	Category	Message
16:16.119	Info	Data	Current variable values: $cmWPRowName = 'Wire Path row 25', $cmWPValue = '1001', $cmOffsetRowName = 'LSMOffset row 25', $cmOffsetVal = '1', $cmAddRowName = 'LSMAddress row 25', $cmAddVal = '100264', $cmNOSRowName = 'Number of Sprinklers row', $cmNOSVal = '1', $cmTagRowName = 'Tag row 25', $cmHoleRowName = 'Hole row 25', $cmHoelVal = '1', $cmAreaRowName = 'Area row 25', $cmAreaVal = 'G', $cmNameRow = 'Name row 25', $cmNameVal = 'Sta 25', $cmStationVal = '1-1-25', $cmStationRowName = 'Station row 25', $cmStationAccessRow = 'Row 25'

📄 SidePanel

20.66s ⊤

Time	Level	Category	Message
16:35.510	Info	Data	Current variable values: $cmSprinklerModel = '730', $cmNozzleModel = '33', $cmArc = '360', $cmPressure = '50', $cmNumSprinklers = '1', $cmNozzleFlow = '22', $cmBackFlow = '10', $cmStaFlow = '22', $cmPrecipRate = '0.57', $cmPattern = 'Tirangle', $cmSprinklerSpacing = '65', $cmRowSpacing = '0'

⚙ StationLevelTest

Data Row: **26** 39.65s ⊤

Station: 1-1-26

StationAccessRow: Row 26

StationRowName: Station row 26

Name: Sta 26

NameRow: Name row 26

Area: G

AreaRowName: Area row 26

Hole: 1

HoleRowName: Hole row 26

Tag: 1

TagRowName: Tag row 26

NOS: 1

NOSRowName: Number of Sprinklers row

LSM Address: 100201

AddRowName: LSMAddress row 26

LSM Offset: 1

OffsetRowName: LSMOffset row 26

Wire Path: 1001

WPRowName: Wire Path row 26

Sprinkler Model: 730

Nozzle Model: 33

Arc: 360

Pressure: 50

Num Sprinklers: 1

Nozzle Flow: 22

Back Flow: 10

Sta Flow: 22

Precip Rate: 0.57

Pattern: Tirangle

Sprinkler Spacing: 65

Row Spacing: 0

📄 PopulateColumn

18.55s ⬆

Time	Level	Category	Message

Time	Level	Category	Message
16:56.174	Info	Data	Current variable values:

$cmWPRowName = 'Wire Path row 26', $cmWPValue = '1001', $cmOffsetRowName = 'LSMOffset row 26', $cmOffsetVal = '1', $cmAddRowName = 'LSMAddress row 26', $cmAddVal = '100201', $cmNOSRowName = 'Number of Sprinklers row', $cmNOSVal = '1', $cmTagRowName = 'Tag row 26', $cmHoleRowName = 'Hole row 26', $cmHoelVal = '1', $cmAreaRowName = 'Area row 26', $cmAreaVal = 'G', $cmNameRow = 'Name row 26', $cmNameVal = 'Sta 26', $cmStationVal = '1-1-26', $cmStationRowName = 'Station row 26', $cmStationAccessRow = 'Row 26'

📄 SidePanel

21.09s

Time	Level	Category	Message
17:14.726	Info	Data	Current variable values:

$cmSprinklerModel = '730', $cmNozzleModel = '33', $cmArc = '360', $cmPressure = '50', $cmNumSprinklers = '1', $cmNozzleFlow = '22', $cmBackFlow = '10', $cmStaFlow = '22', $cmPrecipRate = '0.57', $cmPattern = 'Tirangle', $cmSprinklerSpacing = '65', $cmRowSpacing = '0'

⚙ **StationLevelTest**

Data Row: **27**   40.44s

Station: 1-1-27

StationAccessRow: Row 27

StationRowName: Station row 27

Name: Sta 27

NameRow: Name row 27

Area: G

AreaRowName: Area row 27

Hole: 1

HoleRowName: Hole row 27

Tag: 1

TagRowName: Tag row 27

NOS: 1

NOSRowName: Number of Sprinklers row

LSM Address: 10026B

AddRowName: LSMAddress row 27

LSM Offset: 1

OffsetRowName: LSMOffset row 27

Wire Path: 1001

WPRowName: Wire Path row 27

Sprinkler Model: 730

Nozzle Model: 33

Arc: 360

Pressure: 50

Num Sprinklers: 1

Nozzle Flow: 22

Back Flow: 10

Sta Flow: 22

Precip Rate: 0.57

Pattern: Tirangle

Sprinkler Spacing: 65

Row Spacing: 0

📄 PopulateColumn

19.41s ⊤

Time	Level	Category	Message

Time	Level	Category	Message
17:35.823	Info	Data	Current variable values:

$cmWPRowName = 'Wire Path row 27', $cmWPValue = '1001', $cmOffsetRowName = 'LSMOffset row 27', $cmOffsetVal = '1', $cmAddRowName = 'LSMAddress row 27', $cmAddVal = '10026B', $cmNOSRowName = 'Number of Sprinklers row', $cmNOSVal = '1', $cmTagRowName = 'Tag row 27', $cmHoleRowName = 'Hole row 27', $cmHoelVal = '1', $cmAreaRowName = 'Area row 27', $cmAreaVal = 'G', $cmNameRow = 'Name row 27', $cmNameVal = 'Sta 27', $cmStationVal = '1-1-27', $cmStationRowName = 'Station row 27', $cmStationAccessRow = 'Row 27'

📄 SidePanel

21.02s ⤒

Time	Level	Category	Message
17:55.241	Info	Data	Current variable values:

$cmSprinklerModel = '730', $cmNozzleModel = '33', $cmArc = '360', $cmPressure = '50', $cmNumSprinklers = '1', $cmNozzleFlow = '22', $cmBackFlow = '10', $cmStaFlow = '22', $cmPrecipRate = '0.57', $cmPattern = 'Tirangle', $cmSprinklerSpacing = '65', $cmRowSpacing = '0'

⚙️ **StationLevelTest**

Data Row: **28**   40.28s ⤒

Station: 1-1-28

StationAccessRow: Row 28

StationRowName: Station row 28

Name: Sta 28

NameRow: Name row 28

Area: G

AreaRowName: Area row 28

Hole: 1

HoleRowName: Hole row 28

Tag: 1

TagRowName: Tag row 28

NOS: 1

NOSRowName: Number of Sprinklers row

LSM Address: 10006B

AddRowName: LSMAddress row 28

LSM Offset: 1

OffsetRowName: LSMOffset row 28

Wire Path: 1001

WPRowName: Wire Path row 28

Sprinkler Model: 730

Nozzle Model: 33

Arc: 360

Pressure: 50

Num Sprinklers: 1

Nozzle Flow: 22

Back Flow: 10

Sta Flow: 22

Precip Rate: 0.57

Pattern: Tirangle

Sprinkler Spacing: 65

Row Spacing: 0

📄 PopulateColumn

19.48s ⌅

Time	Level	Category	Message

Time	Level	Category	Message
18:16.263	Info	Data	Current variable values:

$cmWPRowName = 'Wire Path row 28', $cmWPValue = '1001', $cmOffsetRowName = 'LSMOffset row 28', $cmOffsetVal = '1', $cmAddRowName = 'LSMAddress row 28', $cmAddVal = '10006B', $cmNOSRowName = 'Number of Sprinklers row', $cmNOSVal = '1', $cmTagRowName = 'Tag row 28', $cmHoleRowName = 'Hole row 28', $cmHoelVal = '1', $cmAreaRowName = 'Area row 28', $cmAreaVal = 'G', $cmNameRow = 'Name row 28', $cmNameVal = 'Sta 28', $cmStationVal = '1-1-28', $cmStationRowName = 'Station row 28', $cmStationAccessRow = 'Row 28'

📄 SidePanel

20.79s ⊤

Time	Level	Category	Message
18:35.749	Info	Data	Current variable values:

$cmSprinklerModel = '730', $cmNozzleModel = '33', $cmArc = '360', $cmPressure = '50', $cmNumSprinklers = '1', $cmNozzleFlow = '22', $cmBackFlow = '10', $cmStaFlow = '22', $cmPrecipRate = '0.57', $cmPattern = 'Tirangle', $cmSprinklerSpacing = '65', $cmRowSpacing = '0'

⚙️ StationLevelTest

Data Row: **29**   39.78s ⊤

Station: 1-1-29

StationAccessRow: Row 29

StationRowName: Station row 29

Name: Sta 29

NameRow: Name row 29

Area: G

AreaRowName: Area row 29

Hole: 1

HoleRowName: Hole row 29

Tag: 1

TagRowName: Tag row 29

NOS: 1

NOSRowName: Number of Sprinklers row

LSM Address: 100273

AddRowName: LSMAddress row 29

LSM Offset: 1

OffsetRowName: LSMOffset row 29

Wire Path: 1001

WPRowName: Wire Path row 29

Sprinkler Model: 730

Nozzle Model: 33

Arc: 360

Pressure: 50

Num Sprinklers: 1

Nozzle Flow: 22

Back Flow: 10

Sta Flow: 22

Precip Rate: 0.57

Pattern: Tirangle

Sprinkler Spacing: 56

Row Spacing: 0

📄 PopulateColumn

19.36s ⬆

Time	Level	Category	Message

Time	Level	Category	Message
18:56.541	Info	Data	Current variable values: $cmWPRowName = 'Wire Path row 29', $cmWPValue = '1001', $cmOffsetRowName = 'LSMOffset row 29', $cmOffsetVal = '1', $cmAddRowName = 'LSMAddress row 29', $cmAddVal = '100273', $cmNOSRowName = 'Number of Sprinklers row', $cmNOSVal = '1', $cmTagRowName = 'Tag row 29', $cmHoleRowName = 'Hole row 29', $cmHoelVal = '1', $cmAreaRowName = 'Area row 29', $cmAreaVal = 'G', $cmNameRow = 'Name row 29', $cmNameVal = 'Sta 29', $cmStationVal = '1-1-29', $cmStationRowName = 'Station row 29', $cmStationAccessRow = 'Row 29'

📄 SidePanel

20.41s ⬆

Time	Level	Category	Message
19:15.905	Info	Data	Current variable values: $cmSprinklerModel = '730', $cmNozzleModel = '33', $cmArc = '360', $cmPressure = '50', $cmNumSprinklers = '1', $cmNozzleFlow = '22', $cmBackFlow = '10', $cmStaFlow = '22', $cmPrecipRate = '0.57', $cmPattern = 'Tirangle', $cmSprinklerSpacing = '56', $cmRowSpacing = '0'

⚙ **StationLevelTest**

Data Row: **30**   39.65s ⬆

Station: 1-1-30

StationAccessRow: Row 30

StationRowName: Station row 30

Name: Sta 30

NameRow: Name row 30

Area: G

AreaRowName: Area row 30

Hole: 1

HoleRowName: Hole row 30

Tag: 1

TagRowName: Tag row 30

NOS: 1

NOSRowName: Number of Sprinklers row

LSM Address: 100234

AddRowName: LSMAddress row 30

LSM Offset: 1

OffsetRowName: LSMOffset row 30

Wire Path: 1001

WPRowName: Wire Path row 30

Sprinkler Model: 730

Nozzle Model: 33

Arc: 360

Pressure: 50

Num Sprinklers: 1

Nozzle Flow: 22

Back Flow: 10

Sta Flow: 22

Precip Rate: 0.57

Pattern: Tirangle

Sprinkler Spacing: 65

Row Spacing: 0

📄 PopulateColumn

18.78s ⤒

Time	Level	Category	Message

Time	Level	Category	Message
19:36.321	Info	Data	Current variable values:

$cmWPRowName = 'Wire Path row 30', $cmWPValue = '1001', $cmOffsetRowName = 'LSMOffset row 30', $cmOffsetVal = '1', $cmAddRowName = 'LSMAddress row 30', $cmAddVal = '100234', $cmNOSRowName = 'Number of Sprinklers row', $cmNOSVal = '1', $cmTagRowName = 'Tag row 30', $cmHoleRowName = 'Hole row 30', $cmHoelVal = '1', $cmAreaRowName = 'Area row 30', $cmAreaVal = 'G', $cmNameRow = 'Name row 30', $cmNameVal = 'Sta 30', $cmStationVal = '1-1-30', $cmStationRowName = 'Station row 30', $cmStationAccessRow = 'Row 30'

📄 SidePanel

20.87s ⤒

Time	Level	Category	Message
19:55.100	Info	Data	Current variable values:

$cmSprinklerModel = '730', $cmNozzleModel = '33', $cmArc = '360', $cmPressure = '50', $cmNumSprinklers = '1', $cmNozzleFlow = '22', $cmBackFlow = '10', $cmStaFlow = '22', $cmPrecipRate = '0.57', $cmPattern = 'Tirangle', $cmSprinklerSpacing = '65', $cmRowSpacing = '0'

⚙ **StationLevelTest**

Data Row: **31**   40.35s ⤒

Station: 1-1-31

StationAccessRow: Row 31

StationRowName: Station row 31

Name: Sta 31

NameRow: Name row 31

Area: G

AreaRowName: Area row 31

Hole: 1

HoleRowName: Hole row 31

Tag: 1

TagRowName: Tag row 31

NOS: 1

NOSRowName: Number of Sprinklers row

LSM Address: 100271

AddRowName: LSMAddress row 31

LSM Offset: 1

OffsetRowName: LSMOffset row 31

Wire Path: 1001

WPRowName: Wire Path row 31

Sprinkler Model: 730

Nozzle Model: 33

Arc: 360

Pressure: 50

Num Sprinklers: 1

Nozzle Flow: 22

Back Flow: 10

Sta Flow: 22

Precip Rate: 0.57

Pattern: Tirangle

Sprinkler Spacing: 65

Row Spacing: 0

📄 PopulateColumn

19.35s ⌅

Time	Level	Category	Message

Time	Level	Category	Message
20:15.977	Info	Data	Current variable values:

$cmWPRowName = 'Wire Path row 31', $cmWPValue = '1001', $cmOffsetRowName = 'LSMOffset row 31', $cmOffsetVal = '1', $cmAddRowName = 'LSMAddress row 31', $cmAddVal = '100271', $cmNOSRowName = 'Number of Sprinklers row', $cmNOSVal = '1', $cmTagRowName = 'Tag row 31', $cmHoleRowName = 'Hole row 31', $cmHoelVal = '1', $cmAreaRowName = 'Area row 31', $cmAreaVal = 'G', $cmNameRow = 'Name row 31', $cmNameVal = 'Sta 31', $cmStationVal = '1-1-31', $cmStationRowName = 'Station row 31', $cmStationAccessRow = 'Row 31'

📄 SidePanel

21s

Time	Level	Category	Message
20:35.327	Info	Data	Current variable values:

$cmSprinklerModel = '730', $cmNozzleModel = '33', $cmArc = '360', $cmPressure = '50', $cmNumSprinklers = '1', $cmNozzleFlow = '22', $cmBackFlow = '10', $cmStaFlow = '22', $cmPrecipRate = '0.57', $cmPattern = 'Tirangle', $cmSprinklerSpacing = '65', $cmRowSpacing = '0'

⚙️ StationLevelTest

Data Row: **32**   40.04s

Station: 1-1-32

StationAccessRow: Row 32

StationRowName: Station row 32

Name: Sta 32

NameRow: Name row 32

Area: G

AreaRowName: Area row 32

Hole: 1

HoleRowName: Hole row 32

Tag: 1

TagRowName: Tag row 32

NOS: 1

NOSRowName: Number of Sprinklers row

LSM Address: 100083

AddRowName: LSMAddress row 32

LSM Offset: 1

OffsetRowName: LSMOffset row 32

Wire Path: 1001

WPRowName: Wire Path row 32

Sprinkler Model: 730

Nozzle Model: 33

Arc: 360

Pressure: 50

Num Sprinklers: 1

Nozzle Flow: 22

Back Flow: 10

Sta Flow: 22

Precip Rate: 0.57

Pattern: Tirangle

Sprinkler Spacing: 65

Row Spacing: 0

📄 PopulateColumn

18.95s ⬆

Time	Level	Category	Message

Time	Level	Category	Message
20:56.330	Info	Data	Current variable values:

$cmWPRowName = 'Wire Path row 32', $cmWPValue = '1001', $cmOffsetRowName = 'LSMOffset row 32', $cmOffsetVal = '1', $cmAddRowName = 'LSMAddress row 32', $cmAddVal = '100083', $cmNOSRowName = 'Number of Sprinklers row', $cmNOSVal = '1', $cmTagRowName = 'Tag row 32', $cmHoleRowName = 'Hole row 32', $cmHoelVal = '1', $cmAreaRowName = 'Area row 32', $cmAreaVal = 'G', $cmNameRow = 'Name row 32', $cmNameVal = 'Sta 32', $cmStationVal = '1-1-32', $cmStationRowName = 'Station row 32', $cmStationAccessRow = 'Row 32'

📄 SidePanel

21.08s ⤒

Time	Level	Category	Message
21:15.285	Info	Data	Current variable values:

$cmSprinklerModel = '730', $cmNozzleModel = '33', $cmArc = '360', $cmPressure = '50', $cmNumSprinklers = '1', $cmNozzleFlow = '22', $cmBackFlow = '10', $cmStaFlow = '22', $cmPrecipRate = '0.57', $cmPattern = 'Tirangle', $cmSprinklerSpacing = '65', $cmRowSpacing = '0'

⚙ StationLevelTest

Data Row: **33**   40.07s ⤒

Station: 1-1-33

StationAccessRow: Row 33

StationRowName: Station row 33

Name: Sta 33

NameRow: Name row 33

Area: G

AreaRowName: Area row 33

Hole: 1

HoleRowName: Hole row 33

Tag: 1

TagRowName: Tag row 33

NOS: 1

NOSRowName: Number of Sprinklers row

LSM Address: 1001E4

AddRowName: LSMAddress row 33

LSM Offset: 1

OffsetRowName: LSMOffset row 33

Wire Path: 1001

WPRowName: Wire Path row 33

Sprinkler Model: 730

Nozzle Model: 33

Arc: 360

Pressure: 50

Num Sprinklers: 1

Nozzle Flow: 22

Back Flow: 10

Sta Flow: 22

Precip Rate: 0.57

Pattern: Tirangle

Sprinkler Spacing: 65

Row Spacing: 0

📄 PopulateColumn

19.05s ⤒

Time	Level	Category	Message

Time	Level	Category	Message
21:36.367	Info	Data	Current variable values: $cmWPRowName = 'Wire Path row 33', $cmWPValue = '1001', $cmOffsetRowName = 'LSMOffset row 33', $cmOffsetVal = '1', $cmAddRowName = 'LSMAddress row 33', $cmAddVal = '1001E4', $cmNOSRowName = 'Number of Sprinklers row', $cmNOSVal = '1', $cmTagRowName = 'Tag row 33', $cmHoleRowName = 'Hole row 33', $cmHoelVal = '1', $cmAreaRowName = 'Area row 33', $cmAreaVal = 'G', $cmNameRow = 'Name row 33', $cmNameVal = 'Sta 33', $cmStationVal = '1-1-33', $cmStationRowName = 'Station row 33', $cmStationAccessRow = 'Row 33'

📄 SidePanel

21.02s ⤒

Time	Level	Category	Message
21:55.414	Info	Data	Current variable values: $cmSprinklerModel = '730', $cmNozzleModel = '33', $cmArc = '360', $cmPressure = '50', $cmNumSprinklers = '1', $cmNozzleFlow = '22', $cmBackFlow = '10', $cmStaFlow = '22', $cmPrecipRate = '0.57', $cmPattern = 'Tirangle', $cmSprinklerSpacing = '65', $cmRowSpacing = '0'

⚙️ StationLevelTest

Data Row: **34**   39.49s ⤒

Station: 1-1-34

StationAccessRow: Row 34

StationRowName: Station row 34

Name: Sta 34

NameRow: Name row 34

Area: G

AreaRowName: Area row 34

Hole: 1

HoleRowName: Hole row 34

Tag: 1

TagRowName: Tag row 34

NOS: 1

NOSRowName: Number of Sprinklers row

LSM Address: 1001F1

AddRowName: LSMAddress row 34

LSM Offset: 1

OffsetRowName: LSMOffset row 34

Wire Path: 1001

WPRowName: Wire Path row 34

Sprinkler Model: 730

Nozzle Model: 33

Arc: 360

Pressure: 50

Num Sprinklers: 1

Nozzle Flow: 22

Back Flow: 10

Sta Flow: 22

Precip Rate: 0.57

Pattern: Tirangle

Sprinkler Spacing: 65

Row Spacing: 0

📄 PopulateColumn

18.44s

Time	Level	Category	Message

Time	Level	Category	Message
22:16.436	Info	Data	Current variable values:

$cmWPRowName = 'Wire Path row 34', $cmWPValue = '1001', $cmOffsetRowName = 'LSMOffset row 34', $cmOffsetVal = '1', $cmAddRowName = 'LSMAddress row 34', $cmAddVal = '1001F1', $cmNOSRowName = 'Number of Sprinklers row', $cmNOSVal = '1', $cmTagRowName = 'Tag row 34', $cmHoleRowName = 'Hole row 34', $cmHoelVal = '1', $cmAreaRowName = 'Area row 34', $cmAreaVal = 'G', $cmNameRow = 'Name row 34', $cmNameVal = 'Sta 34', $cmStationVal = '1-1-34', $cmStationRowName = 'Station row 34', $cmStationAccessRow = 'Row 34'

📄 SidePanel

21.05s ⤒

Time	Level	Category	Message
22:34.877	Info	Data	Current variable values:

$cmSprinklerModel = '730', $cmNozzleModel = '33', $cmArc = '360', $cmPressure = '50', $cmNumSprinklers = '1', $cmNozzleFlow = '22', $cmBackFlow = '10', $cmStaFlow = '22', $cmPrecipRate = '0.57', $cmPattern = 'Tirangle', $cmSprinklerSpacing = '65', $cmRowSpacing = '0'

⚙ **StationLevelTest**

Data Row: **35**   39.68s ⤒

Station: 1-1-35

StationAccessRow: Row 35

StationRowName: Station row 35

Name: Sta 35

NameRow: Name row 35

Area: G

AreaRowName: Area row 35

Hole: 1

HoleRowName: Hole row 35

Tag: 1

TagRowName: Tag row 35

NOS: 1

NOSRowName: Number of Sprinklers row

LSM Address: 100018

AddRowName: LSMAddress row 35

LSM Offset: 1

OffsetRowName: LSMOffset row 35

Wire Path: 1001

WPRowName: Wire Path row 35

Sprinkler Model: 730

Nozzle Model: 33

Arc: 360

Pressure: 50

Num Sprinklers: 1

Nozzle Flow: 22

Back Flow: 10

Sta Flow: 22

Precip Rate: 0.57

Pattern: Tirangle

Sprinkler Spacing: 65

Row Spacing: 0

📄 PopulateColumn

18.78s ⬆

Time	Level	Category	Message

22:55.931	Info	Data	Current variable values:

$cmWPRowName = 'Wire Path row 35', $cmWPValue = '1001', $cmOffsetRowName = 'LSMOffset row 35', $cmOffsetVal = '1', $cmAddRowName = 'LSMAddress row 35', $cmAddVal = '100018', $cmNOSRowName = 'Number of Sprinklers row', $cmNOSVal = '1', $cmTagRowName = 'Tag row 35', $cmHoleRowName = 'Hole row 35', $cmHoelVal = '1', $cmAreaRowName = 'Area row 35', $cmAreaVal = 'G', $cmNameRow = 'Name row 35', $cmNameVal = 'Sta 35', $cmStationVal = '1-1-35', $cmStationRowName = 'Station row 35', $cmStationAccessRow = 'Row 35'

📄 SidePanel

20.89s ⤒

Time	Level	Category	Message
23:14.718	Info	Data	Current variable values:

$cmSprinklerModel = '730', $cmNozzleModel = '33', $cmArc = '360', $cmPressure = '50', $cmNumSprinklers = '1', $cmNozzleFlow = '22', $cmBackFlow = '10', $cmStaFlow = '22', $cmPrecipRate = '0.57', $cmPattern = 'Tirangle', $cmSprinklerSpacing = '65', $cmRowSpacing = '0'

⚙ StationLevelTest

Data Row: **36**   38.88s ⤒

Station: 1-1-36

StationAccessRow: Row 36

StationRowName: Station row 36

Name: Sta 36

NameRow: Name row 36

Area: G

AreaRowName: Area row 36

Hole: 1

HoleRowName: Hole row 36

Tag: 1

TagRowName: Tag row 36

NOS: 1

NOSRowName: Number of Sprinklers row

LSM Address: 1001EE

AddRowName: LSMAddress row 36

LSM Offset: 1

OffsetRowName: LSMOffset row 36

Wire Path: 1001

WPRowName: Wire Path row 36

Sprinkler Model: 730

Nozzle Model: 33

Arc: 360

Pressure: 50

Num Sprinklers: 1

Nozzle Flow: 22

Back Flow: 10

Sta Flow: 22

Precip Rate: 0.57

Pattern: Tirangle

Sprinkler Spacing: 65

Row Spacing: 0

📄 PopulateColumn

18.13s ⤒

Time	Level	Category	Message

23:35.608	Info	Data	Current variable values:
			$cmWPRowName = 'Wire Path row 36', $cmWPValue = '1001', $cmOffsetRowName = 'LSMOffset row 36', $cmOffsetVal = '1', $cmAddRowName = 'LSMAddress row 36', $cmAddVal = '1001EE', $cmNOSRowName = 'Number of Sprinklers row', $cmNOSVal = '1', $cmTagRowName = 'Tag row 36', $cmHoleRowName = 'Hole row 36', $cmHoelVal = '1', $cmAreaRowName = 'Area row 36', $cmAreaVal = 'G', $cmNameRow = 'Name row 36', $cmNameVal = 'Sta 36', $cmStationVal = '1-1-36', $cmStationRowName = 'Station row 36', $cmStationAccessRow = 'Row 36'

📄 SidePanel

20.75s ⤒

Time	Level	Category	Message
23:53.740	Info	Data	Current variable values:
			$cmSprinklerModel = '730', $cmNozzleModel = '33', $cmArc = '360', $cmPressure = '50', $cmNumSprinklers = '1', $cmNozzleFlow = '22', $cmBackFlow = '10', $cmStaFlow = '22', $cmPrecipRate = '0.57', $cmPattern = 'Tirangle', $cmSprinklerSpacing = '65', $cmRowSpacing = '0'

StationLevelTest

Data Row: **37**   39.62s ⤒

Station: 1-1-37

StationAccessRow: Row 37

StationRowName: Station row 37

Name: Sta 37

NameRow: Name row 37

Area: G

AreaRowName: Area row 37

Hole: 1

HoleRowName: Hole row 37

Tag: 1

TagRowName: Tag row 37

NOS: 1

NOSRowName: Number of Sprinklers row

LSM Address: 10001B

AddRowName: LSMAddress row 37

LSM Offset: 1

OffsetRowName: LSMOffset row 37

Wire Path: 1001

WPRowName: Wire Path row 37

Sprinkler Model: 730

Nozzle Model: 33

Arc: 360

Pressure: 50

Num Sprinklers: 1

Nozzle Flow: 22

Back Flow: 10

Sta Flow: 22

Precip Rate: 0.57

Pattern: Tirangle

Sprinkler Spacing: 56

Row Spacing: 0

📄 PopulateColumn

18.89s

Time	Level	Category	Message

Time	Level	Category	Message
24:14.493	Info	Data	Current variable values:

$cmWPRowName = 'Wire Path row 37', $cmWPValue = '1001', $cmOffsetRowName = 'LSMOffset row 37', $cmOffsetVal = '1', $cmAddRowName = 'LSMAddress row 37', $cmAddVal = '10001B', $cmNOSRowName = 'Number of Sprinklers row', $cmNOSVal = '1', $cmTagRowName = 'Tag row 37', $cmHoleRowName = 'Hole row 37', $cmHoelVal = '1', $cmAreaRowName = 'Area row 37', $cmAreaVal = 'G', $cmNameRow = 'Name row 37', $cmNameVal = 'Sta 37', $cmStationVal = '1-1-37', $cmStationRowName = 'Station row 37', $cmStationAccessRow = 'Row 37'

📄 SidePanel

20.73s ⊤

Time	Level	Category	Message
24:33.389	Info	Data	Current variable values:

$cmSprinklerModel = '730', $cmNozzleModel = '33', $cmArc = '360', $cmPressure = '50', $cmNumSprinklers = '1', $cmNozzleFlow = '22', $cmBackFlow = '10', $cmStaFlow = '22', $cmPrecipRate = '0.57', $cmPattern = 'Tirangle', $cmSprinklerSpacing = '56', $cmRowSpacing = '0'

⚙ StationLevelTest

Data Row: **38**   39.91s ⊤

Station: 1-1-38

StationAccessRow: Row 38

StationRowName: Station row 38

Name: Sta 38

NameRow: Name row 38

Area: G

AreaRowName: Area row 38

Hole: 1

HoleRowName: Hole row 38

Tag: 1

TagRowName: Tag row 38

NOS: 1

NOSRowName: Number of Sprinklers row

LSM Address: 100019

AddRowName: LSMAddress row 38

LSM Offset: 1

OffsetRowName: LSMOffset row 38

Wire Path: 1001

WPRowName: Wire Path row 38

Sprinkler Model: 730

Nozzle Model: 33

Arc: 360

Pressure: 50

Num Sprinklers: 1

Nozzle Flow: 22

Back Flow: 10

Sta Flow: 22

Precip Rate: 0.57

Pattern: Tirangle

Sprinkler Spacing: 65

Row Spacing: 0

📄 PopulateColumn

19.24s ⊤

Time	Level	Category	Message

Time	Level	Category	Message
24:54.118	Info	Data	Current variable values:

$cmWPRowName = 'Wire Path row 38', $cmWPValue = '1001', $cmOffsetRowName = 'LSMOffset row 38', $cmOffsetVal = '1', $cmAddRowName = 'LSMAddress row 38', $cmAddVal = '100019', $cmNOSRowName = 'Number of Sprinklers row', $cmNOSVal = '1', $cmTagRowName = 'Tag row 38', $cmHoleRowName = 'Hole row 38', $cmHoelVal = '1', $cmAreaRowName = 'Area row 38', $cmAreaVal = 'G', $cmNameRow = 'Name row 38', $cmNameVal = 'Sta 38', $cmStationVal = '1-1-38', $cmStationRowName = 'Station row 38', $cmStationAccessRow = 'Row 38'

📄 SidePanel

20.67s ⏫

Time	Level	Category	Message
25:13.357	Info	Data	Current variable values:

$cmSprinklerModel = '730', $cmNozzleModel = '33', $cmArc = '360', $cmPressure = '50', $cmNumSprinklers = '1', $cmNozzleFlow = '22', $cmBackFlow = '10', $cmStaFlow = '22', $cmPrecipRate = '0.57', $cmPattern = 'Tirangle', $cmSprinklerSpacing = '65', $cmRowSpacing = '0'

⚙️ StationLevelTest

Data Row: **39**   39.47s ⏫

Station: 1-1-39

StationAccessRow: Row 39

StationRowName: Station row 39

Name: Sta 39

NameRow: Name row 39

Area: G

AreaRowName: Area row 39

Hole: 1

HoleRowName: Hole row 39

Tag: 1

TagRowName: Tag row 39

NOS: 1

NOSRowName: Number of Sprinklers row

LSM Address: 100270

AddRowName: LSMAddress row 39

LSM Offset: 1

OffsetRowName: LSMOffset row 39

Wire Path: 1001

WPRowName: Wire Path row 39

Sprinkler Model: 730

Nozzle Model: 33

Arc: 360

Pressure: 50

Num Sprinklers: 1

Nozzle Flow: 22

Back Flow: 10

Sta Flow: 22

Precip Rate: 0.57

Pattern: Tirangle

Sprinkler Spacing: 65

Row Spacing: 0

📄 PopulateColumn

18.76s   ⬆

Time	Level	Category	Message

Time	Level	Category	Message
25:34.033	Info	Data	Current variable values:

$cmWPRowName = 'Wire Path row 39', $cmWPValue = '1001', $cmOffsetRowName = 'LSMOffset row 39', $cmOffsetVal = '1', $cmAddRowName = 'LSMAddress row 39', $cmAddVal = '100270', $cmNOSRowName = 'Number of Sprinklers row', $cmNOSVal = '1', $cmTagRowName = 'Tag row 39', $cmHoleRowName = 'Hole row 39', $cmHoelVal = '1', $cmAreaRowName = 'Area row 39', $cmAreaVal = 'G', $cmNameRow = 'Name row 39', $cmNameVal = 'Sta 39', $cmStationVal = '1-1-39', $cmStationRowName = 'Station row 39', $cmStationAccessRow = 'Row 39'

📄 SidePanel

20.71s ⤒

Time	Level	Category	Message
25:52.792	Info	Data	Current variable values:

$cmSprinklerModel = '730', $cmNozzleModel = '33', $cmArc = '360', $cmPressure = '50', $cmNumSprinklers = '1', $cmNozzleFlow = '22', $cmBackFlow = '10', $cmStaFlow = '22', $cmPrecipRate = '0.57', $cmPattern = 'Tirangle', $cmSprinklerSpacing = '65', $cmRowSpacing = '0'

⚙ StationLevelTest

Data Row: **40**

39.77s ⤒

Station: 1-1-40

StationAccessRow: Row 40

StationRowName: Station row 40

Name: Sta 40

NameRow: Name row 40

Area: G

AreaRowName: Area row 40

Hole: 1

HoleRowName: Hole row 40

Tag: 1

TagRowName: Tag row 40

NOS: 1

NOSRowName: Number of Sprinklers row

LSM Address: 100221

AddRowName: LSMAddress row 40

LSM Offset: 1

OffsetRowName: LSMOffset row 40

Wire Path: 1001

WPRowName: Wire Path row 40

Sprinkler Model: 730

Nozzle Model: 33

Arc: 360

Pressure: 50

Num Sprinklers: 1

Nozzle Flow: 22

Back Flow: 10

Sta Flow: 22

Precip Rate: 0.57

Pattern: Tirangle

Sprinkler Spacing: 65

Row Spacing: 0

📄 PopulateColumn

19.12s ⬆

Time	Level	Category	Message

26:13.506	Info	Data	Current variable values:
			$cmWPRowName = 'Wire Path row 40', $cmWPValue = '1001', $cmOffsetRowName = 'LSMOffset row 40', $cmOffsetVal = '1', $cmAddRowName = 'LSMAddress row 40', $cmAddVal = '100221', $cmNOSRowName = 'Number of Sprinklers row', $cmNOSVal = '1', $cmTagRowName = 'Tag row 40', $cmHoleRowName = 'Hole row 40', $cmHoelVal = '1', $cmAreaRowName = 'Area row 40', $cmAreaVal = 'G', $cmNameRow = 'Name row 40', $cmNameVal = 'Sta 40', $cmStationVal = '1-1-40', $cmStationRowName = 'Station row 40', $cmStationAccessRow = 'Row 40'

📄 SidePanel

20.65s ⤒

Time	Level	Category	Message
26:32.631	Info	Data	Current variable values:
			$cmSprinklerModel = '730', $cmNozzleModel = '33', $cmArc = '360', $cmPressure = '50', $cmNumSprinklers = '1', $cmNozzleFlow = '22', $cmBackFlow = '10', $cmStaFlow = '22', $cmPrecipRate = '0.57', $cmPattern = 'Tirangle', $cmSprinklerSpacing = '65', $cmRowSpacing = '0'

⚙ **StationLevelTest**

Data Row: **41**   40.07s ⤒

Station: 1-1-41

StationAccessRow: Row 41

StationRowName: Station row 41

Name: Sta 41

NameRow: Name row 41

Area: G

AreaRowName: Area row 41

Hole: 1

HoleRowName: Hole row 41

Tag: 1

TagRowName: Tag row 41

NOS: 1

NOSRowName: Number of Sprinklers row

LSM Address: 1001BF

AddRowName: LSMAddress row 41

LSM Offset: 1

OffsetRowName: LSMOffset row 41

Wire Path: 1001

WPRowName: Wire Path row 41

Sprinkler Model: 730

Nozzle Model: 33

Arc: 360

Pressure: 50

Num Sprinklers: 1

Nozzle Flow: 22

Back Flow: 10

Sta Flow: 22

Precip Rate: 0.57

Pattern: Tirangle

Sprinkler Spacing: 65

Row Spacing: 0

📄 PopulateColumn

19.07s ⤒

Time	Level	Category	Message

Time	Level	Category	Message
26:53.279	Info	Data	Current variable values:

$cmWPRowName = 'Wire Path row 41', $cmWPValue = '1001', $cmOffsetRowName = 'LSMOffset row 41', $cmOffsetVal = '1', $cmAddRowName = 'LSMAddress row 41', $cmAddVal = '1001BF', $cmNOSRowName = 'Number of Sprinklers row', $cmNOSVal = '1', $cmTagRowName = 'Tag row 41', $cmHoleRowName = 'Hole row 41', $cmHoelVal = '1', $cmAreaRowName = 'Area row 41', $cmAreaVal = 'G', $cmNameRow = 'Name row 41', $cmNameVal = 'Sta 41', $cmStationVal = '1-1-41', $cmStationRowName = 'Station row 41', $cmStationAccessRow = 'Row 41'

📄 SidePanel

20.99s ⬆

Time	Level	Category	Message
27:12.355	Info	Data	Current variable values:

$cmSprinklerModel = '730', $cmNozzleModel = '33', $cmArc = '360', $cmPressure = '50', $cmNumSprinklers = '1', $cmNozzleFlow = '22', $cmBackFlow = '10', $cmStaFlow = '22', $cmPrecipRate = '0.57', $cmPattern = 'Tirangle', $cmSprinklerSpacing = '65', $cmRowSpacing = '0'

⚙ **StationLevelTest**

Data Row: **42**   40.12s ⬆

Station: 1-1-42

StationAccessRow: Row 42

StationRowName: Station row 42

Name: Sta 42

NameRow: Name row 42

Area: G

AreaRowName: Area row 42

Hole: 1

HoleRowName: Hole row 42

Tag: 1

TagRowName: Tag row 42

NOS: 1

NOSRowName: Number of Sprinklers row

LSM Address: 1001B3

AddRowName: LSMAddress row 42

LSM Offset: 1

OffsetRowName: LSMOffset row 42

Wire Path: 1001

WPRowName: Wire Path row 42

Sprinkler Model: 730

Nozzle Model: 33

Arc: 360

Pressure: 50

Num Sprinklers: 1

Nozzle Flow: 22

Back Flow: 10

Sta Flow: 22

Precip Rate: 0.57

Pattern: Tirangle

Sprinkler Spacing: 65

Row Spacing: 0

📄 PopulateColumn

19.1s ⤒

Time	Level	Category	Message

27:33.352	Info	Data	Current variable values:
			$cmWPRowName = 'Wire Path row 42', $cmWPValue = '1001', $cmOffsetRowName = 'LSMOffset row 42', $cmOffsetVal = '1', $cmAddRowName = 'LSMAddress row 42', $cmAddVal = '1001B3', $cmNOSRowName = 'Number of Sprinklers row', $cmNOSVal = '1', $cmTagRowName = 'Tag row 42', $cmHoleRowName = 'Hole row 42', $cmHoelVal = '1', $cmAreaRowName = 'Area row 42', $cmAreaVal = 'G', $cmNameRow = 'Name row 42', $cmNameVal = 'Sta 42', $cmStationVal = '1-1-42', $cmStationRowName = 'Station row 42', $cmStationAccessRow = 'Row 42'

📄 SidePanel

21.01s 🔝

Time	Level	Category	Message
27:52.456	Info	Data	Current variable values:
			$cmSprinklerModel = '730', $cmNozzleModel = '33', $cmArc = '360', $cmPressure = '50', $cmNumSprinklers = '1', $cmNozzleFlow = '22', $cmBackFlow = '10', $cmStaFlow = '22', $cmPrecipRate = '0.57', $cmPattern = 'Tirangle', $cmSprinklerSpacing = '65', $cmRowSpacing = '0'

⚙️ **StationLevelTest**

Data Row: **43**   39.09s 🔝

Station: 1-1-43

StationAccessRow: Row 43

StationRowName: Station row 43

Name: Sta 43

NameRow: Name row 43

Area: G

AreaRowName: Area row 43

Hole: 1

HoleRowName: Hole row 43

Tag: 1

TagRowName: Tag row 43

NOS: 1

NOSRowName: Number of Sprinklers row

LSM Address: 1001B6

AddRowName: LSMAddress row 43

LSM Offset: 1

OffsetRowName: LSMOffset row 43

Wire Path: 1001

WPRowName: Wire Path row 43

Sprinkler Model: 730

Nozzle Model: 33

Arc: 360

Pressure: 50

Num Sprinklers: 1

Nozzle Flow: 22

Back Flow: 10

Sta Flow: 22

Precip Rate: 0.57

Pattern: Tirangle

Sprinkler Spacing: 65

Row Spacing: 0

📄 PopulateColumn

18.6s ⤒

Time	Level	Category	Message

Time	Level	Category	Message
28:13.469	Info	Data	Current variable values:

$cmWPRowName = 'Wire Path row 43', $cmWPValue = '1001', $cmOffsetRowName = 'LSMOffset row 43', $cmOffsetVal = '1', $cmAddRowName = 'LSMAddress row 43', $cmAddVal = '1001B6', $cmNOSRowName = 'Number of Sprinklers row', $cmNOSVal = '1', $cmTagRowName = 'Tag row 43', $cmHoleRowName = 'Hole row 43', $cmHoelVal = '1', $cmAreaRowName = 'Area row 43', $cmAreaVal = 'G', $cmNameRow = 'Name row 43', $cmNameVal = 'Sta 43', $cmStationVal = '1-1-43', $cmStationRowName = 'Station row 43', $cmStationAccessRow = 'Row 43'

📄 SidePanel

20.48s

Time	Level	Category	Message
28:32.074	Info	Data	Current variable values:

$cmSprinklerModel = '730', $cmNozzleModel = '33', $cmArc = '360', $cmPressure = '50', $cmNumSprinklers = '1', $cmNozzleFlow = '22', $cmBackFlow = '10', $cmStaFlow = '22', $cmPrecipRate = '0.57', $cmPattern = 'Tirangle', $cmSprinklerSpacing = '65', $cmRowSpacing = '0'

⚙ StationLevelTest

Data Row: **44**   40.95s

Station: 1-1-44

StationAccessRow: Row 44

StationRowName: Station row 44

Name: Sta 44

NameRow: Name row 44

Area: G

AreaRowName: Area row 44

Hole: 1

HoleRowName: Hole row 44

Tag: 1

TagRowName: Tag row 44

NOS: 1

NOSRowName: Number of Sprinklers row

LSM Address: 1001FA

AddRowName: LSMAddress row 44

LSM Offset: 1

OffsetRowName: LSMOffset row 44

Wire Path: 1001

WPRowName: Wire Path row 44

Sprinkler Model: 730

Nozzle Model: 33

Arc: 360

Pressure: 50

Num Sprinklers: 1

Nozzle Flow: 22

Back Flow: 10

Sta Flow: 22

Precip Rate: 0.57

Pattern: Tirangle

Sprinkler Spacing: 65

Row Spacing: 0

📄 PopulateColumn

18.65s ⬆

Time	Level	Category	Message

28:52.563	Info	Data	Current variable values:

$cmWPRowName = 'Wire Path row 44', $cmWPValue = '1001', $cmOffsetRowName = 'LSMOffset row 44', $cmOffsetVal = '1', $cmAddRowName = 'LSMAddress row 44', $cmAddVal = '1001FA', $cmNOSRowName = 'Number of Sprinklers row', $cmNOSVal = '1', $cmTagRowName = 'Tag row 44', $cmHoleRowName = 'Hole row 44', $cmHoelVal = '1', $cmAreaRowName = 'Area row 44', $cmAreaVal = 'G', $cmNameRow = 'Name row 44', $cmNameVal = 'Sta 44', $cmStationVal = '1-1-44', $cmStationRowName = 'Station row 44', $cmStationAccessRow = 'Row 44'

📄 SidePanel

22.3s ⬆

Time	Level	Category	Message
29:11.216	Info	Data	Current variable values:

$cmSprinklerModel = '730', $cmNozzleModel = '33', $cmArc = '360', $cmPressure = '50', $cmNumSprinklers = '1', $cmNozzleFlow = '22', $cmBackFlow = '10', $cmStaFlow = '22', $cmPrecipRate = '0.57', $cmPattern = 'Tirangle', $cmSprinklerSpacing = '65', $cmRowSpacing = '0'

⚙ **StationLevelTest**

Data Row: **45**   41.12s ⬆

Station: 1-1-45

StationAccessRow: Row 45

StationRowName: Station row 45

Name: Sta 45

NameRow: Name row 45

Area: G

AreaRowName: Area row 45

Hole: 1

HoleRowName: Hole row 45

Tag: 1

TagRowName: Tag row 45

NOS: 1

NOSRowName: Number of Sprinklers row

LSM Address: 1001C9

AddRowName: LSMAddress row 45

LSM Offset: 1

OffsetRowName: LSMOffset row 45

Wire Path: 1001

WPRowName: Wire Path row 45

Sprinkler Model: 730

Nozzle Model: 33

Arc: 360

Pressure: 50

Num Sprinklers: 1

Nozzle Flow: 22

Back Flow: 10

Sta Flow: 22

Precip Rate: 0.57

Pattern: Tirangle

Sprinkler Spacing: 56

Row Spacing: 0

📄 PopulateColumn

20.04s ⬆

Time	Level	Category	Message

Time	Level	Category	Message
29:33.514	Info	Data	Current variable values:

$cmWPRowName = 'Wire Path row 45', $cmWPValue = '1001', $cmOffsetRowName = 'LSMOffset row 45', $cmOffsetVal = '1', $cmAddRowName = 'LSMAddress row 45', $cmAddVal = '1001C9', $cmNOSRowName = 'Number of Sprinklers row', $cmNOSVal = '1', $cmTagRowName = 'Tag row 45', $cmHoleRowName = 'Hole row 45', $cmHoelVal = '1', $cmAreaRowName = 'Area row 45', $cmAreaVal = 'G', $cmNameRow = 'Name row 45', $cmNameVal = 'Sta 45', $cmStationVal = '1-1-45', $cmStationRowName = 'Station row 45', $cmStationAccessRow = 'Row 45'

📄 SidePanel

21.07s ⬆

Time	Level	Category	Message
29:53.557	Info	Data	Current variable values:

$cmSprinklerModel = '730', $cmNozzleModel = '33', $cmArc = '360', $cmPressure = '50', $cmNumSprinklers = '1', $cmNozzleFlow = '22', $cmBackFlow = '10', $cmStaFlow = '22', $cmPrecipRate = '0.57', $cmPattern = 'Tirangle', $cmSprinklerSpacing = '56', $cmRowSpacing = '0'

⚙ StationLevelTest

Data Row: **46**   40.9s ⬆

Station: 1-1-46

StationAccessRow: Row 46

StationRowName: Station row 46

Name: Sta 46

NameRow: Name row 46

Area: G

AreaRowName: Area row 46

Hole: 1

HoleRowName: Hole row 46

Tag: 1

TagRowName: Tag row 46

NOS: 1

NOSRowName: Number of Sprinklers row

LSM Address: 10021D

AddRowName: LSMAddress row 46

LSM Offset: 1

OffsetRowName: LSMOffset row 46

Wire Path: 1001

WPRowName: Wire Path row 46

Sprinkler Model: 730

Nozzle Model: 33

Arc: 360

Pressure: 50

Num Sprinklers: 1

Nozzle Flow: 22

Back Flow: 10

Sta Flow: 22

Precip Rate: 0.57

Pattern: Tirangle

Sprinkler Spacing: 65

Row Spacing: 0

📄 PopulateColumn

19.78s ⬆

Time	Level	Category	Message

Time	Level	Category	Message
30:14.634	Info	Data	Current variable values:

$cmWPRowName = 'Wire Path row 46', $cmWPValue = '1001', $cmOffsetRowName = 'LSMOffset row 46', $cmOffsetVal = '1', $cmAddRowName = 'LSMAddress row 46', $cmAddVal = '10021D', $cmNOSRowName = 'Number of Sprinklers row', $cmNOSVal = '1', $cmTagRowName = 'Tag row 46', $cmHoleRowName = 'Hole row 46', $cmHoelVal = '1', $cmAreaRowName = 'Area row 46', $cmAreaVal = 'G', $cmNameRow = 'Name row 46', $cmNameVal = 'Sta 46', $cmStationVal = '1-1-46', $cmStationRowName = 'Station row 46', $cmStationAccessRow = 'Row 46'

📄 SidePanel

21.12s ⬆

Time	Level	Category	Message
30:34.415	Info	Data	Current variable values:

$cmSprinklerModel = '730', $cmNozzleModel = '33', $cmArc = '360', $cmPressure = '50', $cmNumSprinklers = '1', $cmNozzleFlow = '22', $cmBackFlow = '10', $cmStaFlow = '22', $cmPrecipRate = '0.57', $cmPattern = 'Tirangle', $cmSprinklerSpacing = '65', $cmRowSpacing = '0'

⚙ StationLevelTest

Data Row: **47**   40.78s ⬆

Station: 1-1-47

StationAccessRow: Row 47

StationRowName: Station row 47

Name: Sta 47

NameRow: Name row 47

Area: G

AreaRowName: Area row 47

Hole: 1

HoleRowName: Hole row 47

Tag: 1

TagRowName: Tag row 47

NOS: 1

NOSRowName: Number of Sprinklers row

LSM Address: 10008B

AddRowName: LSMAddress row 47

LSM Offset: 1

OffsetRowName: LSMOffset row 47

Wire Path: 1001

WPRowName: Wire Path row 47

Sprinkler Model: 730

Nozzle Model: 33

Arc: 360

Pressure: 50

Num Sprinklers: 1

Nozzle Flow: 22

Back Flow: 10

Sta Flow: 22

Precip Rate: 0.57

Pattern: Tirangle

Sprinkler Spacing: 65

Row Spacing: 0

📄 PopulateColumn

19.85s ⬆

Time	Level	Category	Message

Time	Level	Category	Message
30:55.539	Info	Data	Current variable values:

$cmWPRowName = 'Wire Path row 47', $cmWPValue = '1001', $cmOffsetRowName = 'LSMOffset row 47', $cmOffsetVal = '1', $cmAddRowName = 'LSMAddress row 47', $cmAddVal = '10008B', $cmNOSRowName = 'Number of Sprinklers row', $cmNOSVal = '1', $cmTagRowName = 'Tag row 47', $cmHoleRowName = 'Hole row 47', $cmHoelVal = '1', $cmAreaRowName = 'Area row 47', $cmAreaVal = 'G', $cmNameRow = 'Name row 47', $cmNameVal = 'Sta 47', $cmStationVal = '1-1-47', $cmStationRowName = 'Station row 47', $cmStationAccessRow = 'Row 47'

📄 SidePanel

20.93s ⊼

Time	Level	Category	Message
31:15.393	Info	Data	Current variable values:

$cmSprinklerModel = '730', $cmNozzleModel = '33', $cmArc = '360', $cmPressure = '50', $cmNumSprinklers = '1', $cmNozzleFlow = '22', $cmBackFlow = '10', $cmStaFlow = '22', $cmPrecipRate = '0.57', $cmPattern = 'Tirangle', $cmSprinklerSpacing = '65', $cmRowSpacing = '0'

⚙ **StationLevelTest**

Data Row: **48**   40.25s ⊼

Station: 1-1-48

StationAccessRow: Row 48

StationRowName: Station row 48

Name: Sta 48

NameRow: Name row 48

Area: G

AreaRowName: Area row 48

Hole: 1

HoleRowName: Hole row 48

Tag: 1

TagRowName: Tag row 48

NOS: 1

NOSRowName: Number of Sprinklers row

LSM Address: 1001C5

AddRowName: LSMAddress row 48

LSM Offset: 1

OffsetRowName: LSMOffset row 48

Wire Path: 1001

WPRowName: Wire Path row 48

Sprinkler Model: 730

Nozzle Model: 33

Arc: 360

Pressure: 50

Num Sprinklers: 1

Nozzle Flow: 22

Back Flow: 10

Sta Flow: 22

Precip Rate: 0.57

Pattern: Tirangle

Sprinkler Spacing: 65

Row Spacing: 0

📄 PopulateColumn

19.45s   ⬆

Time	Level	Category	Message

Time	Level	Category	Message
31:36.325	Info	Data	Current variable values:

$cmWPRowName = 'Wire Path row 48', $cmWPValue = '1001', $cmOffsetRowName = 'LSMOffset row 48', $cmOffsetVal = '1', $cmAddRowName = 'LSMAddress row 48', $cmAddVal = '1001C5', $cmNOSRowName = 'Number of Sprinklers row', $cmNOSVal = '1', $cmTagRowName = 'Tag row 48', $cmHoleRowName = 'Hole row 48', $cmHoelVal = '1', $cmAreaRowName = 'Area row 48', $cmAreaVal = 'G', $cmNameRow = 'Name row 48', $cmNameVal = 'Sta 48', $cmStationVal = '1-1-48', $cmStationRowName = 'Station row 48', $cmStationAccessRow = 'Row 48'

🗎 SidePanel

20.8s ⤒

Time	Level	Category	Message
31:55.776	Info	Data	Current variable values:

$cmSprinklerModel = '730', $cmNozzleModel = '33', $cmArc = '360', $cmPressure = '50', $cmNumSprinklers = '1', $cmNozzleFlow = '22', $cmBackFlow = '10', $cmStaFlow = '22', $cmPrecipRate = '0.57', $cmPattern = 'Tirangle', $cmSprinklerSpacing = '65', $cmRowSpacing = '0'

⚙ StationLevelTest

Data Row: **49**   39.99s ⤒

Station: 1-1-49

StationAccessRow: Row 49

StationRowName: Station row 49

Name: Sta 49

NameRow: Name row 49

Area: G

AreaRowName: Area row 49

Hole: 1

HoleRowName: Hole row 49

Tag: 1

TagRowName: Tag row 49

NOS: 1

NOSRowName: Number of Sprinklers row

LSM Address: 100110

AddRowName: LSMAddress row 49

LSM Offset: 1

OffsetRowName: LSMOffset row 49

Wire Path: 1001

WPRowName: Wire Path row 49

Sprinkler Model: 730

Nozzle Model: 33

Arc: 360

Pressure: 50

Num Sprinklers: 1

Nozzle Flow: 22

Back Flow: 10

Sta Flow: 22

Precip Rate: 0.57

Pattern: Tirangle

Sprinkler Spacing: 65

Row Spacing: 0

📄 PopulateColumn

19.26s   ⬆

Time	Level	Category	Message

Time	Level	Category	Message
32:16.574	Info	Data	Current variable values:

$cmWPRowName = 'Wire Path row 49', $cmWPValue = '1001', $cmOffsetRowName = 'LSMOffset row 49', $cmOffsetVal = '1', $cmAddRowName = 'LSMAddress row 49', $cmAddVal = '100110', $cmNOSRowName = 'Number of Sprinklers row', $cmNOSVal = '1', $cmTagRowName = 'Tag row 49', $cmHoleRowName = 'Hole row 49', $cmHoelVal = '1', $cmAreaRowName = 'Area row 49', $cmAreaVal = 'G', $cmNameRow = 'Name row 49', $cmNameVal = 'Sta 49', $cmStationVal = '1-1-49', $cmStationRowName = 'Station row 49', $cmStationAccessRow = 'Row 49'

📄 SidePanel

20.72s ⤒

Time	Level	Category	Message
32:35.841	Info	Data	Current variable values:

$cmSprinklerModel = '730', $cmNozzleModel = '33', $cmArc = '360', $cmPressure = '50', $cmNumSprinklers = '1', $cmNozzleFlow = '22', $cmBackFlow = '10', $cmStaFlow = '22', $cmPrecipRate = '0.57', $cmPattern = 'Tirangle', $cmSprinklerSpacing = '65', $cmRowSpacing = '0'

⚙ StationLevelTest

Data Row: **50**   39.81s ⤒

Station: 1-1-50

StationAccessRow: Row 50

StationRowName: Station row 50

Name: Sta 50

NameRow: Name row 50

Area: G

AreaRowName: Area row 50

Hole: 1

HoleRowName: Hole row 50

Tag: 1

TagRowName: Tag row 50

NOS: 1

NOSRowName: Number of Sprinklers row

LSM Address: 10022D

AddRowName: LSMAddress row 50

LSM Offset: 1

OffsetRowName: LSMOffset row 50

Wire Path: 1001

WPRowName: Wire Path row 50

Sprinkler Model: 730

Nozzle Model: 33

Arc: 360

Pressure: 50

Num Sprinklers: 1

Nozzle Flow: 22

Back Flow: 10

Sta Flow: 22

Precip Rate: 0.57

Pattern: Tirangle

Sprinkler Spacing: 65

Row Spacing: 0

📄 PopulateColumn

18.98s ⤒

Time	Level	Category	Message

32:56.566	Info	Data	Current variable values:

$cmWPRowName = 'Wire Path row 50', $cmWPValue = '1001', $cmOffsetRowName = 'LSMOffset row 50', $cmOffsetVal = '1', $cmAddRowName = 'LSMAddress row 50', $cmAddVal = '10022D', $cmNOSRowName = 'Number of Sprinklers row', $cmNOSVal = '1', $cmTagRowName = 'Tag row 50', $cmHoleRowName = 'Hole row 50', $cmHoelVal = '1', $cmAreaRowName = 'Area row 50', $cmAreaVal = 'G', $cmNameRow = 'Name row 50', $cmNameVal = 'Sta 50', $cmStationVal = '1-1-50', $cmStationRowName = 'Station row 50', $cmStationAccessRow = 'Row 50'

📄 SidePanel

20.83s ⤒

Time	Level	Category	Message
33:15.545	Info	Data	Current variable values:

$cmSprinklerModel = '730', $cmNozzleModel = '33', $cmArc = '360', $cmPressure = '50', $cmNumSprinklers = '1', $cmNozzleFlow = '22', $cmBackFlow = '10', $cmStaFlow = '22', $cmPrecipRate = '0.57', $cmPattern = 'Tirangle', $cmSprinklerSpacing = '65', $cmRowSpacing = '0'

⚙ StationLevelTest

Data Row: **51** 40.39s ⤒

Station: 1-1-51

StationAccessRow: Row 51

StationRowName: Station row 51

Name: Sta 51

NameRow: Name row 51

Area: T

AreaRowName: Area row 51

Hole: 1

HoleRowName: Hole row 51

Tag: 1

TagRowName: Tag row 51

NOS: 1

NOSRowName: Number of Sprinklers row

LSM Address: 1001E7

AddRowName: LSMAddress row 51

LSM Offset: 1

OffsetRowName: LSMOffset row 51

Wire Path: 1001

WPRowName: Wire Path row 51

Sprinkler Model: 730

Nozzle Model: 33

Arc: 360

Pressure: 50

Num Sprinklers: 1

Nozzle Flow: 22

Back Flow: 10

Sta Flow: 22

Precip Rate: 0.57

Pattern: Tirangle

Sprinkler Spacing: 65

Row Spacing: 0

📄 PopulateColumn

19.16s ⊤

Time	Level	Category	Message

Time	Level	Category	Message
33:36.383	Info	Data	Current variable values:

$cmWPRowName = 'Wire Path row 51', $cmWPValue = '1001', $cmOffsetRowName = 'LSMOffset row 51', $cmOffsetVal = '1', $cmAddRowName = 'LSMAddress row 51', $cmAddVal = '1001E7', $cmNOSRowName = 'Number of Sprinklers row', $cmNOSVal = '1', $cmTagRowName = 'Tag row 51', $cmHoleRowName = 'Hole row 51', $cmHoelVal = '1', $cmAreaRowName = 'Area row 51', $cmAreaVal = 'T', $cmNameRow = 'Name row 51', $cmNameVal = 'Sta 51', $cmStationVal = '1-1-51', $cmStationRowName = 'Station row 51', $cmStationAccessRow = 'Row 51'

📄 SidePanel

21.22s ⯯

Time	Level	Category	Message
33:55.543	Info	Data	Current variable values:

$cmSprinklerModel = '730', $cmNozzleModel = '33', $cmArc = '360', $cmPressure = '50', $cmNumSprinklers = '1', $cmNozzleFlow = '22', $cmBackFlow = '10', $cmStaFlow = '22', $cmPrecipRate = '0.57', $cmPattern = 'Tirangle', $cmSprinklerSpacing = '65', $cmRowSpacing = '0'

⚙ StationLevelTest

Data Row: **52**

39.71s ⯯

Station: 1-1-52

StationAccessRow: Row 52

StationRowName: Station row 52

Name: Sta 52

NameRow: Name row 52

Area: T

AreaRowName: Area row 52

Hole: 1

HoleRowName: Hole row 52

Tag: 1

TagRowName: Tag row 52

NOS: 1

NOSRowName: Number of Sprinklers row

LSM Address: 1001D2

AddRowName: LSMAddress row 52

LSM Offset: 1

OffsetRowName: LSMOffset row 52

Wire Path: 1001

WPRowName: Wire Path row 52

Sprinkler Model: 730

Nozzle Model: 33

Arc: 360

Pressure: 50

Num Sprinklers: 1

Nozzle Flow: 22

Back Flow: 10

Sta Flow: 22

Precip Rate: 0.57

Pattern: Tirangle

Sprinkler Spacing: 65

Row Spacing: 0

📄 PopulateColumn

18.65s ⬆

Time	Level	Category	Message

34:16.768	Info	Data	Current variable values: $cmWPRowName = 'Wire Path row 52', $cmWPValue = '1001', $cmOffsetRowName = 'LSMOffset row 52', $cmOffsetVal = '1', $cmAddRowName = 'LSMAddress row 52', $cmAddVal = '1001D2', $cmNOSRowName = 'Number of Sprinklers row', $cmNOSVal = '1', $cmTagRowName = 'Tag row 52', $cmHoleRowName = 'Hole row 52', $cmHoelVal = '1', $cmAreaRowName = 'Area row 52', $cmAreaVal = 'T', $cmNameRow = 'Name row 52', $cmNameVal = 'Sta 52', $cmStationVal = '1-1-52', $cmStationRowName = 'Station row 52', $cmStationAccessRow = 'Row 52'

📄 SidePanel

21.06s ⤒

Time	Level	Category	Message
34:35.417	Info	Data	Current variable values: $cmSprinklerModel = '730', $cmNozzleModel = '33', $cmArc = '360', $cmPressure = '50', $cmNumSprinklers = '1', $cmNozzleFlow = '22', $cmBackFlow = '10', $cmStaFlow = '22', $cmPrecipRate = '0.57', $cmPattern = 'Tirangle', $cmSprinklerSpacing = '65', $cmRowSpacing = '0'

⚙ **StationLevelTest**

Data Row: **53**   41.03s ⤒

Station: 1-1-53

StationAccessRow: Row 53

StationRowName: Station row 53

Name: Sta 53

NameRow: Name row 53

Area: T

AreaRowName: Area row 53

Hole: 1

HoleRowName: Hole row 53

Tag: 1

TagRowName: Tag row 53

NOS: 1

NOSRowName: Number of Sprinklers row

LSM Address: 10021F

AddRowName: LSMAddress row 53

LSM Offset: 1

OffsetRowName: LSMOffset row 53

Wire Path: 1001

WPRowName: Wire Path row 53

Sprinkler Model: 730

Nozzle Model: 33

Arc: 360

Pressure: 50

Num Sprinklers: 1

Nozzle Flow: 22

Back Flow: 10

Sta Flow: 22

Precip Rate: 0.57

Pattern: Tirangle

Sprinkler Spacing: 56

Row Spacing: 0

📄 PopulateColumn

20.13s ⬆

Time	Level	Category	Message

Time	Level	Category	Message
34:56.479	Info	Data	Current variable values: $cmWPRowName = 'Wire Path row 53', $cmWPValue = '1001', $cmOffsetRowName = 'LSMOffset row 53', $cmOffsetVal = '1', $cmAddRowName = 'LSMAddress row 53', $cmAddVal = '10021F', $cmNOSRowName = 'Number of Sprinklers row', $cmNOSVal = '1', $cmTagRowName = 'Tag row 53', $cmHoleRowName = 'Hole row 53', $cmHoelVal = '1', $cmAreaRowName = 'Area row 53', $cmAreaVal = 'T', $cmNameRow = 'Name row 53', $cmNameVal = 'Sta 53', $cmStationVal = '1-1-53', $cmStationRowName = 'Station row 53', $cmStationAccessRow = 'Row 53'

📄 SidePanel

20.9s ⤒

Time	Level	Category	Message
35:16.609	Info	Data	Current variable values: $cmSprinklerModel = '730', $cmNozzleModel = '33', $cmArc = '360', $cmPressure = '50', $cmNumSprinklers = '1', $cmNozzleFlow = '22', $cmBackFlow = '10', $cmStaFlow = '22', $cmPrecipRate = '0.57', $cmPattern = 'Tirangle', $cmSprinklerSpacing = '56', $cmRowSpacing = '0'

⚙ StationLevelTest

Data Row: **54**   35.52s ⤒

Station: 1-1-54

StationAccessRow: Row 54

StationRowName: Station row 54

Name: Sta 54

NameRow: Name row 54

Area: T

AreaRowName: Area row 54

Hole: 1

HoleRowName: Hole row 54

Tag: 1

TagRowName: Tag row 54

NOS: 1

NOSRowName: Number of Sprinklers row

LSM Address: 100107

AddRowName: LSMAddress row 54

LSM Offset: 1

OffsetRowName: LSMOffset row 54

Wire Path: 1001

WPRowName: Wire Path row 54

Sprinkler Model: 730

Nozzle Model: 33

Arc: 360

Pressure: 50

Num Sprinklers: 1

Nozzle Flow: 22

Back Flow: 10

Sta Flow: 22

Precip Rate: 0.57

Pattern: Tirangle

Sprinkler Spacing: 65

Row Spacing: 0

📄 PopulateColumn

35.52s ⊤

Time	Level	Category	Message

35:37.513	Info	Data	Current variable values:
			$cmWPRowName = 'Wire Path row 54', $cmWPValue = '1001', $cmOffsetRowName = 'LSMOffset row 54', $cmOffsetVal = '1', $cmAddRowName = 'LSMAddress row 54', $cmAddVal = '100107', $cmNOSRowName = 'Number of Sprinklers row', $cmNOSVal = '1', $cmTagRowName = 'Tag row 54', $cmHoleRowName = 'Hole row 54', $cmHoelVal = '1', $cmAreaRowName = 'Area row 54', $cmAreaVal = 'T', $cmNameRow = 'Name row 54', $cmNameVal = 'Sta 54', $cmStationVal = '1-1-54', $cmStationRowName = 'Station row 54', $cmStationAccessRow = 'Row 54'
36:12.954 ❌	Error	Module	Failed to find item 'LynxDrive_ControlSystems_001Repository.MainForm.CS_StaLevel.rAreaRow'.
			No element found for path 'container[@controlname='secondaryPanel']/container[@controlname='detailSplitter']/grip[@controlname='<Panel1>k__BackingField']/container[@controlname='workspace']/container[@controlname='workspaceSplitter']/grip[@controlname='<Panel1>k__BackingField']/container[@controlname='workspacePanel']/container[@controlname='ControlSystemWorkspace']/element[@controlname='grid']/table[@accessiblename='MainView']/container[@accessiblename='Data Panel']/listitem[@accessiblename='Row 54']/cell[@accessiblename='Area row 54']' at step 'container[@controlname='secondaryPanel']' after 508 attempts within 30s.

⚙ StationLevelTest
Data Row: **55**   0ms ⤒

⚙ StationLevelTest
Data Row: **56**   0ms ⤒

⚙ StationLevelTest
Data Row: **57**   0ms ⤒

⚙ StationLevelTest
Data Row: **58**   0ms ⤒

⚙ StationLevelTest
Data Row: **59**   0ms ⤒

⚙ StationLevelTest
Data Row: **60**   0ms ⤒

⚙ StationLevelTest
Data Row: **61**   0ms ⤒

⚙ StationLevelTest
Data Row: **62**   0ms ⤒

StationLevelTest

Data Row: **63**   0ms

StationLevelTest

Data Row: **64**   0ms

StationLevelTest

Data Row: **65**   0ms

StationLevelTest

Data Row: **66**   0ms

StationLevelTest

Data Row: **67**   0ms

StationLevelTest

Data Row: **68**   0ms

StationLevelTest

Data Row: **69**   1ms

StationLevelTest

Data Row: **70**   1ms

StationLevelTest

Data Row: **71**   0ms

StationLevelTest

Data Row: **72**   0ms

StationLevelTest

Data Row: **73**   0ms

StationLevelTest

Data Row: **74**   0ms

StationLevelTest

Data Row: **75**   1ms

StationLevelTest

Data Row: **76**   0ms

StationLevelTest

Data Row: **77**   1ms

StationLevelTest

Data Row: **78**   0ms

StationLevelTest

Data Row: **79**   1ms

StationLevelTest

Data Row: **80**   0ms

StationLevelTest

Data Row: **81**   1ms

StationLevelTest

Data Row: **82**   0ms

StationLevelTest

Data Row: **83**   1ms

StationLevelTest

Data Row: **84**   1ms

StationLevelTest

Data Row: **85**   0ms

StationLevelTest

Data Row: **86**   0ms

StationLevelTest

Data Row: **87**   0ms

StationLevelTest

Data Row: **88**   0ms

StationLevelTest

Data Row: **89**   1ms

StationLevelTest

Data Row: **90**   0ms

StationLevelTest

Data Row: **91**   0ms

StationLevelTest

	Data Row: **92**	0ms	

StationLevelTest

	Data Row: **93**	0ms	

StationLevelTest

	Data Row: **94**	0ms	

StationLevelTest

	Data Row: **95**	0ms	

StationLevelTest

	Data Row: **96**	0ms	

StationLevelTest

	Data Row: **97**	0ms	

StationLevelTest

	Data Row: **98**	0ms	

StationLevelTest

	Data Row: **99**	0ms	

StationLevelTest

	Data Row: **100**	0ms	

StationLevelTest

	Data Row: **101**	0ms	

StationLevelTest

	Data Row: **102**	0ms	

StationLevelTest

	Data Row: **103**	0ms	

StationLevelTest

	Data Row: **104**	0ms	

StationLevelTest

	Data Row: **105**	0ms	

StationLevelTest

	Data Row: **106**	0ms	

StationLevelTest

Data Row: **107**　　　　0ms

StationLevelTest

Data Row: **108**　　　　0ms

StationLevelTest

Data Row: **109**　　　　1ms

StationLevelTest

Data Row: **110**　　　　0ms

StationLevelTest

Data Row: **111**　　　　0ms

StationLevelTest

Data Row: **112**　　　　0ms

StationLevelTest

Data Row: **113**　　　　0ms

StationLevelTest

Data Row: **114**　　　　0ms

StationLevelTest

Data Row: **115**　　　　0ms

StationLevelTest

Data Row: **116**　　　　0ms

StationLevelTest

Data Row: **117**　　　　0ms

StationLevelTest

Data Row: **118**　　　　0ms

StationLevelTest

Data Row: **119**　　　　0ms

StationLevelTest

Data Row: **120**　　　　0ms

StationLevelTest

Data Row: **121**　　　　0ms

StationLevelTest

Data Row: **122**   0ms

StationLevelTest

Data Row: **123**   0ms

StationLevelTest

Data Row: **124**   0ms

StationLevelTest

Data Row: **125**   1ms

StationLevelTest

Data Row: **126**   1ms

StationLevelTest

Data Row: **127**   0ms

StationLevelTest

Data Row: **128**   0ms

StationLevelTest

Data Row: **129**   0ms

StationLevelTest

Data Row: **130**   0ms

StationLevelTest

Data Row: **131**   0ms

StationLevelTest

Data Row: **132**   0ms

StationLevelTest

Data Row: **133**   0ms

StationLevelTest

Data Row: **134**   0ms

StationLevelTest

Data Row: **135**   0ms

StationLevelTest

| | Data Row: **136** | 0ms | ↟ |

StationLevelTest

| | Data Row: **137** | 0ms | ↟ |

StationLevelTest

| | Data Row: **138** | 0ms | ↟ |

StationLevelTest

| | Data Row: **139** | 0ms | ↟ |

StationLevelTest

| | Data Row: **140** | 0ms | ↟ |

StationLevelTest

| | Data Row: **141** | 0ms | ↟ |

StationLevelTest

| | Data Row: **142** | 0ms | ↟ |

StationLevelTest

| | Data Row: **143** | 0ms | ↟ |

StationLevelTest

| | Data Row: **144** | 0ms | ↟ |

StationLevelTest

| | Data Row: **145** | 0ms | ↟ |

StationLevelTest

| | Data Row: **146** | 0ms | ↟ |

StationLevelTest

| | Data Row: **147** | 0ms | ↟ |

StationLevelTest

| | Data Row: **148** | 0ms | ↟ |

StationLevelTest

| | Data Row: **149** | 0ms | ↟ |

StationLevelTest

| | Data Row: **150** | 0ms | ↟ |

StationLevelTest

Data Row: **151** 1ms

StationLevelTest

Data Row: **152** 0ms

StationLevelTest

Data Row: **153** 1ms

StationLevelTest

Data Row: **154** 0ms

StationLevelTest

Data Row: **155** 1ms

StationLevelTest

Data Row: **156** 0ms

StationLevelTest

Data Row: **157** 0ms

StationLevelTest

Data Row: **158** 0ms

StationLevelTest

Data Row: **159** 0ms

StationLevelTest

Data Row: **160** 0ms

StationLevelTest

Data Row: **161** 1ms

StationLevelTest

Data Row: **162** 0ms

StationLevelTest

Data Row: **163** 0ms

StationLevelTest

Data Row: **164** 0ms

StationLevelTest

Data Row: **165** 0ms

StationLevelTest

Data Row: **166**   0ms

StationLevelTest

Data Row: **167**   1ms

StationLevelTest

Data Row: **168**   0ms

StationLevelTest

Data Row: **169**   0ms

StationLevelTest

Data Row: **170**   0ms

StationLevelTest

Data Row: **171**   0ms

StationLevelTest

Data Row: **172**   0ms

StationLevelTest

Data Row: **173**   0ms

StationLevelTest

Data Row: **174**   0ms

StationLevelTest

Data Row: **175**   0ms

StationLevelTest

Data Row: **176**   0ms

StationLevelTest

Data Row: **177**   0ms

StationLevelTest

Data Row: **178**   0ms

StationLevelTest

Data Row: **179**   0ms

StationLevelTest

| | Data Row: **180** | | 0ms | |

StationLevelTest

| | Data Row: **181** | | 0ms | |

StationLevelTest

| | Data Row: **182** | | 1ms | |

StationLevelTest

| | Data Row: **183** | | 0ms | |

StationLevelTest

| | Data Row: **184** | | 0ms | |

StationLevelTest

| | Data Row: **185** | | 0ms | |

StationLevelTest

| | Data Row: **186** | | 1ms | |

StationLevelTest

| | Data Row: **187** | | 0ms | |

StationLevelTest

| | Data Row: **188** | | 0ms | |

StationLevelTest

| | Data Row: **189** | | 0ms | |

StationLevelTest

| | Data Row: **190** | | 0ms | |

StationLevelTest

| | Data Row: **191** | | 0ms | |

StationLevelTest

| | Data Row: **192** | | 1ms | |

StationLevelTest

| | Data Row: **193** | | 0ms | |

StationLevelTest

| | Data Row: **194** | | 0ms | |

StationLevelTest

Data Row: **195**   0ms

StationLevelTest

Data Row: **196**   0ms

StationLevelTest

Data Row: **197**   0ms

StationLevelTest

Data Row: **198**   0ms

StationLevelTest

Data Row: **199**   0ms

StationLevelTest

Data Row: **200**   1ms

StationLevelTest

Data Row: **201**   0ms

StationLevelTest

Data Row: **202**   1ms

StationLevelTest

Data Row: **203**   0ms

StationLevelTest

Data Row: **204**   1ms

StationLevelTest

Data Row: **205**   0ms

StationLevelTest

Data Row: **206**   0ms

StationLevelTest

Data Row: **207**   0ms

StationLevelTest

Data Row: **208**   0ms

StationLevelTest

Data Row: **209**   2ms

StationLevelTest

Data Row: **210**   0ms

StationLevelTest

Data Row: **211**   0ms

StationLevelTest

Data Row: **212**   0ms

StationLevelTest

Data Row: **213**   1ms

StationLevelTest

Data Row: **214**   0ms

StationLevelTest

Data Row: **215**   0ms

StationLevelTest

Data Row: **216**   0ms

StationLevelTest

Data Row: **217**   0ms

StationLevelTest

Data Row: **218**   0ms

StationLevelTest

Data Row: **219**   0ms

StationLevelTest

Data Row: **220**   0ms

StationLevelTest

Data Row: **221**   0ms

StationLevelTest

Data Row: **222**   0ms

StationLevelTest

Data Row: **223**   0ms

StationLevelTest

| | Data Row: | 224 | 0ms | |

StationLevelTest

| | Data Row: | 225 | 0ms | |

StationLevelTest

| | Data Row: | 226 | 0ms | |

StationLevelTest

| | Data Row: | 227 | 0ms | |

StationLevelTest

| | Data Row: | 228 | 1ms | |

StationLevelTest

| | Data Row: | 229 | 0ms | |

StationLevelTest

| | Data Row: | 230 | 1ms | |

StationLevelTest

| | Data Row: | 231 | 0ms | |

StationLevelTest

| | Data Row: | 232 | 0ms | |

StationLevelTest

| | Data Row: | 233 | 1ms | |

StationLevelTest

| | Data Row: | 234 | 0ms | |

StationLevelTest

| | Data Row: | 235 | 1ms | |

StationLevelTest

| | Data Row: | 236 | 0ms | |

StationLevelTest

| | Data Row: | 237 | 2ms | |

StationLevelTest

| | Data Row: | 238 | 0ms | |

StationLevelTest

Data Row: **239**   0ms

StationLevelTest

Data Row: **240**   0ms

StationLevelTest

Data Row: **241**   0ms

StationLevelTest

Data Row: **242**   0ms

StationLevelTest

Data Row: **243**   0ms

StationLevelTest

Data Row: **244**   0ms

StationLevelTest

Data Row: **245**   0ms

StationLevelTest

Data Row: **246**   0ms

StationLevelTest

Data Row: **247**   0ms

StationLevelTest

Data Row: **248**   0ms

StationLevelTest

Data Row: **249**   0ms

StationLevelTest

Data Row: **250**   0ms

StationLevelTest

Data Row: **251**   0ms

StationLevelTest

Data Row: **252**   0ms

StationLevelTest

Data Row: **253**   0ms

StationLevelTest

Data Row: **254** 0ms

StationLevelTest

Data Row: **255** 1ms

StationLevelTest

Data Row: **256** 0ms

StationLevelTest

Data Row: **257** 0ms

StationLevelTest

Data Row: **258** 0ms

StationLevelTest

Data Row: **259** 1ms

StationLevelTest

Data Row: **260** 0ms

StationLevelTest

Data Row: **261** 1ms

StationLevelTest

Data Row: **262** 0ms

StationLevelTest

Data Row: **263** 0ms

StationLevelTest

Data Row: **264** 0ms

StationLevelTest

Data Row: **265** 1ms

StationLevelTest

Data Row: **266** 0ms

StationLevelTest

Data Row: **267** 1ms

StationLevelTest

	Data Row:	**268**	1ms

StationLevelTest

	Data Row:	**269**	0ms

StationLevelTest

	Data Row:	**270**	0ms

StationLevelTest

	Data Row:	**271**	1ms

StationLevelTest

	Data Row:	**272**	0ms

StationLevelTest

	Data Row:	**273**	0ms

StationLevelTest

	Data Row:	**274**	0ms

StationLevelTest

	Data Row:	**275**	0ms

StationLevelTest

	Data Row:	**276**	0ms

StationLevelTest

	Data Row:	**277**	0ms

StationLevelTest

	Data Row:	**278**	0ms

StationLevelTest

	Data Row:	**279**	0ms

StationLevelTest

	Data Row:	**280**	1ms

StationLevelTest

	Data Row:	**281**	0ms

StationLevelTest

	Data Row:	**282**	1ms

StationLevelTest

Data Row: **283** 0ms

StationLevelTest

Data Row: **284** 0ms

StationLevelTest

Data Row: **285** 0ms

StationLevelTest

Data Row: **286** 0ms

StationLevelTest

Data Row: **287** 0ms

StationLevelTest

Data Row: **288** 0ms

StationLevelTest

Data Row: **289** 0ms

StationLevelTest

Data Row: **290** 0ms

StationLevelTest

Data Row: **291** 1ms

StationLevelTest

Data Row: **292** 0ms

StationLevelTest

Data Row: **293** 2ms

StationLevelTest

Data Row: **294** 0ms

StationLevelTest

Data Row: **295** 1ms

StationLevelTest

Data Row: **296** 0ms

StationLevelTest

Data Row: **297** 0ms

StationLevelTest

Data Row: **298**   0ms

StationLevelTest

Data Row: **299**   0ms

StationLevelTest

Data Row: **300**   0ms

StationLevelTest

Data Row: **301**   0ms

StationLevelTest

Data Row: **302**   0ms

StationLevelTest

Data Row: **303**   0ms

StationLevelTest

Data Row: **304**   1ms

TEARDOWN

0ms