
66.Rear Wiring Harness and Rear Gate Cord

A: LOCATION

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
R16	3	*	C-3		Rear door switch RH
R22	3	*	C-1		Rear door switch LH
R26	6	Gray	C-4		Rear combination light RH
R28	6	Gray	C-3		Rear combination light LH
R29	3	Black	D-2		Rear vehicle height sensor
R38	8	*	C-4	D34	Dear note and
R39	14	Gray	C-4	D35	Rear gate cord
R58	4	*	C-3		Fuel pump assembly
R59	2	*	C-3		Fuel sub level sensor
R72	2	Light gray	C-3		Rear ABS wheel speed sensor RH
R73	2	Light gray	C-2		Rear ABS wheel speed sensor LH
R79	8	*	C-3		Trailer connector
R80	8	*	C-2		Keyless entry CM
R97	1	*	C-3		Antenna feeder cord
R141	2	Light gray	C-2		Luggage room light
R211	12	*	C-2		TPMS CM
R221	12	*	C-2		TPMS & keyless entry CM
R296	5	*	C-2		Receiver
R298	3	*	C-3		Keyless access interior antenna (rear)
R299	6	*	C-4		Keyless access exterior antenna (rear)
R400	8	Gray	C-3		ELCM
★: White or natural color					

	Con	nector	·		Connecting to	
No.	Pole	Color	Area	No.	Description	
D34	8	*	B-4	R38	Dear wining harross DLI	
D35	14	Gray	B-4	R39	Rear wiring harness RH	
D39	2	*	B-4		High-mounted stop light	
D43	4	*	A-4		Rear wiper motor	
D44	2	*	B-4		License plate light RH	
D46	4	*	A-4		Rear gate lock actuator & latch switch	
D47	2	Brown	A-4		Rear gate opener button	
D48	1	Black	B-3		Rear defogger	
D77	4	*	A-4		Rear lock button & rear gate opener button	
D80	8	*	B-5	D81	Dear acts soul	
D81	8	*	B-5	D80	Rear gate cord	
D89	1	Black	B-4		Rear defogger	
D137	2	*	B-4		License plate light LH	
★: White c	r natural col	or		•		

Connector				Connecting to		
No.	Pole	Color	Area	No.	Description	
AB31	2	Black	C-2		Curtain airbag module LH	
AB32	4	Yellow	C-1		Curtain airbag sensor LH	
AB33	2	Black	C-4		Curtain airbag module RH	
AB34	4	Yellow	C-3		Curtain airbag sensor RH	
AB41	2	Yellow	C-2		Satellite safing sensor	

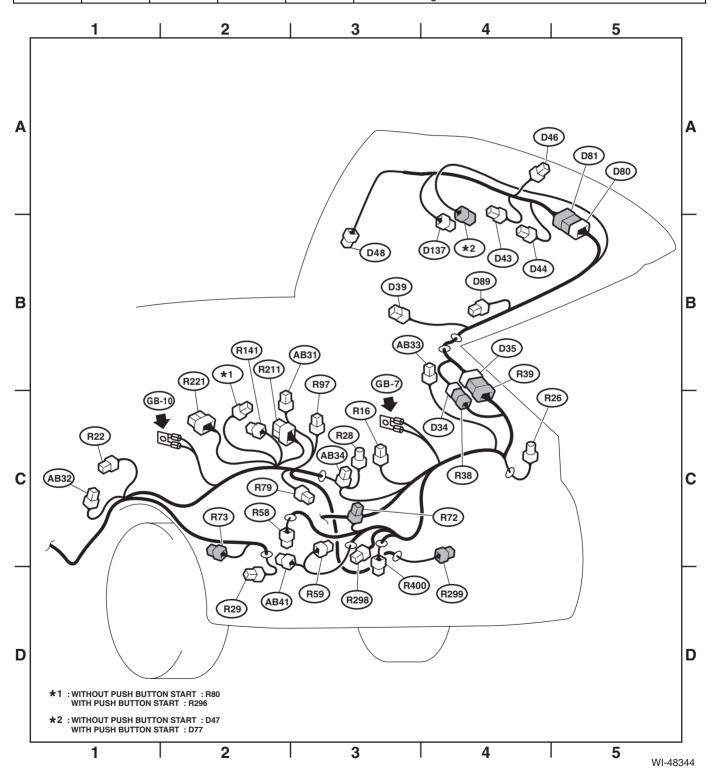

WIRING SYSTEM

WI(HEV)

		Page
1.	Basic Diagnostic Procedure	
2.	Working Precautions	
3.	Power Supply Circuit	
4.	Ground Circuit	
5.	Active Grille Shutter	
6.	Airbag System	
7.	Air Conditioning System	
8.	Audio System	
9.	Back-up Light System	
10.	CAN Communication System	
11.	Charging System	
12.	Clearance Light and Illumination Light System	
13.	Combination Meter System	
14.	Coolant Temperature System	
15.	Cruise Control System	
16.	CVT Control System	
17.	Electric Power Steering System	
18.	Engine Electrical System	
19.	Front Accessory Power Supply Socket System	
20.	Front Fog Light System	
21.	Front Wiper and Washer System	
22.	Fuel Gauge System	
23.	Headlight Beam Leveler System	
24.	Headlight System	
25.	Hybrid Electric Vehicle System	
26.	Horn System	
27.	Immobilizer System	
28.	Interior Light System	
29.	Keyless Access System	
30.	Keyless Entry System	
31.	Multi-function Display (MFD) System	
32.	Navigation System	
33.	Occupant Detection System	
34.	Oil Pressure Warning Light System	
35.	Parking Brake / Brake Fluid Level Warning Light System	
36.	Power Window System	
37.	Push Button Start System	
38.	Radiator Fan System	
39.	Rear Accessory Power Supply Socket System	
40.	Rear Defogger System	
41.	Rearview Camera System	
42.	Rearview Mirror System	
43.	Rear Wiper and Washer System	
44.	Remote Control Mirror System	
45.	Remote Engine Start System	194

46.	Seat Belt Warning System	201
47.	Seat Heater System	202
48.	Security System	203
49.	Shift Lock Control System	207
50.	Speedometer System	
51.	Starter System	209
52.	Stop Light System	210
53.	Sunroof Control System	211
54.	Tire Pressure Monitoring System	212
55.	Turn Signal Light and Hazard Light System	213
56.	Pedestrian Alert System	216
57.	Vehicle Dynamics Control System	218
58.	Wiper Deicer System	223
59.	Harness Components Location	224
60.	Front Wiring Harness	226
61.	Bulkhead Wiring Harness (In Engine Compartment) RH	228
62.	Bulkhead Wiring Harness (In Engine Compartment) LH	230
63.	Bulkhead Wiring Harness (In Compartment) RH	232
64.	Bulkhead Wiring Harness (In Compartment) LH	234
65.	Engine Wiring Harness and Transmission Cord	237
66.	Instrument Panel Wiring Harness RH	239
67.	Instrument Panel Wiring Harness LH	241
68.	Roof Cord	243
69.	Rear Wiring Harness RH	245
70.	Rear Wiring Harness LH	247
71.	Rear Wiring Harness (HEV)	249
72.	Door Cord RH	251
73.	Door Cord LH	253
74	Bear Wiring Harness and Bear Gate Cord	255