



GUI Python → real tProcessor / TMUX / AWG / SquarePulse RTL → independent analog RC  
300 MHz fabric, 4.8 GSPS DAC samples,  $\tau = 10\text{ us}$ , full scale =  $\pm 800\text{ mV}$


AWG output 1: DC + RC

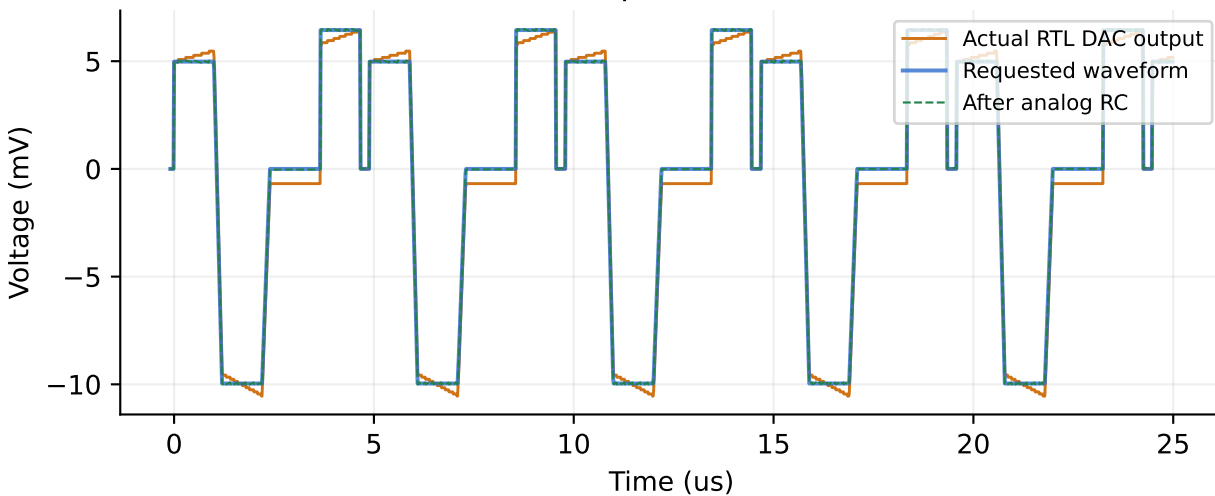


RC output error across all 100 points x 2 repeats

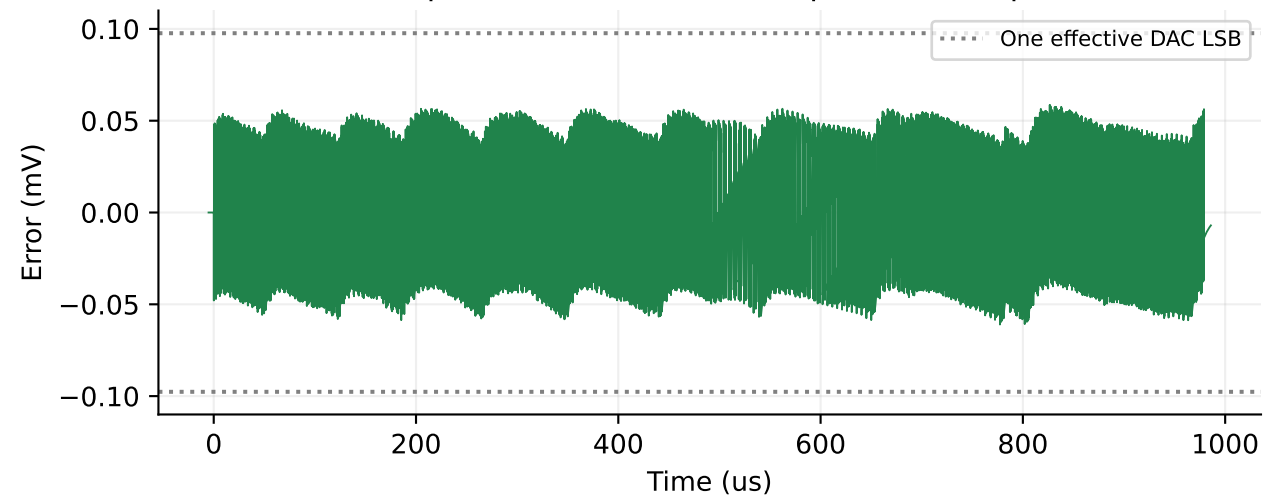


AWG output 2: DC + RC

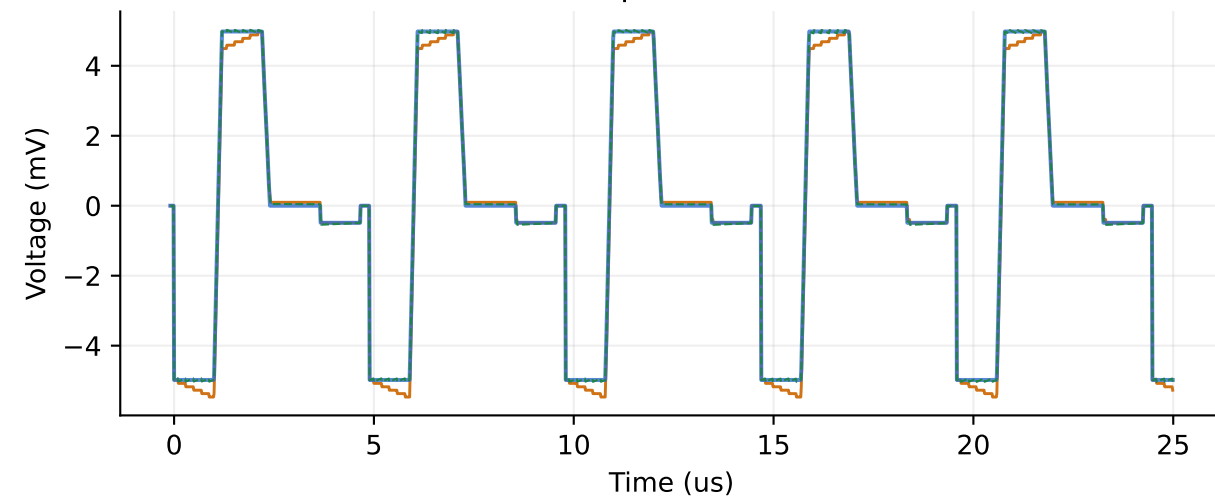

RC output error across all 100 points x 2 repeats

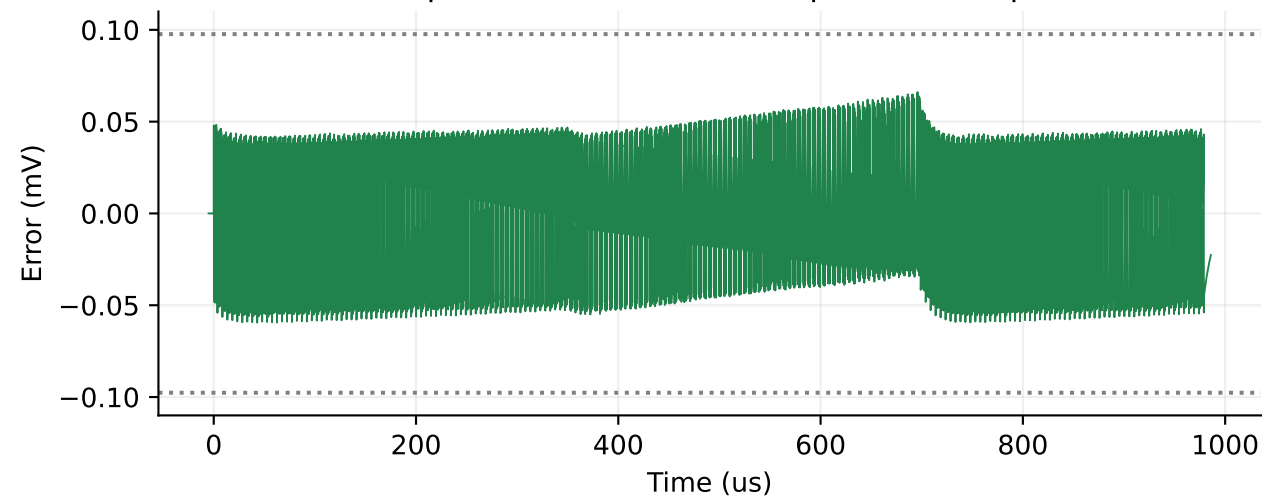

SquarePulse: 500 us period, RC

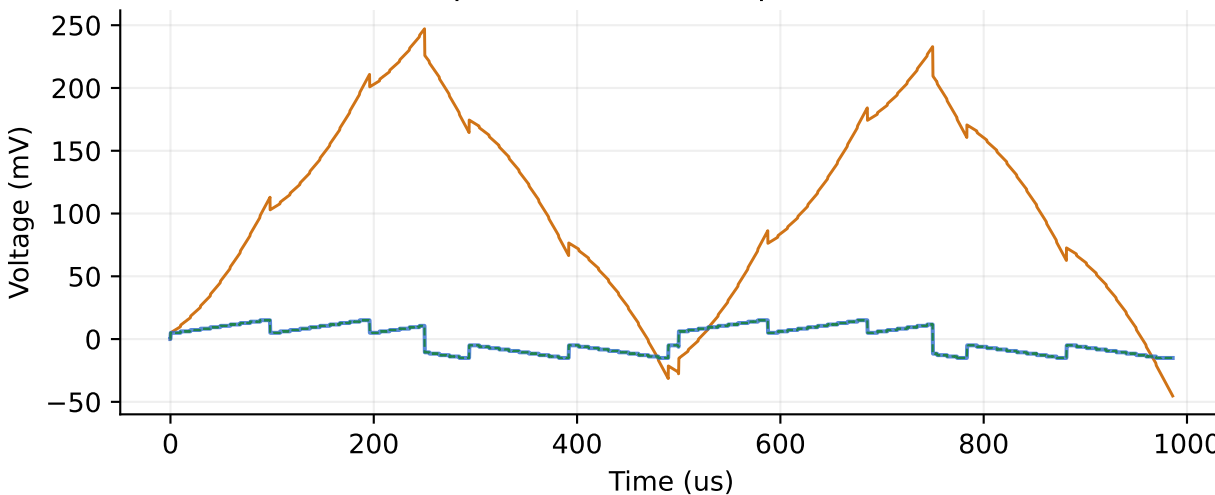

RC output error across all 100 points x 2 repeats

