

APC40 MK2

Ableton Live 12 Getting Started

APC-only zero-to-one live-looping setup

Connect -> Configure -> Launch -> Mix -> Record

apc40-mk2-ableton-start (0.1.0)

Alexy Khrabrov

Codex with ChatGPT 5.5

APC40 MK2 Ableton Live 12 Getting Started

APC-only zero-to-one live-looping setup with Kiffness-style practice scenes

Alexy Khrabrov

Codex with ChatGPT 5.5

2026-07-06

Contents

1	Start Here	2
2	Source Video Pack	3
2.1	Watch Order	5
3	What The APC40 MK2 Is	5
3.1	First-Day Rule	7
4	Cable And Power	7
5	Ableton Live 12 Settings	8
5.1	Native Control Surface Setup	8
5.2	MIDI Ports	8
5.3	Immediate Test	9
6	The First Empty Set	9
7	Clip Grid Basics	9
7.1	Clip Launch Buttons	10
7.2	Scene Launch Buttons	10
8	Stop Buttons	11
8.1	Clip Stop Per Track	11
8.2	Stop All Clips	11
9	Tracks, Faders, And Mutes	12
9.1	Faders	12
9.2	Track Activator Buttons	13
9.3	Solo Buttons	13
9.4	Record Arm Buttons	13
10	Channel Knobs: Pan, Sends, User	14
10.1	Pan Mode	14
10.2	Sends Mode	14
10.3	User Mode	14
11	Device Control Knobs	15
11.1	Beginner Macro Rack	16
12	Bank And Session Navigation	16
12.1	Bank Select Buttons	16
12.2	Bank Button Plus Arrows	16

12.3	Shift And Session Overview	17
13	Kiffness Practice Track Choice	17
14	Build The APC-Only Practice Set	18
14.1	Track Columns	18
14.2	Scene Rows	19
14.3	Clip Slot Plan	20
14.4	Global Quantization	20
15	First Performance: Scene Buttons Only	21
16	Second Performance: Add Faders	21
16.1	Intro	21
16.2	Groove	21
16.3	Hook	22
16.4	Break	22
16.5	End	22
17	Third Performance: Add Mutes	22
18	Fourth Performance: Add Sends	22
18.1	Reverb Pass	22
18.2	Delay Pass	23
19	Fifth Performance: Device Control	23
20	Sixth Performance: Crossfader	24
21	Record The APC Performance	24
21.1	What Gets Recorded	25
22	Daily Practice Plan	26
22.1	Day 1: Recognition And Grid	26
22.2	Day 2: Mixer	26
22.3	Day 3: Sends	26
22.4	Day 4: Device Rack	26
22.5	Day 5: Record A Take	27
23	One-Page Performance Recipe	27
24	Troubleshooting	29
24.1	APC Lights Up, But Live Does Nothing	29
24.2	Grid Launches Clips, But Faders Do Nothing	29
24.3	Faders Work, But Clip Buttons Do Nothing	30
24.4	Clips Start Late	30
24.5	Everything Is Too Loud	30
24.6	Manual Mapping Broke Something	30
25	What To Ignore For Now	30
26	Final Check	31

1 Start Here

This is a separate book for the new Akai APC40 MK2. It assumes one controller only: the APC40 MK2 connected to Ableton Live 12. Do not connect the MPK yet. Do not build a combined rig

yet. The first goal is to make the APC feel obvious: clip grid, scene launch, faders, track buttons, device knobs, sends, transport, and recording a simple performance into Arrangement View.

This guide is deliberately detailed. It is for the first sitting where the controller is new, Ableton Session View is still unfamiliar, and every light on the APC could mean three different things. The goal is not to memorize every button. The goal is to build one small, repeatable live set, press the correct controls in the correct order, and understand why they worked.

The visual plates in this book are original recreated diagrams and setup panels. They are not copied frames from YouTube, not screenshots from Ableton, and not Akai product art. They are intentionally screenshot-like because the practical need is visual: where to click, what to select, what button to press, and what the APC should be doing at that moment.

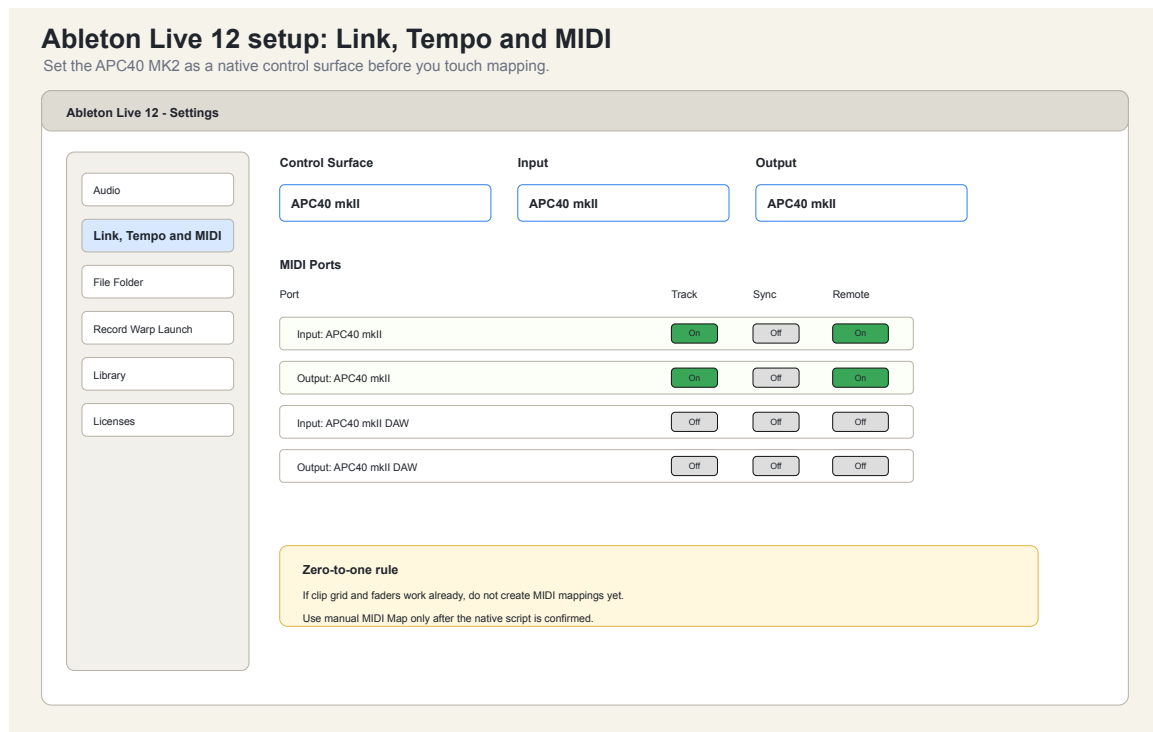


Figure 1: Ableton Live 12 MIDI settings for APC40 MK2.

2 Source Video Pack

The best zero-to-one path is not one video. APC40 MK2 videos tend to split into three buckets: hardware operation, Live setup, and performance workflow. I used the following source pack to shape this book.

Primary APC walkthrough:

- Meta Mind Music, “Learn the APC40 mk2 Controller In 30 - The best Ableton mixer!” Length: 29:56. URL: <https://www.youtube.com/watch?v=hUo2xowjr0U>

- Why it matters: this is the most useful APC40 MK2 beginner walkthrough found for the surface itself. Its chapter path covers setup, mixer controls, transport controls, device controls, clip/session controls, global controls, and pro tips.

Official APC walkthrough:

- Akai Professional, “APC40 mkII - Demo, Features, and Operation in Ableton Live.” Length: 12:45. URL: <https://www.youtube.com/watch?v=IAWy2TVtXo8>
- Why it matters: this is the official APC40 mkII operation overview. It covers clips and scenes, mixer, device control, transport, track control, footswitch, and customization.

Workflow video:

- Random Noise, “Why I love this Ableton Controller and How I Use It.” Length: 25:40. URL: <https://www.youtube.com/watch?v=BoFqQGtyG3o>
- Why it matters: useful for thinking of the APC as an arranging and performance surface, not just a grid of buttons.

Fast arrangement overview:

- Tony Tyson, “A Really Quick Guide To Using The Akai APC40 MkII.” Length: 9:02. URL: <https://www.youtube.com/watch?v=POb406So534>
- Why it matters: quick arrangement-on-the-fly overview. Good after the first setup works.

Set preparation:

- Isotonik Studios, “Ableton Live - Preparing your set for the APC40 / Launchpad.” Length: 9:40. URL: <https://www.youtube.com/watch?v=76WvQNJb1bk>
- Why it matters: practical set-preparation ideas: crop clips, color tracks, and make the controller readable.

Ableton 12 Session View:

- MusicRadar Tech, “How to use Session View to turn loops into full tracks in Ableton Live 12.” Length: 14:28. URL: <https://www.youtube.com/watch?v=o8diEg51rZs>
- Why it matters: Live 12 Session View framing for turning loop ideas into song structure.

Official documentation used for the exact behavior:

- Akai APC40 mkII User Guide: <https://cdn.inmusicbrands.com/akai/attachments/apc40II/APC40%20mkII%20-%20User%20Guide%20-%20v1.0.pdf>
- Ableton APC40 mkII controller page: <https://www.ableton.com/en/products/controllers/apc40mkii/>
- Ableton Live 12 Manual, MIDI and Key Remote Control: <https://www.ableton.com/en/manual/midi-and-key-remote-control/>
- Ableton Live 12 Manual, Session View: <https://www.ableton.com/en/manual/session-view/>
- Ableton Live 12 Manual, Launching Clips: <https://www.ableton.com/en/manual/launching-clips/>

- Ableton Help, Using Control Surfaces: <https://help.ableton.com/hc/en-us/articles/209774285-Using-Control-Surfaces>

2.1 Watch Order

Do not watch the source pack in random order. Use this order:

1. Watch the Akai official APC40 mkII video once without touching anything.
2. Watch the Meta Mind Music video with the APC on your desk.
3. Pause at the setup section and configure Ableton exactly.
4. Watch the mixer and device-control sections while moving only those controls.
5. Watch the Isotonik set-preparation video after you understand the grid.
6. Watch the MusicRadar Live 12 Session View video when you are ready to turn loops into a performance.
7. Watch the Random Noise workflow video after you can launch, fade, mute, and record a simple set.

This book compresses that path into a single project.

3 What The APC40 MK2 Is

The APC40 MK2 is not a keyboard. It is not primarily for playing melodies. It is a physical control surface for Ableton Live's Session View and mixer. Ableton's controller page describes the core idea: a 5 by 8 RGB clip-launching grid, nine faders, eight channel control knobs, and eight device control knobs. The Akai manual explains the same surface in operational terms: the eight columns are tracks, the five rows are scenes, and the buttons at the right launch entire scenes.

That gives you the whole mental model:

Physical APC zone	Ableton job	First-day meaning
8 by 5 clip grid	Session View clip slots	Start one loop on one track.
5 scene buttons	Session rows	Start a whole musical section.
Clip Stop buttons	Track stops	Stop the currently playing clip in a column.
Track selectors	Track focus	Choose the track whose device you want to control.
Track activators	Mute/unmute	Create dropouts without touching the mouse.
Solo buttons	Isolate a track	Diagnose problems, not a normal performance move.
Record-arm buttons	Prepare tracks for recording	Useful later; not central to APC-only playback.
Track faders	Mixer volumes	Make the set feel alive.
Channel knobs	Pan, sends, or user mappings	Use Pan and Sends first; avoid User at first.
Device knobs	Current device parameters	Control macros, filters, delays, and racks.
Crossfader	A/B blend	Performance transitions.
Play, Record, Session	Transport and recording	Start Live, capture the performance.

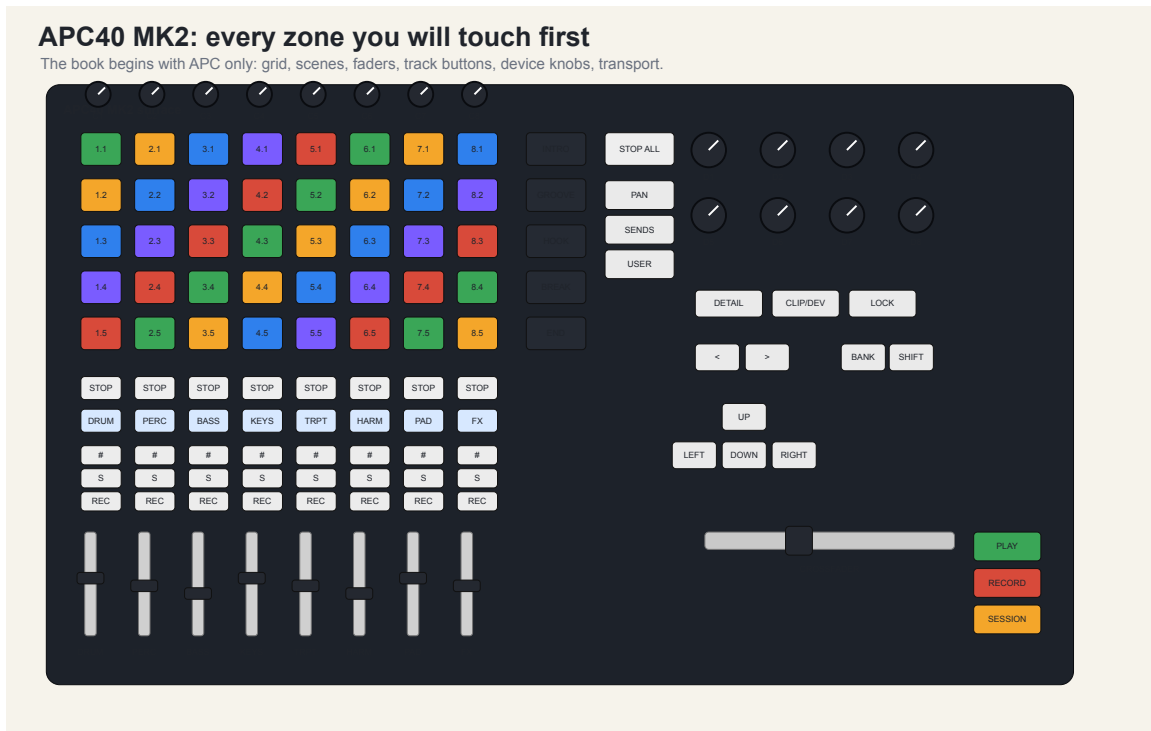


Figure 2: APC40 MK2 zones used first.

3.1 First-Day Rule

For the first day, do not manually MIDI-map anything until the native APC script works. The APC40 MK2 is designed to correspond to Ableton Live automatically. Manual mapping is powerful, but it can hide whether the native script is working.

Use this order:

1. Make Live recognize the APC40 MK2 as a Control Surface.
2. Confirm the grid rectangle appears in Session View.
3. Confirm clip launch buttons trigger clips.
4. Confirm faders move track volumes.
5. Confirm track activator buttons mute and unmute tracks.
6. Confirm Device Control knobs move the selected device.
7. Only then consider User mode or manual MIDI Map.

4 Cable And Power

Before launching Live:

1. Put the APC40 MK2 flat on the desk.
2. Connect its USB cable directly to the Mac if possible.
3. Avoid a hub for the first setup.
4. Turn the APC power switch on.
5. Wait a moment for macOS to see it as a MIDI device.

6. Open Ableton Live 12.

The APC is USB-powered. If it does not light up, first suspect the cable, port, or hub. A direct cable to the Mac removes one whole class of problems.

Do not connect the MPK, audio interface MIDI ports, or any other controller for the first setup. If another MIDI controller is connected, Ableton can still work, but troubleshooting becomes noisier.

5 Ableton Live 12 Settings

Ableton 12 may call the window Settings. Older videos may say Preferences or MIDI/Sync. Treat these as the same destination:

Live > Settings > Link, Tempo and MIDI

On Windows, the path is usually:

Options > Settings > Link, Tempo and MIDI

5.1 Native Control Surface Setup

Use these exact choices first:

Field	Set to
Control Surface	APC40 mkII
Input	APC40 mkII
Output	APC40 mkII

If Ableton auto-detects the APC, these may already be filled in. If they are filled in correctly, leave them alone.

If you see more than one APC port name, choose the pair that matches the normal APC40 mkII input and output. Port names can vary slightly by macOS, Ableton version, and driver state. The test is practical: after closing Settings, the Session View ring should move when you bank the APC, and the clip grid should light with the clip colors.

5.2 MIDI Ports

For this beginner book:

Port	Track	Sync	Remote
Input: APC40 mkII	On	Off	On
Output: APC40 mkII	On	Off	On

Why:

- Track lets MIDI notes and control data reach tracks when needed.
- Remote lets Live receive controller commands and send feedback.

- Sync is not needed for APC-only setup unless you are synchronizing tempo with another device. Leave it off for now.

If your APC works with Track Off because the native script handles everything, that is fine. The important beginner state is this: native Control Surface selected, correct Input and Output selected, and Remote available for feedback or manual mappings later.

5.3 Immediate Test

After closing Settings:

1. Open Session View with the Tab key if Arrangement View is visible.
2. Create or open a set with at least one clip.
3. Look for Ableton's highlighted Session ring around a block of clips.
4. Press APC Bank Right.
5. The Session ring should move right.
6. Press Bank Left.
7. The Session ring should move back.

If the Session ring does not move, stop here. Do not continue to clip launching yet. Go to the troubleshooting chapter and fix recognition first.

6 The First Empty Set

Create the simplest possible Ableton set before you build the Kiffness exercise. This is your controller test set.

1. Open Live 12.
2. Create a new Live Set.
3. Switch to Session View.
4. Delete extra tracks until you have four tracks if you want less clutter.
5. Add one audio or MIDI clip to Track 1, Scene 1.
6. Add another clip to Track 2, Scene 1.
7. Add a third clip to Track 1, Scene 2.
8. Color the clips different colors.
9. Press the matching APC grid buttons.

Expected result:

- The clip launches on the next quantized boundary.
- The button color roughly follows the clip color.
- The playing state is visible from the APC.
- The corresponding Ableton clip slot also shows activity.

Do not worry about the music yet. This is a hardware check, not a song.

7 Clip Grid Basics

The APC grid is eight columns by five rows.

- A column is a track.
- A row is a scene.
- A button is a clip slot.
- The five scene launch buttons on the right launch full rows.

The Akai manual says the current 8 by 5 matrix is represented in Live by a rectangle around the clips. That is the key. You are not looking at the whole Ableton set. You are looking at the part of the set currently under the APC.

7.1 Clip Launch Buttons

To launch one clip:

1. Find the track column.
2. Find the scene row.
3. Press the grid button at that intersection.

If Global Quantization is set to 1 Bar, the clip will usually wait until the next bar before it starts. This is good. It keeps the performance in time.

If you press a clip and nothing happens:

1. Check that the slot actually contains a clip.
2. Check that you are in Session View.
3. Check that the Session ring is over the clip you think it is over.
4. Check that the track is not muted.
5. Check that the master volume is up.

7.2 Scene Launch Buttons

To launch a whole musical section:

1. Look at the right edge of the APC grid.
2. Press the scene button for the row you want.
3. Wait for the quantized launch.
4. Use faders to shape the mix after the row starts.

Scene launching is the APC's superpower. A mouse can launch clips, but a mouse is awkward for launching a row and riding faders. The APC makes the song structure physical.

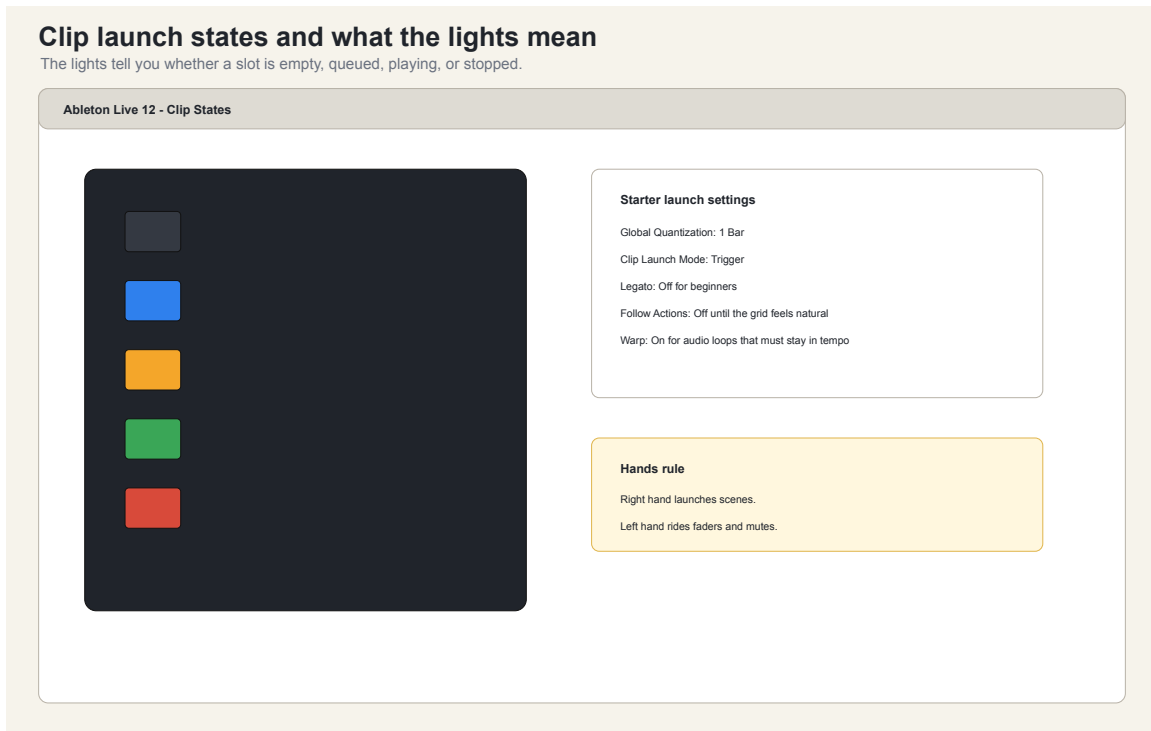


Figure 3: Clip launch states and beginner launch settings.

8 Stop Buttons

There are two kinds of stop actions to learn early.

8.1 Clip Stop Per Track

The Clip Stop buttons sit under the clip grid, one per track. Pressing a Clip Stop button stops the currently playing clip in that track column.

Use this for:

- removing percussion while bass continues;
- stopping a riser or one-shot FX track;
- cutting keys or pads for a break;
- ending one track while the rest of the scene continues.

8.2 Stop All Clips

Stop All Clips stops the Session clips. It is your panic button and your clean ending button.

Use this for:

- recovering from the wrong row;
- ending a practice pass;
- resetting before another take;
- proving to yourself that the APC is controlling the set.

Beginner mistake: pressing Live's main Stop button when you only meant to stop one track. Use Clip Stop for one track. Use Stop All Clips for the entire grid.

9 Tracks, Faders, And Mutes

The APC40 MK2 becomes much more musical once you stop thinking of it as just a clip launcher. It is also a mixer.

9.1 Faders

Use faders with the left hand:

1. Start the Groove scene.
2. Put all faders down.
3. Raise drums.
4. Raise bass.
5. Raise keys or pads.
6. Bring in trumpet/hook later.
7. Keep FX low until the transition.

Do not slam every fader to the top. A good practice target is:

Track	Starter fader position
Drums	medium-high
Percussion	low-medium
Bass	medium
Keys	medium-low
Trumpet/hook	medium, featured only when needed
Harmony	lower than lead
Pads	low but wide
FX	very low except transitions

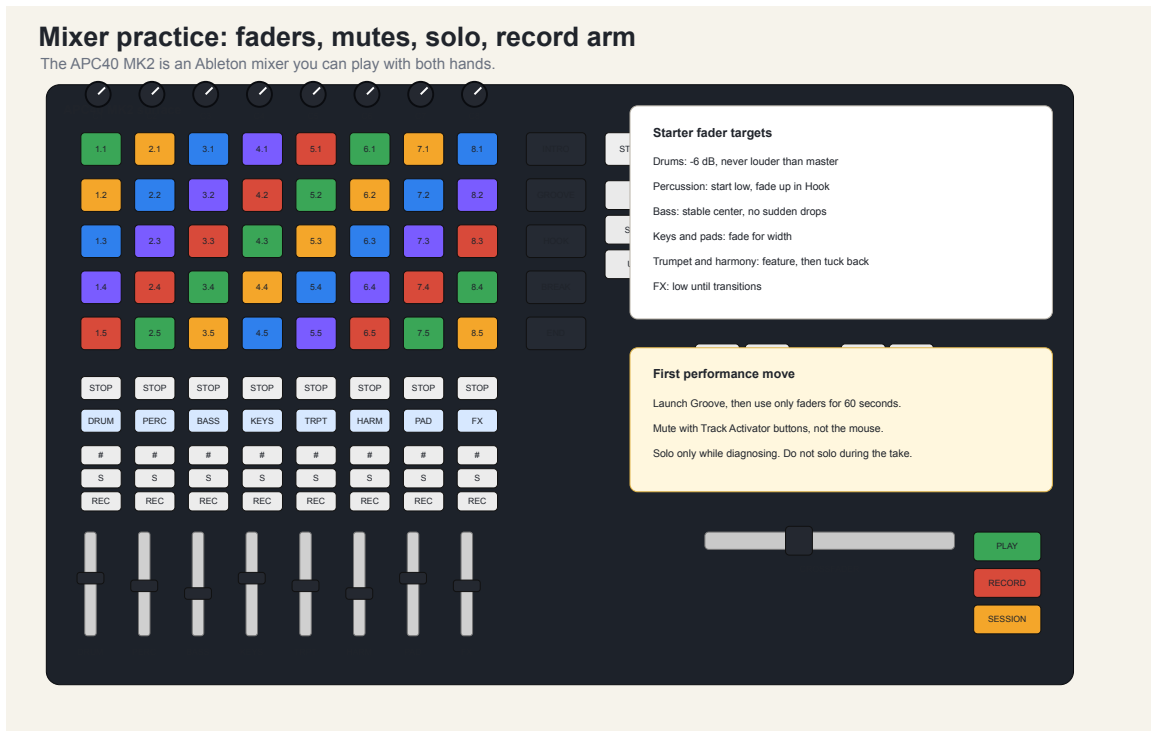


Figure 4: Mixer practice with faders and track buttons.

9.2 Track Activator Buttons

The Track Activator button is the mute/unmute button. It has the track number on it. Use it to create arrangement movement.

Practice:

1. Launch Groove.
2. Let all tracks play for four bars.
3. Mute percussion for two bars.
4. Unmute percussion.
5. Mute drums for one bar before the Hook scene.
6. Launch Hook.

This teaches a crucial APC skill: performance is not only starting clips. It is also removing layers.

9.3 Solo Buttons

Solo is for diagnosis. If bass is too loud, solo bass, adjust, then unsolo. Do not build your normal performance around Solo. Audiences do not need to hear you check a track in isolation.

9.4 Record Arm Buttons

Record Arm matters when recording into clips. Since this first book is APC-only, use Record Arm later. For now, the APC is mainly launching and mixing clips that already exist.

10 Channel Knobs: Pan, Sends, User

The row of eight assignable knobs can do different things depending on mode.

10.1 Pan Mode

Press Pan. Now the eight assignable knobs control panning for the current eight tracks.

Beginner pan map:

Track	Pan
Drums	center
Percussion	slightly right
Bass	center
Keys	slightly left
Trumpet	center or slightly right
Harmony	left/right spread
Pads	wide but not extreme
FX	whatever makes the transition audible

Do not over-pan bass or kick. Keep low-frequency foundation centered.

10.2 Sends Mode

Press Sends. By default, the knobs control Send A for the current eight tracks. If Send A is reverb, each knob controls how much reverb each track receives.

To select another send, the Akai manual describes this gesture:

1. Hold Sends.
2. Press Track Selector 1 for Send A.
3. Press Track Selector 2 for Send B.
4. Release Sends.
5. Turn the assignable knobs.

Beginner return-track plan:

Return	Effect	Use
Return A	Reverb	pads, trumpet, harmony, ending tail
Return B	Delay	trumpet stab, vocal chop, FX throw

10.3 User Mode

User mode is for manual MIDI mapping. Do not use it during the first setup. Use it only after:

1. native clip launch works;
2. faders work;

3. mutes work;
4. device knobs work;
5. you know what single parameter is missing from your normal workflow.

Beginner User mode mapping:

1. Press User.
2. In Live, press MIDI Map.
3. Click a parameter, such as Auto Filter Frequency on the FX track.
4. Turn Assignable Knob 8.
5. Exit MIDI Map.
6. Save the set as a template if the mapping is useful.

Manual mappings live in the Live Set. They do not automatically become a global APC behavior for every project.

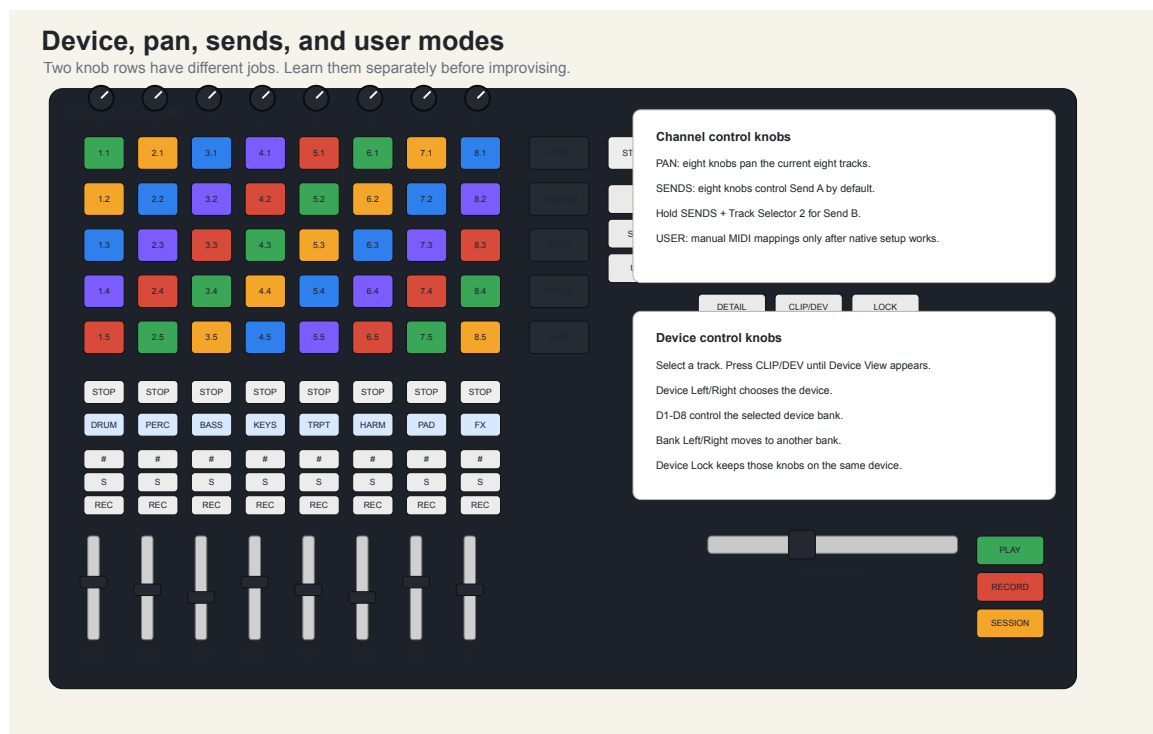


Figure 5: Device, pan, sends, and user mode diagram.

11 Device Control Knobs

The eight Device Control knobs are different from the Channel knobs. Device Control follows the selected track and selected device.

Use this sequence:

1. Press Track Selector 7 for PADS.
2. Press Clip/Dev View until Device View is visible.

3. Use Device Left/Right to select the device or rack you want.
4. Turn Device Control Knob 1.
5. Watch the selected device parameter move.
6. Turn Device Control Knob 2.
7. Use Bank Left/Right if the device has more than eight parameters.
8. Press Device Lock if you want the APC to stay locked to that device.

11.1 Beginner Macro Rack

Create an Audio Effect Rack on the FX or PADS track with these macros:

Macro	Device knob	Parameter
Filter Cutoff	D1	Auto Filter Frequency
Filter Res	D2	Auto Filter Resonance
Echo Wet	D3	Echo Dry/Wet
Echo Feedback	D4	Echo Feedback
Reverb Wet	D5	Reverb Dry/Wet
Reverb Size	D6	Reverb Size
Utility Gain	D7	Utility Gain
Width	D8	Utility Width

For the first week, lock the APC to this rack. This makes the Device Control knobs predictable while your hands learn the surface.

12 Bank And Session Navigation

The APC grid shows only eight tracks by five scenes at a time. Bigger Live Sets are normal, but the APC needs a current window into them.

12.1 Bank Select Buttons

Use the arrow buttons to move the selection one track or scene at a time.

Use this for small moves:

- Track 1 to Track 2;
- Scene 1 to Scene 2;
- selecting the next device or slot without a mouse.

12.2 Bank Button Plus Arrows

Hold Bank and press an arrow to move the entire controlled grid:

- left/right by eight tracks;
- up/down by five scenes.

Beginner advice: do not need this in the first APC-only Kiffness practice set. Stay inside eight tracks and five scenes. Save big-set navigation for later.

12.3 Shift And Session Overview

Holding **Shift** can put the clip grid into Session Overview. In that view, each button represents a larger 8-track by 5-scene block in Live. This is excellent for big sets and confusing on day one.

Day-one rule:

1. Know that Session Overview exists.
2. Do not use it for the first exercise.
3. Build the first set to fit one APC grid.

13 Kiffness Practice Track Choice

The selected practice track is:

Oh Long Johnson x The Kiffness

Why this one:

- It has more usable layers than a tiny three-part loop.
- The local Kiffness layer inventory includes drums, percussion, bass, keys, trumpet, trumpet harmonies, vocal harmonies, pads, and related transitions.
- It exercises the entire APC surface without requiring the MPK.
- It can be practiced legally as a structure and controller exercise using your own sounds, not as a copy of the recording.

Do not rip the source audio. Do not copy lyrics. Do not include video frames in your final practice artifact. Build an original set that borrows the layer logic: drums, percussion, bass, keys, trumpet-like hook, harmonies, pads, and FX.

Kiffness exercise track: Oh Long Johnson
 This track is chosen because it uses enough layers to justify the APC40 MK2 surface.

Practice target: recreate the structure, not the copyrighted recording.

1 DRUMS	kick, snare, hi-hat, snare-off break
2 PERC	darbuka, shaker, percussion fill
3 BASS	main bass, bass hold, ending bass
4 KEYS	keys, dub keys, short stabs
5 TRUMPET	trumpet hook, open trumpet, stabs
6 HARMONY	vocal harmony 1, vocal harmony 2, chop
7 PADS	pads, wide pad, filtered pad tail
8 FX	delay throw, riser, impact, verb tail

The goal is a legal, original practice set inspired by the visible layer logic, using your own sounds.

Figure 6: Oh Long Johnson layer map for APC practice.

14 Build The APC-Only Practice Set

Create exactly eight tracks and five scenes. Keep the whole first performance inside one APC grid.

14.1 Track Columns

Name the tracks:

1. DRUMS
2. PERC
3. BASS
4. KEYS
5. TRUMPET
6. HARMONY
7. PADS
8. FX

Color the tracks by family:

Track	Color idea
DRUMS	green
PERC	yellow or amber
BASS	blue
KEYS	purple
TRUMPET	red
HARMONY	pink
PADS	teal
FX	gray or orange

The colors matter because the APC grid reflects clip colors. A readable set is easier to play.

14.2 Scene Rows

Create five scenes:

1. INTRO
2. GROOVE
3. HOOK
4. BREAK
5. END

Beginner scene logic:

Scene	Musical job	APC job
INTRO	small texture	start calmly
GROOVE	main beat and bass	lock the loop
HOOK	full recognizable moment	launch the biggest row
BREAK	remove drums or reduce density	practice mutes/faders
END	tails and stop	finish cleanly

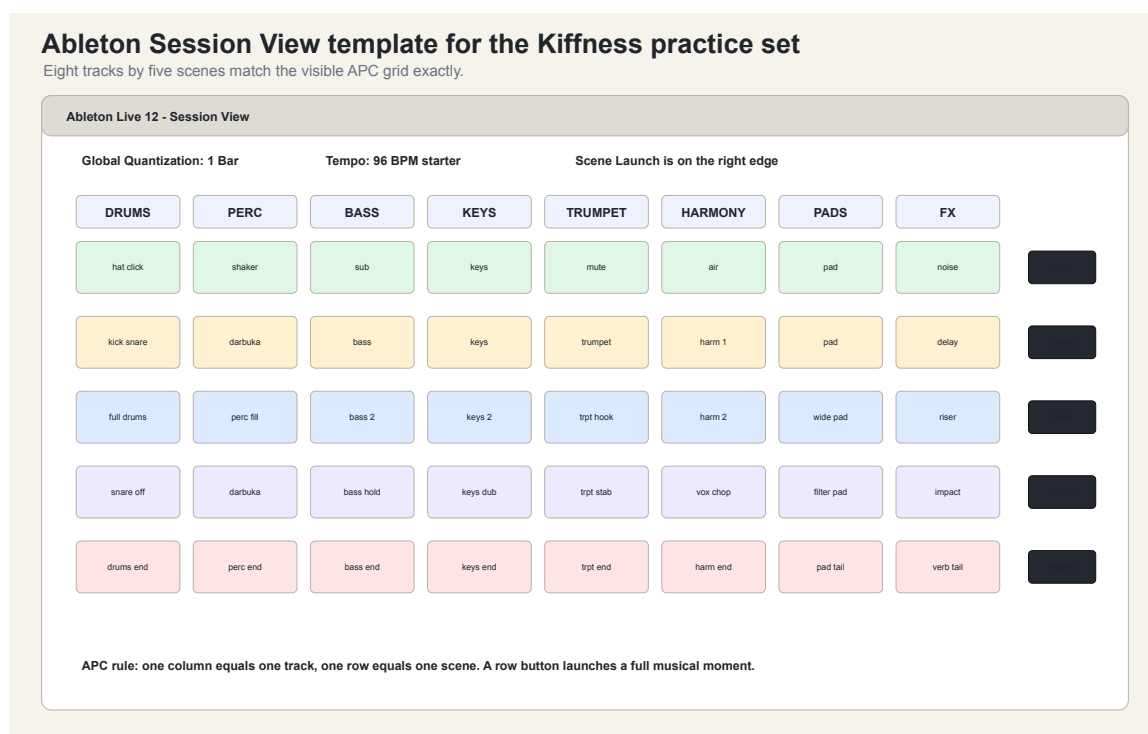


Figure 7: Ableton Session View template for the first APC set.

14.3 Clip Slot Plan

Use placeholder clips if you do not have sounds yet. The point is controller fluency.

Scene	DRUMS	PERC	BASS	KEYS	TRUM- PET	HAR- MONY	PADS	FX
INTRO	hat click	shaker	sub pulse	keys hint	mute	air	pad	noise
GROOVE	kick snare	dar- buka	bass	keys	trum- pet	harm 1	pad	delay
HOOK	full drums	perc fill	bass 2	keys 2	trpt hook	harm 2	wide pad	riser
BREAK	snare off	dar- buka	bass hold	keys dub	trpt stab	vox chop	filter pad	impact
END	drums end	perc end	bass end	keys end	trpt end	harm end	pad tail	verb tail

If a clip is missing, leave the slot empty. Empty slots are better than a messy unlabeled set.

14.4 Global Quantization

Set Global Quantization to 1 Bar.

Why:

- It lets you press a scene button slightly early.
- It keeps launches musical.
- It gives your hands time to move from scene buttons to faders.

Later, try 1/4 for fast cuts. Do not start there.

15 First Performance: Scene Buttons Only

This exercise uses no faders, no knobs, no mutes. Only scene buttons.

1. Put all track faders around the same medium level.
2. Press Play.
3. Press Scene 1: INTRO.
4. Count four bars.
5. Press Scene 2: GROOVE.
6. Count eight bars.
7. Press Scene 3: HOOK.
8. Count eight bars.
9. Press Scene 4: BREAK.
10. Count four bars.
11. Press Scene 3 again: HOOK.
12. Count four bars.
13. Press Scene 5: END.
14. Press Stop All Clips.

Do this three times before touching faders. The goal is to trust the grid.

16 Second Performance: Add Faders

Repeat the scene-button performance, but add fader moves.

16.1 Intro

1. Pull DRUMS, PERC, and TRUMPET down.
2. Leave PADS and FX low.
3. Launch INTRO.
4. Raise only PADS slightly.

16.2 Groove

1. Launch GROOVE.
2. Raise DRUMS.
3. Raise BASS.
4. Bring PERC up slowly.
5. Keep TRUMPET lower than you think.

16.3 Hook

1. Launch HOOK.
2. Raise TRUMPET.
3. Raise HARMONY.
4. Push PADS wider if needed.
5. Keep FX controlled.

16.4 Break

1. Launch BREAK.
2. Pull DRUMS down or mute it.
3. Let BASS, PADS, and FX breathe.
4. Prepare your hand over the HOOK scene button.

16.5 End

1. Launch END.
2. Fade DRUMS and BASS out first.
3. Let PADS and FX tail.
4. Press Stop All Clips when the tail feels done.

17 Third Performance: Add Mutes

Mutes are more decisive than faders. Practice them after the fader pass.

Try this:

1. Launch GROOVE.
2. Mute PERC for two bars.
3. Unmute PERC.
4. Mute DRUMS for one bar.
5. Launch HOOK.
6. Mute PADS for one bar inside the hook.
7. Unmute PADS.
8. Launch BREAK.
9. Mute TRUMPET.
10. Launch END.

The trick is to think in bars, not random button presses. A mute should sound like an arrangement decision.

18 Fourth Performance: Add Sends

Set Return A to Reverb and Return B to Delay.

18.1 Reverb Pass

1. Press Sends.
2. Select Send A if needed.
3. Launch HOOK.

4. Add reverb to TRUMPET, HARMONY, and PADS.
5. Keep BASS and DRUMS mostly dry.
6. Launch END.
7. Increase reverb on PADS and FX.

18.2 Delay Pass

1. Hold Sends.
2. Press Track Selector 2 to select Send B.
3. Launch BREAK.
4. Add delay to TRUMPET stab and FX.
5. Pull delay down before returning to HOOK.

Beginner warning: sends accumulate. If everything is in reverb and delay, the mix loses punch. Use sends for contrast.

19 Fifth Performance: Device Control

Build one device rack on PADS or FX. Lock the APC to it.

Recommended rack:

1. Auto Filter.
2. Echo.
3. Reverb.
4. Utility.

Map the first eight macros:

1. Filter Cutoff.
2. Filter Resonance.
3. Echo Wet.
4. Echo Feedback.
5. Reverb Wet.
6. Reverb Size.
7. Utility Gain.
8. Width.

Use it this way:

1. Select the FX track.
2. Press Clip/Dev View until Device View appears.
3. Select the rack.
4. Press Device Lock.
5. Launch GR00VE.
6. Slowly open Filter Cutoff.
7. Launch HOOK.
8. Increase Echo Wet for one bar.
9. Pull Echo Wet down.

10. Launch END.

11. Increase Reverb Wet and Width.

One good effect move is better than eight nervous knob moves.

20 Sixth Performance: Crossfader

The crossfader is optional on day one, but the APC gives you a real one, so it is worth a controlled exercise.

Assign tracks:

Track	Crossfader assignment
DRUMS	A
PERC	A
BASS	A
KEYS	Off
TRUMPET	B
HARMONY	B
PADS	B
FX	B

Exercise:

1. Put the crossfader all the way left.
2. Launch GR00VE.
3. You should hear the A-side rhythm section.
4. Slowly move the crossfader to the center.
5. Launch H00K.
6. Move the crossfader right to reveal B-side melodic layers.
7. Move back to center before BREAK.

Do not use the crossfader as a volume fader. Use it as a transition control.

21 Record The APC Performance

Once the practice set works, record one pass into Arrangement View.

1. Save the set as APC 0h Long Johnson Practice 01.
2. Return to Session View.
3. Set Global Quantization to 1 Bar.
4. Press Stop All Clips.
5. Put faders in starting positions.
6. Press Arrangement Record in Live or the APC Record button if it is assigned to Arrangement Record.

7. Press Play.
8. Perform the five-scene structure.
9. Use faders, mutes, sends, and one device rack move.
10. Press Stop twice.
11. Switch to Arrangement View.
12. Listen back.
13. Save the set as APC 0h Long Johnson Practice 01 - recorded.

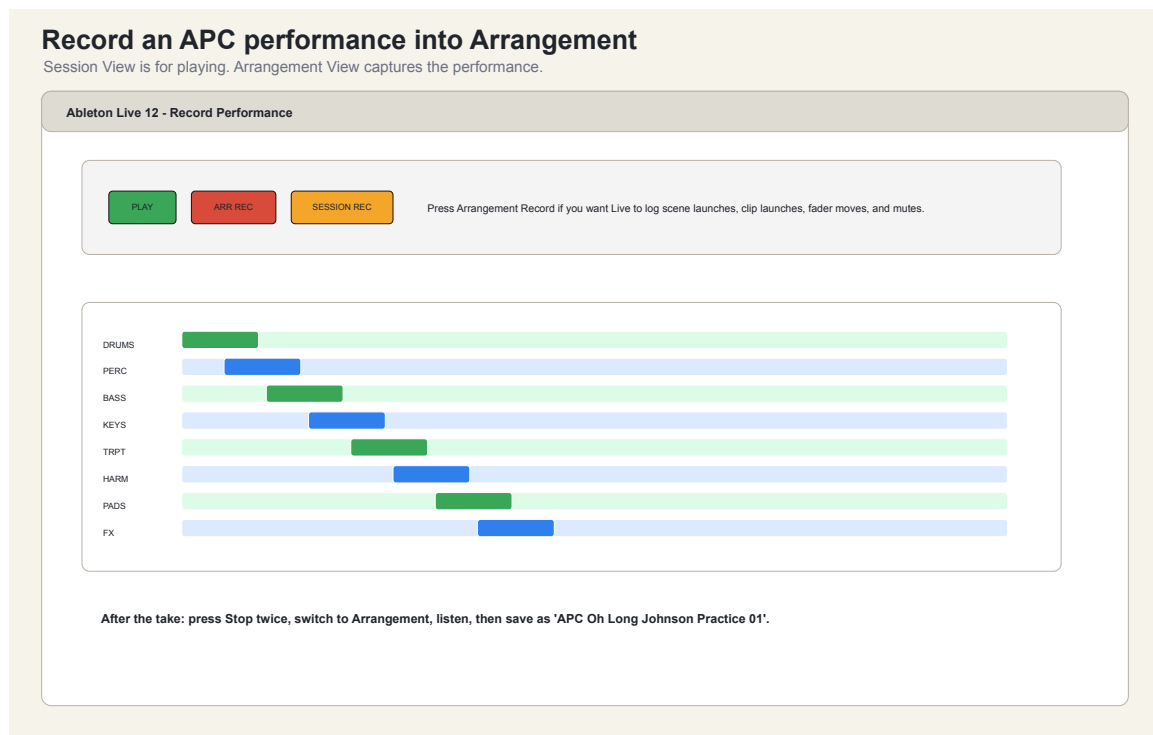


Figure 8: Recording Session View actions into Arrangement View.

21.1 What Gets Recorded

Arrangement recording can capture:

- scene launches;
- clip launches;
- fader moves;
- track activator changes;
- device macro movements;
- send changes;
- crossfader movement.

This is why the APC matters. You are not only triggering loops. You are playing the arrangement.

22 Daily Practice Plan

22.1 Day 1: Recognition And Grid

Goal: Ableton sees the APC and the grid launches clips.

Checklist:

1. APC lights up.
2. Live Settings show APC40 mkII as Control Surface.
3. Input and Output are set.
4. Session ring moves.
5. One clip launches.
6. One scene launches.
7. Stop All Clips works.

Stop after this if your brain is full. That is a valid first session.

22.2 Day 2: Mixer

Goal: play the APC as a mixer.

Checklist:

1. Launch GROOVE.
2. Use faders only.
3. Add and remove percussion with a fader.
4. Mute DRUMS for one bar.
5. Unmute cleanly.
6. Fade to END.

22.3 Day 3: Sends

Goal: understand wet/dry space.

Checklist:

1. Return A is Reverb.
2. Return B is Delay.
3. Sends mode controls Send A.
4. Hold Sends plus Track Selector selects Send B.
5. Add reverb to pads.
6. Add delay to trumpet or FX.
7. Keep kick and bass mostly dry.

22.4 Day 4: Device Rack

Goal: one locked effect rack.

Checklist:

1. Create rack on FX.

2. Map eight macros.
3. Select track.
4. Select rack.
5. Lock device.
6. Perform one filter opening.
7. Perform one echo throw.

22.5 Day 5: Record A Take

Goal: record one APC performance into Arrangement.

Checklist:


1. Save the set.
2. Arm Arrangement Record.
3. Perform the five scenes.
4. Stop twice.
5. Listen in Arrangement View.
6. Rename and save the recorded set.

23 One-Page Performance Recipe

Use this exact recipe when you do not want to think.

1. Open APC 0h Long Johnson Practice 01.
2. Connect only APC40 MK2.
3. Confirm Settings: Control Surface APC40 mkII, Input APC40 mkII, Output APC40 mkII.
4. Set Global Quantization to 1 Bar.
5. Press Stop All Clips.
6. Put faders low.
7. Launch INTRO.
8. Raise PADS and FX.
9. Launch GROOVE.
10. Raise DRUMS, BASS, and PERC.
11. Launch HOOK.
12. Raise TRUMPET and HARMONY.
13. Add a little Send A to TRUMPET and PADS.
14. Launch BREAK.
15. Mute DRUMS.
16. Open the filter on FX.
17. Launch HOOK.
18. Unmute DRUMS.
19. Launch END.
20. Fade DRUMS and BASS.
21. Let PADS and FX tail.
22. Press Stop All Clips.

Use this as the top-down hardware cheat sheet while practicing the track.

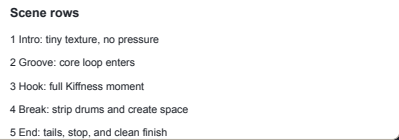

How to press

Start with a scene button on the right.

Then add or swap individual clips in the grid.

If lost, press STOP ALL and return to Intro.

UP

LEFT DOWN RIGHT

PLAY

RECORD

SESSION

28

24 Troubleshooting

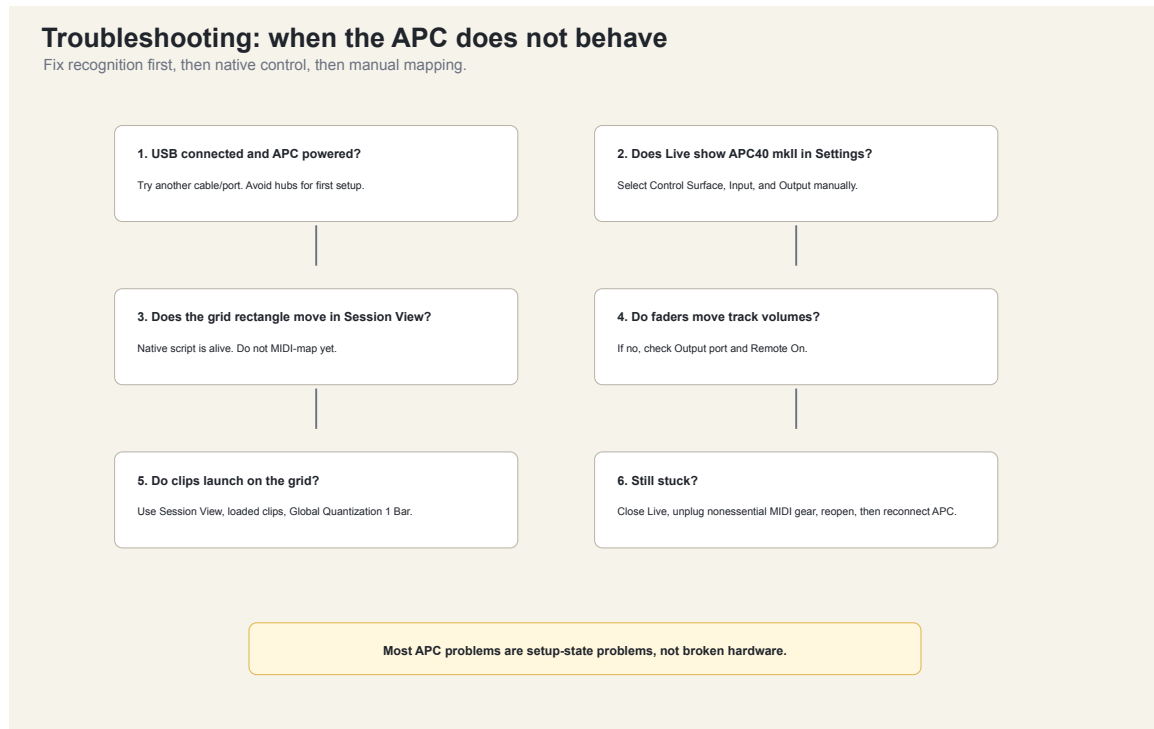


Figure 10: Troubleshooting flow for APC40 MK2 setup.

24.1 APC Lights Up, But Live Does Nothing

Likely cause: Ableton has not loaded the native control surface.

Fix:

1. Open Settings.
2. Go to Link, Tempo and MIDI.
3. Set Control Surface to APC40 mkII.
4. Set Input to APC40 mkII.
5. Set Output to APC40 mkII.
6. Close Settings.
7. Move the APC Bank arrows.
8. Look for the Session ring.

24.2 Grid Launches Clips, But Faders Do Nothing

Likely cause: output feedback or control surface selection is wrong.

Fix:

1. Confirm the Control Surface row has both Input and Output.
2. Confirm Remote is On for APC input and output.
3. Create a fresh set with one track and one clip.
4. Test fader 1 on track volume.

24.3 Faders Work, But Clip Buttons Do Nothing

Likely cause: you are not in Session View, or the APC ring is not over clips.

Fix:

1. Press Tab to switch to Session View.
2. Put clips inside the visible APC ring.
3. Use Bank arrows to move the ring.
4. Press a clip button that corresponds to a loaded slot.

24.4 Clips Start Late

Likely cause: Global Quantization.

This is usually correct. If Global Quantization is 1 Bar, clips wait until the next bar. To test immediate launching, temporarily set quantization to None. Then put it back to 1 Bar for performance.

24.5 Everything Is Too Loud

Likely cause: all faders are high, plus returns are adding level.

Fix:

1. Pull Master down slightly.
2. Pull FX and returns down.
3. Put kick, bass, and snare at sensible levels.
4. Add pads, harmony, and FX only after the groove is stable.

24.6 Manual Mapping Broke Something

Likely cause: a User mode or MIDI Map assignment is overriding native behavior.

Fix:

1. Enter MIDI Map Mode.
2. Open the Mapping Browser.
3. Delete suspicious mappings.
4. Exit MIDI Map Mode.
5. Save a clean template before experimenting again.

25 What To Ignore For Now

The APC40 MK2 can do more than this book covers. Ignore these until the APC-only basics feel automatic:

- multiple APC controllers;
- deep User mode remapping;
- Max for Live control scripts;
- footswitch recording;
- complex Session Overview navigation;
- elaborate DJ racks;
- MPK integration;

- recording new MIDI parts from another controller;
- custom Python remote scripts.

That is not a limitation. It is how you get fluent faster.

26 Final Check

You are ready to add the MPK later when you can do this without looking up the steps:

1. Connect APC40 MK2.
2. Open Live 12.
3. Confirm native control surface setup.
4. Launch a scene.
5. Launch one individual clip.
6. Stop one track with Clip Stop.
7. Stop all clips.
8. Fade drums, bass, and pads.
9. Mute and unmute one track in time.
10. Select a track.
11. Control a device rack.
12. Add reverb or delay through Sends mode.
13. Record one performance pass into Arrangement.

Once those are easy, the MPK has a clean role: play new musical material. The APC keeps the performance surface job: launch, arrange, mix, transition, and record.