

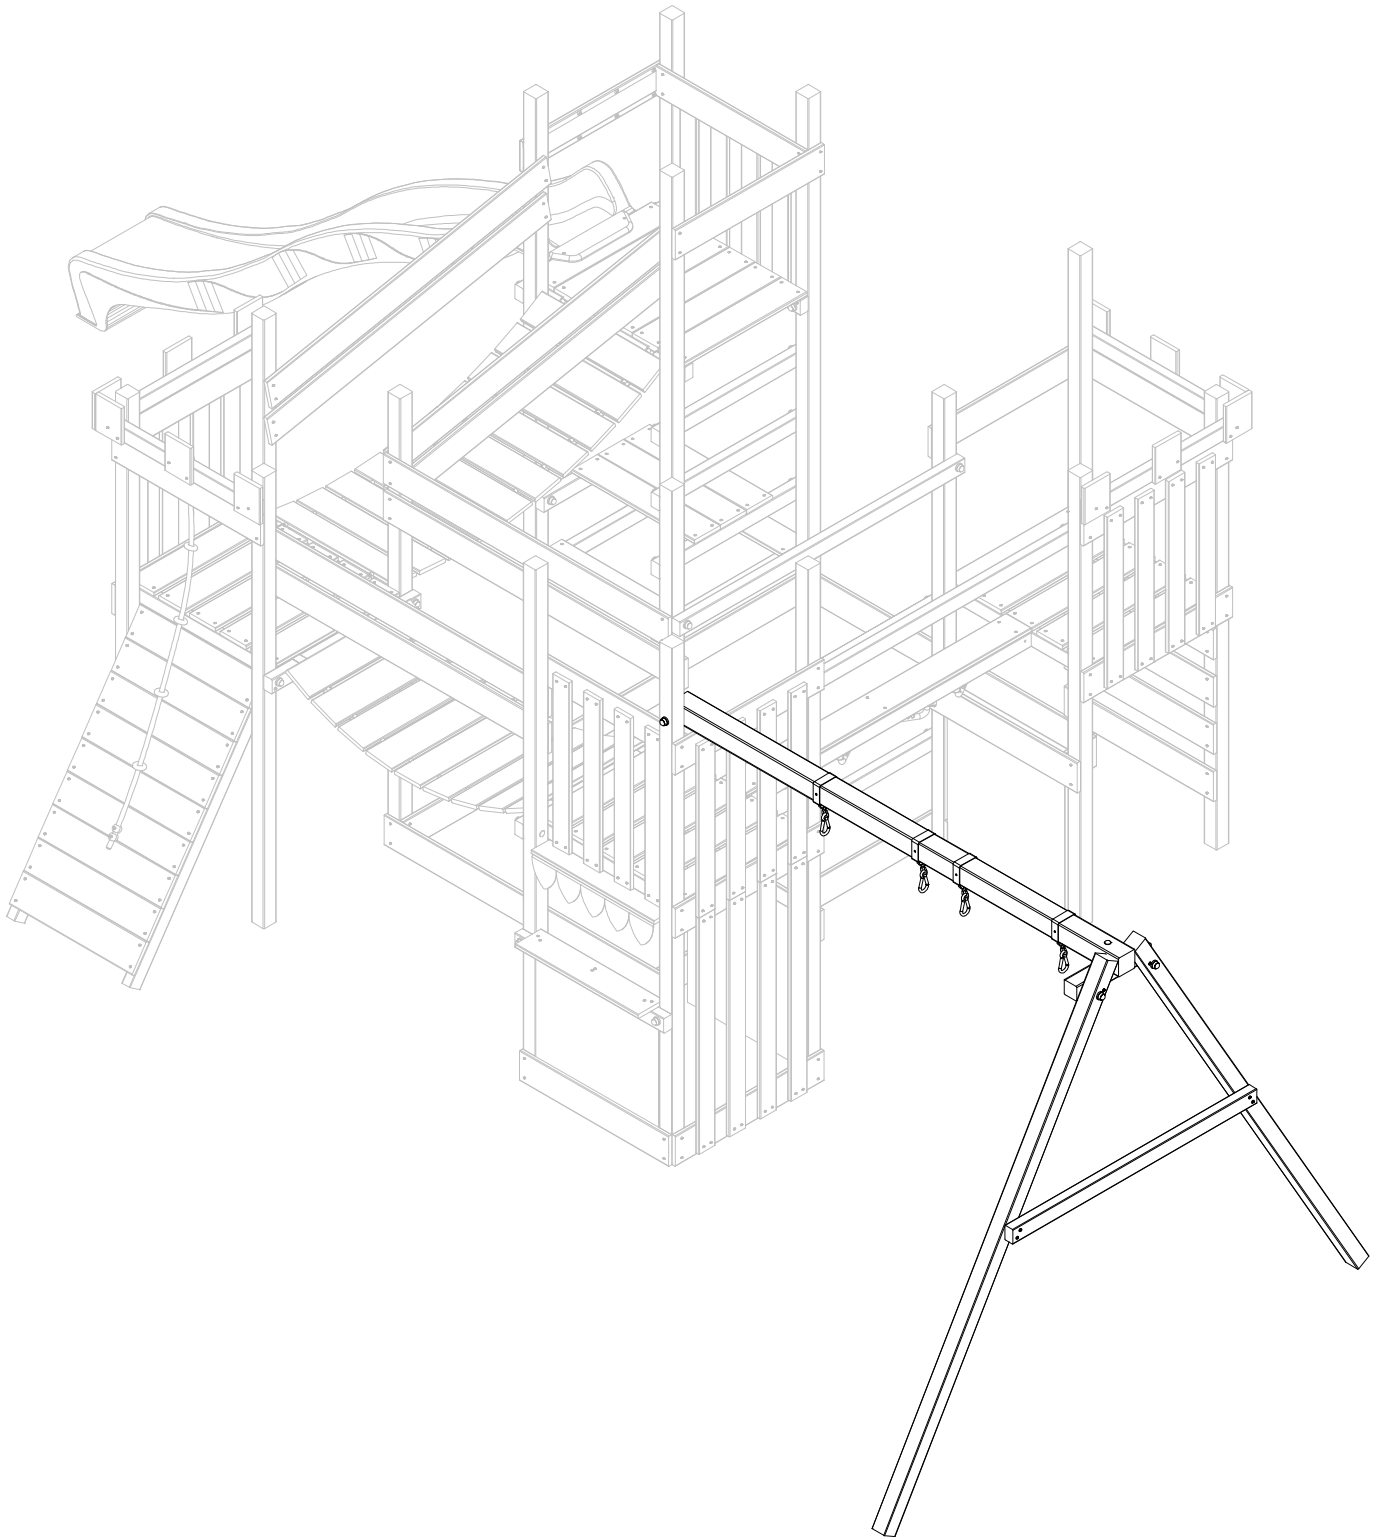




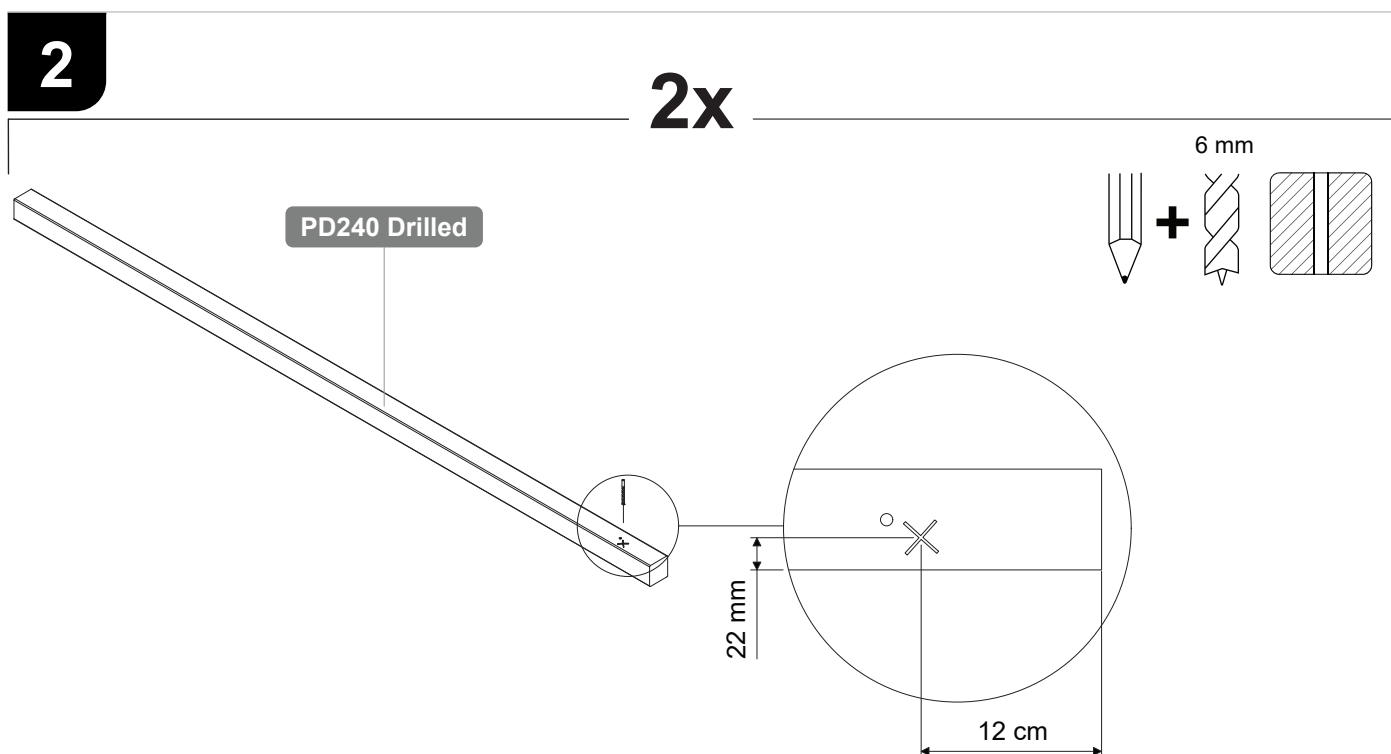


Swing Frame 020


PD240 2400x68x68mm  2x	PD40 400x68x68mm  1x	BK131 1310x68x44mm  1x	M10x170 M10x170mm  1x	10x150 10x150mm  2x	M10 Nut M10  3x	6x90 6x90mm  6x
Cap  5x						

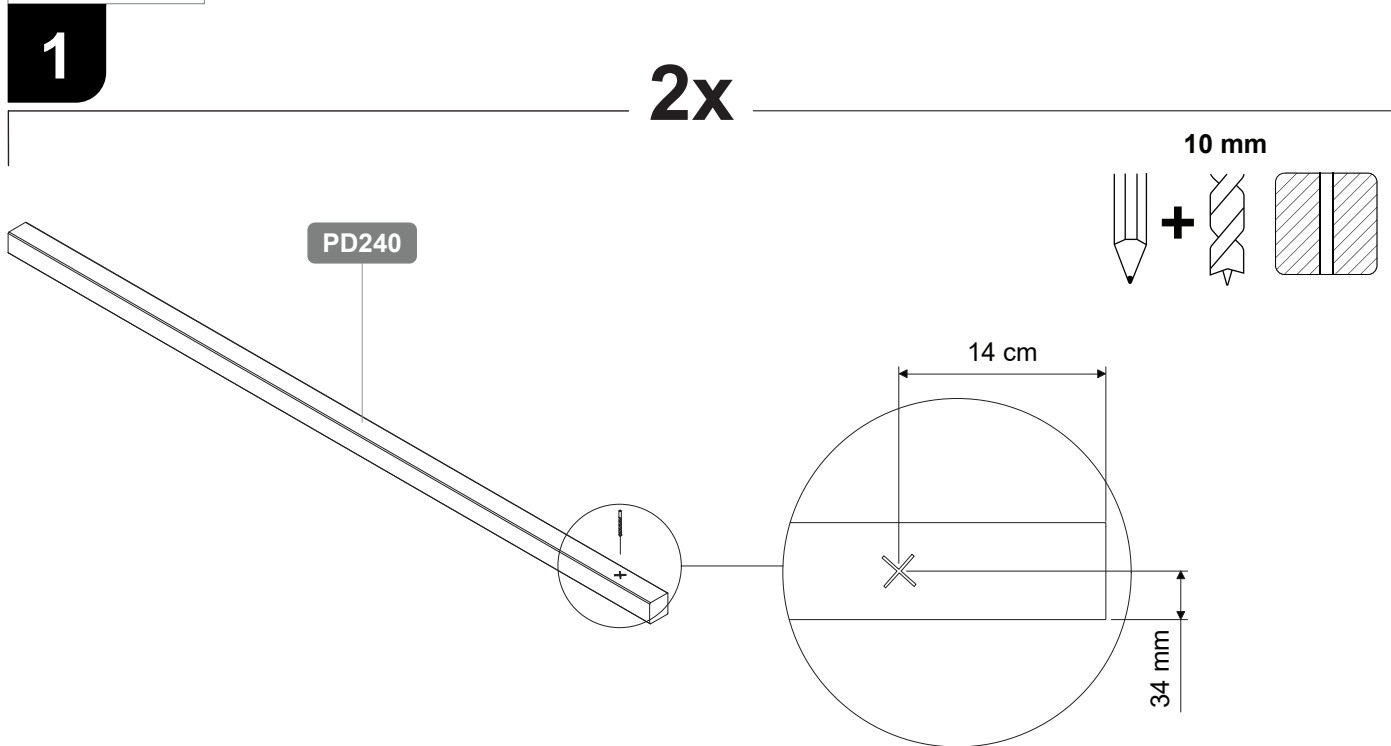

3



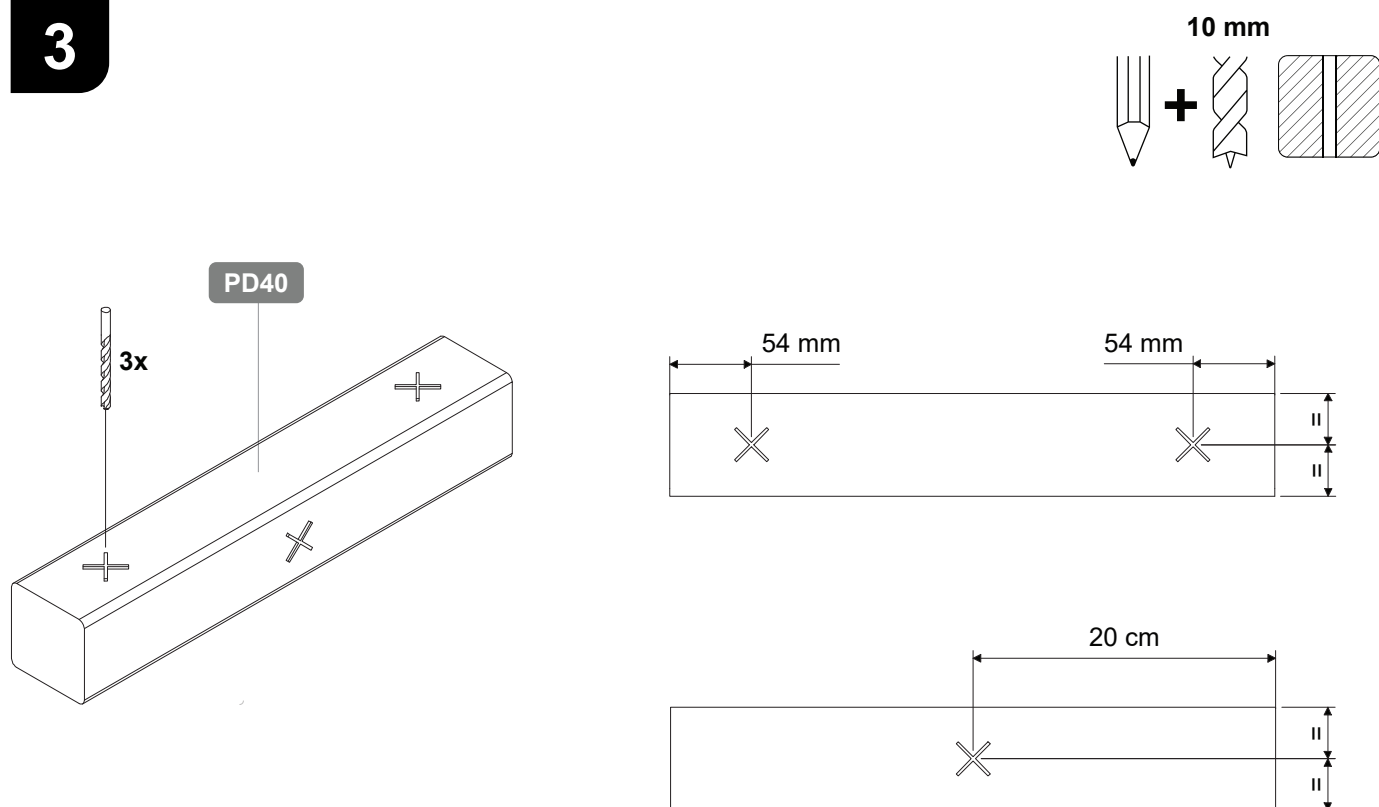


4





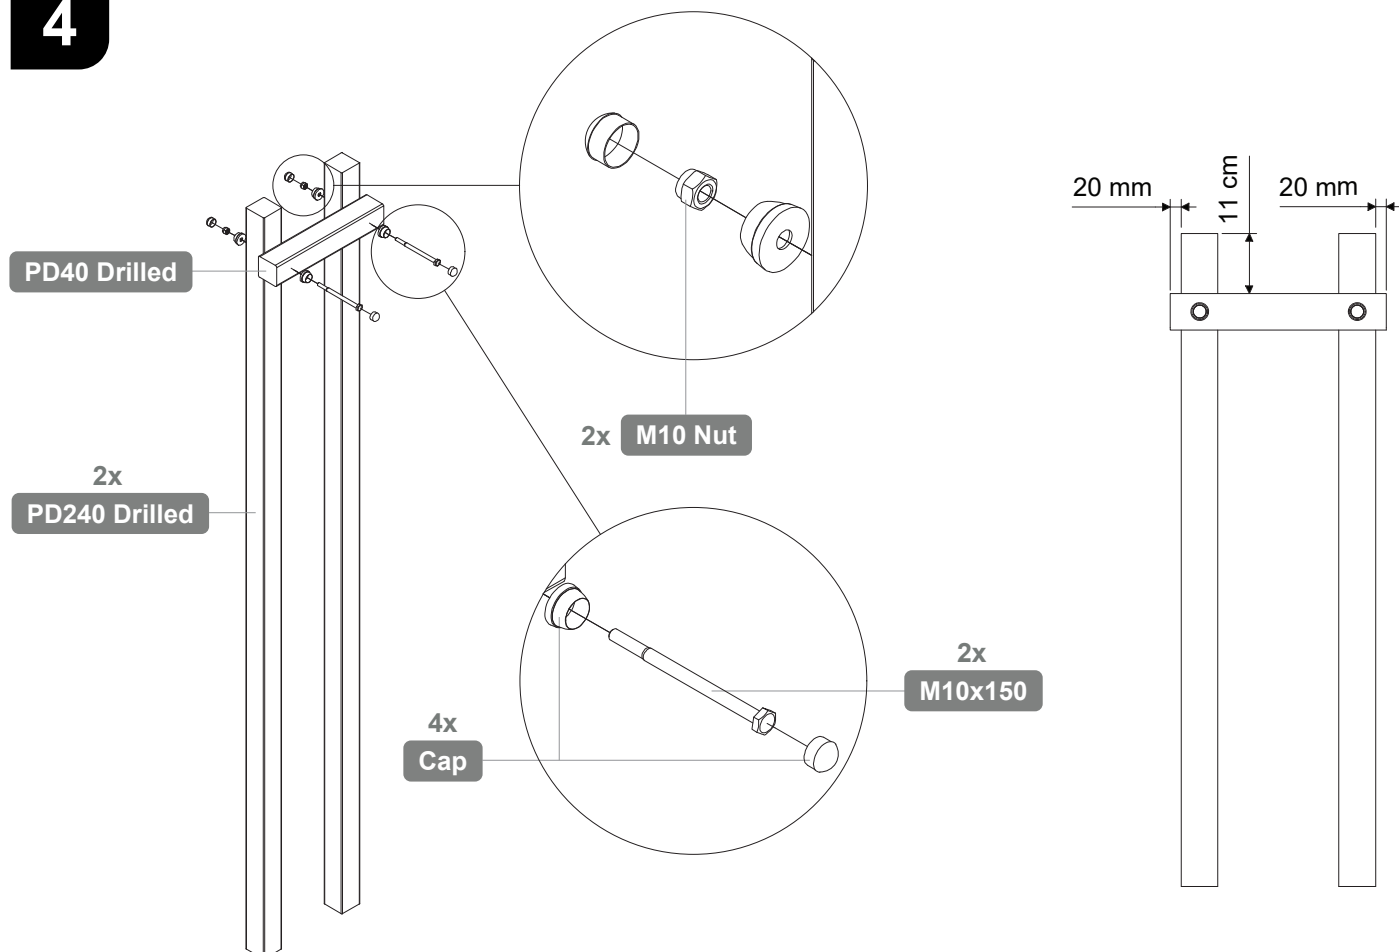


5


10 mm

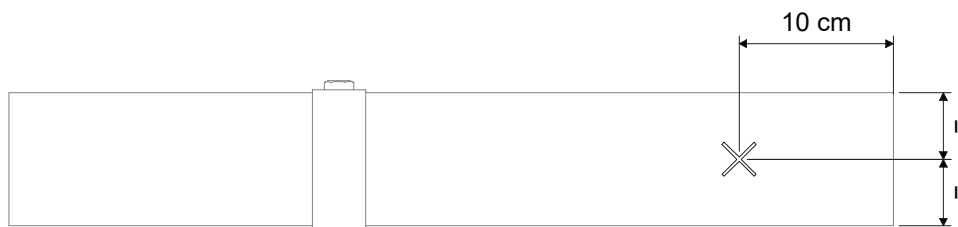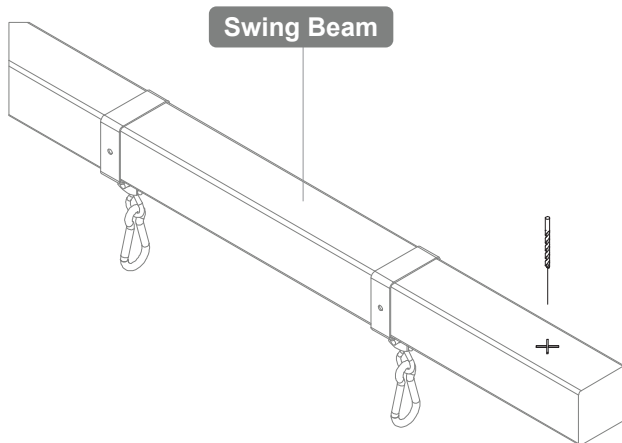
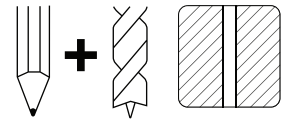


6

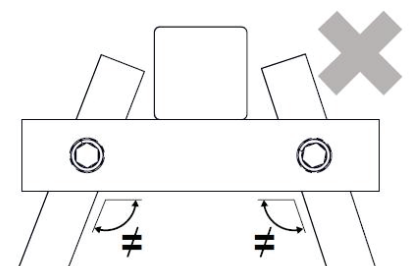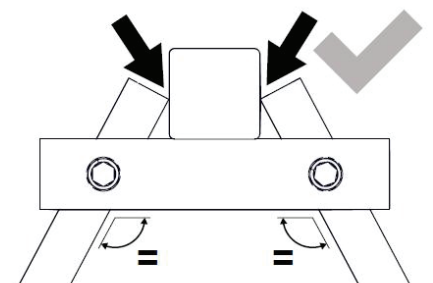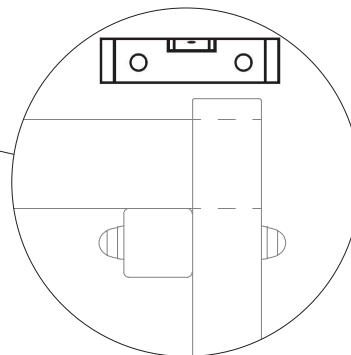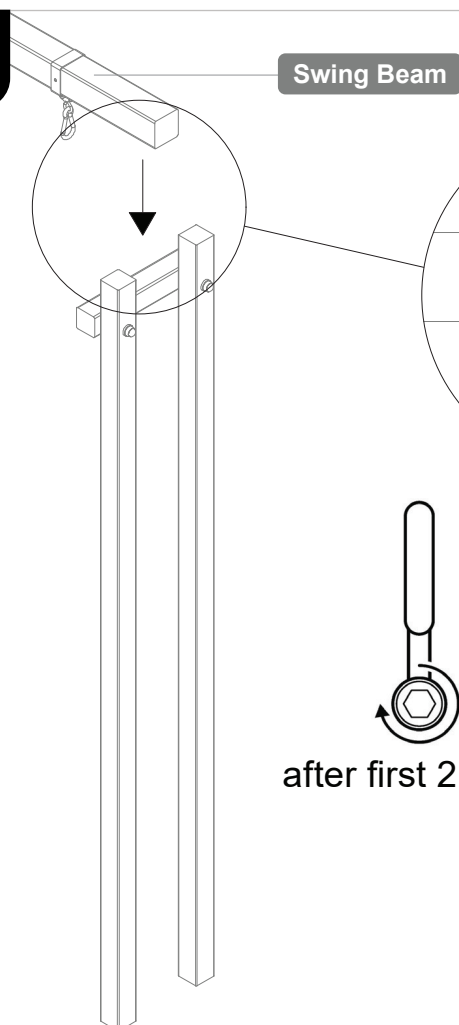


after first 2 weeks

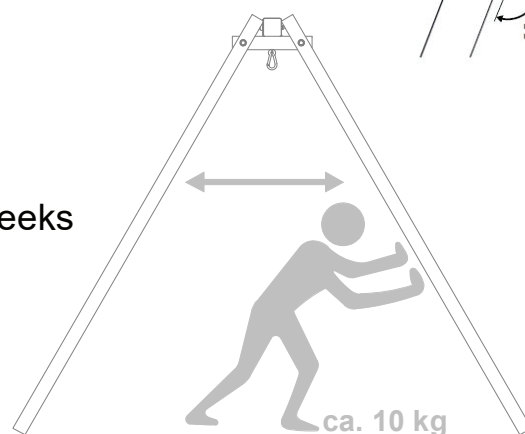


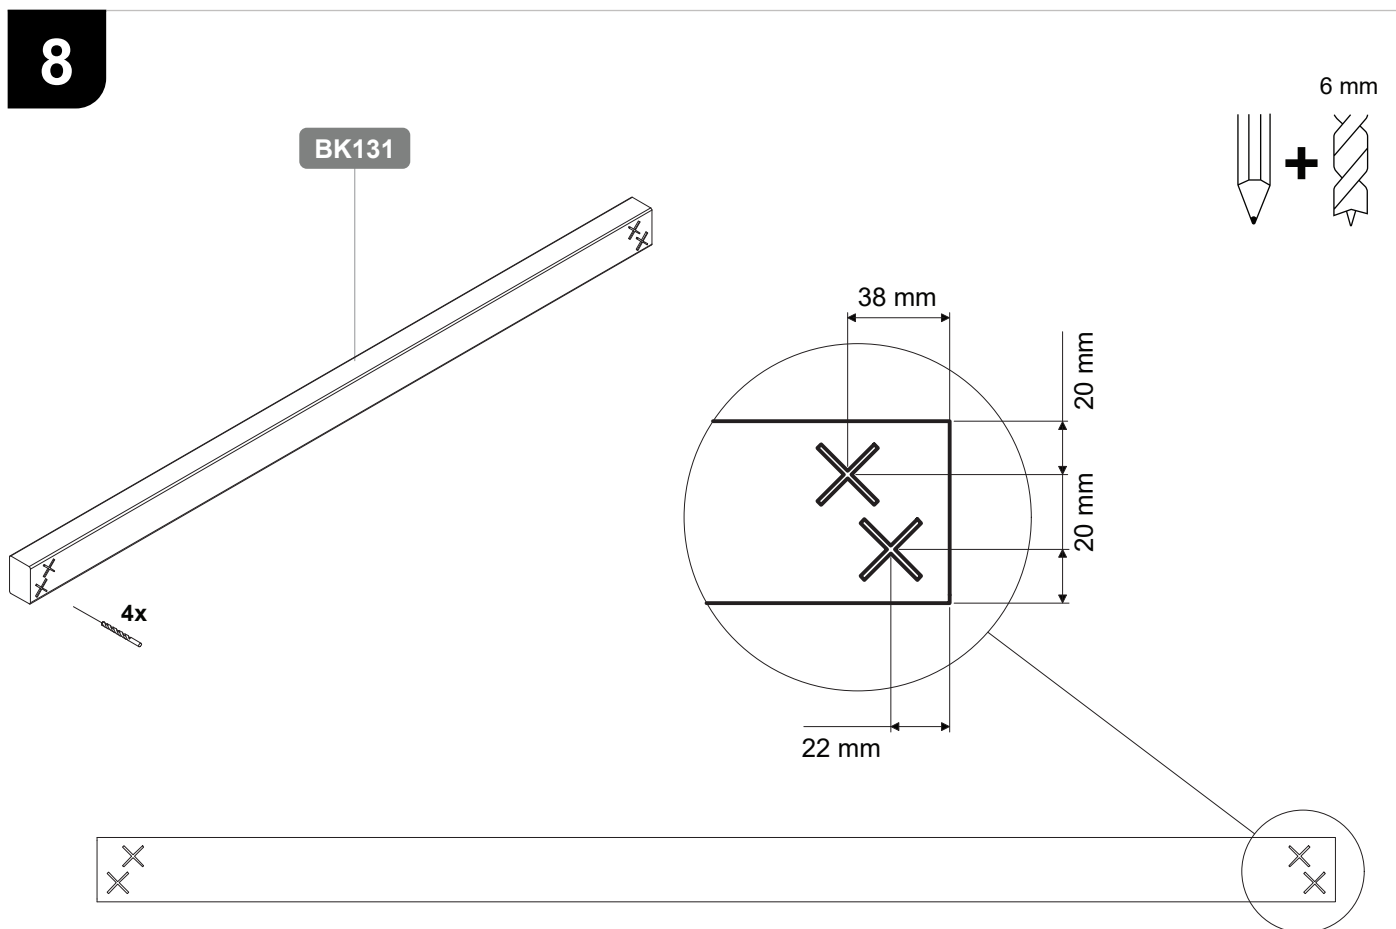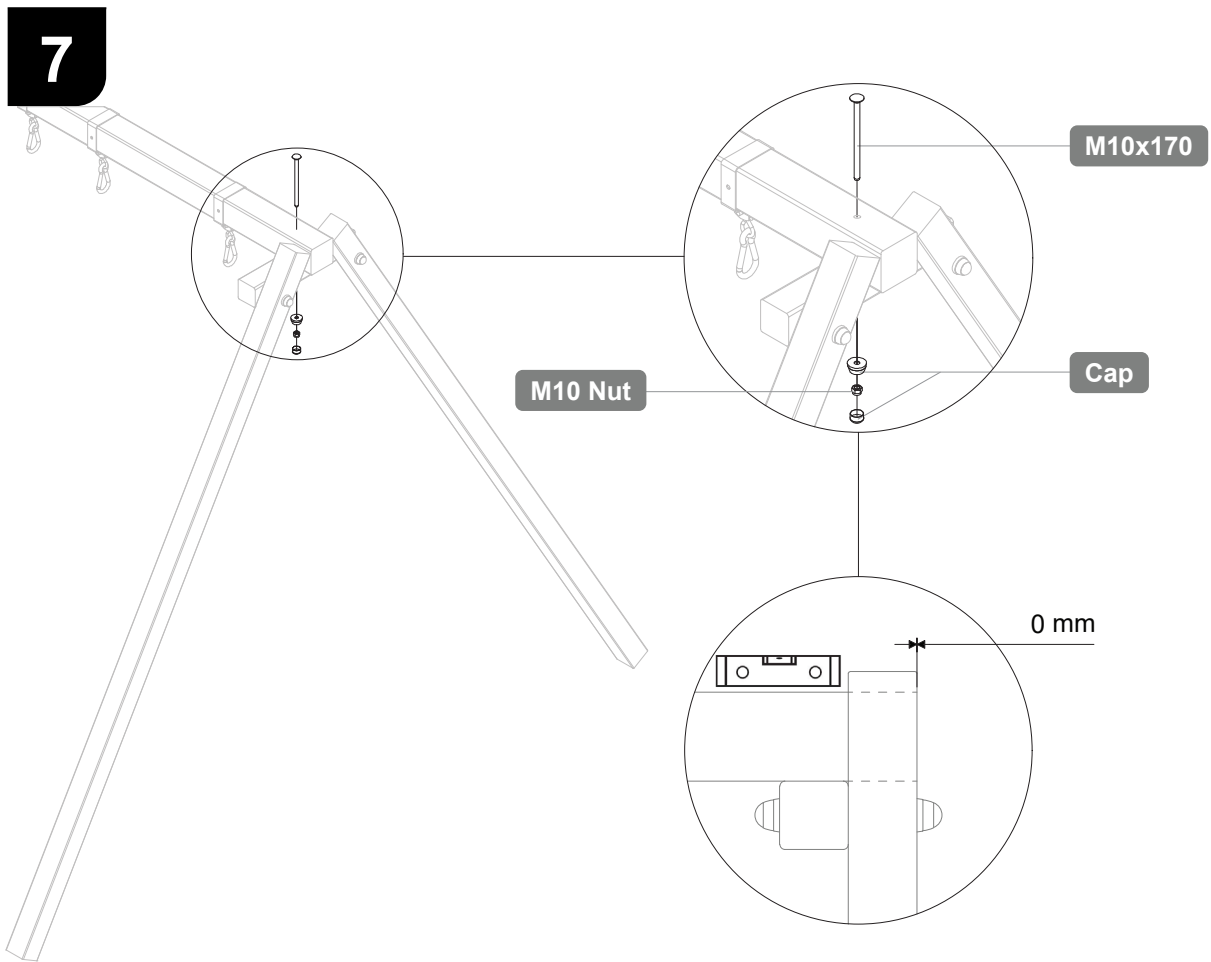


9

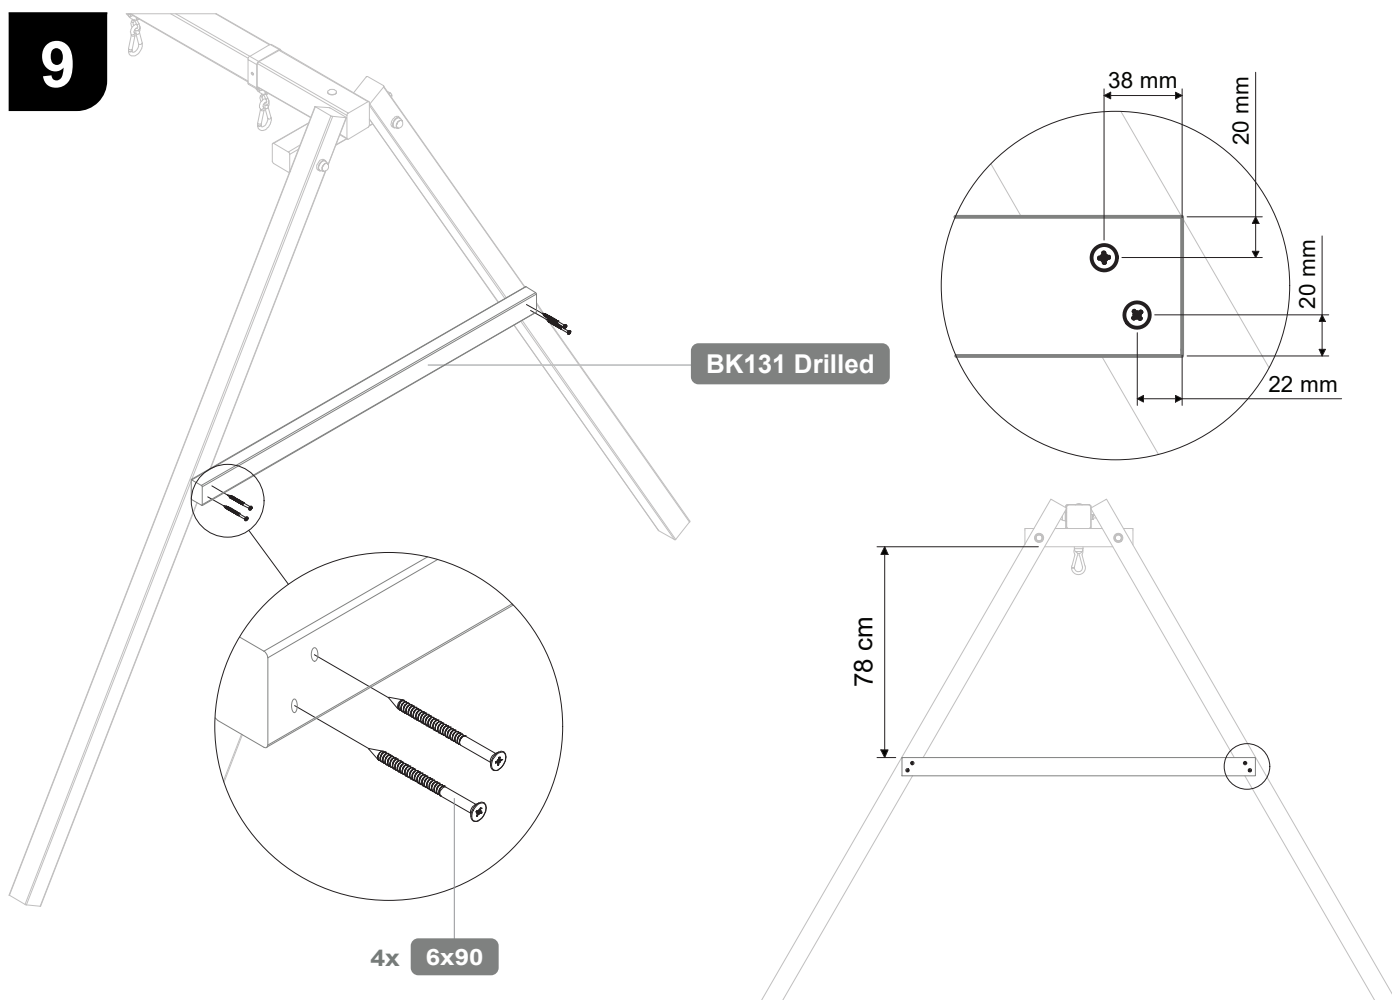

10

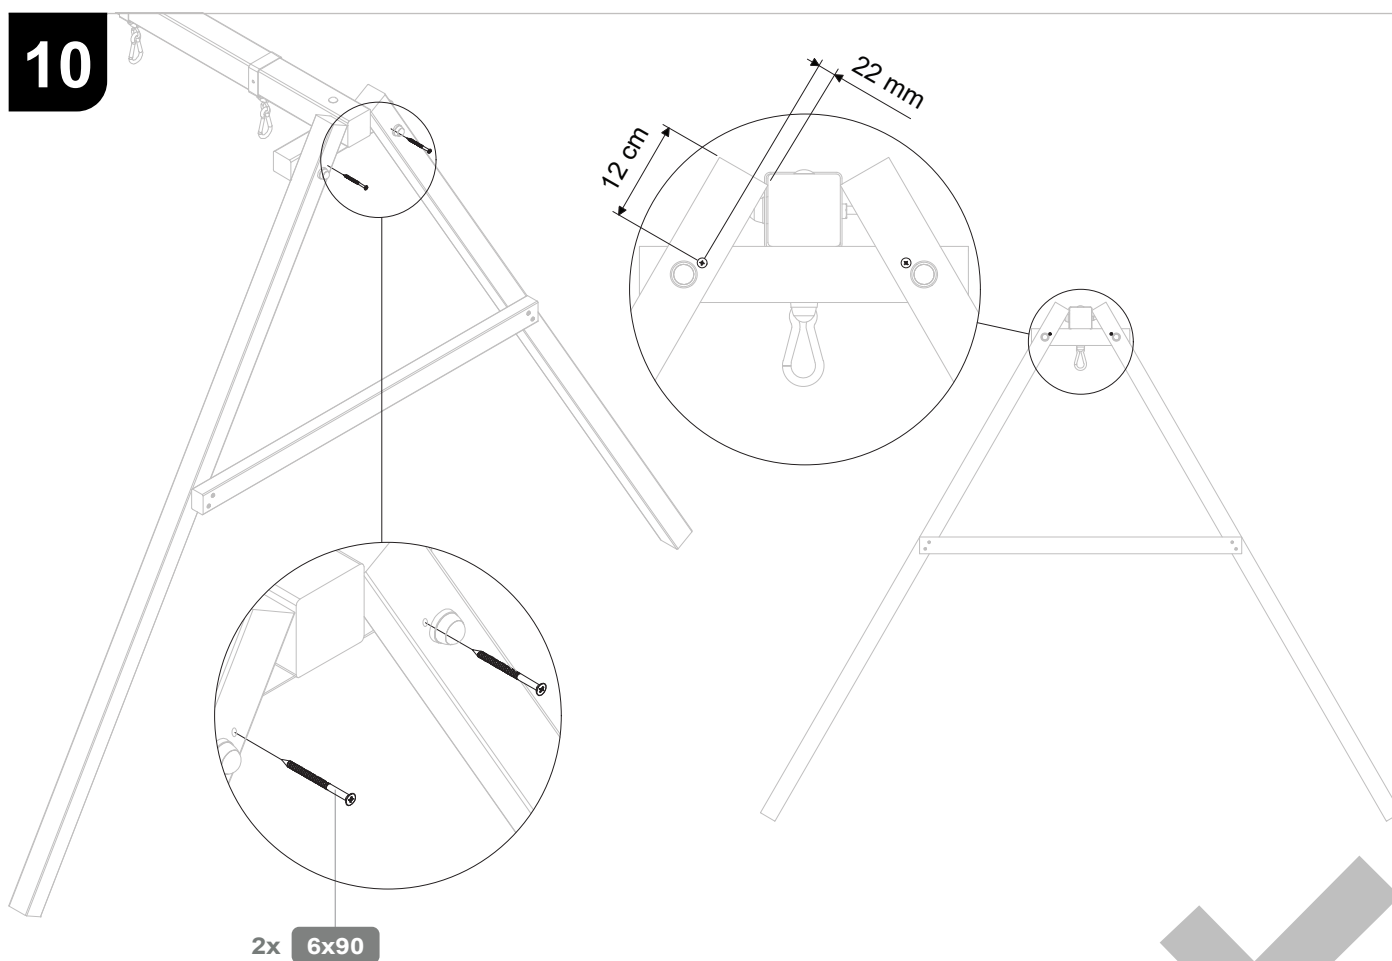


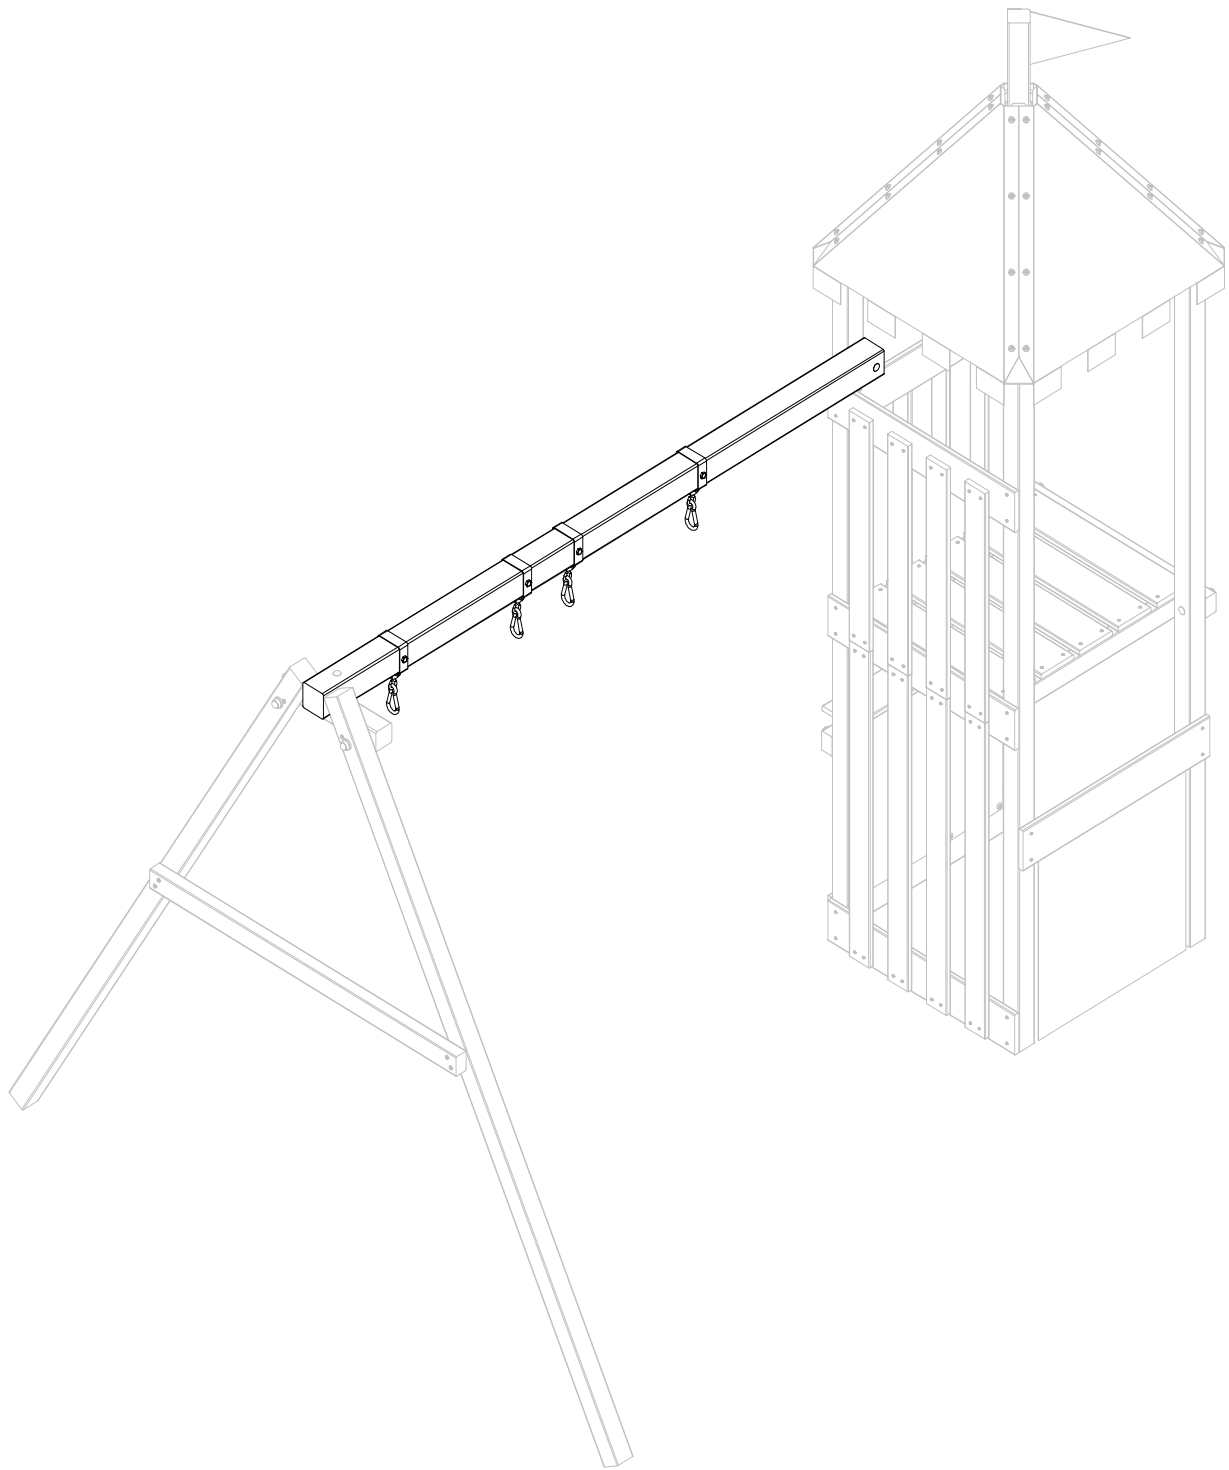


Swing Beam 018

P240 2400x88x88mm  1x	Hook Swing Hook  4x	7x80 7x80mm  4x	M10x170 M10x170mm  1x	M10 Nut M10  1x	Cap  1x
---	---	---	---	--	--


1

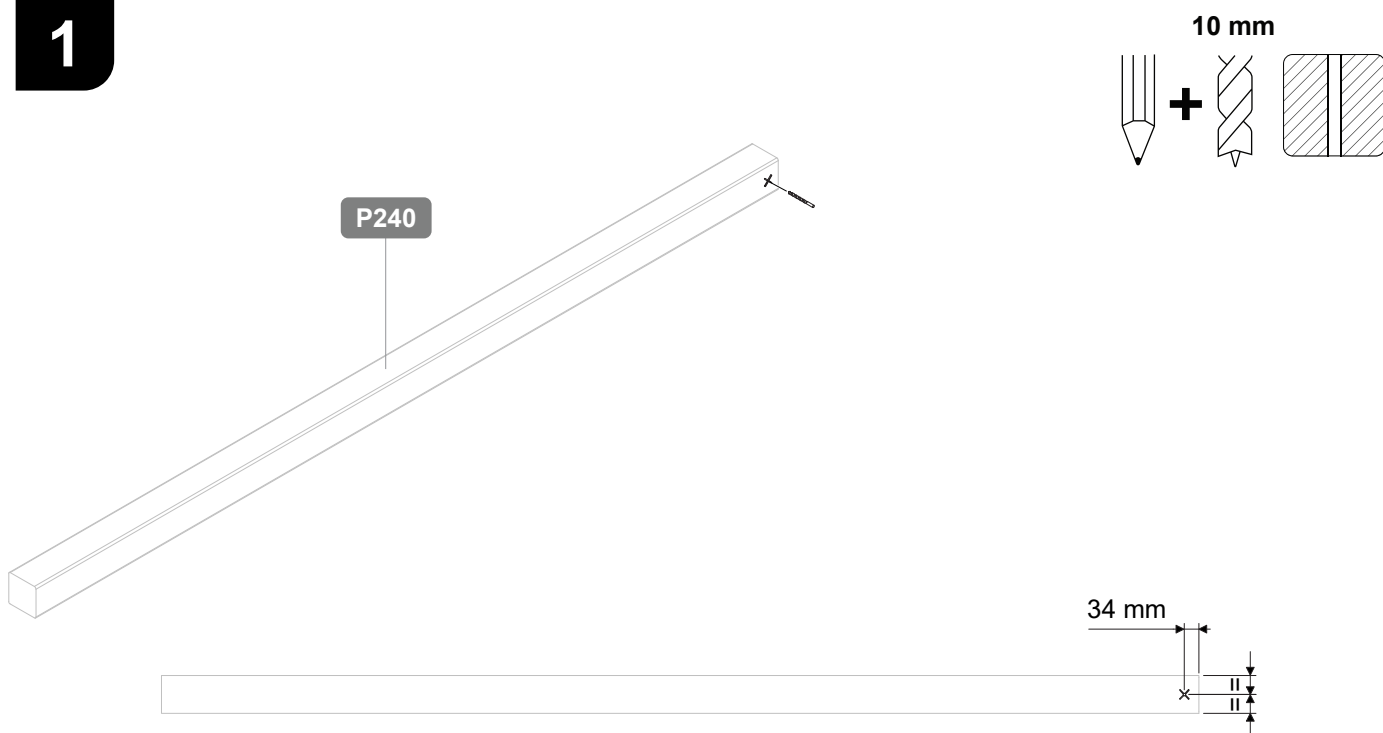


2

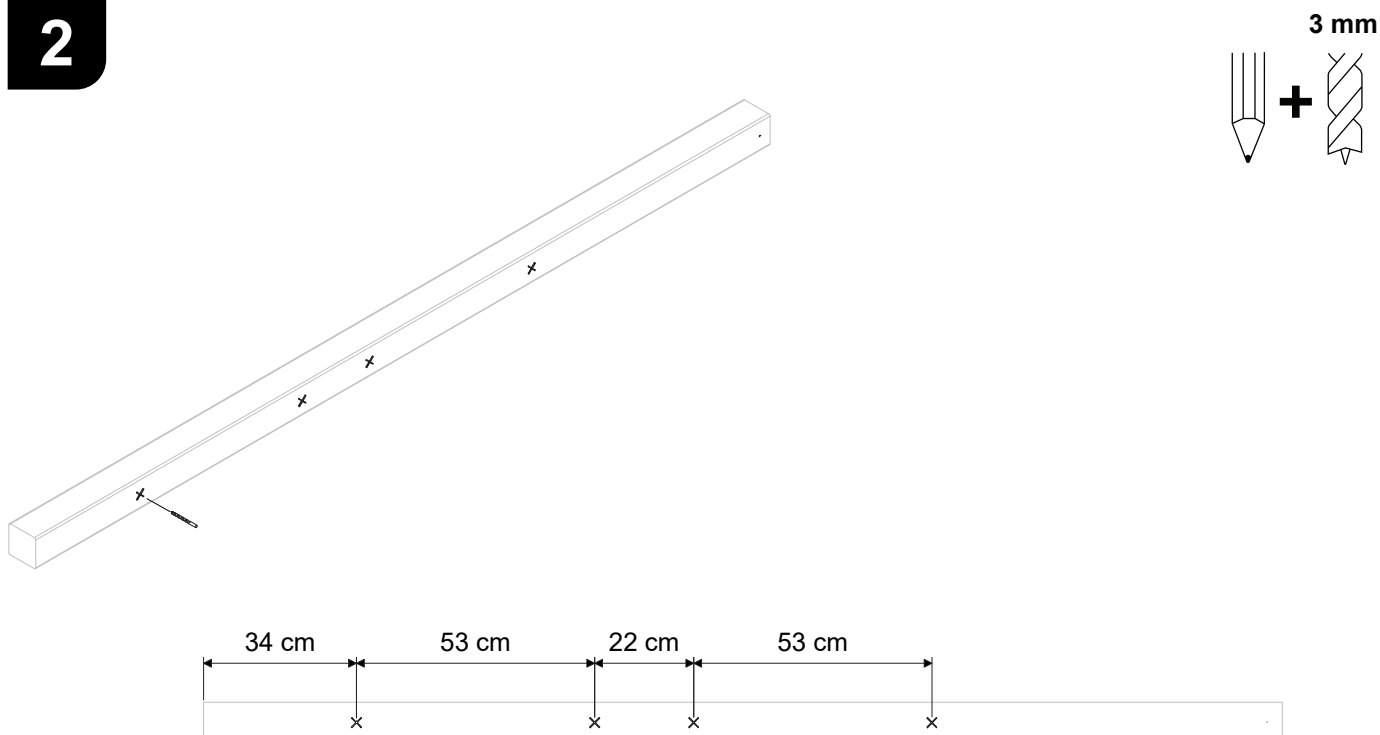



3

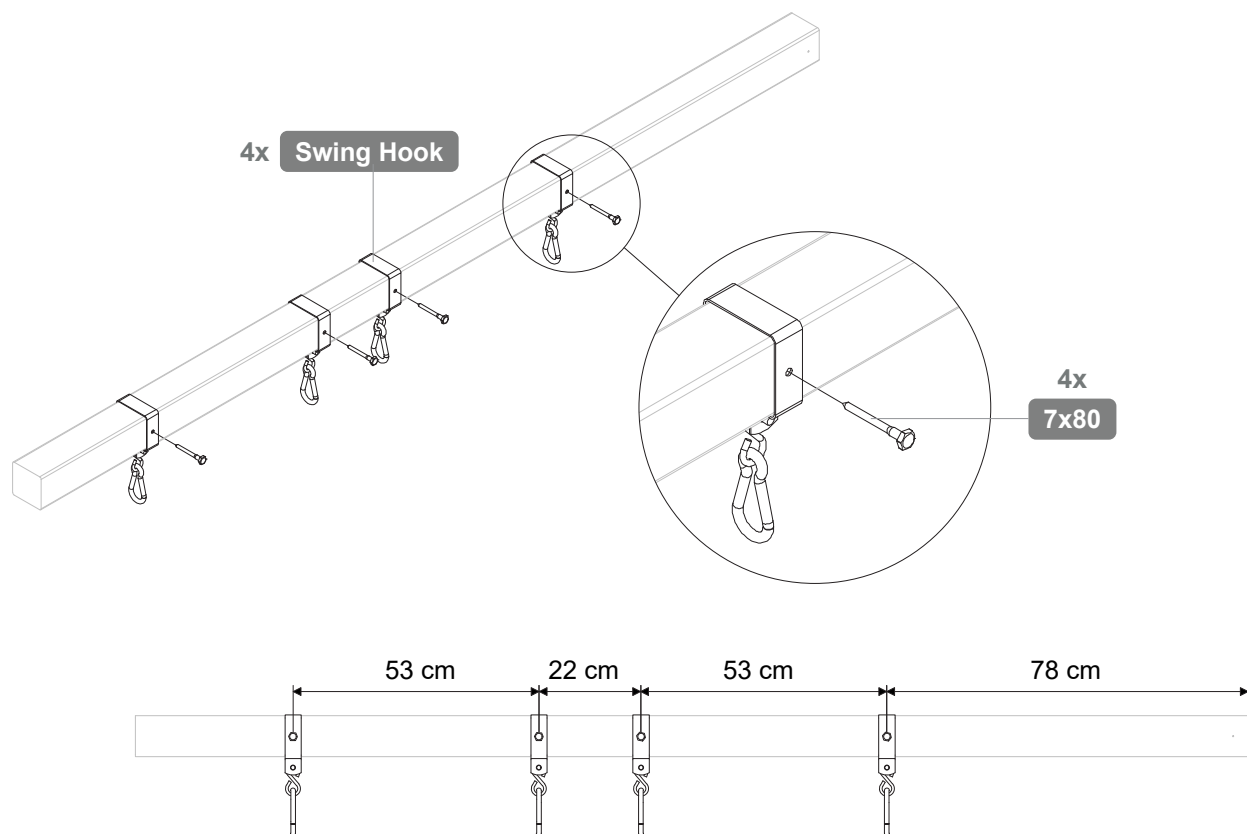


4

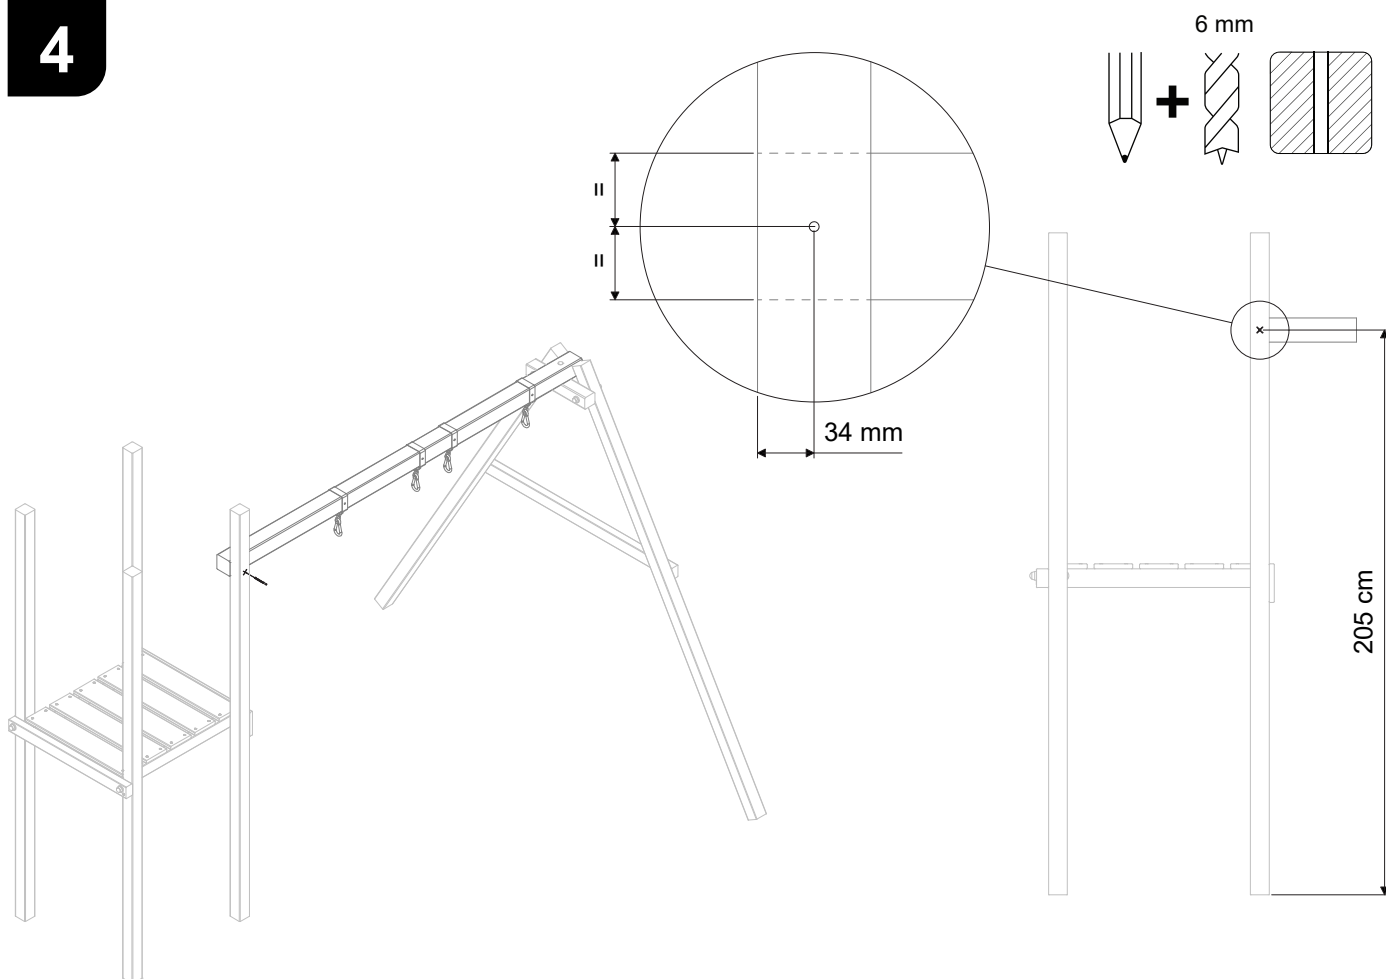

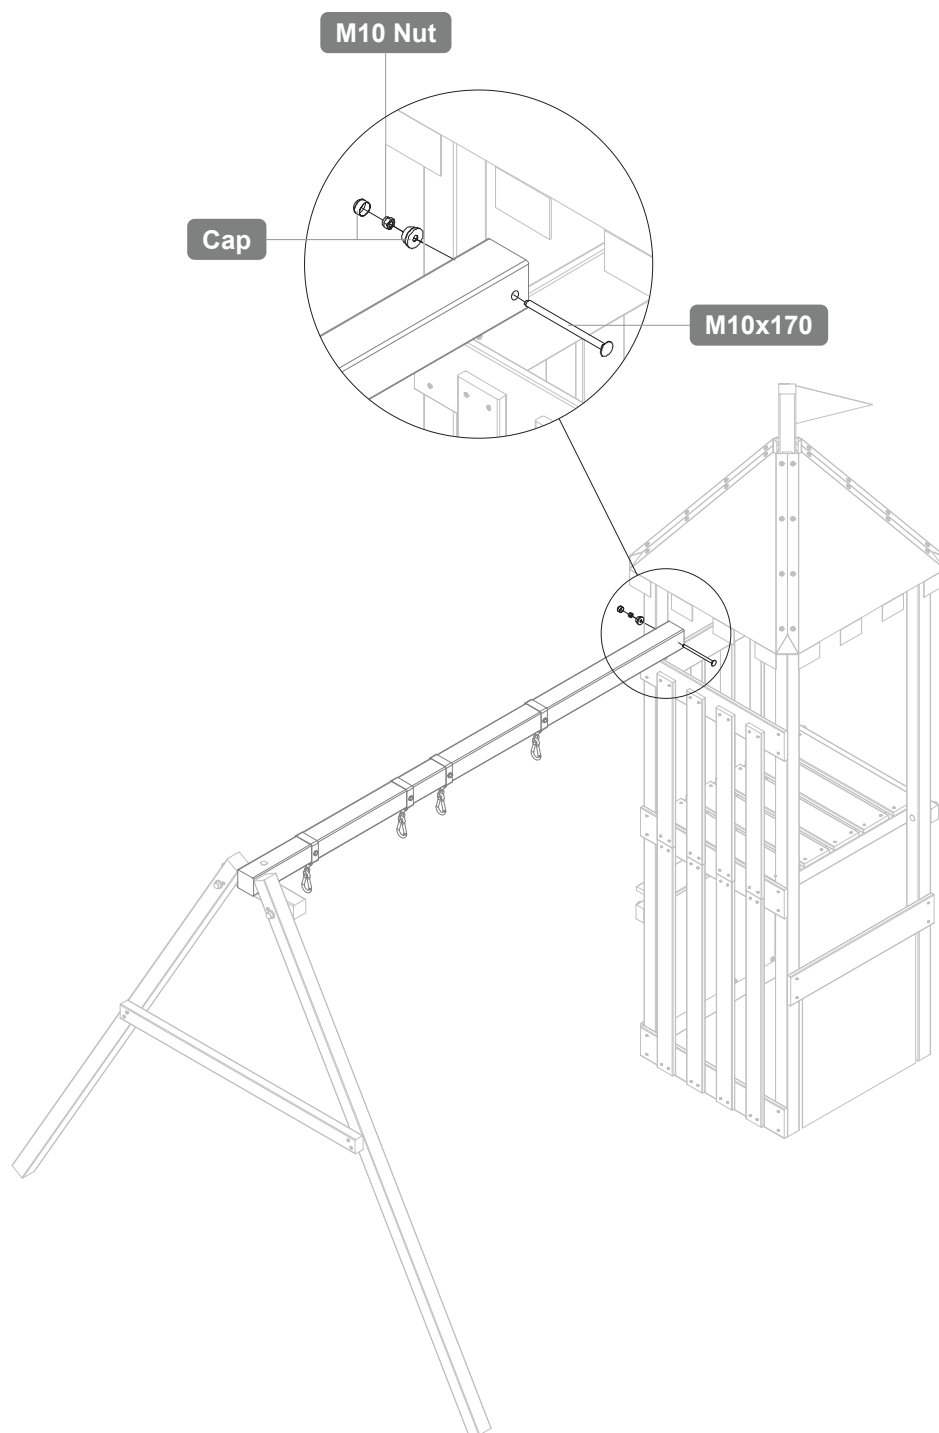

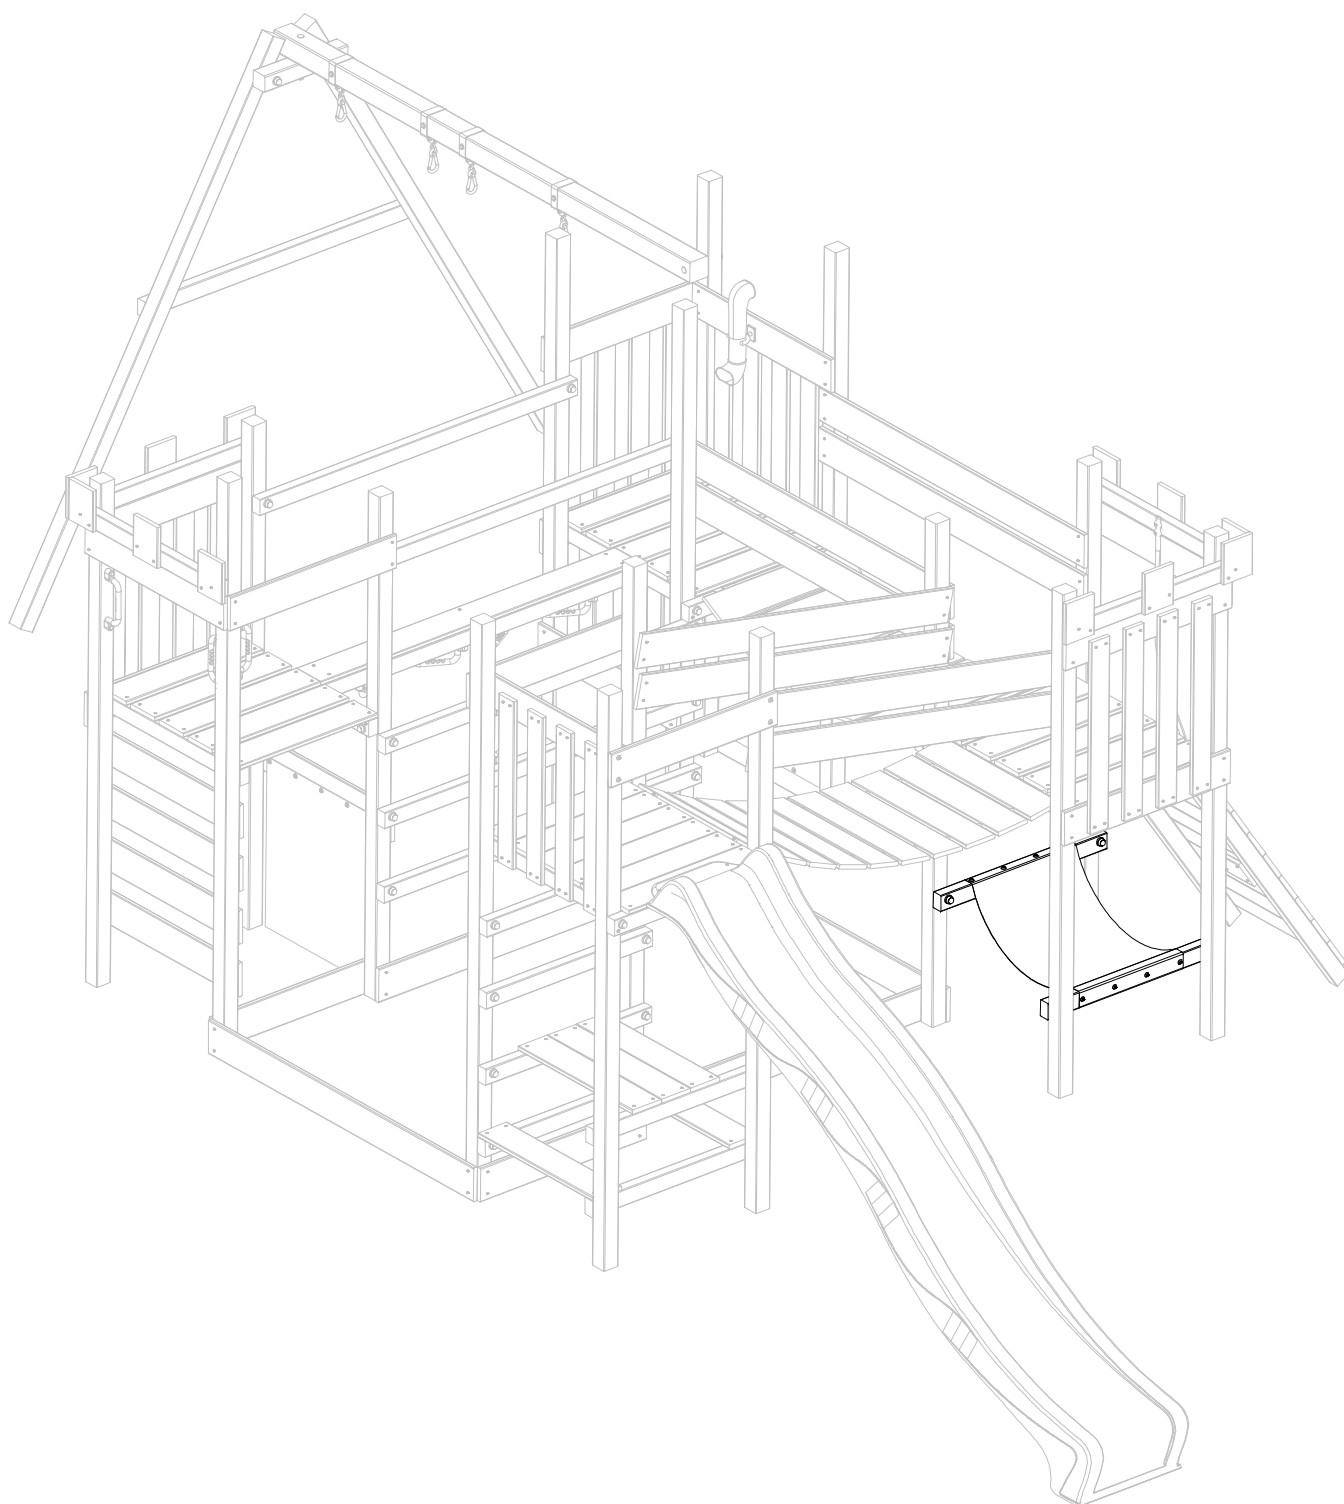

Extra 103

BK80 800x68x44mm  2x	10x80 10x80mm  4x	4x30 4x30mm  16x	Cap  4x	Washer Yellow Washer  16x	Hammock 660x1070mm  1x
--	---	--	--	--	--

