


## XTRA PLAY Step by step for manual

**Project manager** Designer


Date | Feb 06 / 2025

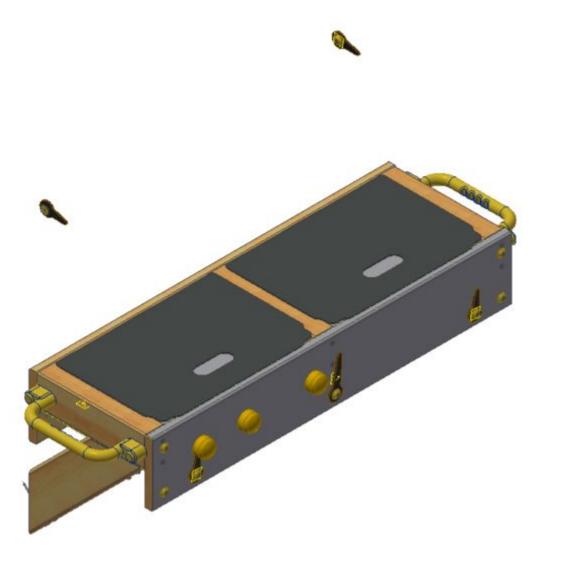




C04024	DK 24	2
694024	BK-24	3
698036	BG-36	2
691080	B-80	2
681020	5 x 20 Spannplattschr.	25
681080	5 x 80 Spannplattschr.	10
	H 12 Scheibe (Washer) 18 x 4	
695012	mm (Loch 5mm) -GELB-	25
689053	Schrauben 4.5x 50 mm	50
	#N/A	
102	3mm HDPE arrow set new	1
103	3mm HDPE lid new	2
104	Stickersheet new	1
	Pre cutted tarp 800x510mm	
105	(cut inhouse) new	1



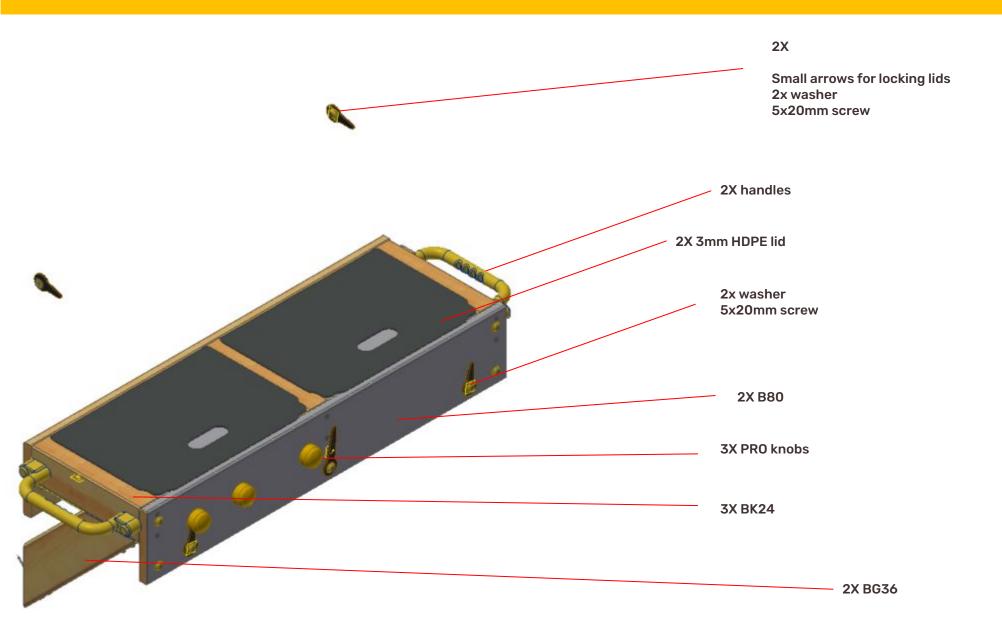



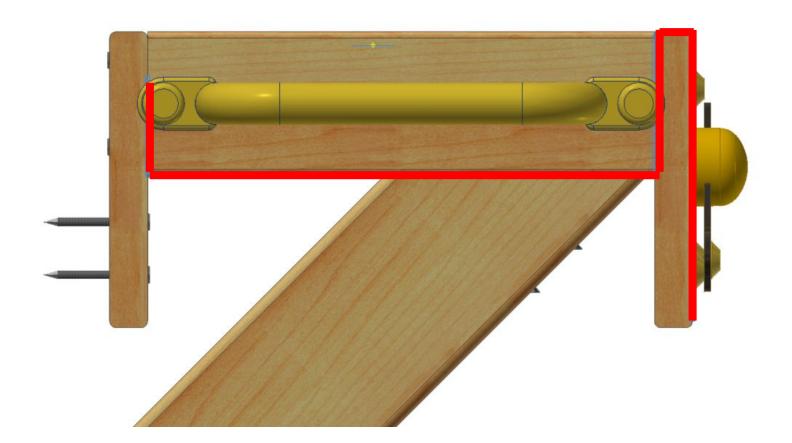


Tarp should be positioned like this


## From right to left:

- 1. Wrap infront of B80
- 2. Sandwich between BK24 and B80 (screw in)
- 3. Run along the bottom of BK24
- Sandwich between BK24 and B80 (screw in)



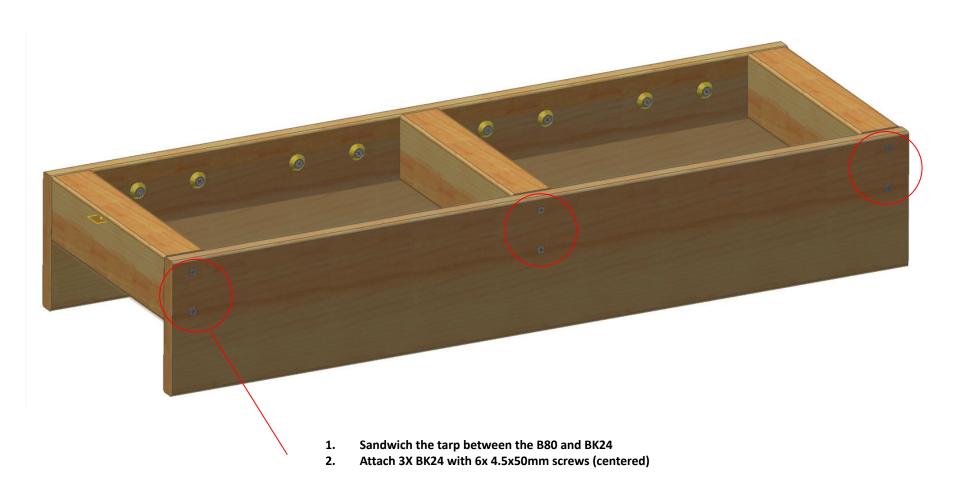




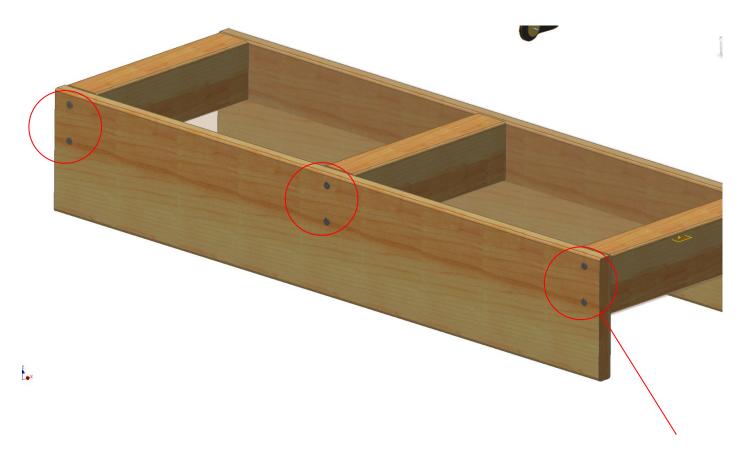


- 1. Sandwich the tarp between the B80 and BK24
- 2. Attach 3X BK24 with 6x 4.5x50mm screws (centered)




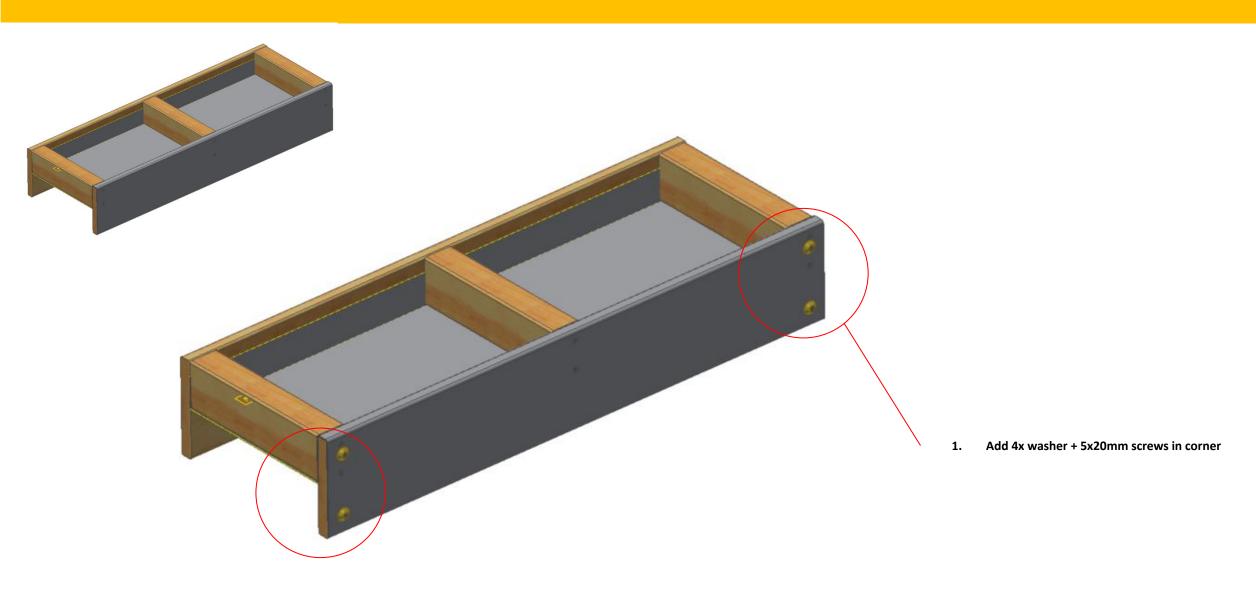




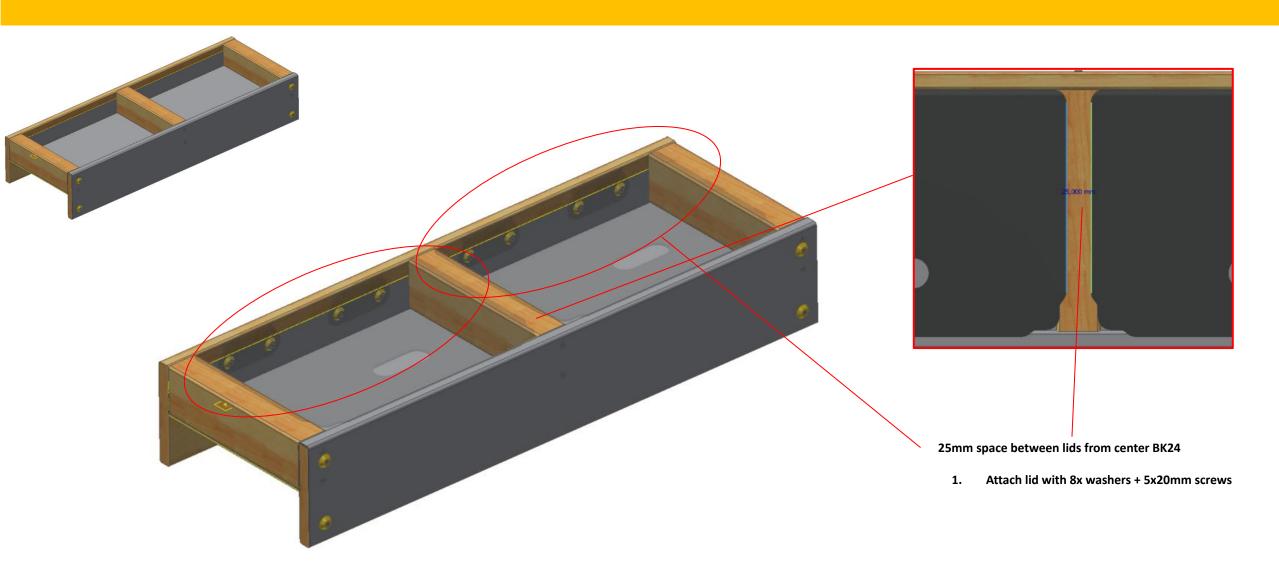




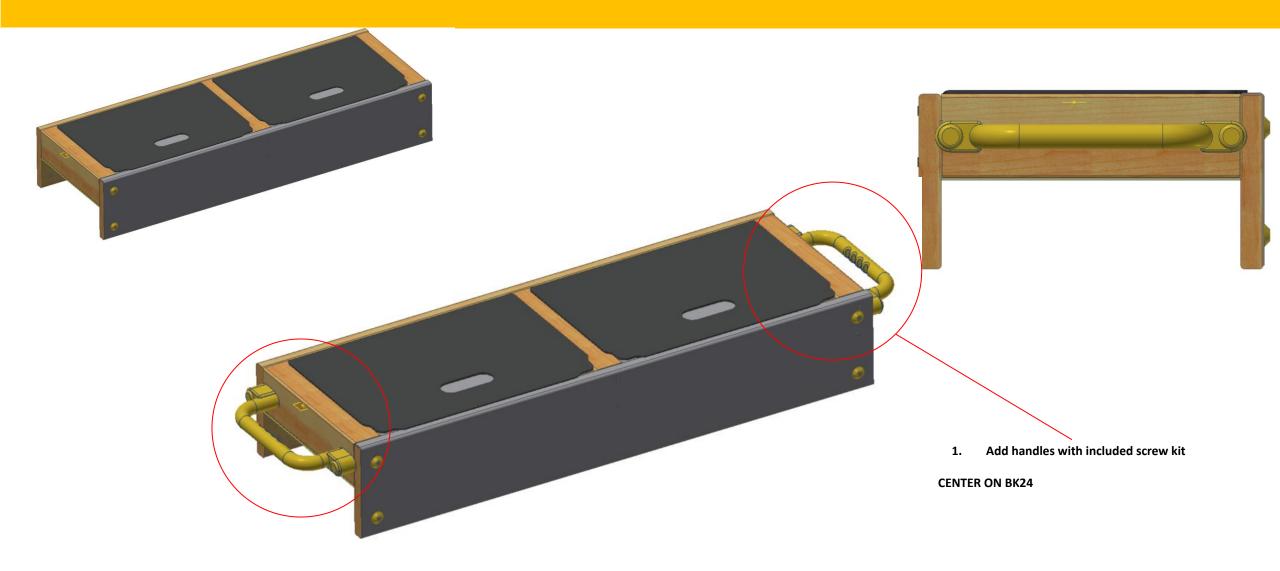



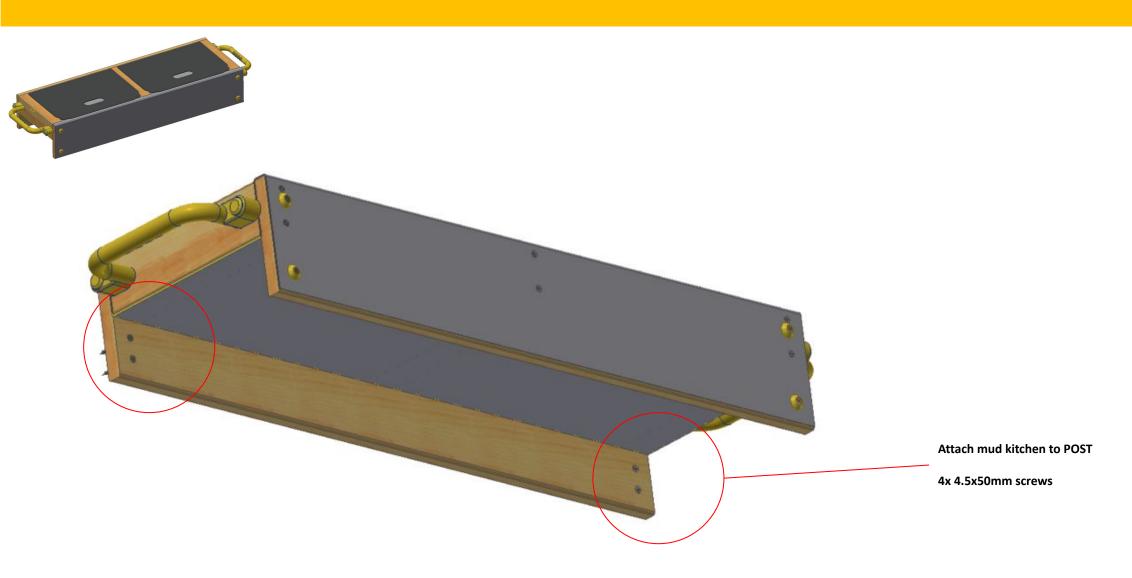





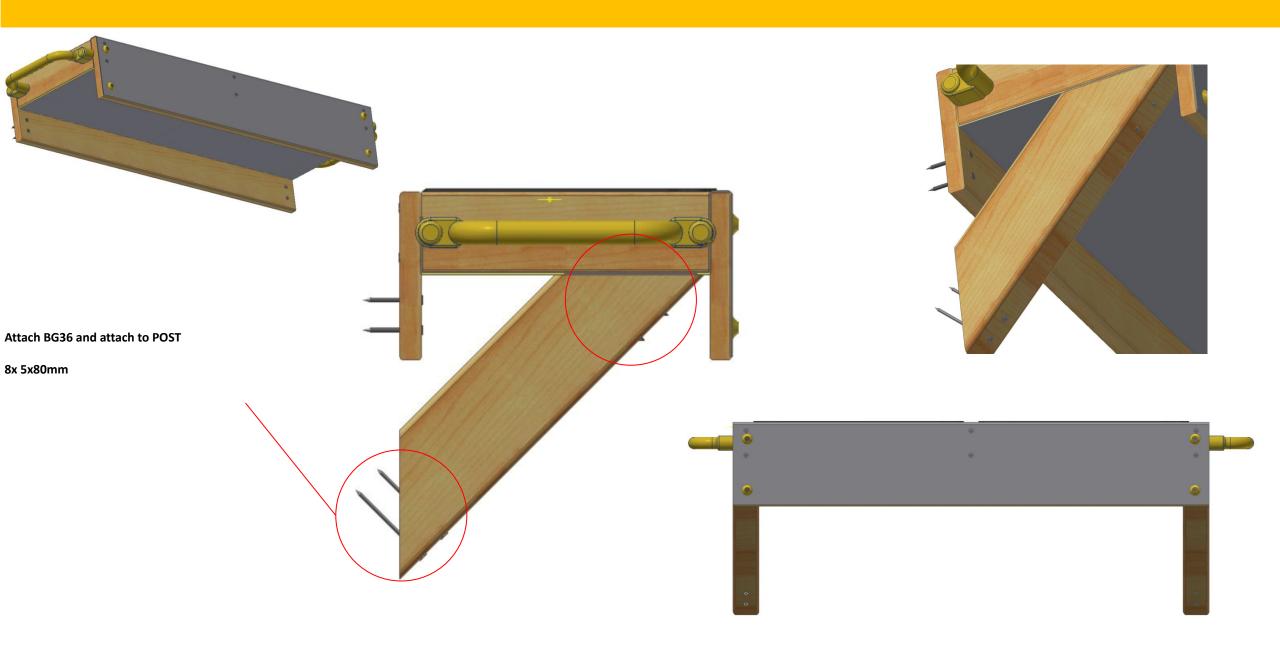







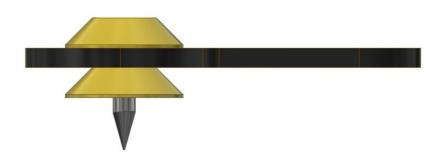

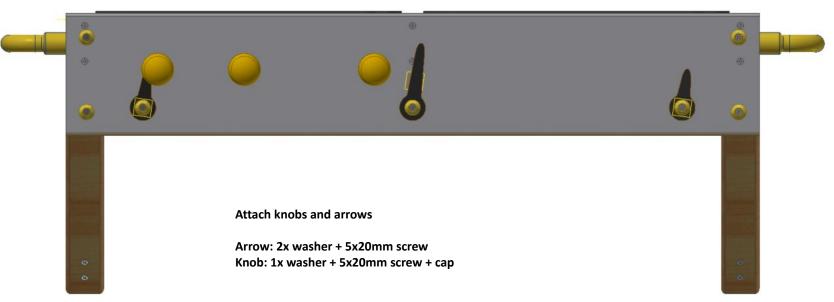

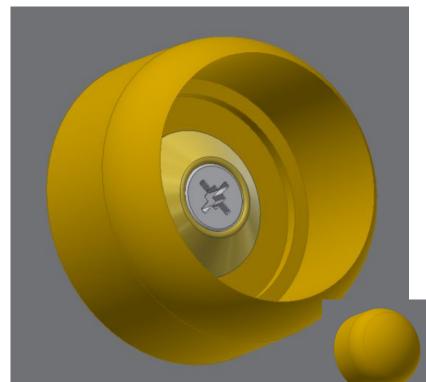



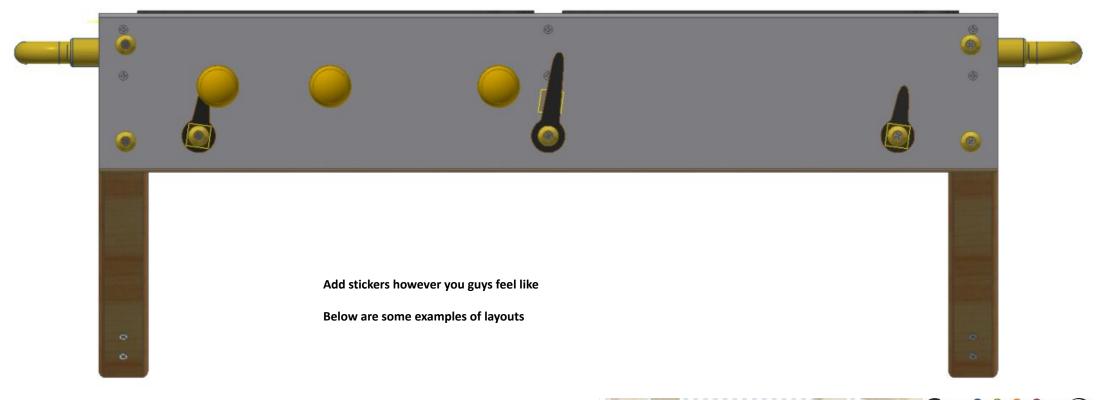







## Thank you for your attention