Verpackungsanleitung Autoklavierspieler Millitron

autor: winfried ritsch dez.2009

klangatelier algorythmics (algo.mur.at)

Kontakt: ++43 664 2439369 or ritsch@iem.at

A) Preperation:

a) remove all cables, unscrew from player and powersupplys, seriel cables to computer

b) remove grid from electronics box (golden) by releasing 2 screws



c) put grey cables inside electronics

d)Put grid again on electronics!



B) Remove golden Electronics-box from piano by removing 4 Nuts



2) remove other nuts and also fingerboards




3) remove iron construction and unscrew them in parts

use imbus keyıfar removing

put nuts on screws






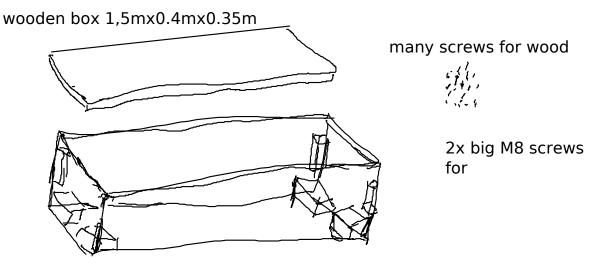

box from top


1. put top plate from box and the open box on the floor




2. put the two fingerboards on each side, fingers up in the box and screw the long wooden screws to wholes to fixate



3.Put elecronics box (brass) in den mittel and srew them with two big M8 screws to the bottom

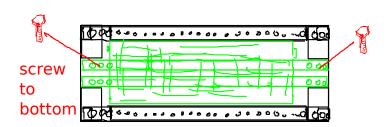


4.store iron parts to one side and all cables to the other

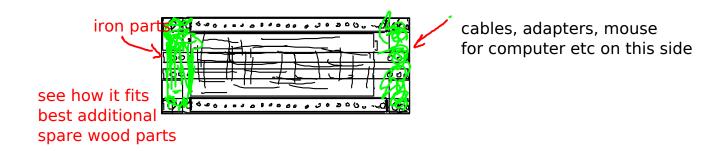


5. Put the 3 power supplies, computers, keyboards on top of the grid


put them side aside.
and fill rest with some stuff (plastik, paper,..., one or two rainy days catalogs ;-)



6. Close Box and screw down top, use two iron screw parts for sides

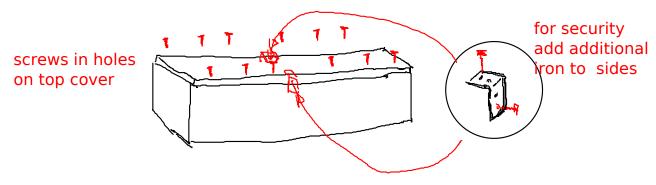

7. optional put a palette under the box with the strips if needed by transportation company or order one "one way pallette"



If something is missing, please add, this is a rough description from mind.