


Alice Lifter

Assembly preview — Front-Right corner
DRAFT — for look & feel only · 2026-07-24


Това е чернова, за да видим как изглежда ръководството. Hardware от бележките + GRÖBE heat-set. Не е финална поръчка.

BE AWARE — electrical motor inside. RAISE only as designed. Motor warning on printed parts.

1. Overview — Front-Right corner

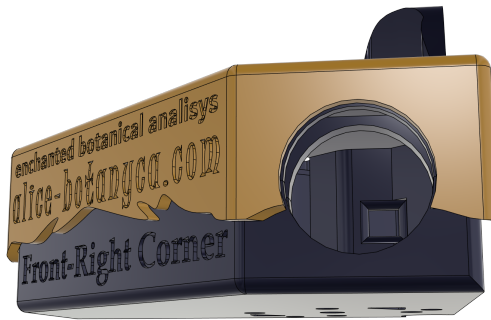


Brand face: enchanted botanical analysis · alice-botanyca.COM · Front-Right Corner

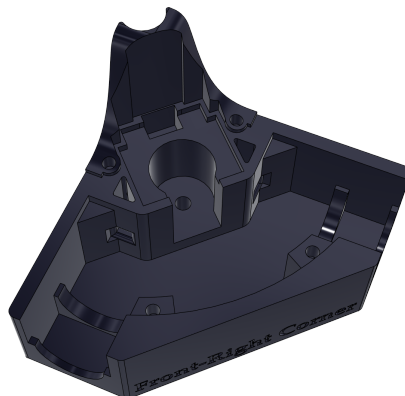

Printed body — Front-Right Corner (structure)

2. Motor case + cover

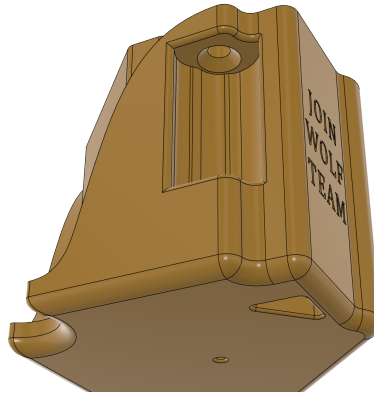


MotorCase — JOIN WOLF TEAM




MotorCaseCover — MOTOR inside · 4 holes around shaft

- Motor is held on MotorCaseCover with 4× M3 bolts.
- Thread length without head: 6 mm.
- If round head: head Ø max 6 mm, head height ~2 mm.

3. Motor assembly on Body

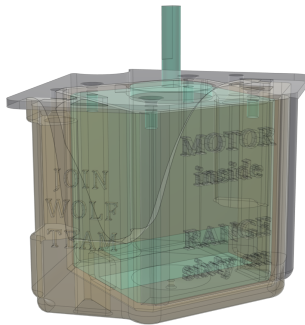


GrowBox / motor assembled (ghost view)

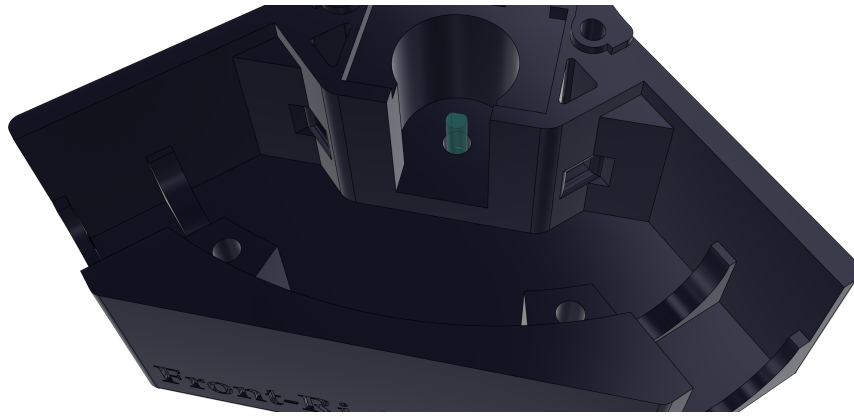


Motor seated in Front-Right body

- Whole motor unit → Body with 2× M4 bolts, length max 10 mm, countersunk head, head width max 8 mm.
- Into Body (heat-set, GRÖBE): 2× #8-32 Short (hole Ø5.6 · L 4.7 mm) for those M4 bolts.

4. Axis (AxZ) + more Body inserts

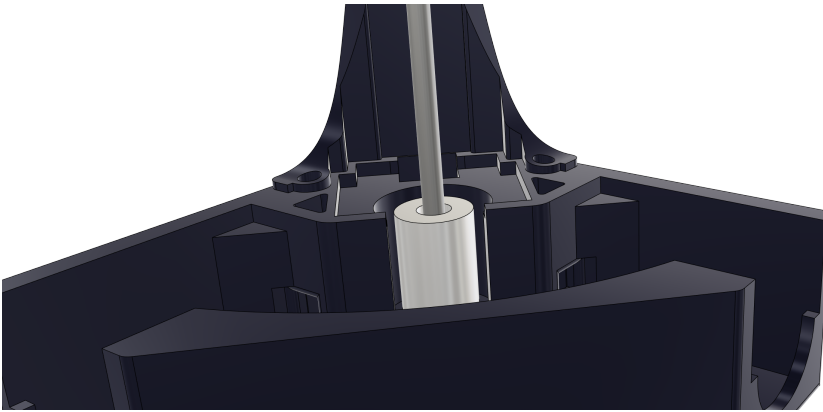


Body + AxZ guide / bushing

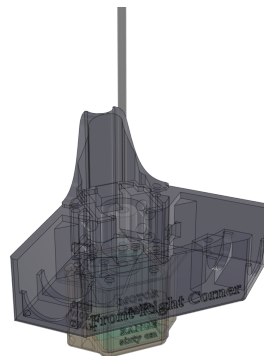


AxZ connected through Front-Right Corner

- Also in Body: 4× M6 heat-set — hole $\sim \varnothing 8$ · length $\sim 12.7\text{--}13.7$ mm (confirm M6 vs M6 Short on GRÖBE chart).
- Also in Body: 4× M4-thread inserts — 2× #8-32 Short + 2× #8-32 (long L 8.1).

5. Body cover + stopper

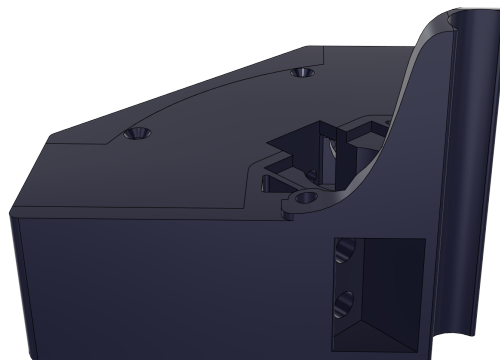


BodyCase (side / mount view)

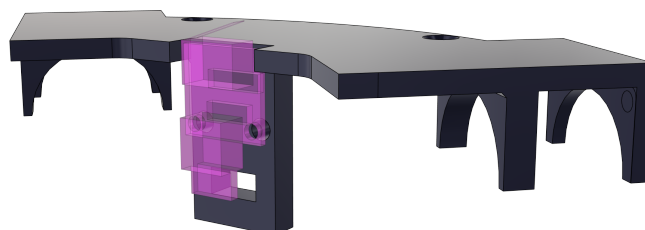

BodyCase + stopper zone (pink = keep-out / fit)

- Body cover: 2× M4 countersunk — head ~8 mm · ~2.4 mm (from note).
- Stopper capture: M3 / #6-32 Short heat-set — hole ~Ø4.8 · L ~4.8 (max related 8 mm) — confirm against GRÖBE #6-32 Short.

6. Full corner assembly

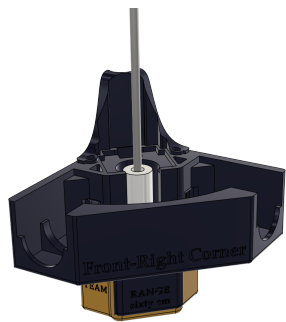

Front-Right Corner + motor unit + AxZ · RANGE sixty cm label on lower block

7. Hardware cheat-sheet (1 corner — draft)

Qty	Item	Use
4	M3 · 6 mm thread (round head OK)	Motor → MotorCaseCover
2	M4 · ≤10 mm countersunk	Motor unit → Body
2+	#8-32 Short insert (Ø5.6 / L4.7)	Body (for M4)
2	#8-32 long insert (L8.1)	Body
4	M6 insert (confirm short/full)	Body
2	M4 countersunk (~8 / 2.4 head)	Body cover
?	#6-32 Short / M3 insert (~Ø4.8)	Stopper capture

×4 corners for full lifter when ordering. Films / pre-order invite = later. This PDF is only a visual draft.