


FRONT FENDER APRON (ASSY)

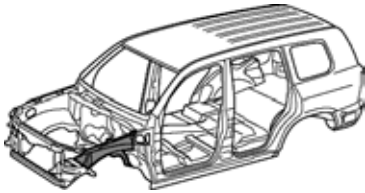

F29206A

With the radiator side support and cowl top side panel removed.

Symbol meaning

REMOVAL



△ △ : Remove Weld Points

INSTALLATION

□ I : Plug Weld

F29206B

REMOVAL-INSTALLATION

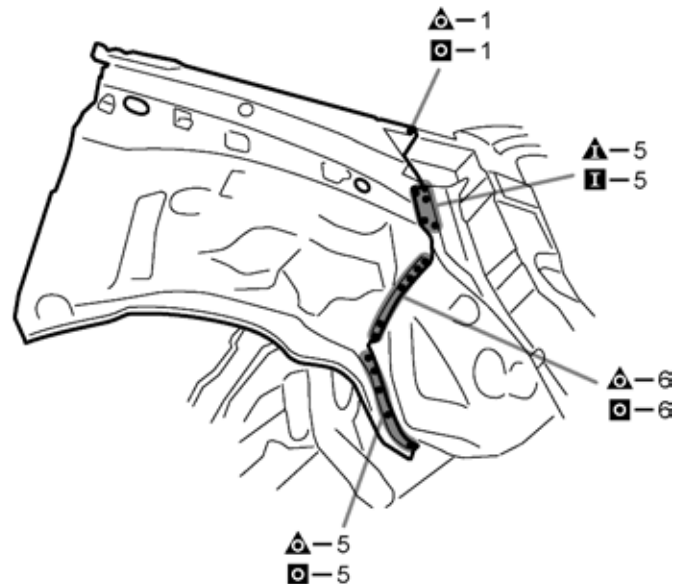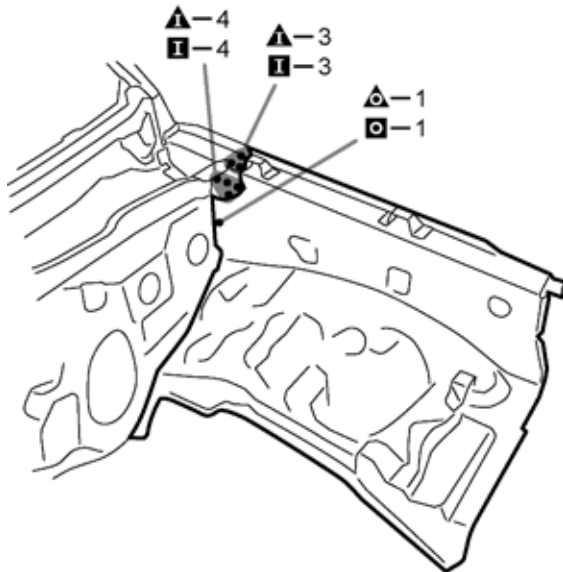

F29206

INSTALLATION POINT

- 1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- 2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- 3 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint coating)
- 4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.