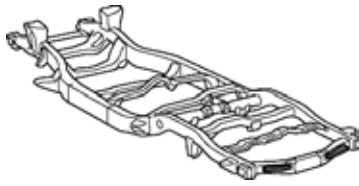





FRAME REAR BUMPER REINFORCEMENT (ASSY): w/ Towing Hitch

F29267A

Symbol meaning

: Cut with Disc Sander etc.

F29267B

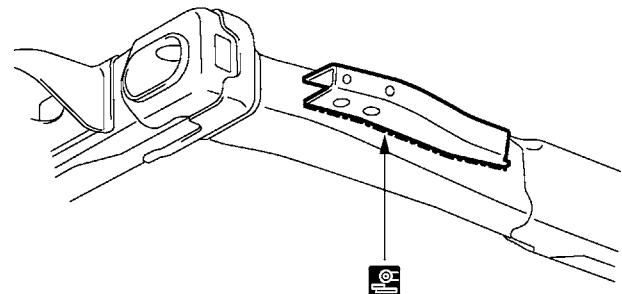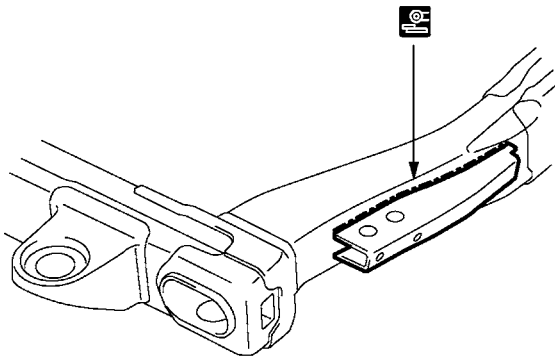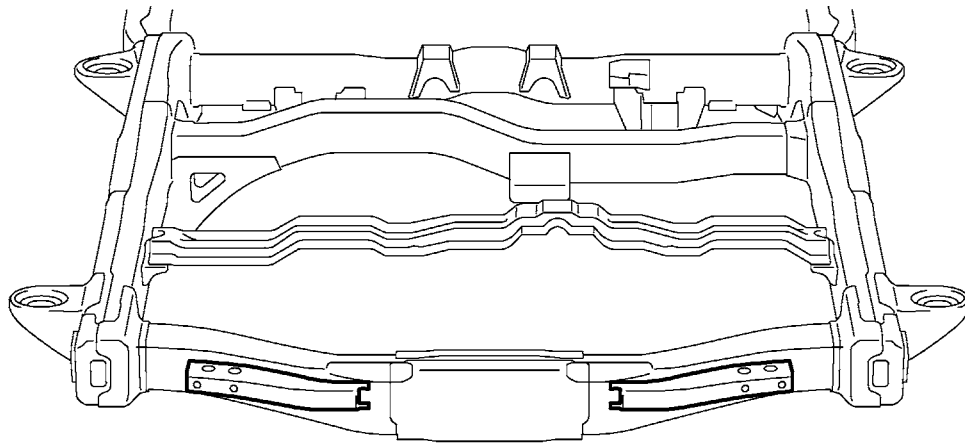REMOVAL



F29267

Symbol meaning

 : Fillet Weld

F29268B

INSTALLATION

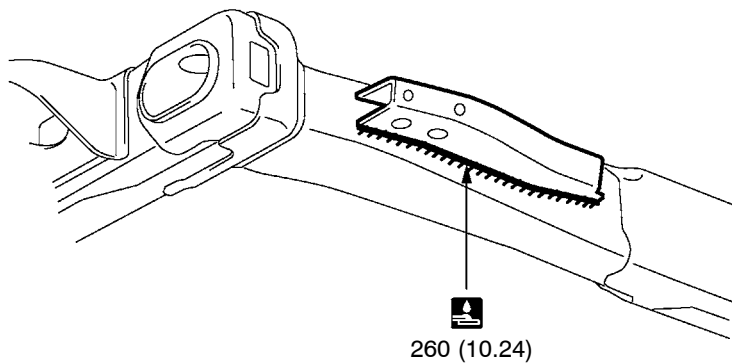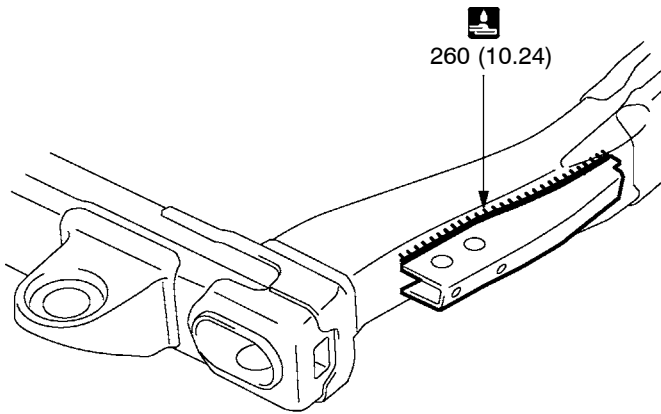

mm (in.)

F29268

INSTALLATION POINT

- 1 Make sure that proper welding can be performed by setting up the welding conditions as necessary before performing work.
- 2 To prevent heat deformation, weld the right and left side of each part before continuing to the next part.
- 3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.