

REAR FLOOR PAN (CUT)



F29246A



With the body lower back panel and rear foot side panel removed.

Symbol meaning


△△ : Remove Weld Points  : Cut Location

F29246B

REMOVAL

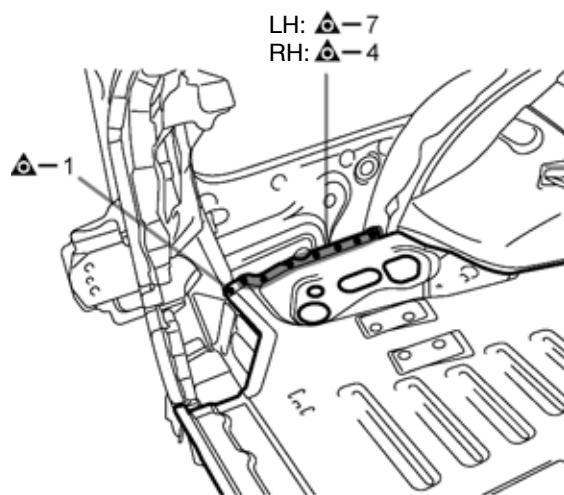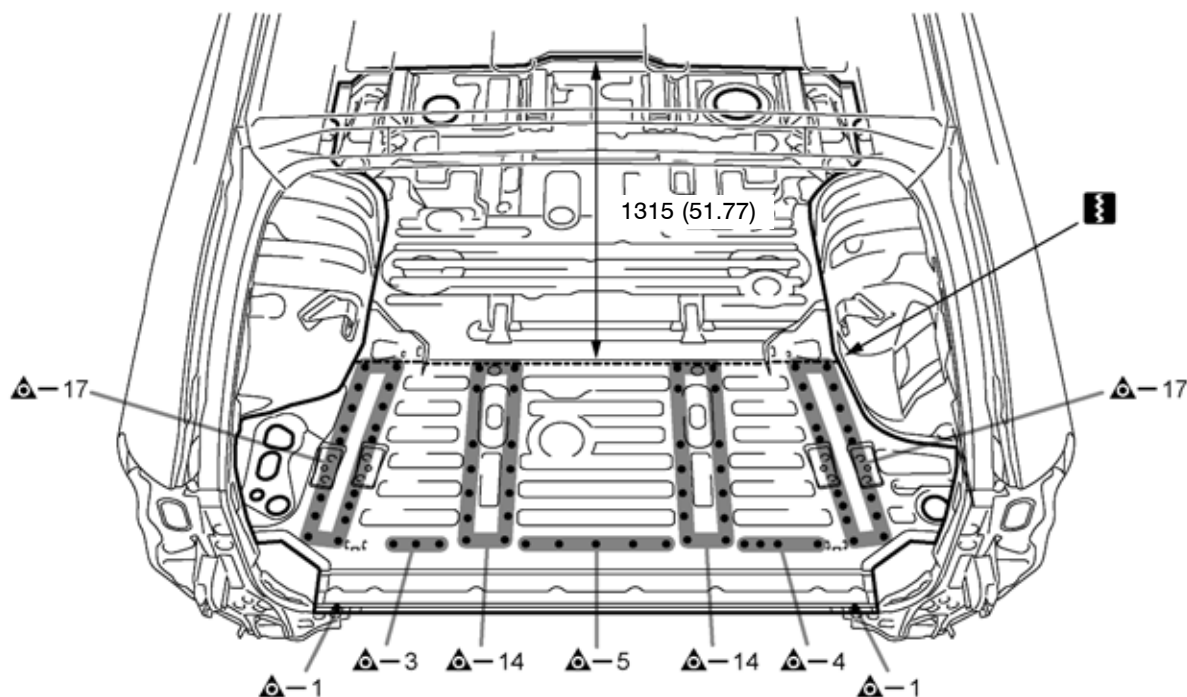

LH: △-7
RH: △-4

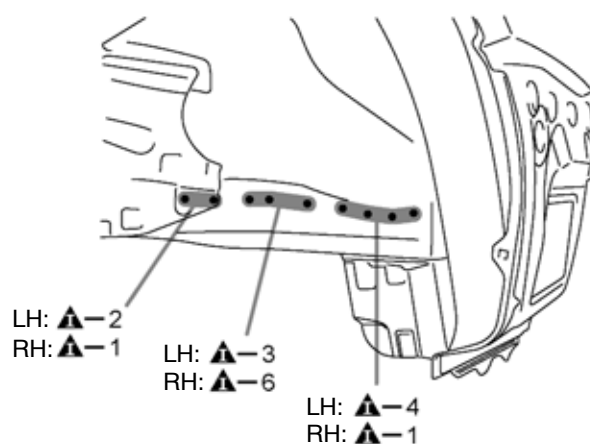

LH: △-2
RH: △-1
LH: △-3
RH: △-6
LH: △-4
RH: △-1

mm (in.)


F29246

Symbol meaning

 **I** : Plug Weld
  : Cut Location
  : Body Sealer

F29247B

INSTALLATION

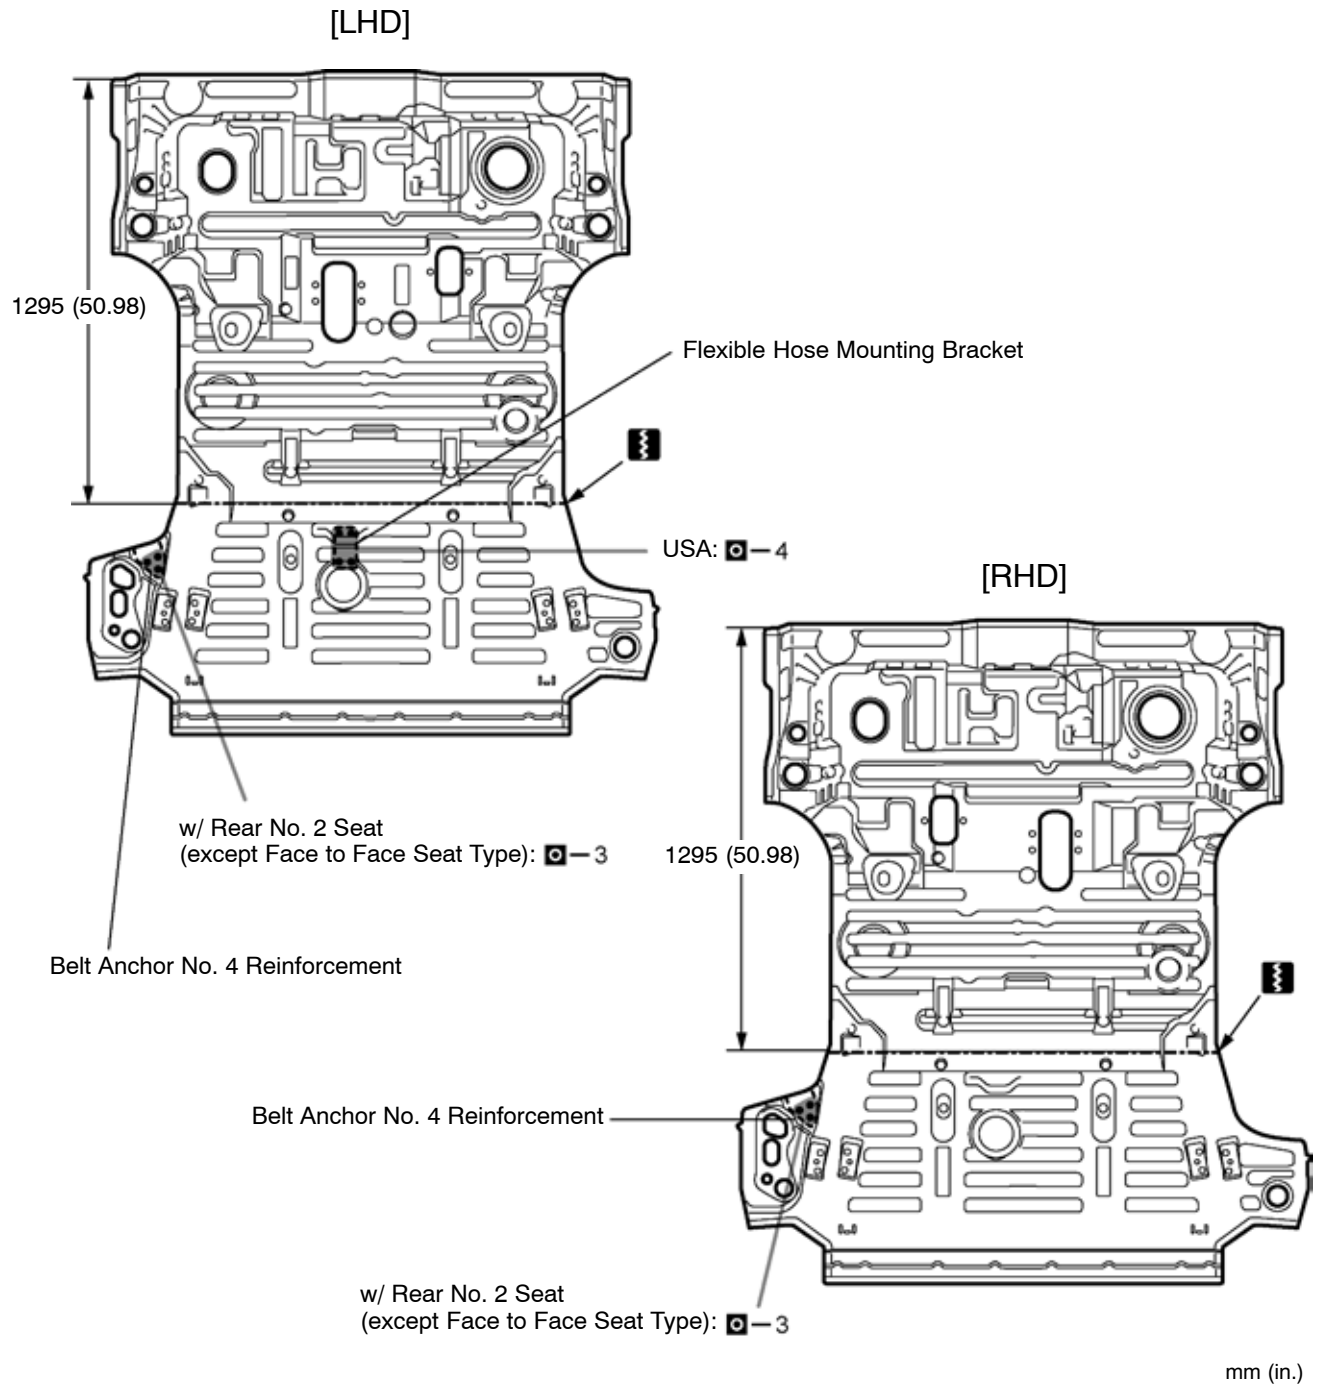

F29247


INSTALLATION POINT

- 1 Cut the new part so that it overlaps the previous cut location by approximately 20 mm (0.79 in).
- 2 Before temporarily installing the new parts, weld the belt anchor No. 4 reinforcement and flexible hose mounting bracket with the standard number of welding points.

Symbol meaning

□ I : Plug Weld ⌋ : Cut Location ⌒ : Body Sealer

F29247B

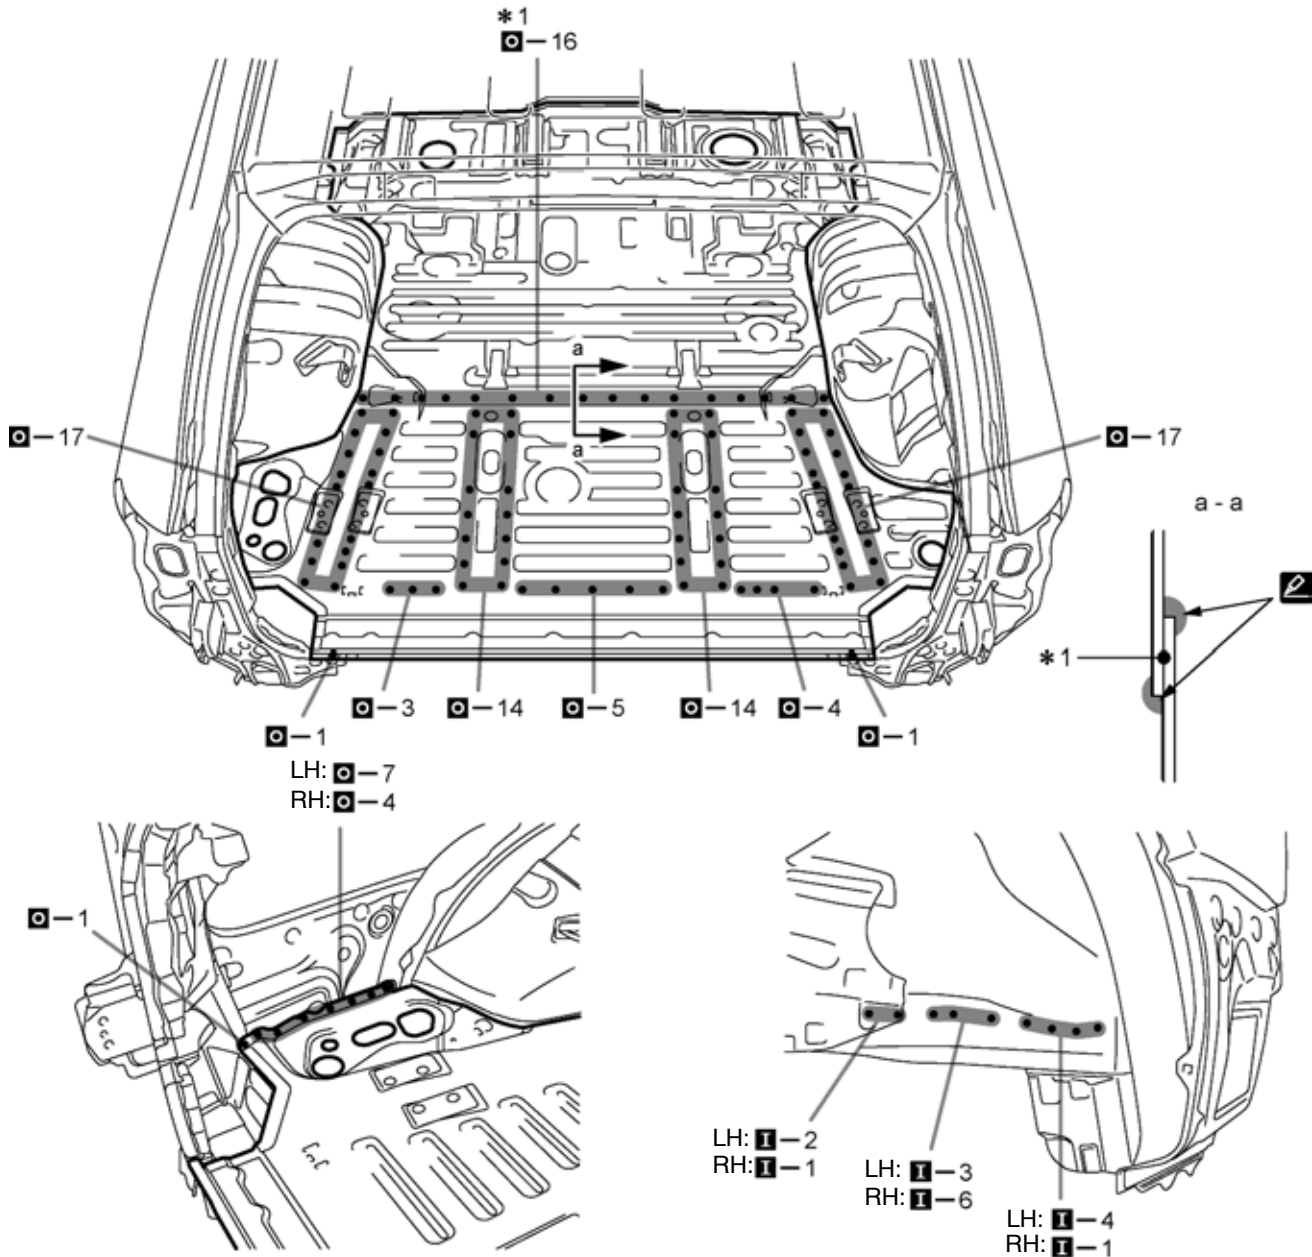

F29248

INSTALLATION POINT

- 1 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- 2 *1: Perform plug-welding in the area where the panel are overlapped. Apply body sealer to both sides of each panel.
HINT:
 - Confirm that the panels are securely welded together.
 - Apply sealer in an even, continuous bead.
- 2 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint-coating)
- 3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.