


■ DRIVER SEAT ECU

- The driver seat ECU is built into the front power seat switch.
- This ECU effects the main control of the memory system in order to memorize and recall the driver seat position. In addition, the driver seat ECU instructs the outer mirror control ECU, multiplex tilt & telescopic ECU, to start memorizing or recalling their respective positions.
- The driver seat position, outer rear view mirror position, and the tilt and telescopic steering position are memorized by their respective ECUs.
- The ECUs exchange the information that is necessary for memory control via the CAN.

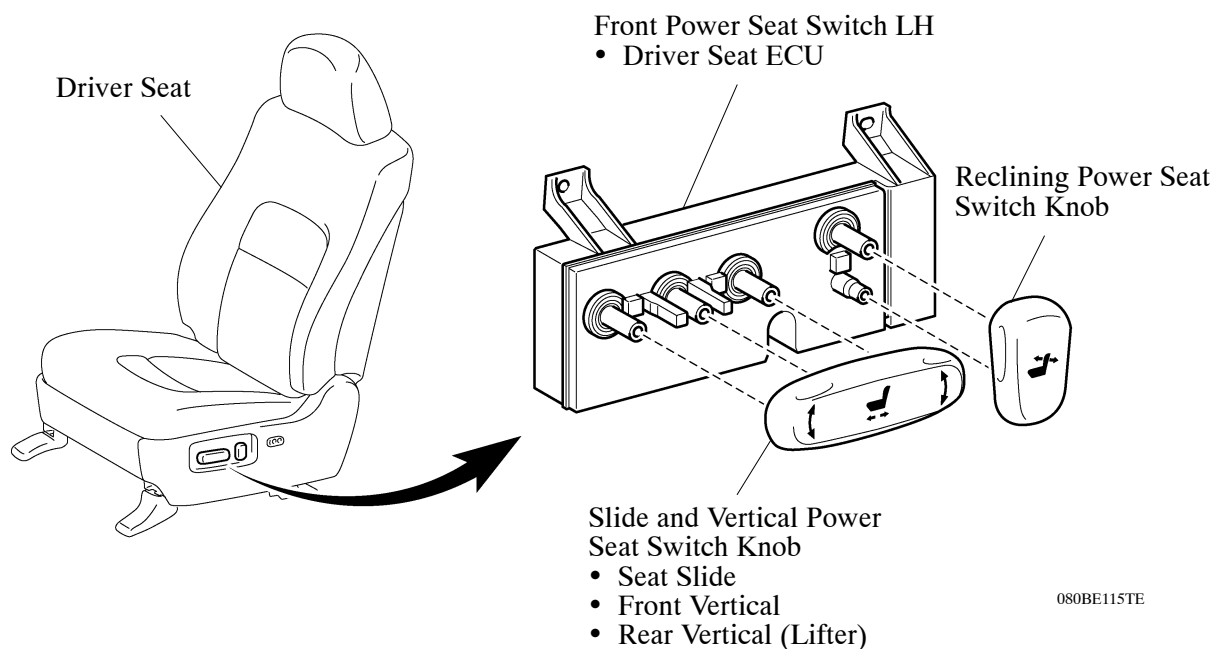

LHD Models

■ SEAT POSITION DETECTION METHOD

A pulse generation circuit in driver seat ECU converts the driving current pulsations that are generated by the rotation of the motor into pulse signals. These signals are then picked up in order to detect the seat position.

