

ALPHASERVER ES47/ES80/GS1280 EXPANDER CABINET INSTALLATION CARD

Use this card as a quick reference to install an expander cabinet to an AlphaServer ES47, ES80, or GS1280 system. Additional information can be found in the *AlphaServer ES47/ES80/GS1280 Installation Information, Revision 3.0*.

Overview

- Remove the side panels of the base and expander cabinets.
- Position and attach the expander cabinet to the base cabinet.
- Set the expander cabinet ID number.
- Set expander cabinet drawer ID numbers, as applicable.
- Attach cables to expander cabinet devices.

Before you Begin

Keep these points in mind:




WARNING: To prevent injury, access is limited to persons who have appropriate technical training and experience. Such persons are expected to understand the hazards of working within this equipment and take measures to minimize danger to themselves or others.



CAUTION: To reduce the risk of electrical shock or damage to the equipment, do not disable the power cord grounding plug.

NOTE: The illustrations that follow show the installation of an expander cabinet to a 16P system. You may be installing your expander cabinet to a different system or to another expander cabinet. The procedure is the same.

Remove the Side Panels of Both Cabinets

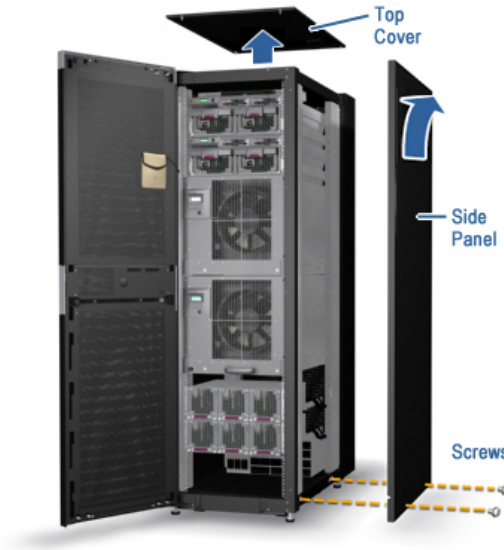


You should already have determined the location of the expander cabinet relative to other cabinets making up the system. Remove the side panel, either right or left of both the expander cabinet and the base cabinet as follows:


1. Open the front door.
2. Lift the cabinet top cover and remove.
3. Loosen the screw at the front bottom right or bottom left that will free the side panel you are removing.
4. Lift the panel up until it stops (approximately 2 cm.), pull away from the frame and remove.

Position and Attach the Expander Cabinet

1. Roll the expander cabinet as close as possible to the base cabinet and align the front and rear surfaces.

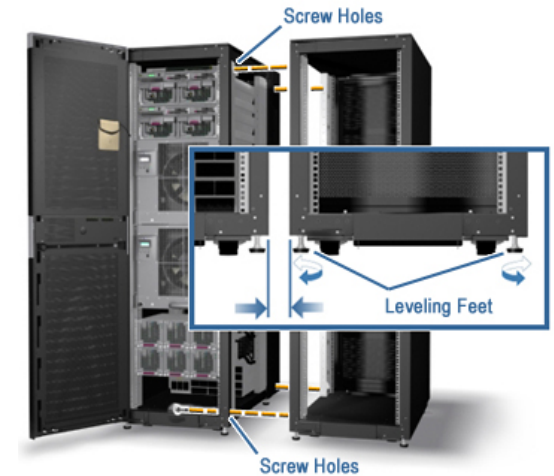

2. Align the cabinet heights by adjusting the leveling feet.
3. Use the four screws from the joining kit (PN 70-40120-02) to join the cabinets together. The illustration shows the location of the screw connections.
4. Connect the ground wire to both cabinets. The ground wire should be attached to each cabinet at the right rear rail (as viewed from the front).

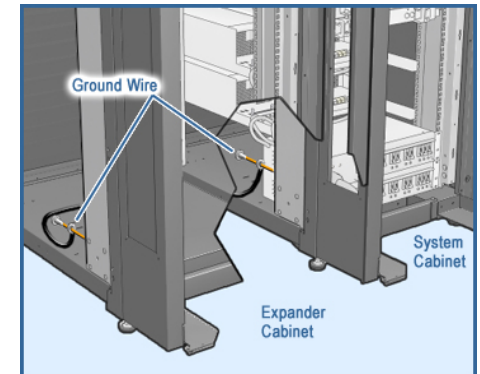

Set the Expander Cabinet ID Number

Set the cabinet ID number on the front door OCP push wheel according to these rules for setting cabinet IDs:

Each cabinet has a unique ID defined by the setting two push-wheel switches on the back of the door OCP. There are two exceptions to this rule that occur when either a 32P is formed by two 16P systems side-by-side or a 64P system is formed by two 32P systems side-by-side. Otherwise the following rules apply to cabinet IDs:

- The leftmost system cabinet has an ID of 00.
- All subsequent cabinet IDs are incremented as cabinets are added to the platform first to the right and then to the left of the first system cabinet. (Orientation is the front of the system.)

The result of these rules is that all cabinets to the right of cabinet 0 have odd ID numbers and all cabinets to the left of cabinet 0 have even ID numbers.

Legal cabinet ID numbers are in the range 00:0F; the left most number must be 0. Note that the switches on the back of the OCP are oriented right to left and the display on the front is oriented left to right. This means that the switches will look like a range 00:F0.

Set the Expander Drawer ID Number(s)

If the cabinet has I/O drawers, set the push wheel ID number on the drawer OCP according to the rules for setting drawer IDs contained in the *AlphaServer ES47/ES80/GS1280 Installation Information, Revision 3.0*.

Attach Cables to Expander Cabinet Devices

Cabling depends upon the contents of the expander cabinet and the contents of the base cabinet. I/O drawers must be connected using an IP cable to an I/O CPU connector. Storage shelves must be connected to storage shelf controllers in I/O drawers.