

# Washing instructions

Scroll for the pile you are holding.  
Generic front loader, 1–8 kg · Generic steam iron

LOADS — ONE LINE, ONE WASH

|                              |                                     |       |
|------------------------------|-------------------------------------|-------|
| <b>Cottons 60°</b>           | <b>White + White Socks</b>          | ~2:30 |
| <b>Cottons 60°</b>           | White Towels (on its own)           | ~2:30 |
| <b>Cottons 40°</b>           | <b>Coloured + Coloured Socks</b>    | ~2:15 |
| <b>Cottons 40°</b>           | Coloured Towels (on its own)        | ~2:15 |
| <b>Easy Care 40°</b>         | Microfibre Towels (on its own)      | ~1:30 |
| <b>Cottons 30°</b>           | <b>Dark + Black Socks + Denim</b>   | ~2:00 |
| <b>Delicates / Silk cold</b> | Raw Denim (on its own)              | ~0:45 |
| <b>Wool 30°</b>              | <b>Merino Wool + Cashmere Blend</b> | ~0:40 |
| <b>Sportswear 30°</b>        | Synthetic Activewear (on its own)   | ~1:10 |
| <b>Sportswear 40°</b>        | Gym Socks (on its own)              | ~1:20 |
| <b>Wool cold</b>             | Wool Trainers (on its own)          | ~0:40 |



programme


The dials are drawn as they sit on the machine: twelve o'clock is Off, and the red pointer is where to turn it. Chips show every value the display steps through, filled in on the one you want. On the iron, the blue band is the zone where it makes steam.

## 1. White

~2:30

**NO SOFTENER**

**Cottons 60 °C · 1200 rpm**

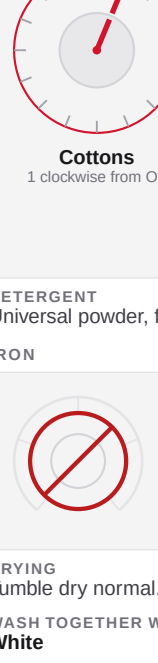

**Cottons**  
1 clockwise from Off

Temp

cold 20 30

40 **60** 90

0 400 600

800 **1200**

1400

Spin rpm

Buttons


Speed **Eco**

Easy Iron

Extra Rinse

DETERGENT  
Universal powder, full dose — the bleach in powder is what keeps whites from going grey

IRON

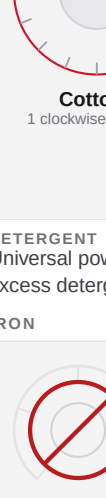

**\*\*\* — cotton, linen · 200 °C**  
inside the steam zone  
Iron while slightly damp, steam on. Cotton takes all the heat the iron has.

DRYING  
Tumble dry normal, or line dry in the sun — sunlight bleaches whites for free.

WASH TOGETHER WITH  
**White Socks**


NOTES  
Wash whites on their own. One stray coloured sock is all it takes.

## 2. White Socks

~2:30

**NO SOFTENER**

**Cottons 60 °C · 1200 rpm**

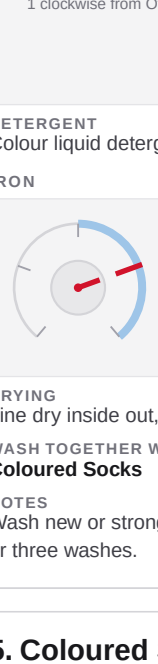

**Cottons**  
1 clockwise from Off

Temp

cold 20 30

40 **60** 90

0 400 600

800 **1200**

1400

Spin rpm

Buttons


Speed **Eco**

Easy Iron

Extra Rinse

DETERGENT  
Universal powder, full dose

IRON

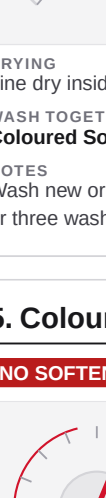

**Do not iron**

DRYING  
Tumble dry normal.

WASH TOGETHER WITH  
**White**


NOTES  
Same settings as White — throw them in that load.

## 3. White Towels

~2:30

**NO SOFTENER**

**Cottons 60 °C · 1400 rpm**

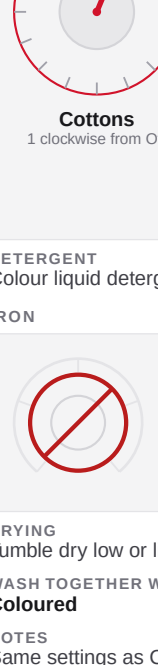

**Cottons**  
1 clockwise from Off

Temp

cold 20 30

40 **60** 90

0 400 600

800 1200

**1400**

Spin rpm

Buttons


Speed **Eco**

Easy Iron

**Extra Rinse**

DETERGENT  
Universal powder, full dose. Go lighter rather than heavier: excess detergent stiffens terry.

IRON

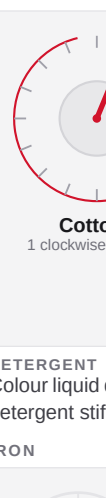

**Do not iron**  
Ironing crushes the pile flat and the towel stops drying you.

DRYING  
Tumble dry medium — the tumbling is what fluffs the pile back up.

WASH TOGETHER WITH  
**nothing else — wash alone**

NOTES  
Never fabric softener: it coats the loops in silicone and the towel stops absorbing. White vinegar in the softener drawer once a month softens instead.

## 4. Coloured

~2:15

**SOFTENER OK**

**Cottons 40 °C · 1200 rpm**



**Cottons**  
1 clockwise from Off

Temp

cold 20 30

**40** 60 90

0 400 600

800 **1200**

1400

Spin rpm

Buttons


Speed **Eco**

Easy Iron

Extra Rinse

DETERGENT  
Colour liquid detergent — no bleach, no optical brighteners

IRON

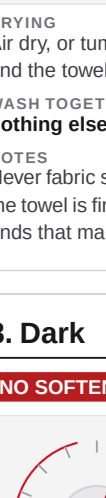

**\*\*\* — cotton, linen · 200 °C**  
inside the steam zone  
Steam, but turn prints and dark panels inside out first.

DRYING  
Line dry inside out, or tumble on low.

WASH TOGETHER WITH  
**Coloured Socks**


NOTES  
Wash new or strongly dyed items separately for the first two or three washes.

## 5. Coloured Socks

~2:15

**NO SOFTENER**

**Cottons 40 °C · 1200 rpm**

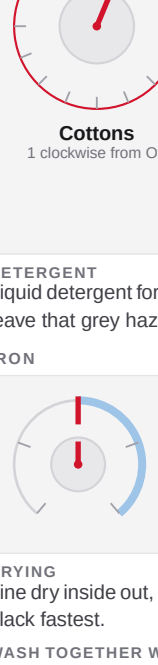

**Cottons**  
1 clockwise from Off

Temp

cold 20 30

**40** 60 90

0 400 600

800 **1200**

1400

Spin rpm

Buttons

Speed **Eco**

Easy Iron

Extra Rinse

DETERGENT  
Colour liquid detergent

IRON



**Do not iron**

DRYING  
Tumble dry low or line dry.

WASH TOGETHER WITH  
**Coloured**


NOTES  
Same settings as Coloured — throw them in that load.

## 6. Coloured Towels

~2:15

**NO SOFTENER**

**Cottons 40 °C · 1400 rpm**

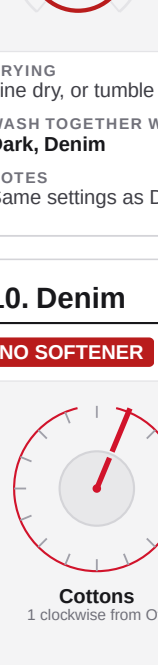

**Cottons**  
1 clockwise from Off

Temp

cold 20 30

**40** 60 90

0 400 600

800 1200

**1400**

Spin rpm

Buttons


Speed **Eco**

Easy Iron

**Extra Rinse**

DETERGENT  
Colour liquid detergent. Go lighter rather than heavier: excess detergent stiffens terry.

IRON

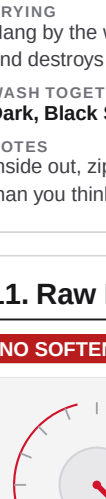

**Do not iron**  
Ironing crushes the pile flat and the towel stops drying you.

DRYING  
Tumble dry medium — the tumbling is what fluffs the pile back up.

WASH TOGETHER WITH  
**nothing else — wash alone**


NOTES  
Never fabric softener — it kills absorbency. Run them at 60 °C every month or so if they start to smell.

## 7. Microfibre Towels

~1:30

**NO SOFTENER**

**Easy Care 40 °C · 1200 rpm**

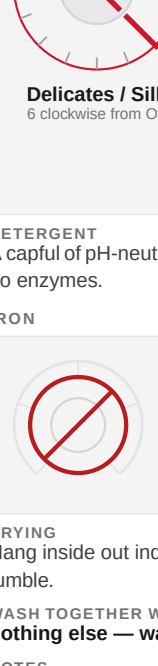

**Easy Care**  
3 clockwise from Off

Temp

cold 20 30

**40** 60 90

0 400 600

800 **1200**

1400

Spin rpm

Buttons


Speed **Eco**

Easy Iron

**Extra Rinse**

DETERGENT  
Liquid detergent, half dose. What doesn't rinse away stays in the split fibre and stops it picking anything up.

IRON

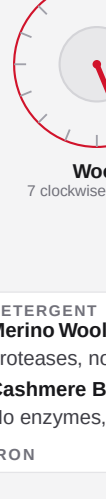

**Do not iron**  
Polyester and polyamide start melting around 110 °C, well before the iron does anything useful.

DRYING  
Air dry, or tumble on low. High heat fuses the split ends shut and the towel never absorbs again.

WASH TOGETHER WITH  
**nothing else — wash alone**


NOTES  
Never fabric softener — it fills the split fibres with silicone and the towel is finished. Wash with microfibre only: the same split ends that make it absorbent grab cotton lint and never let go.

## 8. Dark

~2:00

**NO SOFTENER**

**Cottons 30 °C · 800 rpm**

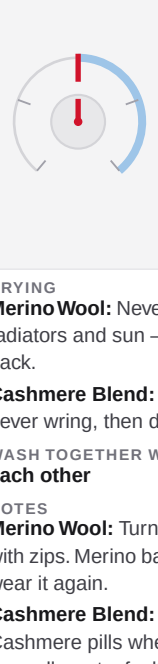

**Cottons**  
1 clockwise from Off

Temp

cold 20 **30**

40 60 90

0 400 600

**800** 1200

1400

Spin rpm

Buttons


Speed **Eco**

Easy Iron

**Extra Rinse**

DETERGENT  
Liquid detergent for dark/black — optical brighteners are what leave that grey haze

IRON

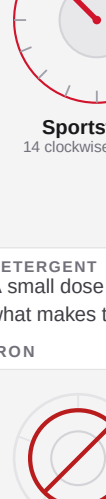

**\*\* — wool, silk · 150 °C**  
inside the steam zone  
Inside out, medium heat. Steam, don't press hard — shine on dark cotton doesn't come out.

DRYING  
Line dry inside out, out of direct sun. Skip the dryer: heat fades black fastest.

WASH TOGETHER WITH  
**Black Socks, Denim**


NOTES  
Turn everything inside out. The extra rinse matters here — detergent residue dries as grey streaks on black.

## 9. Black Socks

~2:00

**NO SOFTENER**

**Cottons 30 °C · 800 rpm**

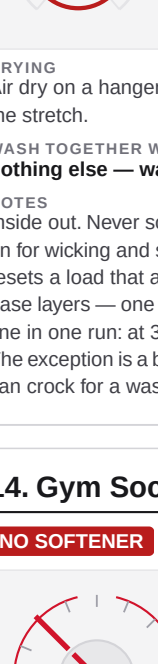

**Cottons**  
1 clockwise from Off

Temp

cold 20 **30**

40 60 90

0 400 600

**800** 1200

1400

Spin rpm

Buttons


Speed **Eco**

Easy Iron

**Extra Rinse**

DETERGENT  
Liquid detergent for dark/black

IRON

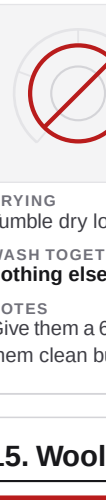

**Do not iron**

DRYING  
Line dry, or tumble on low.

WASH TOGETHER WITH  
**Dark, Denim**


NOTES  
Same settings as Dark — throw them in that load.

## 10. Denim

~2:00

**NO SOFTENER**

**Cottons 30 °C · 800 rpm**

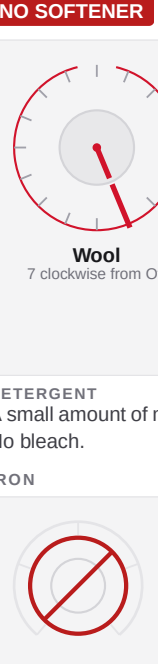

**Cottons**  
1 clockwise from Off

Temp

cold 20 **30**

40 60 90

0 400 600

**800** 1200

1400

Spin rpm

Buttons


Speed **Eco**

Easy Iron

**Extra Rinse**

DETERGENT  
Liquid detergent for dark/black

IRON

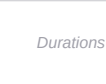

**\*\*\* — cotton, linen · 200 °C**  
inside the steam zone  
Inside out on cotton heat if you want them crisp. Steam.

DRYING  
Hang by the waistband and air dry. A hot dryer shrinks them and destroys the elastane in stretch denim.

WASH TOGETHER WITH  
**Dark, Black Socks**

NOTES  
Inside out, zips and buttons closed. Wash them far less often than you think.

## 11. Raw Denim

~0:45

**NO SOFTENER**

**Delicates / Silk cold °C · 400 rpm**



**Delicates / Silk**  
6 clockwise from Off

Temp

**cold** 20 30

40 60 90

0 **400** 600

800 1200

1400

Spin rpm

Buttons

Speed **Eco**

Easy Iron

Extra Rinse

DETERGENT  
A capful of pH-neutral or denim-specific detergent. No bleach, no enzymes.

IRON



**Do not iron**  
Pressing sets creases in the wrong places and flattens the fades that took months to earn.

DRYING  
Hang inside out indoors, away from sun and radiators. Never tumble.

WASH TOGETHER WITH  
**nothing else — wash alone**

NOTES  
Unwashed denim is meant to go months before its first wash. Gentler than the machine: a 45-minute cold soak in the bath, inside out, no agitation, no wringing — then roll in a towel to press the water out.

## 12. Merino Wool + Cashmere Blend

~0:40

**NO SOFTENER**

**Wool 30 °C · 400 rpm**



**Wool**  
7 clockwise from Off

Temp

cold 20 **30**

40 60 90

0 **400** 600

800 1200

1400

Spin rpm

Buttons

Speed **Eco**

Easy Iron

Extra Rinse

DETERGENT  
**Merino Wool:** Wool detergent, half dose. No enzymes, no proteases, no bleach — they eat the fibre.  
**Cashmere Blend:** Wool or cashmere detergent, half dose. No enzymes, no proteases, no bleach.

IRON



**\*\* — wool, silk · 150 °C**  
inside the steam zone  
**Merino Wool:** Only if you must: pressing cloth, no weight. Hanging it in a steamy bathroom drops the creases without touching it.  
**Cashmere Blend:** Low heat through a pressing cloth. Better still, steam it on a hanger and let the creases drop out on their own.

DRYING  
**Merino Wool:** Never tumble dry. Dry flat on a towel, away from radiators and sun — hung up it stretches and never comes back.  
**Cashmere Blend:** Never tumble dry. Squeeze the water out, never wring, then dry flat on a towel away from any heat.

WASH TOGETHER WITH  
**each other**

NOTES  
**Merino Wool:** Turn inside out, wash with wool only, nothing with zips. Merino barely needs washing — air it overnight and wear it again.  
**Cashmere Blend:** Inside out, and only ever with other wool. Cashmere pills where it rubs — that is the fibre behaving normally, not a fault; a cashmere comb takes it off. Check the blend first: a little nylon makes it tougher, silk makes it more delicate.

## 13. Synthetic Activewear

~1:10

**NO SOFTENER**

**Sportswear 30 °C · 800 rpm**



**Sportswear**  
14 clockwise from Off

Temp

cold 20 **30**

40 60 90

0 400 600

**800** 1200

1400

Spin rpm

Buttons

Speed **Eco**

Easy Iron

**Extra Rinse**

DETERGENT  
A small dose of mild pH-neutral liquid detergent. Too much is what makes them smell.

IRON



**Do not iron**  
Elastane starts degrading around 110 °C, and the technical finish goes with it.

DRYING  
Air dry on a hanger — dry within the hour. Tumble heat kills the stretch.

WASH TOGETHER WITH  
**nothing else — wash alone**

NOTES  
Inside out. Never softener: it films over the fibres these rely on for wicking and stretch. A cup of white vinegar in the rinse resets a load that already smells. Covers tops, shorts and base layers — one fabric family, one wash. Mixed colours are fine in one run: at 30 °C the dyes on polyester barely move. The exception is a brand-new black or strong red piece, which can crock for a wash or two — give that its own run first.

## 14. Gym Socks

~1:20

**NO SOFTENER**

**Sportswear 40 °C · 1200 rpm**



**Sportswear**  
14 clockwise from Off

Temp

cold 20 30

**40** 60 90

0 400 600

800 **1200**

1400

Spin rpm

Buttons

Speed **Eco**

Easy Iron

**Extra Rinse**

DETERGENT  
Liquid detergent, normal dose

IRON



**Do not iron**

DRYING  
Tumble dry low or line dry.

WASH TOGETHER WITH  
**nothing else — wash alone**

NOTES  
Give them a 60 °C cotton run every few weeks — 40 °C keeps them clean but doesn't reset the smell.

## 15. Wool Trainers

~0:40

**NO SOFTENER**

**Wool cold °C · 400 rpm**



**Wool**  
7 clockwise from Off

Temp

**cold** 20 30

40 60 90

0 **400** 600

800 1200

1400

Spin rpm

Buttons

Speed **Eco**

Easy Iron

Extra Rinse

DETERGENT  
A small amount of mild detergent — a wool detergent is ideal. No bleach.

IRON



**Do not iron**

DRYING  
Air dry only, somewhere with moving air: outside, by a window, or in front of a fan. Never the dryer and never a radiator — heat warps the sole and shrinks the wool upper.

WASH TOGETHER WITH  
**nothing else — wash alone**

NOTES  
Pull the insoles and laces out first and wash those by hand. The shoes go in a mesh delicates bag or a pillowcase, on their own — a loose trainer batters the drum and everything in it.

Durations are the machine's own estimates and vary with load.