


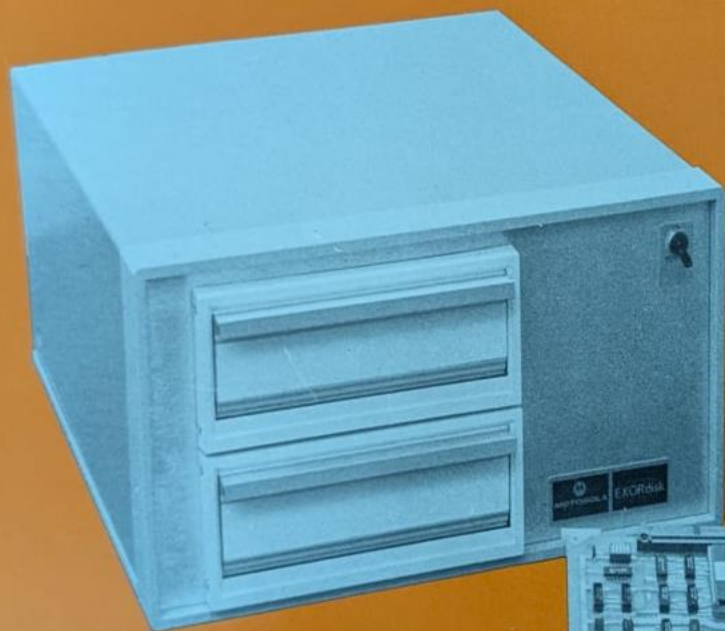

**MOTOROLA MICROSYSTEMS**

The only peripheral required to use the EXORciser for design purposes is a data terminal. For major design efforts, however, considerable design time can be saved with additional peripherals that speed up program development. EXORdisk and EXORTape are among these development tools.



# **M6800 Support Peripherals**