How to create a new Font Library

Purpose: After downloading the font file into terminal, the text display function can be used.


Note: 1.The character size and type are defined by the font files.

2. The Default Font Library is 0x20,0x21,0x22 and 0x23 which store the ASCII 6*12, ASCII 8*16, ASCII 12*24 and ASCII 16*32 font file.

3. All of the Character code follows the HEX “Unicode table”, please set character code of your language in accordance with the HEX “Unicode table”

Process:

Step 1. Create a font file by the “Font Generator” software

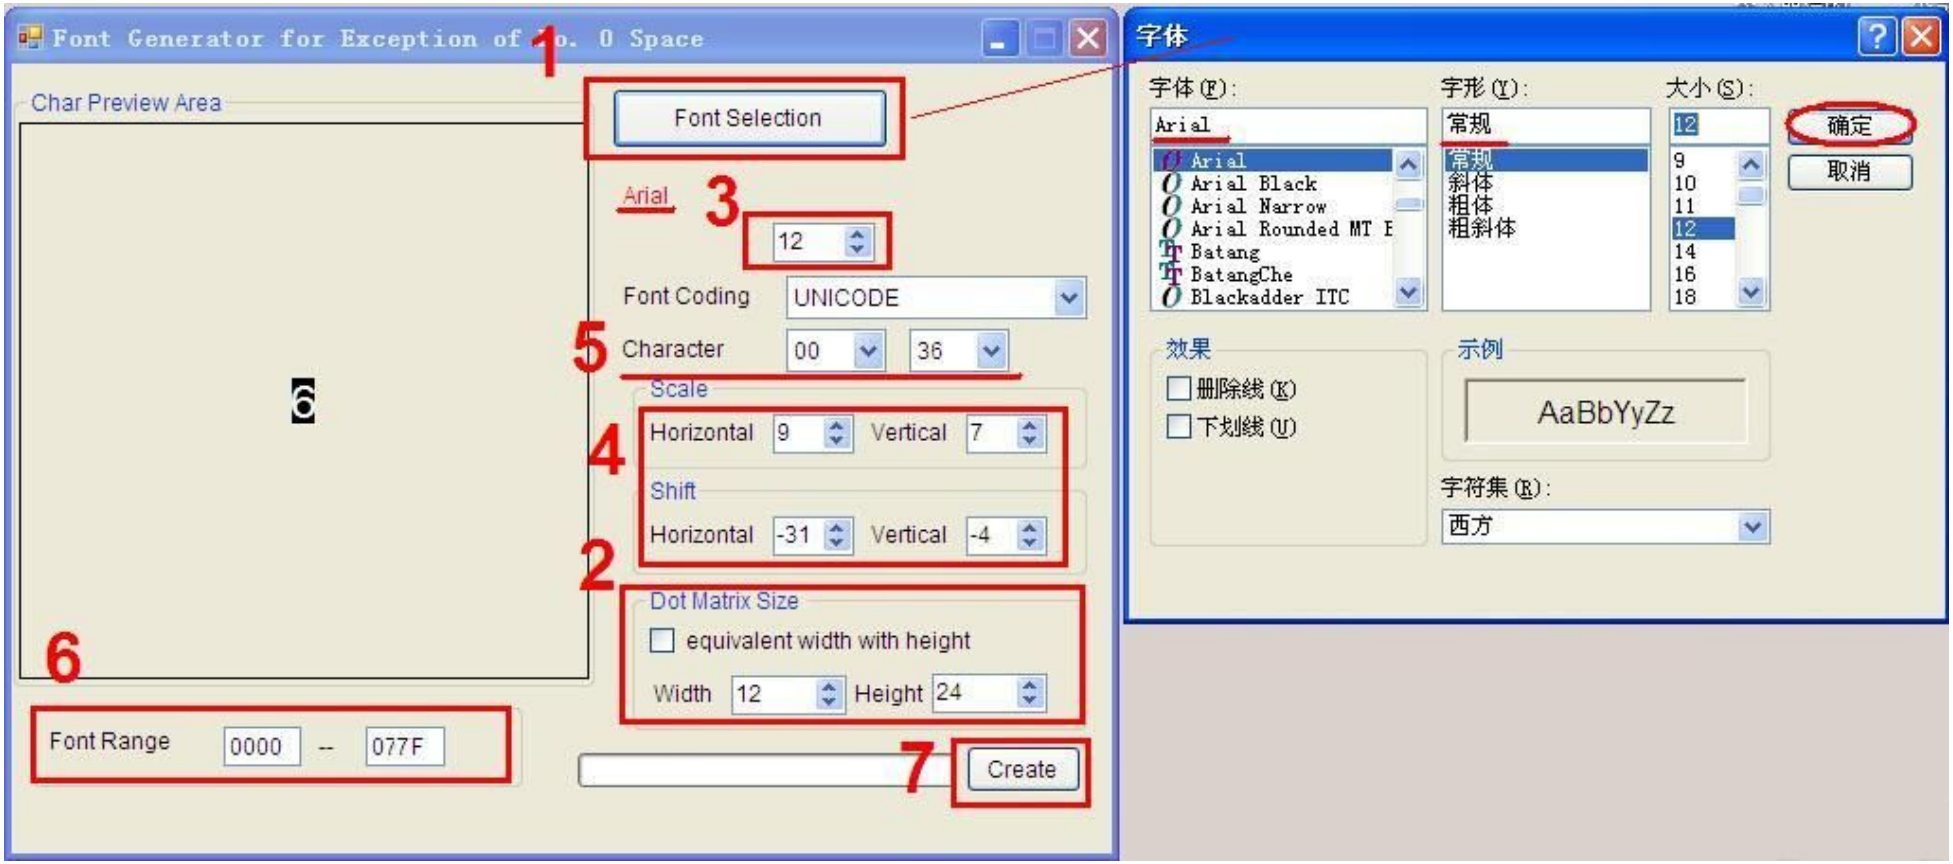

1. Click the “Font Selection” button to select the font and type of Character you want.
2. Select the dot matrix size. (Each character possesses area. There are many kinds of the “dot matrix” size you can use, see Table-01 as below.)
   Note: The English letter is the half-width characters.
3. Set the font size.
   Suggestion: It is preferably that the ratio of the font size and the dot matrix size (High) is 1: 1.5. (For example: If the Font size is 16 while the Dot matrix size is 24.)
4. Adjust the scale and shift of the character.
5. Preview Function (You can preview the type and size of each character.)
6. Designated HEX UNICODE Areas.
   The “Designated Areas” means to choose all of characters in this designated area of Hex Unicode.
   Note: The suggestion of designated area is from 0x0000 to 0x077F which includes most of character in the world, except for East Asia and South Asia.
   Or it also can design the small range UNICODE.
7. Click “Create”, then wait for a moment, till a new font file with “DZK” format is created and saved into your desk.

Table-1

C_Dots	Dot Matrix	C_Dots	Dot Matrix
0x00	8*8	0x10	64*64
0x01	6*12	0x11	40*80
0x02	8*16	0x12	48*96
0x03	12*24	0x13	56*112
0x04	16*32	0x14	64*128
0x05	20*40	0x15	80*80
0x06	24*48	0x16	96*96
0x07	28*58	0x17	112*112
0x08	32*64	0x18	128*128
0x09	12*12	0x19	6*8
0x0A	16*16	0x1A	8*10
0x0B	24*24	0x1B	8*12
0x0C	32*32	0x1C	100*200
0x0D	40*40	0x1D	200*200
0x0E	48*48		
0x0F	56*56		

Step 2. Download the font file into terminal through mini USB port.

1. Select “Download Custom Font” option.

2. Click this button.


3. Select “dzk files” option.

4. Choose the Font file. (.dzk format file)

5. Select the storage position of the font file.

Note: The custom font file only can be stored into 16 font libraries which is from 0x00 to 0x0E.

6. Click “Download” button.

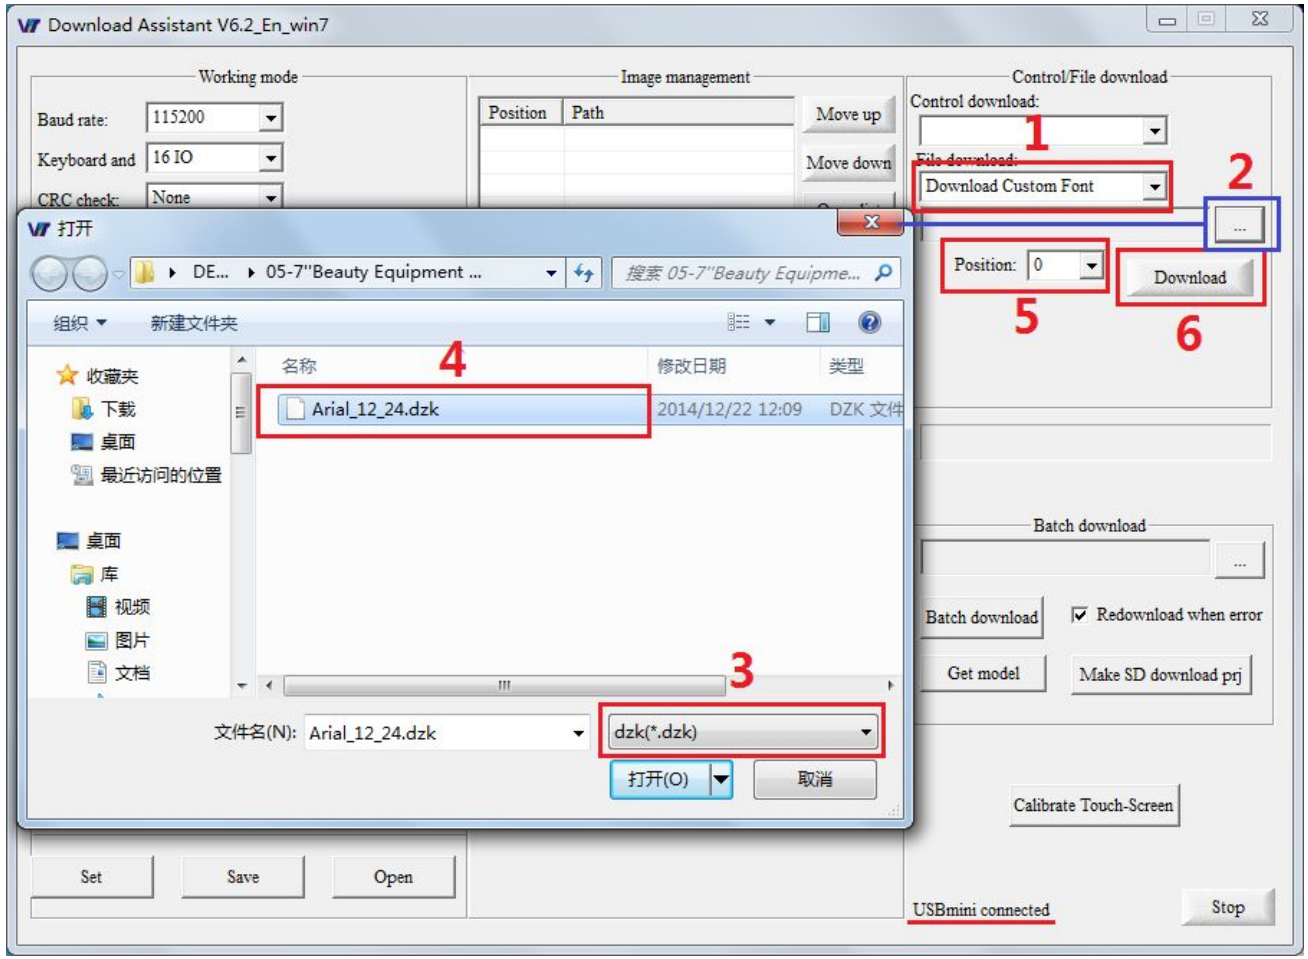

Step 3. Display the Character.

1. Select “Custom Font” option.

2. Define the coordinate.

3. Lib_ID:

The font library number.

For example: Store a font file in the 00 position, the Lib_ID is 00.

4. C_Mode:

If you want to display the Fcolour & Bcolour,
the C_Mode is 197. (HEX code: 0xC5)
If you only want to display Fcolour, not Bcolour, the C_Mode is 133.
(HEX code: 0x85)

5. C_dots:

The Dot Matrix Font code.


For example: The C_dots of 12x24 Font is 0x03.

6. Select the Fcolour & Bcolour.

7. Write some Characters

8. Click “Send” Button

Note: Please according to 0x98 command.

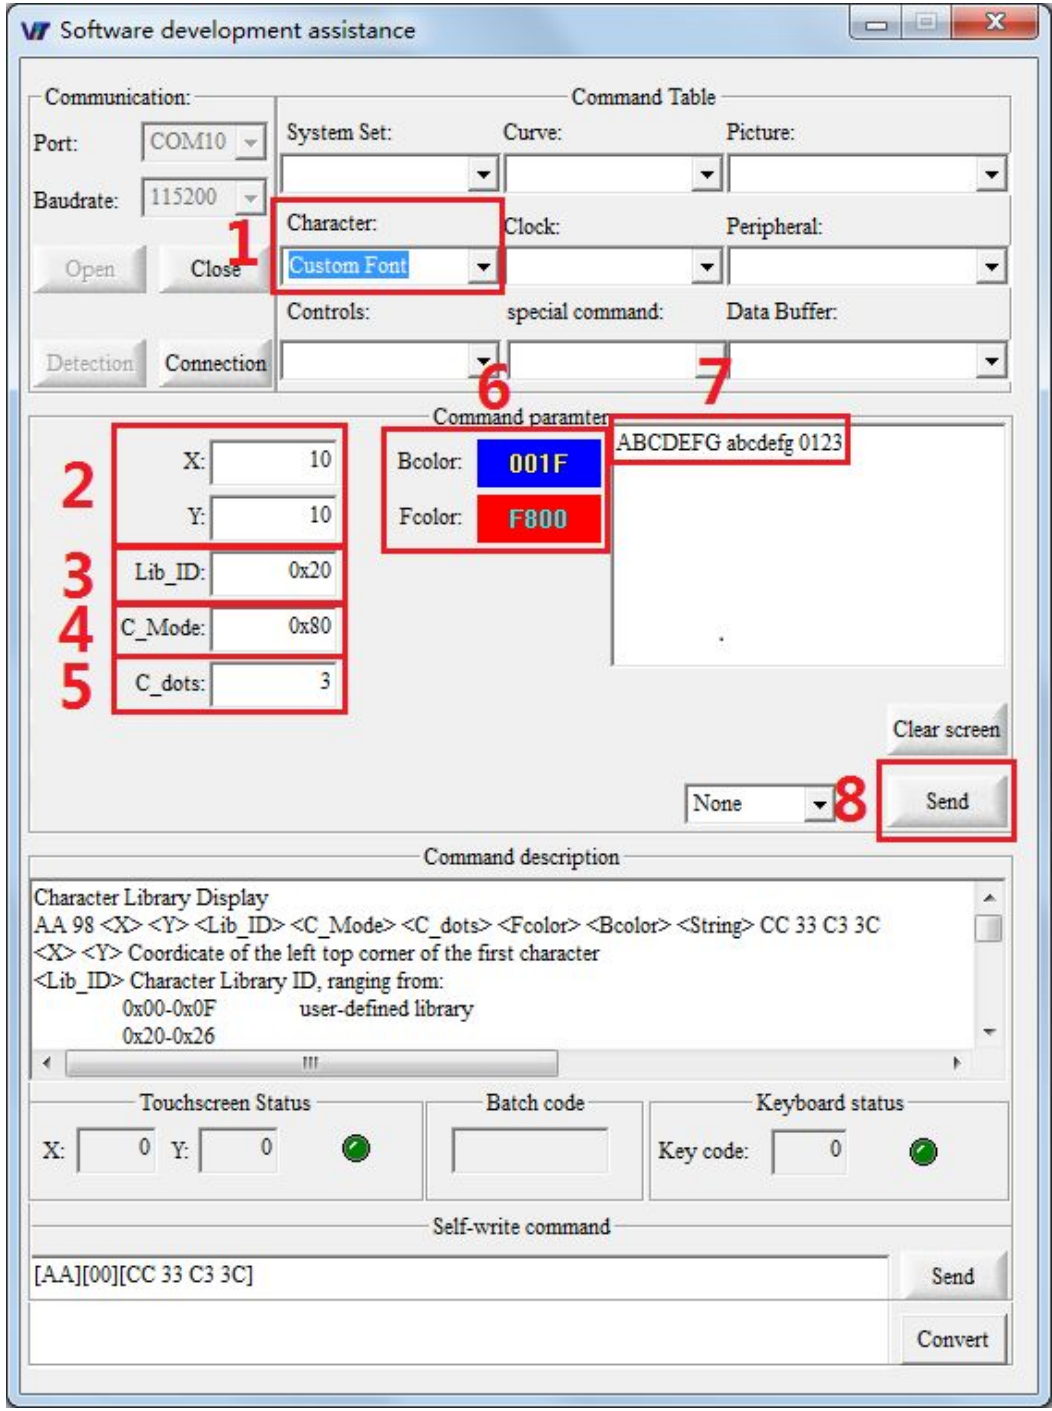

Should you have any technical questions, please feel free to contact us.