


Step 1: Carcass base: sides + bottom panel + kick rail + rear plinth rail (cam-lock + dowels)

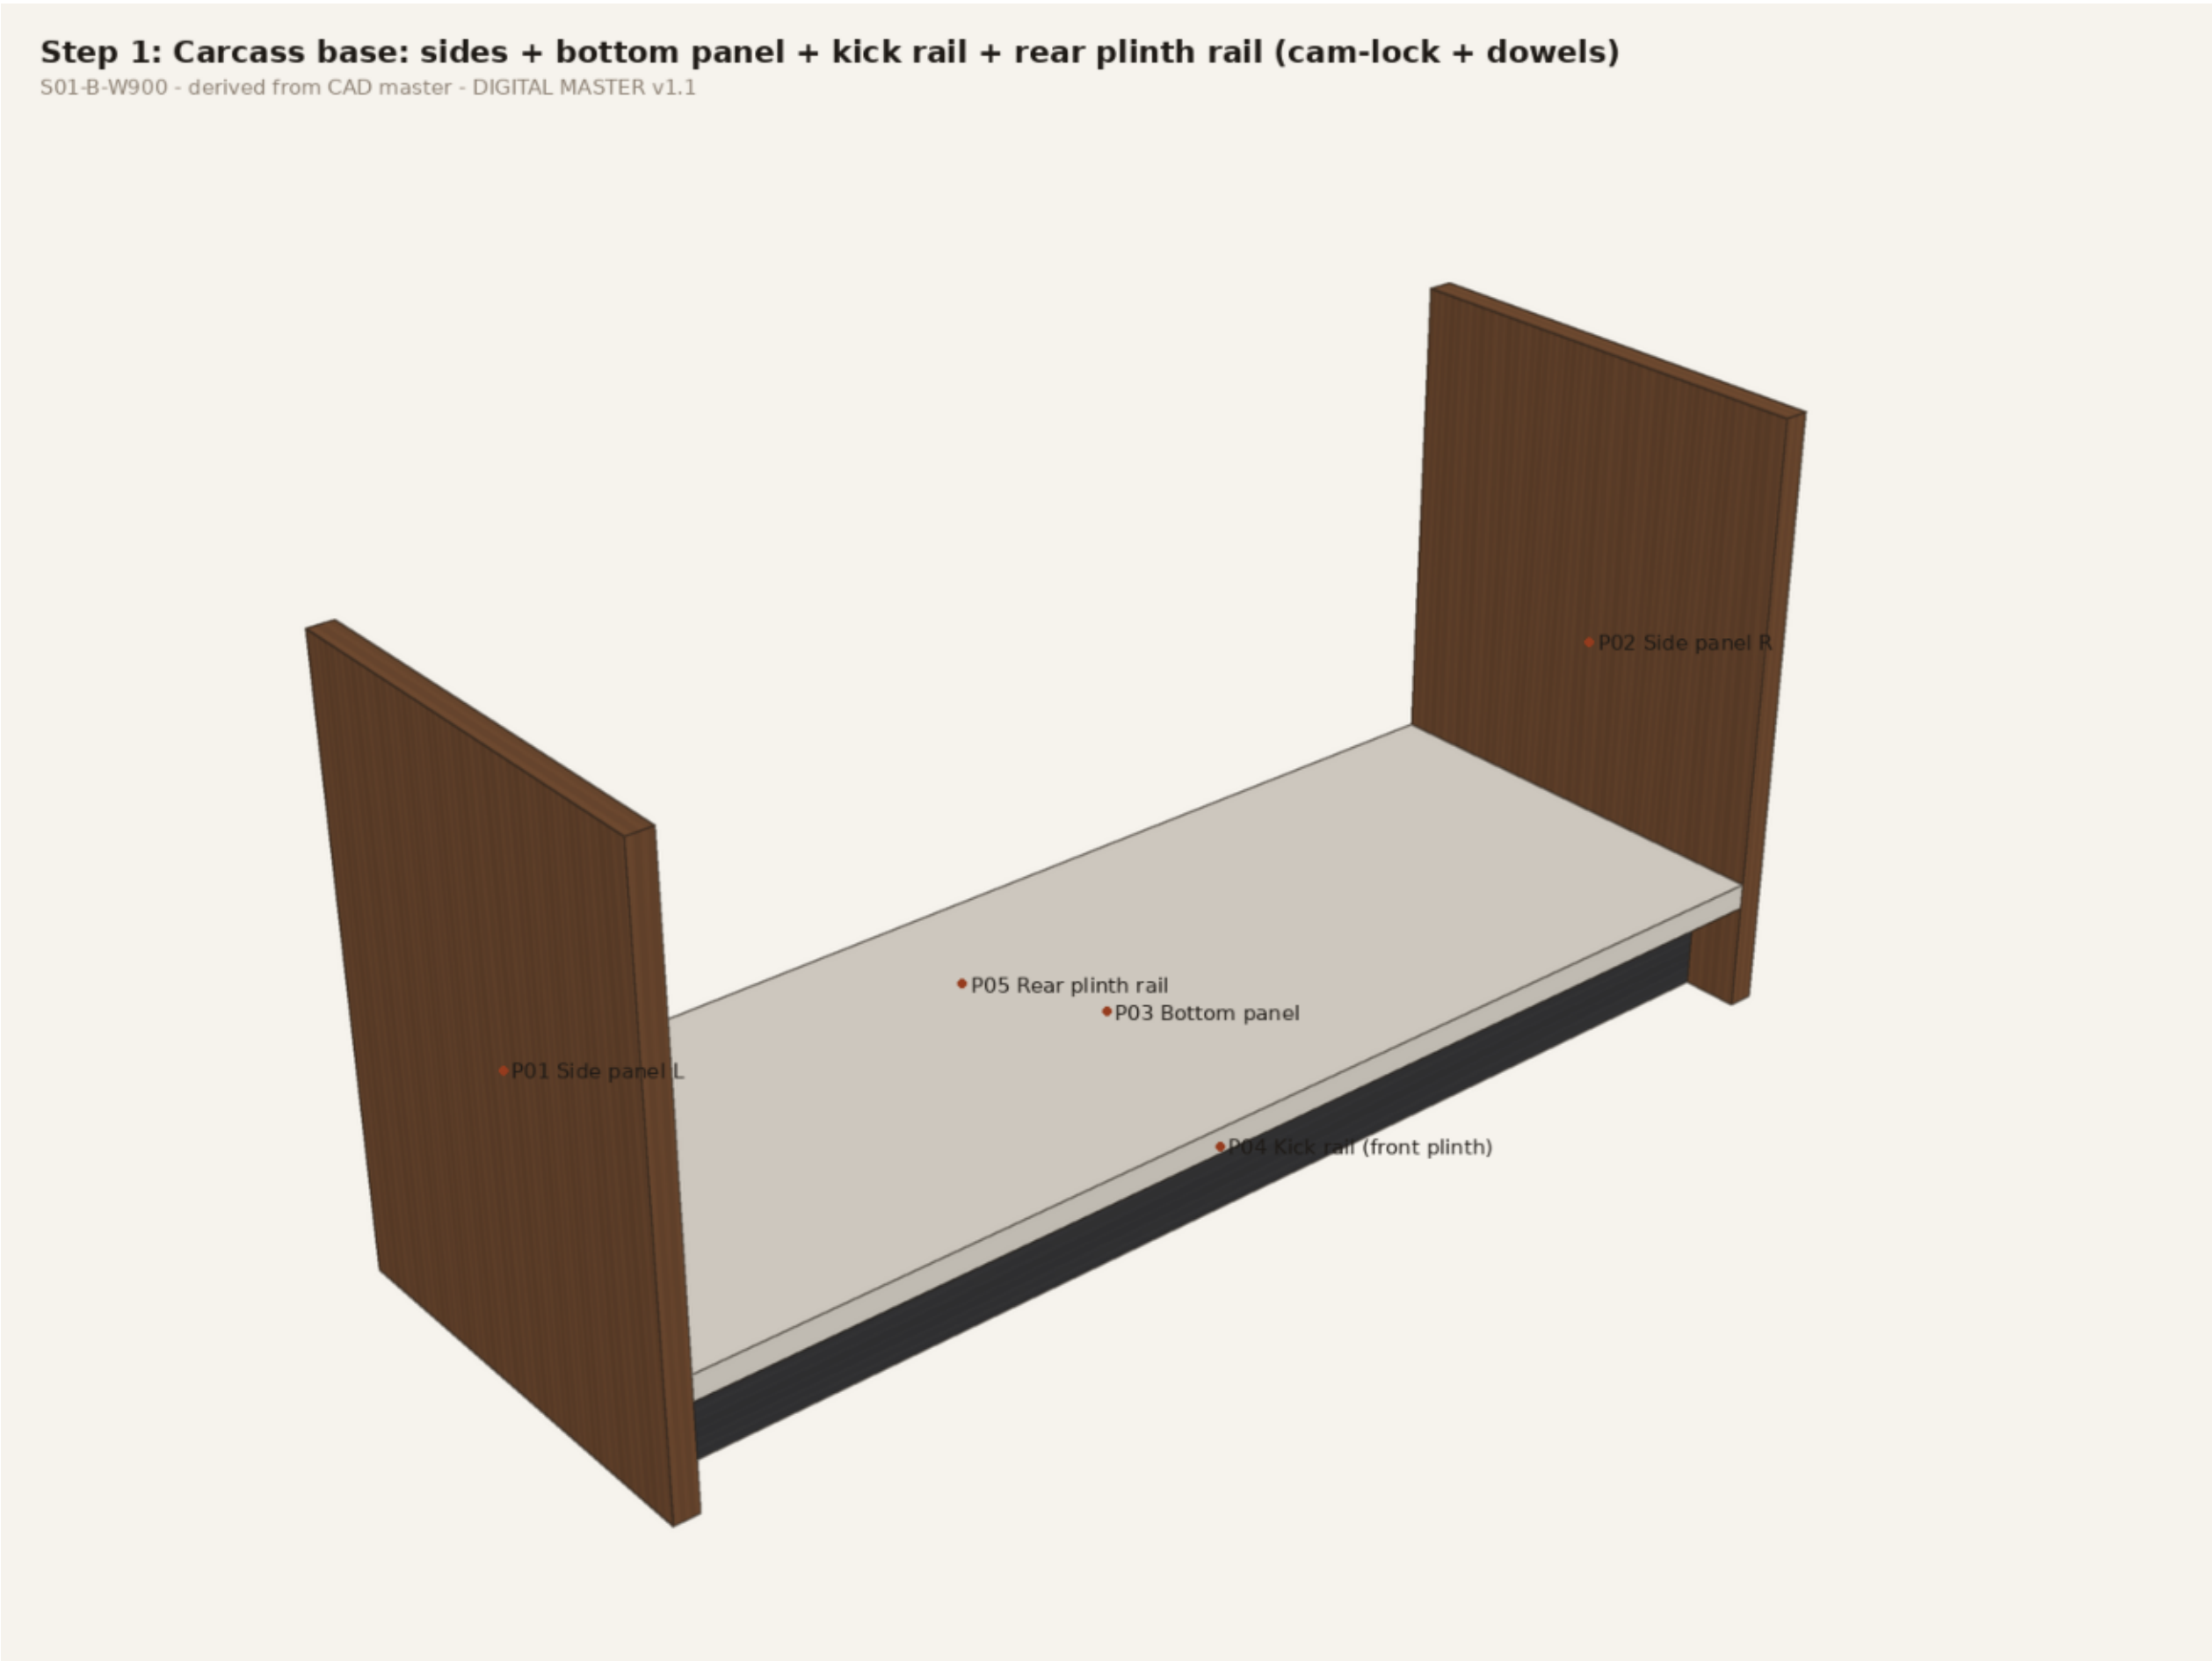


ALTERCRAFT | S01 SHOE BENCH | ASSEMBLY SEQUENCE

Variant B | W 900 x D 350 x H 450 mm | board 18 mm PLPB | back 6 mm | finish WALNUT_BEIGE | units mm | scale: fit to sheet (do not scale)

DIGITAL MASTER v1.1 - NOT RELEASED FOR PRODUCTION. Structure, fasteners, tolerances and hardware boring require fabrication validation.

Step 2: Insert partition(s) onto bottom panel

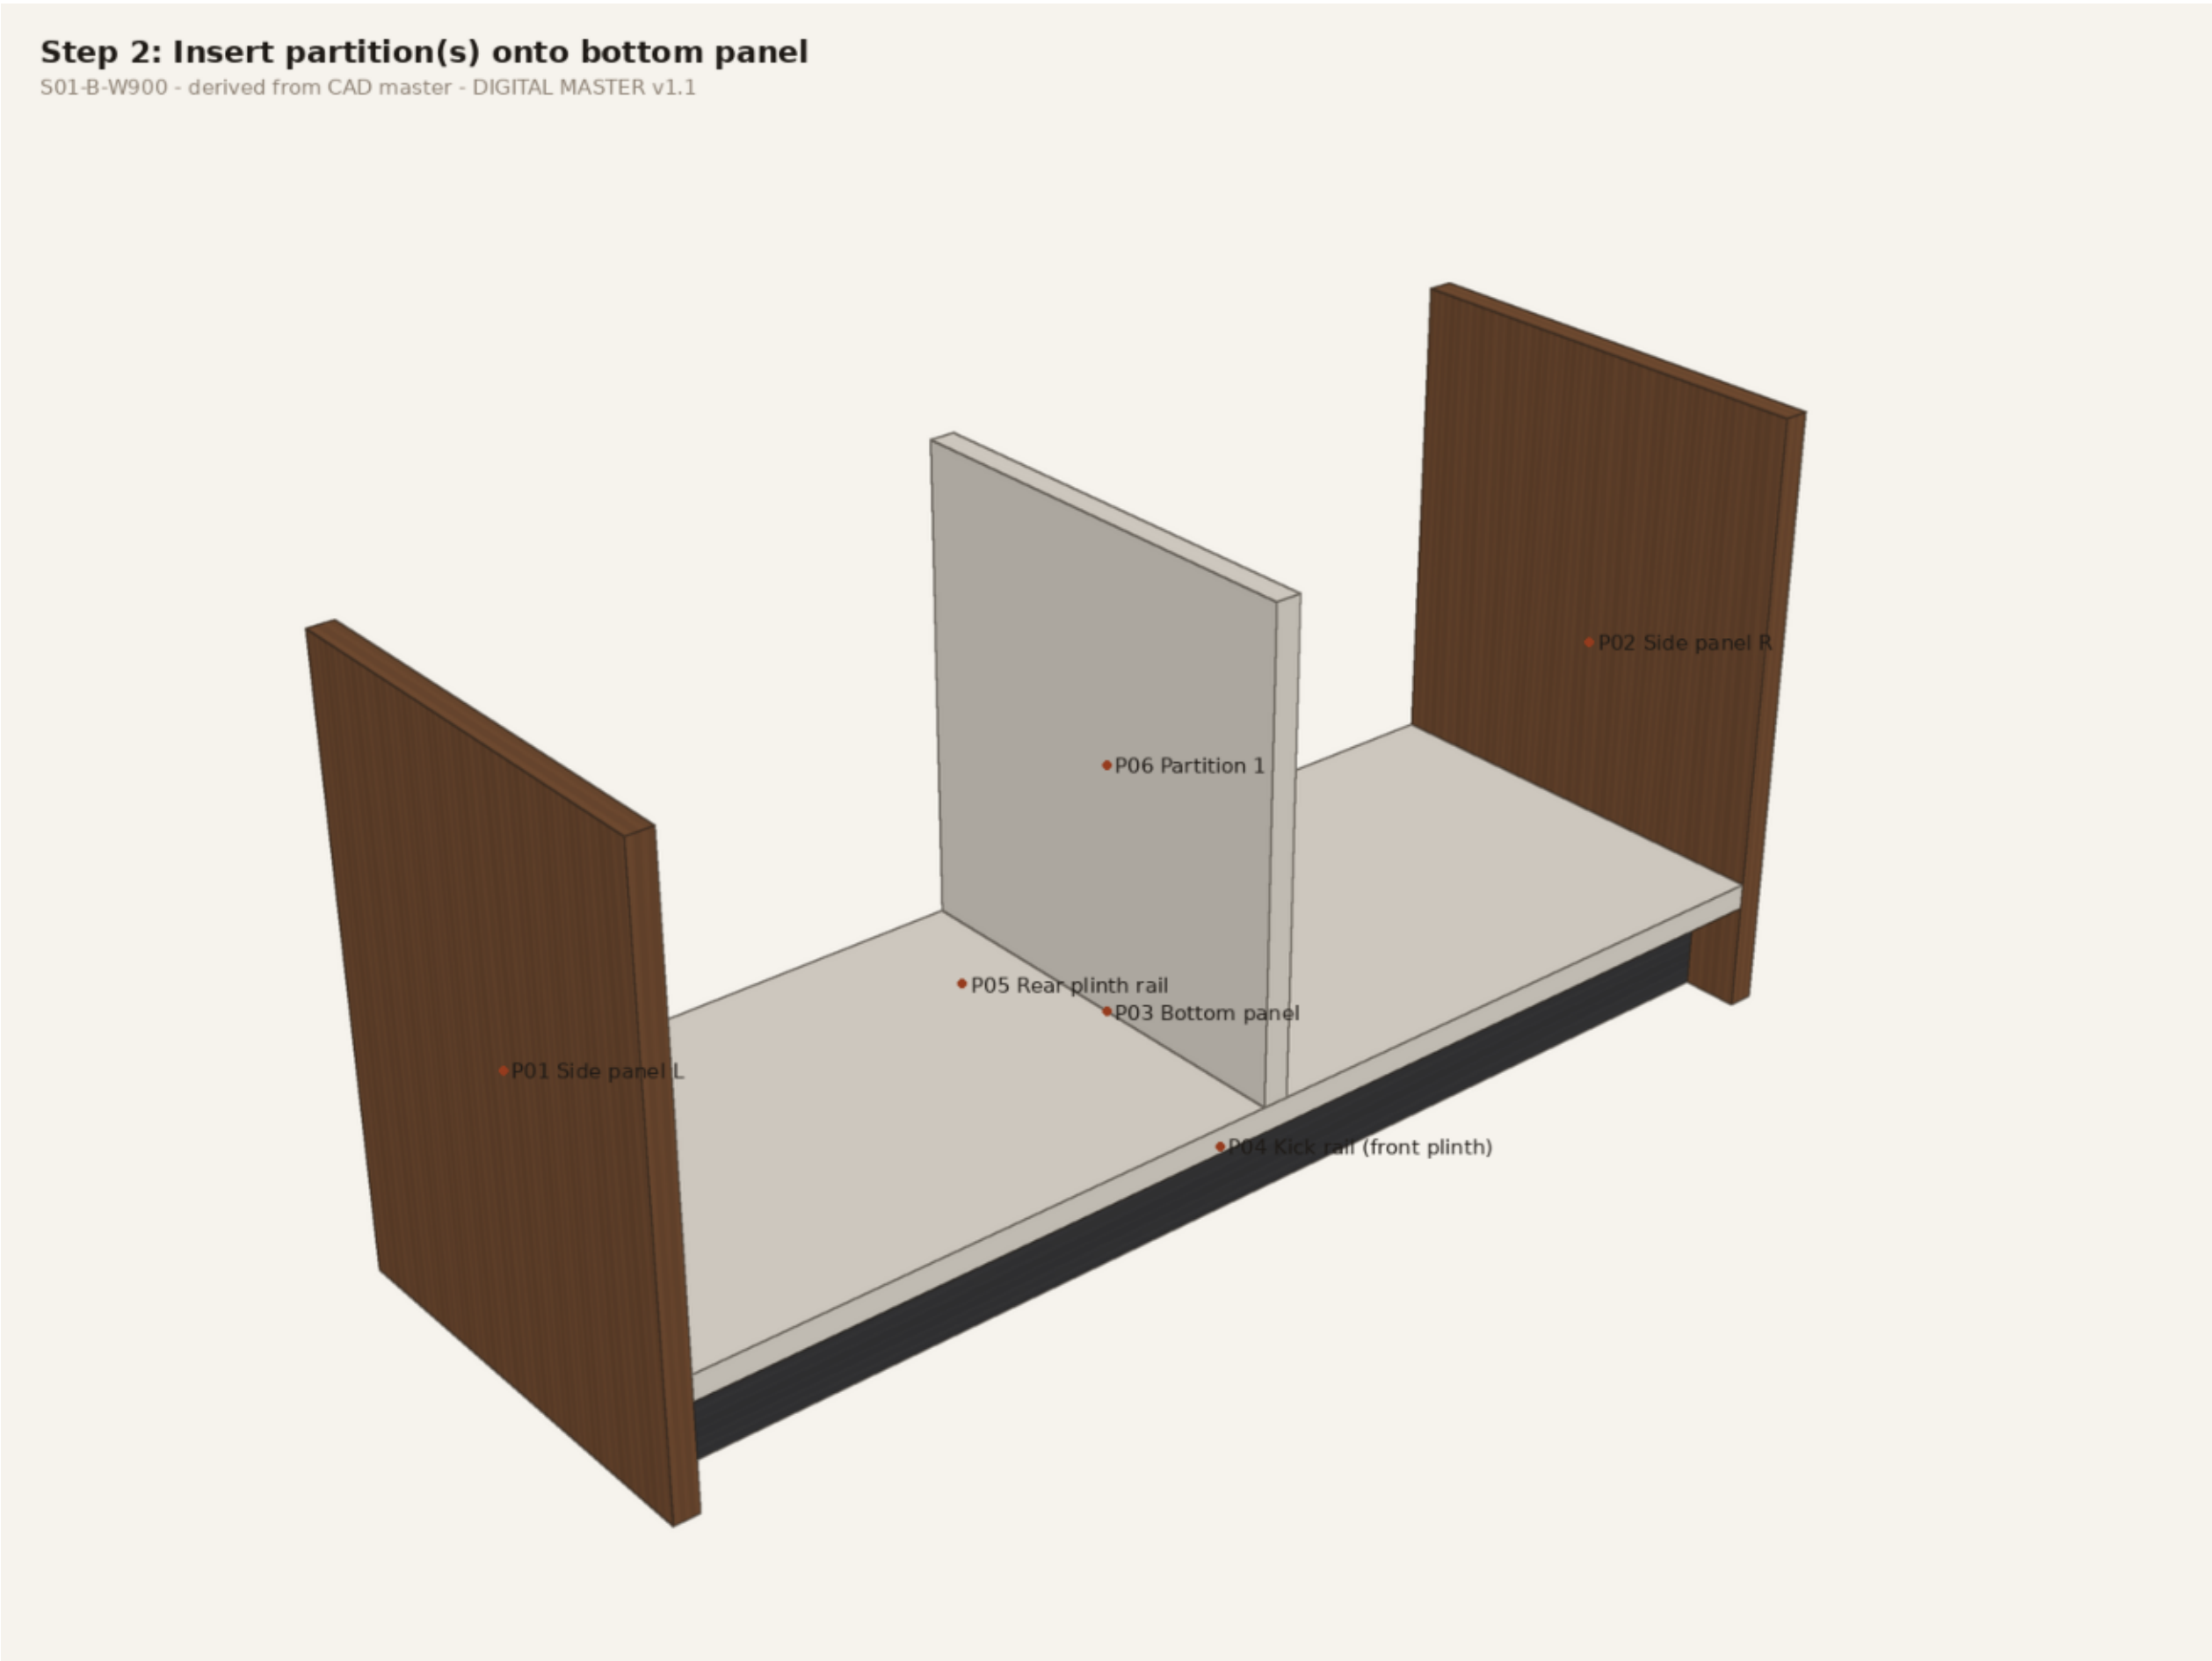

ALTERCRAFT | S01 SHOE BENCH | ASSEMBLY SEQUENCE


Variant B | W 900 x D 350 x H 450 mm | board 18 mm PLPB | back 6 mm | finish WALNUT_BEIGE | units mm | scale: fit to sheet (do not scale)

DIGITAL MASTER v1.1 - NOT RELEASED FOR PRODUCTION. Structure, fasteners, tolerances and hardware boring require fabrication validation.

Step 3: Fit seat top onto sides/partitions; square carcass and fix back panel

Step 3: Fit seat top onto sides/partitions; square carcass and fix back panel

S01-B-W900 - derived from CAD master - DIGITAL MASTER v1.1

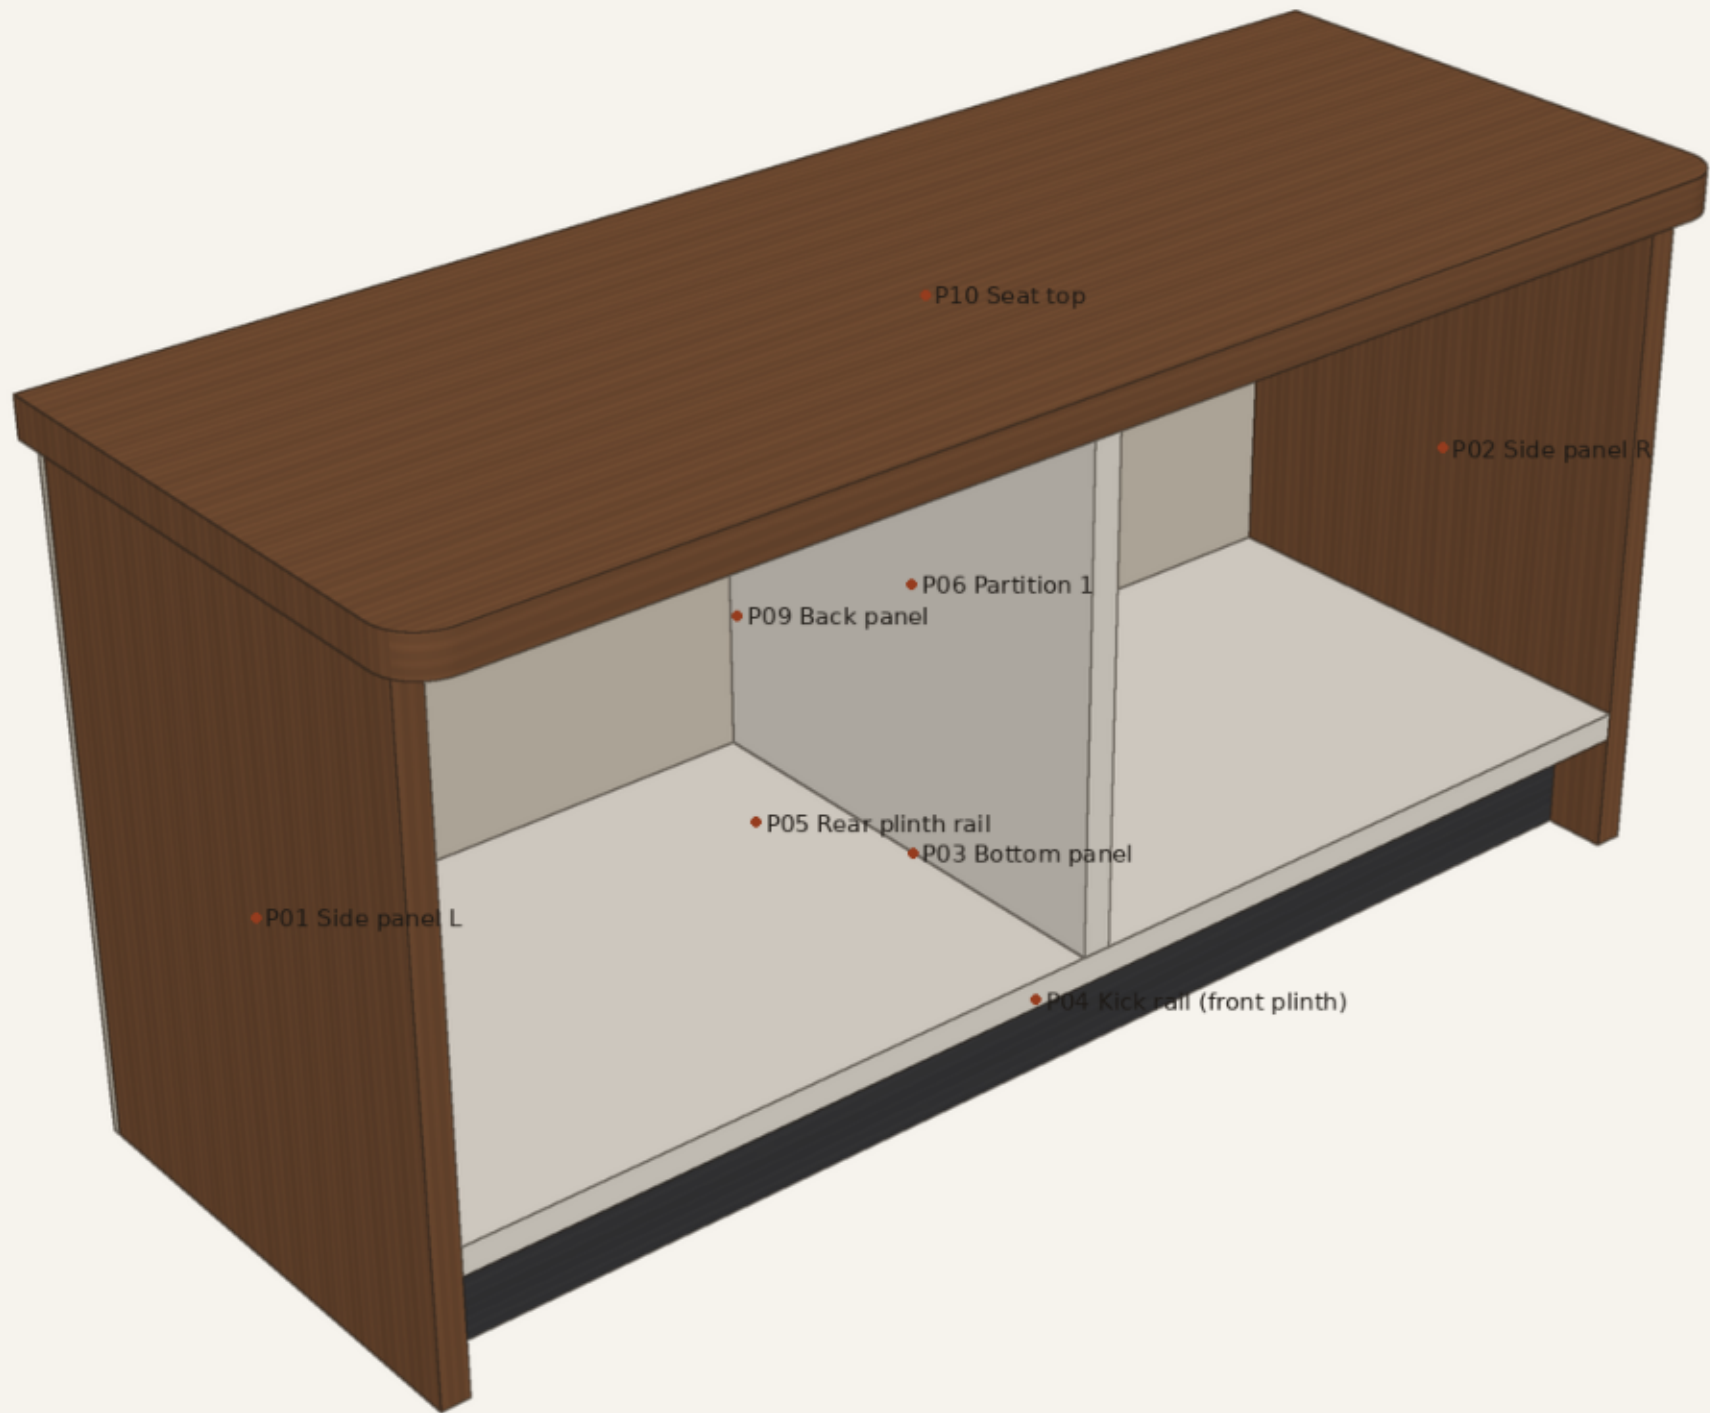

ALTERCRAFT | S01 SHOE BENCH | ASSEMBLY SEQUENCE


Variant B | W 900 x D 350 x H 450 mm | board 18 mm PLPB | back 6 mm | finish WALNUT_BEIGE | units mm | scale: fit to sheet (do not scale)

DIGITAL MASTER v1.1 - NOT RELEASED FOR PRODUCTION. Structure, fasteners, tolerances and hardware boring require fabrication validation.

Step 4: Insert shelf pins and loose shelves

Step 4: Insert shelf pins and loose shelves

S01-B-W900 - derived from CAD master - DIGITAL MASTER v1.1

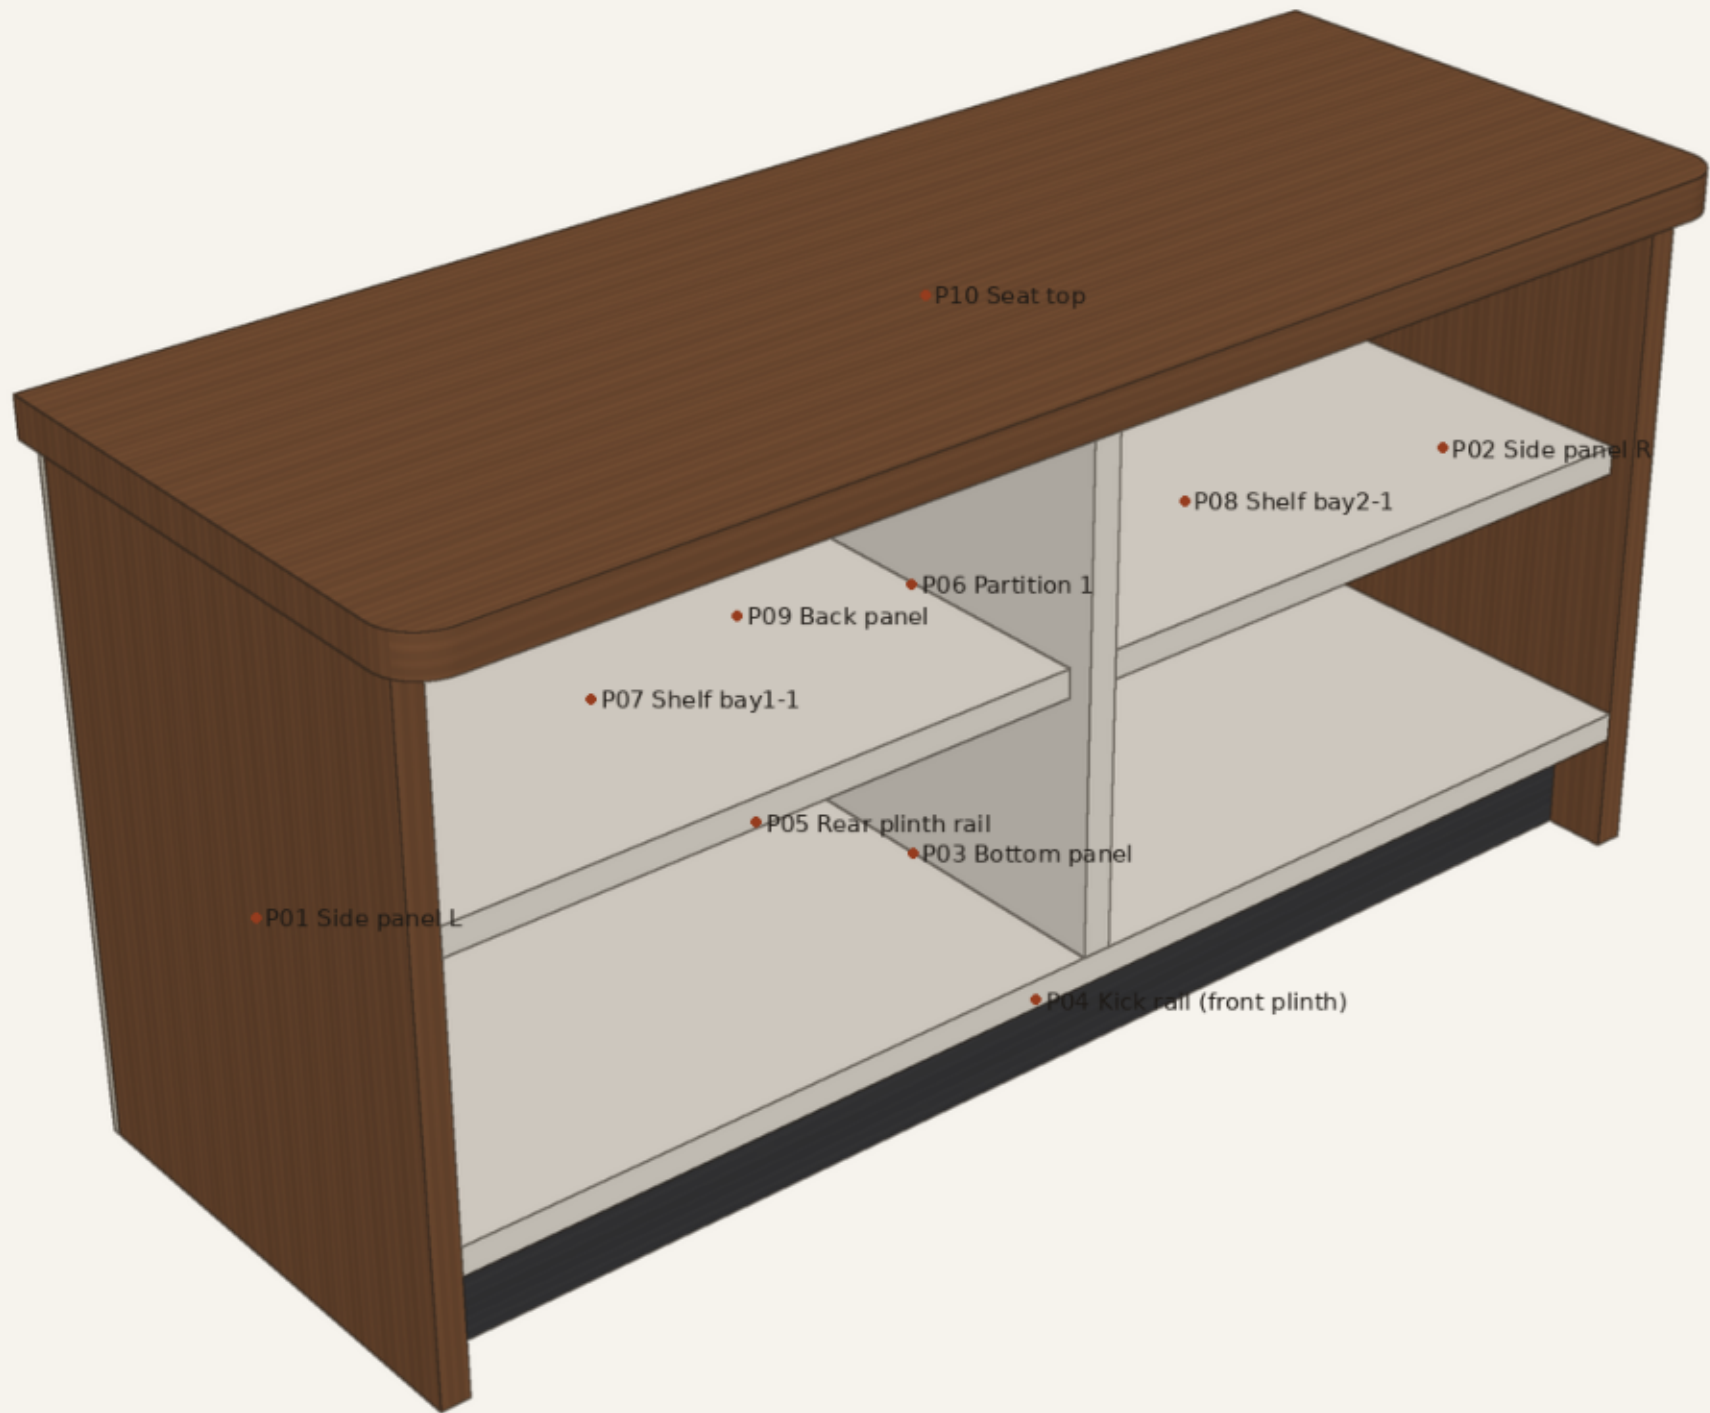


ALTERCRAFT | S01 SHOE BENCH | ASSEMBLY SEQUENCE

Variant B | W 900 x D 350 x H 450 mm | board 18 mm PLPB | back 6 mm | finish WALNUT_BEIGE | units mm | scale: fit to sheet (do not scale)

DIGITAL MASTER v1.1 - NOT RELEASED FOR PRODUCTION. Structure, fasteners, tolerances and hardware boring require fabrication validation.

Step 6: Hang doors, fit push latches, adjust reveals to 3 mm

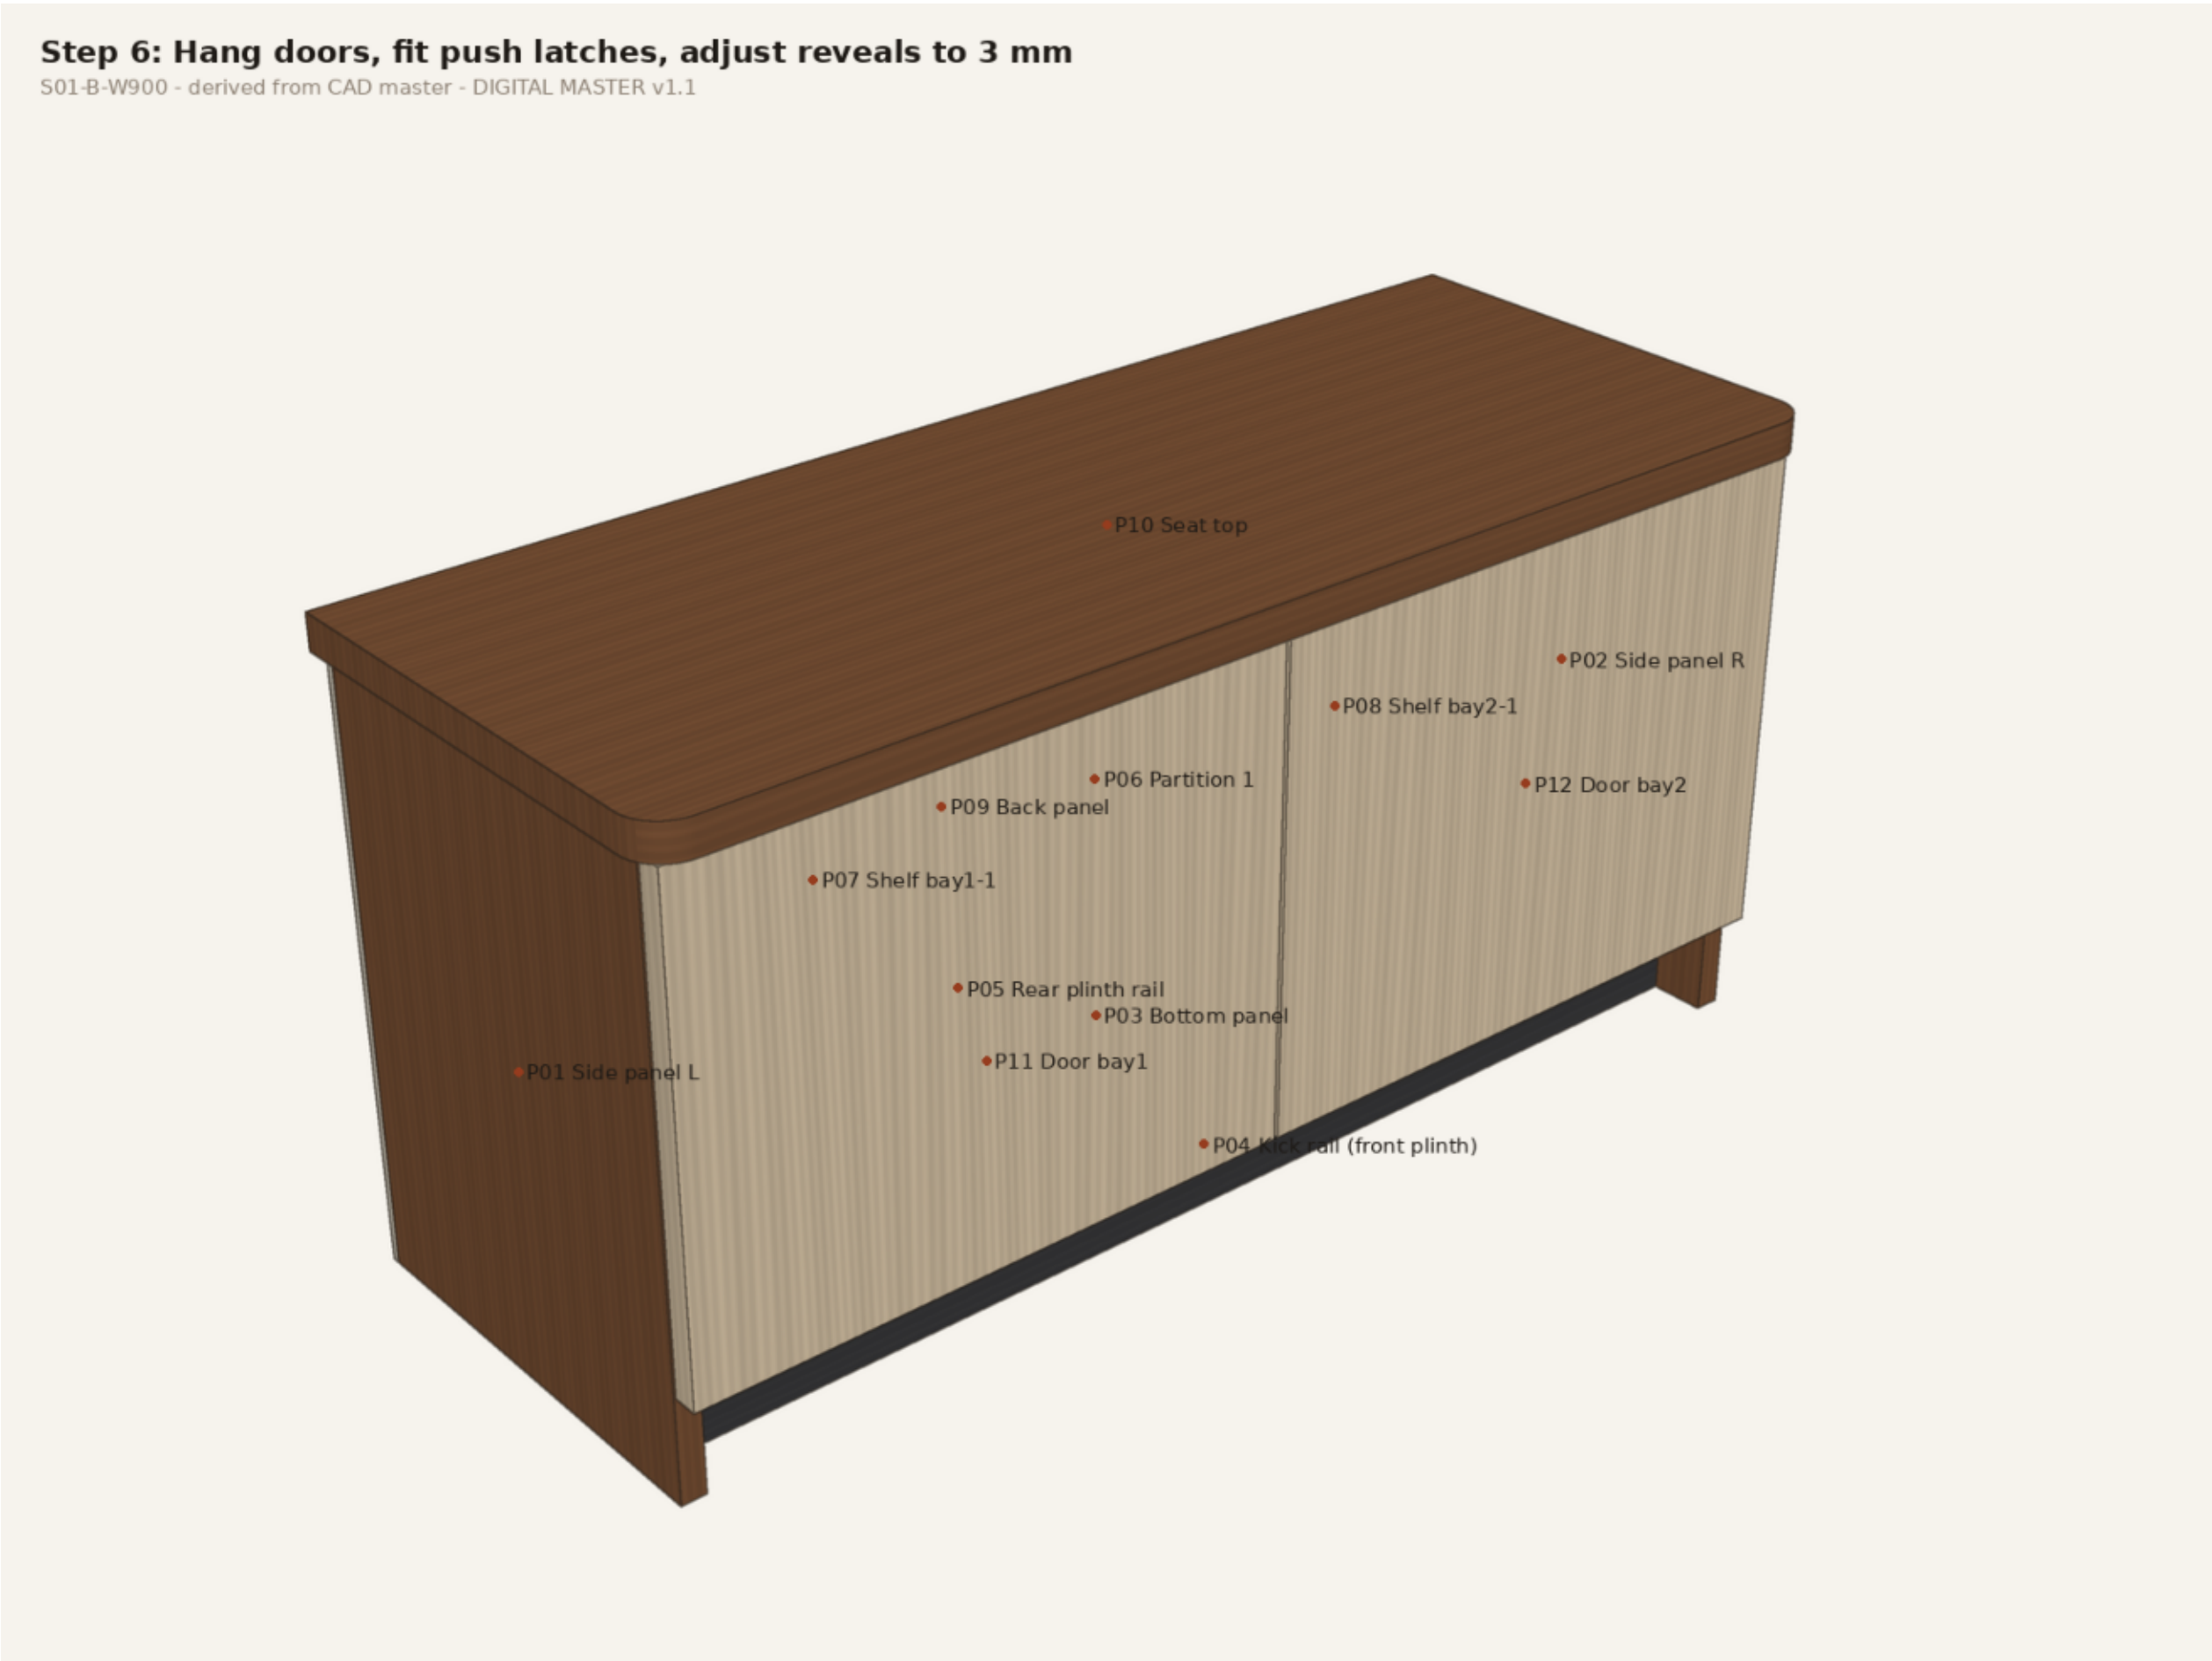


ALTERCRAFT | S01 SHOE BENCH | ASSEMBLY SEQUENCE

Variant B | W 900 x D 350 x H 450 mm | board 18 mm PLPB | back 6 mm | finish WALNUT_BEIGE | units mm | scale: fit to sheet (do not scale)

DIGITAL MASTER v1.1 - NOT RELEASED FOR PRODUCTION. Structure, fasteners, tolerances and hardware boring require fabrication validation.

Step 7: Fit LED profiles, driver and sensors; route cable through back-panel grommet

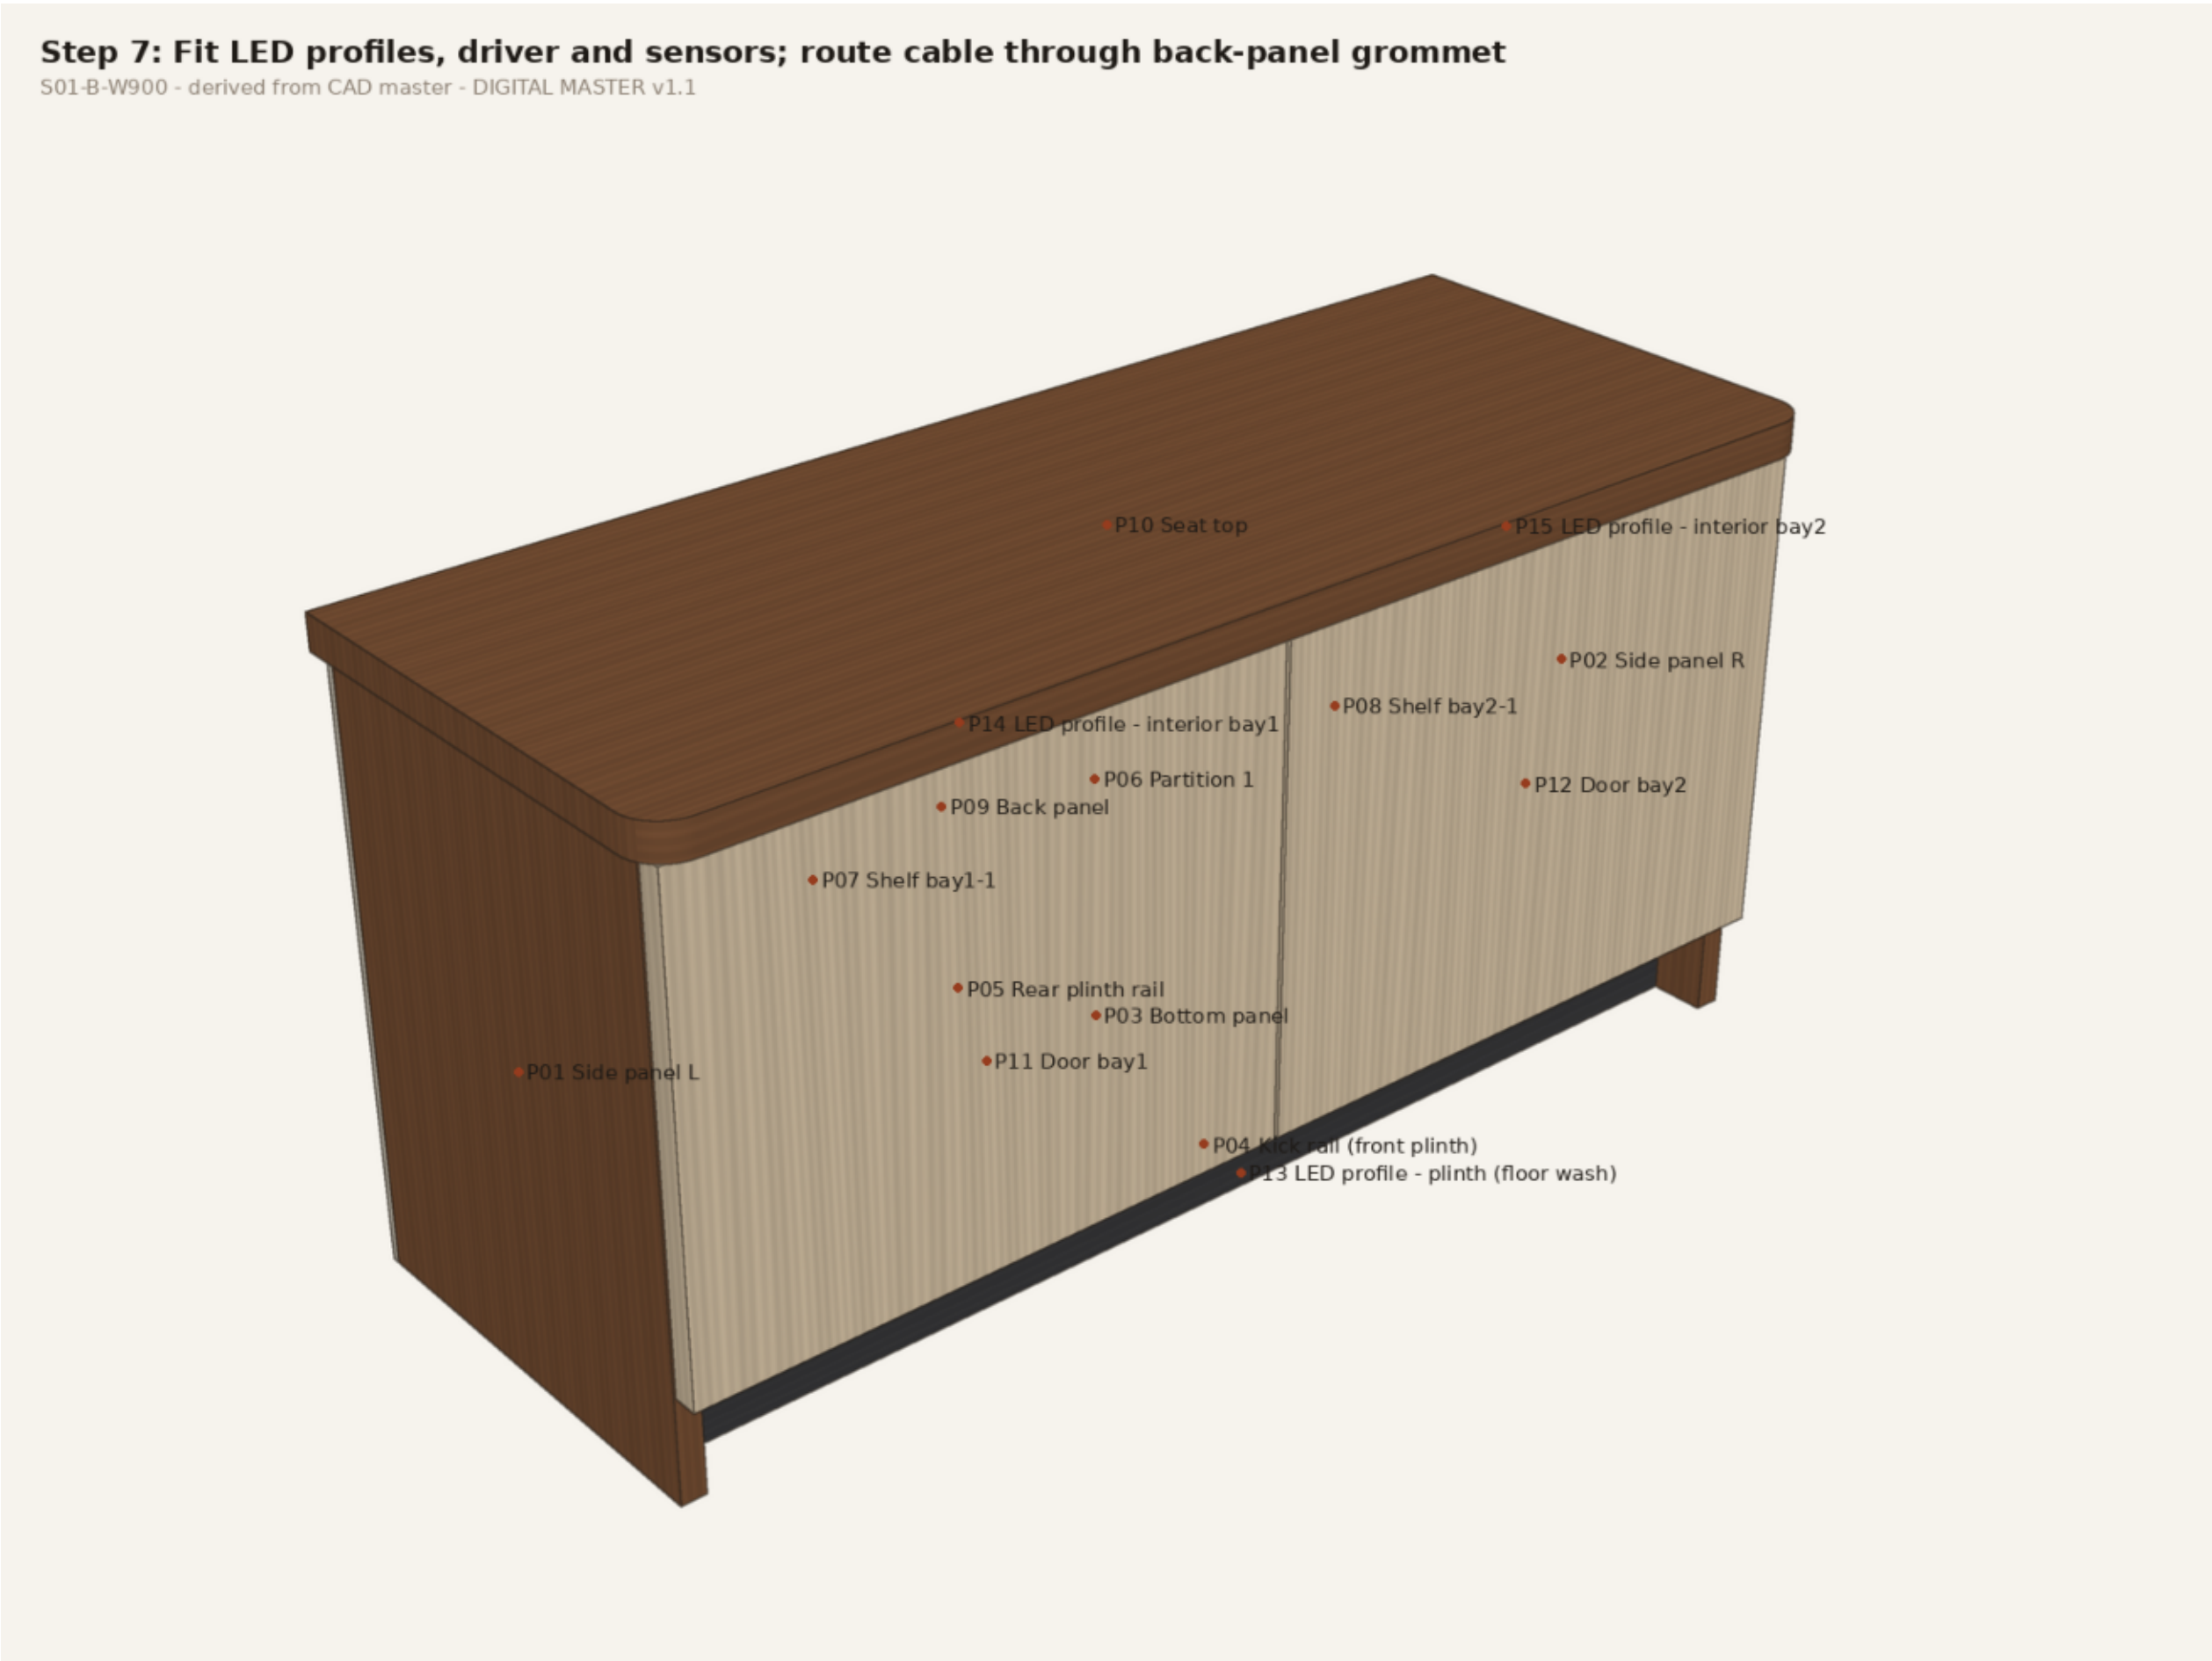

ALTERCRAFT | S01 SHOE BENCH | ASSEMBLY SEQUENCE

Variant B | W 900 x D 350 x H 450 mm | board 18 mm PLPB | back 6 mm | finish WALNUT_BEIGE | units mm | scale: fit to sheet (do not scale)

DIGITAL MASTER v1.1 - NOT RELEASED FOR PRODUCTION. Structure, fasteners, tolerances and hardware boring require fabrication validation.