



Cisco Catalyst SD-WAN Portal Configuration Guide

First Published: 2022-12-01

Last Modified: 2025-11-06

Americas Headquarters

Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA
<http://www.cisco.com>
Tel: 408 526-4000
800 553-NETS (6387)
Fax: 408 527-0883

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

All printed copies and duplicate soft copies of this document are considered uncontrolled. See the current online version for the latest version.

Cisco has more than 200 offices worldwide. Addresses and phone numbers are listed on the Cisco website at www.cisco.com/go/offices.

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: <https://www.cisco.com/c/en/us/about/legal/trademarks.html>. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1721R)

© 2023–2025 Cisco Systems, Inc. All rights reserved.



CONTENTS

CHAPTER 1	Read Me First	1
CHAPTER 2	Cisco Catalyst SD-WAN Portal Feature History	3
	Cisco Catalyst SD-WAN Portal Feature History	3
CHAPTER 3	Cisco Catalyst SD-WAN Portal	7
	Overview of the Cisco Catalyst SD-WAN Portal	7
	Prerequisites for the Cisco Catalyst SD-WAN Portal	10
	Benefits of the Cisco Catalyst SD-WAN Portal	10
	Smart Accounts and Virtual Accounts	10
CHAPTER 4	Access the Cisco Catalyst SD-WAN Portal	13
	Workflow for Smart Account and Virtual Accounts for provisioning control components	13
	Create a Virtual Account associated with your Smart Account	14
	Workflow for certified overlays	15
	Access the Cisco Catalyst SD-WAN Portal for the first time	15
	Log in to the Cisco Catalyst SD-WAN Portal	16
	Configure additional MFA options or update an existing MFA option	16
CHAPTER 5	Configure an Identity Provider for the Cisco Catalyst SD-WAN Portal	17
	Configure an identity provider for the Cisco Catalyst SD-WAN Portal	17
CHAPTER 6	Manage Role-Based Access	19
	Configure Cisco Catalyst SD-WAN Portal roles for IdP users	19
	Create additional roles	19

CHAPTER 7**Manage fabrics 21**

- Create a Cisco SD-WAN Cloud-Pro fabric 21
- Configure advanced options for a Cisco SD-WAN Cloud-Pro fabric 25
- Delete a fabric 29
- Specify the allowed list of IP addresses for managing control component access 29
- Create Predefined Inbound Rules 30
- Create additional fabrics 31

CHAPTER 8**Use Cisco Catalyst 8000V as a Cloud Gateway for a fabric 33**

- Information about Cisco Catalyst 8000V as a cloud gateway for a fabric 33
- Use cases for Cisco Catalyst 8000V as a cloud gateway for a fabric 34
- Prerequisites for Cisco Catalyst 8000V as a cloud gateway for a fabric 34
- Restrictions for Cisco Catalyst 8000V as a cloud gateway for a fabric 34
- Configure Cisco Catalyst 8000V as a cloud gateway for a fabric 34

CHAPTER 9**Monitor overlay networks 39**

- Monitor control components and devices in fabrics 39
- View fabric and control component details 39
- View change window notifications 40

CHAPTER 10**Manage account settings 43**

- Information about predefined inbound rules 43
- Benefits of predefined inbound rules 43
- Manage predefined inbound rules 44

CHAPTER 11**Configure certification compliance 47**

- Cisco Catalyst SD-WAN compliance and certification 47
- Benefits of a certified environment 48
- Enable compliance with industry certifications for a new fabric 48
- Enable compliance with industry certifications for an existing fabric 49
- View certification compliance 49

CHAPTER 12	Configuring system snapshots	51
	Information about system snapshots	51
	Take an on-demand snapshot	52
	View snapshots	53

CHAPTER 13	Configure webhooks	57
	Information about webhooks	57
	Configure a webhook	57
	Send a webhook notification	58

CHAPTER 14	Configuration Conversion Tool	59
	Configuration Conversion Tool feature history	59
	Information about the Configuration Conversion Tool	59
	Restrictions for the Configuration Conversion Tool	60
	Prerequisites for the Configuration Conversion Tool	60
	Use the Configuration Conversion Tool	60

CHAPTER 15	Frequently Asked Questions	63
	Frequently Asked Questions	63
	How to	64
	Troubleshooting	64

CHAPTER 16	Troubleshooting the Cisco Catalyst SD-WAN Portal	67
	Update an expired IdP certificate	67
	Reset a Misconfigured IdP	67
	Troubleshoot Smart Account issues	68
	Troubleshoot Virtual Account issues	68
	Troubleshoot browser security issues	69



CHAPTER 1

Read Me First



Note

To achieve simplification and consistency, the Cisco SD-WAN solution has been rebranded as Cisco Catalyst SD-WAN. In addition, from Cisco IOS XE SD-WAN Release 17.12.1a and Cisco Catalyst SD-WAN Release 20.12.1, the following component changes are applicable: **Cisco vManage** to **Cisco Catalyst SD-WAN Manager**, **Cisco vAnalytics** to **Cisco Catalyst SD-WAN Analytics**, **Cisco vBond** to **Cisco Catalyst SD-WAN Validator**, **Cisco vSmart** to **Cisco Catalyst SD-WAN Controller**, and **Cisco Controllers** to **Cisco Catalyst SD-WAN Control Components**. See the latest Release Notes for a comprehensive list of all the component brand name changes. While we transition to the new names, some inconsistencies might be present in the documentation set because of a phased approach to the user interface updates of the software product.

Related References

- [Cisco Catalyst SD-WAN Control Components Compatibility Matrix and Server Recommendations](#)
- [Cisco Catalyst SD-WAN Device Compatibility](#)

User Documentation

- [User Documentation for Cisco IOS XE Catalyst SD-WAN Release 17](#)

Communications, Services, and Additional Information

- Sign up for Cisco email newsletters and other communications at: [Cisco Profile Manager](#).
- For information on the latest technical, advanced, and remote services to increase the operational reliability of your network visit [Cisco Services](#).
- To browse and discover secure, validated enterprise-class apps, products, solutions, and services, visit [Cisco Devnet](#).
- To obtain general networking, training, and certification titles from Cisco Press Publishers, visit [Cisco Press](#).
- To find warranty information for a specific product or product family, visit [Cisco Warranty Finder](#).
- To view open and resolved bugs for a release, access the [Cisco Bug Search Tool](#).
- To submit a service request, visit [Cisco Support](#).

Documentation Feedback

To provide feedback about Cisco technical documentation use the feedback form available in the right pane of every online document.



CHAPTER 2

Cisco Catalyst SD-WAN Portal Feature History

- [Cisco Catalyst SD-WAN Portal Feature History, on page 3](#)

Cisco Catalyst SD-WAN Portal Feature History

Table 1: Feature History

Release date	Feature name	Description
October 2025	Automatic email confirmation after Cisco SD-WAN Cloud and Cloud-Pro purchases	After you purchase Cisco SD-WAN Cloud or Cloud-Pro subscriptions, the Cisco Catalyst SD-WAN Portal sends you confirmation emails and guidances for next steps.
October 2025	TAC case hyperlink available when creating fabric	If you need assistance when selecting a fabric type for a new fabric, you can open a TAC case directly from the window.
October 2025	Customer Name field added to fabric overview	You can view and search on the customer name in the Overview page for Cisco SD-WAN Cloud-Pro fabrics.
September 2025	Release Notes and FAQ support links in Resources area	The Resources area for Cisco SD-WAN Cloud-Pro fabrics in the Cisco Catalyst SD-WAN Portal display includes links for Release Notes and FAQ documentation.
August 2025	Enhanced Proof of Concept (POC) workflow	The POC workflow has been improved to simplify onboarding and other POC operations. Note The Cisco Catalyst SD-WAN Portal provides access to both production and POC workflows. If you need to execute a POC project before purchasing a Cisco SD-WAN offering, contact your account team to discuss details.

Release date	Feature name	Description
August 2025	SD-WAN Manager session management and bookmarking	After you successfully log in to Cisco Catalyst SD-WAN Portal and access your fabric for the first time, you can bookmark the SD-WAN Manager URL and then directly access SD-WAN Manager there with your CCO email and password. The Cisco Catalyst SD-WAN Portal and SD-WAN Manager share the same session timer and active or idle status.
August 2025	Display Snapshot Frequency and Max Snapshot in Cisco Catalyst SD-WAN Portal	The Snapshot Frequency and Max Snapshot counts are displayed on the Overlay Details and Snapshot pages.
July 2025	New fabric creation workflow	There is a new workflow for fabric creation. The process is customized for your site needs and automated to improve response time.
June 2025	Improved fabric creation load time	Virtual Accounts are retrieved directly from the Cisco Catalyst SD-WAN Portal database, so they load much faster.
May 2025	Software Release Category field in Create Fabric page	You can choose between Recommended and Early Adopter software release when creating a Cisco SD-WAN Cloud fabric.
April 2025	Improved loading time for Cisco Catalyst SD-WAN Portal	The Cisco Catalyst SD-WAN Portal loading time is significantly improved.
April 2025	Snapshot retention changes	Retention time for a golden snapshot changed from 180 days to 90 days. Retention time for an on-demand snapshot changed from 90 days to 10 days. The number of retained regular snapshots, taken automatically, changed from 10 to 7. Snapshots are retained only in the Primary region.
March 2025	Configuration Conversion Tool	A configuration conversion tool available through the Cisco Catalyst SD-WAN Portal enables you to convert device templates into configuration groups, and traditionally configured policies into policy groups. The policy conversion is considered to operate at a beta level in this release, performing a best-effort conversion. Converting configurations to configuration groups enables all of the benefits of the newer device-agnostic configuration model.

Release date	Feature name	Description
February 2025	Additional network compliance certification support	The Cisco Catalyst SD-WAN solution supports these network compliance certifications: SOC2 Type2, ISO 27001, ISO 27701, ISO 27017, ISO 27018, C5, and ENS These compliance certifications are supported on all long-lived releases.
October 2024	Webhook notification support	Support for sending notifications based on network events in the SD-WAN fabric.
August 2024	Use of any email account for a support ticket	On the Dashboard > Overlays > Details page, you can open a support ticket for the SD-WAN fabric. When opening a support ticket, you can specify any email address for contact information.
August 2024	Fabric details page shows Cisco support case information	In the SD-WAN Portal, the Service Requests section of the Fabric Details page shows Cisco Support cases related to the fabric.



CHAPTER 3

Cisco Catalyst SD-WAN Portal

- [Overview of the Cisco Catalyst SD-WAN Portal, on page 7](#)
- [Prerequisites for the Cisco Catalyst SD-WAN Portal, on page 10](#)
- [Benefits of the Cisco Catalyst SD-WAN Portal, on page 10](#)
- [Smart Accounts and Virtual Accounts, on page 10](#)

Overview of the Cisco Catalyst SD-WAN Portal

The Cisco Catalyst SD-WAN Portal is a cloud-infrastructure automation tool that: which


- is tailored for Cisco Catalyst SD-WAN,
- provides a quick way to provision, monitor, and maintain Cisco Catalyst SD-WAN control components on public cloud providers, and
- supports user authentication and granular access management for high security.

You can provision these control components using the Cisco Catalyst SD-WAN Portal:

- Cisco SD-WAN Manager
- Cisco SD-WAN Validator
- Cisco SD-WAN Controller
- Optional virtual devices such as the Cisco Catalyst 8000v

Benefits and Functions

Figure 1: Cisco Catalyst SD-WAN Portal Benefits and Operations

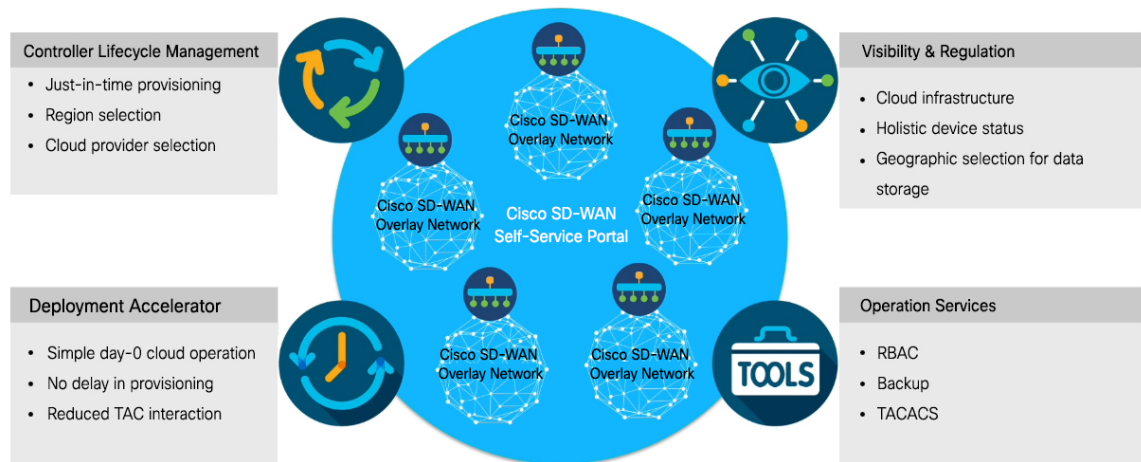

The Cisco Catalyst SD-WAN Portal enforces multi-factor authentication (MFA) by default for the portal access. You can configure the Cisco Catalyst SD-WAN Portal to use an identity provider (IdP) that lets you connect any user with any application on any device, using single sign-on (SSO). The Cisco Catalyst SD-WAN Portal is modularized into separate web servers, backend servers, and database clusters to achieve software scalability.

Cisco vMonitor collects data on the cloud infrastructure and generates health notifications about the overlay infrastructure for the customer in a common database. The Cisco vOrchestrator web server is also accessible for advanced features and existing infrastructure-tier customizations, if any, that you use. The Cisco Catalyst SD-WAN Portal uses Cisco vMonitor and Cisco vOrchestrator by way of API calls to orchestrate actions and monitor the overlay.




Note Cisco vMonitor and Cisco vOrchestrator can be accessed by Cisco FedOps only.

All three applications use a common global database that includes multiple read replicas for high availability and disaster recovery. The applications connect to the database using either Transport Layer Security (TLS) or Secure Sockets Layer (SSL).

Architecture (Government)

Figure 2: Cisco Catalyst SD-WAN Portal Architecture

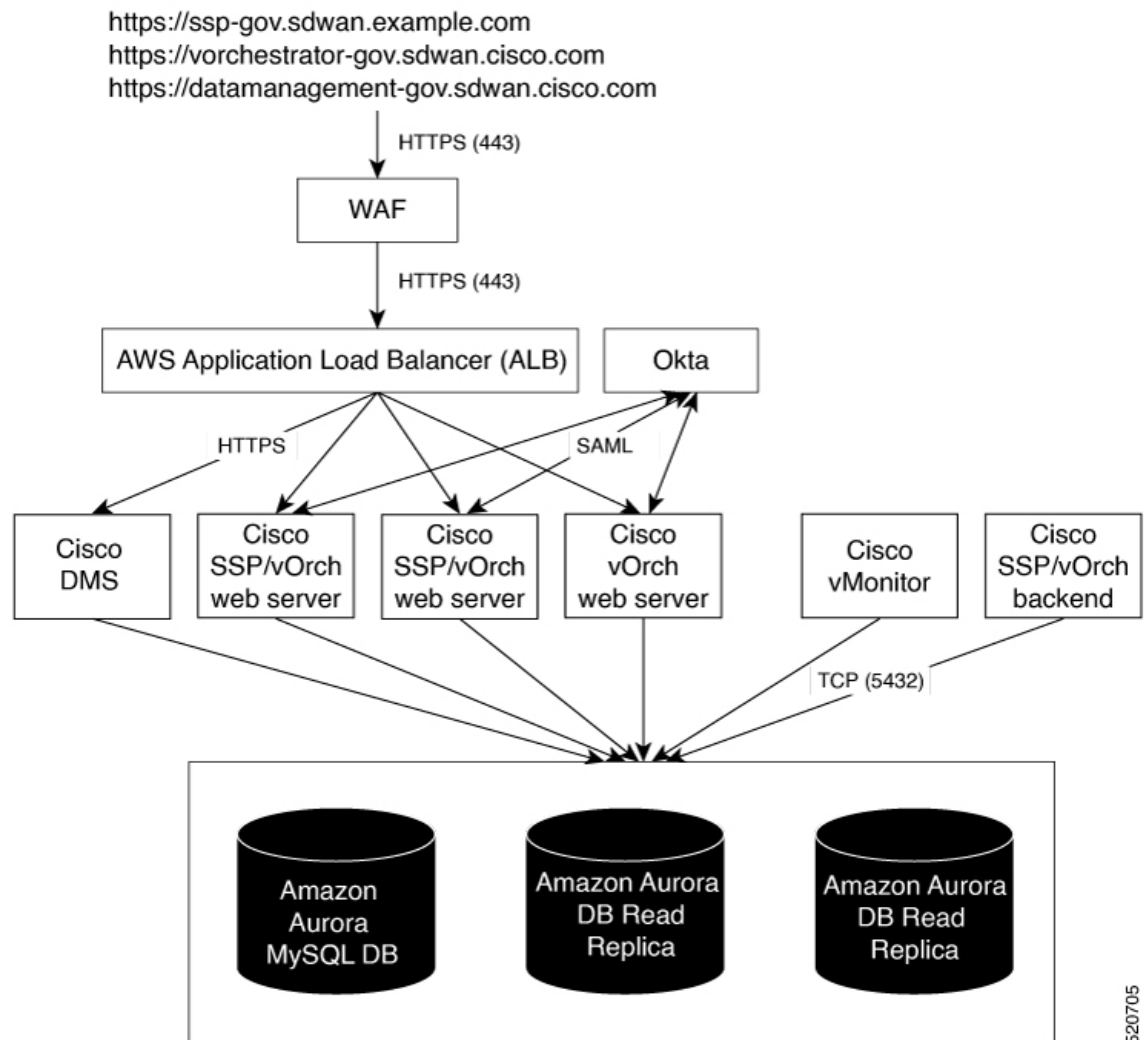

520705

Audience

This document is intended for customers such as service providers, partners, and other end users.

There are two types of users for Cisco Catalyst SD-WAN Portal for Government:

- Customers, such as service providers, partners, and other end users.
- Cisco Catalyst SD-WAN Federal Operations (FedOps): A Cisco team that maintains and monitors Cisco Catalyst SD-WAN for Government.

Prerequisites for the Cisco Catalyst SD-WAN Portal

- Purchase a Cisco DNA subscription from the [Commerce Workspace](#).
- Create or open an existing Smart Account.
- Create a Virtual Account that is associated with your Smart Account.
- Add the device serial numbers on the Plug and Play Connect (PnP) portal.

For more information, see the [Network Plug and Play Connect Capability Overview](#).

Benefits of the Cisco Catalyst SD-WAN Portal

The Cisco Catalyst SD-WAN Portal:

- enables visibility into critical statistics like instance CPU utilization,
- provides a centralized dashboard for real-time monitoring of your Cisco Catalyst SD-WAN overlay networks,
- includes a wizard-driven interface that helps you easily navigate to tasks within the workflow,
- lets you select cloud providers and specify geographic locations for primary and secondary data storage,
- supports secure login using an identity provider (IdP) for single sign-on (SSO) with multi-factor authentication (MFA),
- supports role-based access control (RBAC),
- and supports provisioning new overlay networks with custom subnets that enable on-premises TACACS+ server connections.

Smart Accounts and Virtual Accounts

For more information, see [Workflow for Smart Account and Virtual Accounts for Provisioning the Controllers](#).

Smart Accounts

Smart Accounts are centralized, cloud-based data repositories that:

- contain the software licenses purchased by an organization,
- serve as a central hub for license management, and
- enable real-time enterprise-wide license management and compliance.

Use the Smart Account as a central repository to view software assets you have purchased, register and report software use, and manage licenses for your organization.

Using the Cisco Catalyst SD-WAN Portal, the Smart Account administrator can view and manage your control component infrastructure. Management tasks include viewing IP addresses for control components and

changing the control component IP access lists. To restrict access for other users, go to the Manage Smart Account section on [Cisco Software Central](#) and remove those users as Smart Account administrators. Alternatively, use the identity provider (IdP) onboarding feature to grant access to the Cisco Catalyst SD-WAN Portal based on trusted users in the IdP.

Virtual Accounts

Virtual Accounts are subaccounts within your Smart Account that:

- help you organize your Cisco assets in a way that aligns with your business,
- can be set up by department, product, geography, or another designation that suits your business model, and
- allow you to organize and manage your software licenses, devices, and users more granularly.

The system creates a default Virtual Account for you. Create an additional dedicated Virtual Account for Cisco Catalyst SD-WAN fabrics.

For more information, see [Create a Virtual Account Associated with Your Smart Account](#).

To provision a Cisco Catalyst SD-WAN control component, associate a Virtual Account with an offer attribute that is Cisco Catalyst SD-WAN-capable. An Cisco Catalyst SD-WAN-capable attribute is associated with a Virtual Account when ordering your Cisco DNA cloud license.



Note When you order DNA licenses using the enterprise agreement, the system does not automatically associate Virtual Accounts to an SD-WAN-capable attribute. Submit a cloud control component provisioning request form through the Enterprise Agreement Workspace for the CloudOps team to provision the control components. Contact Cisco Catalyst SD-WAN Technical Support to request access to the desired Virtual Account on the Cisco Catalyst SD-WAN Portal. After receiving access, you can provision the control components by providing the necessary enterprise agreement contract information.



CHAPTER 4

Access the Cisco Catalyst SD-WAN Portal

- [Workflow for Smart Account and Virtual Accounts for provisioning control components](#), on page 13
- [Create a Virtual Account associated with your Smart Account](#), on page 14
- [Workflow for certified overlays](#), on page 15
- [Access the Cisco Catalyst SD-WAN Portal for the first time](#), on page 15
- [Log in to the Cisco Catalyst SD-WAN Portal](#), on page 16
- [Configure additional MFA options or update an existing MFA option](#), on page 16

Workflow for Smart Account and Virtual Accounts for provisioning control components

This workflow describes how to create a Smart Account, create a Virtual Account, and associate the Cisco DNA subscription with your Virtual Account.

1. Open [Cisco Software Central](#) and create a Smart Account for your organization.
2. Create a Virtual Account associated with your Smart Account.

For instructions on how to create a Virtual Account, review [Create a Virtual Account Associated with Your Smart Account](#).

3. At the [Cisco Commerce Workspace](#), purchase a Cisco DNA subscription.



Note You must associate the Cisco DNA subscription with one Virtual Account within the respective Smart Account.

An account manager or sales representative usually places the order for the customer.

4. Choose the DNA cloud subscription product identification (PID) for your license.
Selecting the DNA cloud subscription PID automatically associates your Virtual Account with the SD-WAN-capable attribute for control component provisioning.
5. When the order is complete, the Virtual Account is available on the Cisco Catalyst SD-WAN Portal for control component provisioning.



Note The Virtual Account must include the device serial numbers that were added on the Cisco Plug and Play (PnP) portal. After creating the overlay through the Cisco Catalyst SD-WAN Portal, see the **Control Component Profile** tab on the Cisco PnP portal to view the mapping of the device serial numbers with their respective control components. This mapping provides the necessary information to add the devices to Cisco SD-WAN Manager or to perform zero-touch provisioning (ZTP). To confirm control component provisioning as part of the overlay creation process using the Cisco Catalyst SD-WAN Portal, view the **Control Component Profile** tab in the Cisco PnP portal.

For additional details, refer to [Cisco Network Plug and Play Connect Capability Overview](#).

Create a Virtual Account associated with your Smart Account

Before You Begin

Create a Smart Account for your organization using [Cisco Software Central](#).

For information on creating a Smart Account, refer to the [Workflow for Smart Account and Virtual Accounts for Provisioning the Controllers](#) documentation.

Create a Virtual Account

1. In [Cisco Software Central](#), choose **Manage account** under **Manage Smart Account**.
2. Click **Virtual Accounts**.
3. Click **Create Virtual Account**.
4. Click **Review Notice**, and after reviewing the notice, click **I Have Reviewed the Notice**.
5. Enter the required information in each field.



Note The **Parent Account** field is autopopulated with **At Top Level**. You may retain this selection.

6. Click **Next**.
7. (Optional) Assign users to the Virtual Account.
8. Click **Next**.
9. Click **Create Virtual Account**.

The newly created Virtual Account is listed in Virtual Accounts.

Workflow for certified overlays

Workflow for certified overlays for new customers

1. If you are a new Cisco Catalyst SD-WAN customer or partner, place an order on the Cisco Commerce Workspace.
2. Choose the **Certified Hosting Infra for vManage PID** subscription option.
3. Follow the same steps as for any other order.



Note Ensure that you select the correct PID that corresponds to the certified overlay.

Workflow for certified overlays for existing customers

1. If you are an existing Cisco Catalyst SD-WAN customer or partner, place an order on the Cisco Commerce Workspace with an existing Virtual Account.
2. Select the **Certified Hosting Infra for vManage PID** subscription option.
3. Create a ticket in [Cisco One](#).

Include this information in the ticket:

- Virtual Account
- Organization Name
- Order Number
- Region

4. The CloudOps team confirms the order. Then, they upgrade an existing overlay to a certified overlay.

Access the Cisco Catalyst SD-WAN Portal for the first time

When you log in to the Cisco Catalyst SD-WAN Portal for the first time, you see a guided workflow. You can use this workflow to configure selected features and to create your first Cisco Catalyst SD-WAN overlay network.

Log in to the Cisco Catalyst SD-WAN Portal for the first time as a Smart Account administrator. If you do not use an identity provider (IdP), you must have Smart Account administrator privileges each time you log in.

If you use an IdP, you can access the Cisco Catalyst SD-WAN Portal with the permissions provided by the IdP.



Note You cannot use Virtual Account administrator-level access to log in to the Cisco Catalyst SD-WAN Portal, but you can use it with other portals, such as software.cisco.com. The Cisco Catalyst SD-WAN Portal does not accept Virtual Account administrator-level access.

Log in to the Cisco Catalyst SD-WAN Portal

1. For the commercial version of the Cisco Catalyst SD-WAN Portal, navigate to <https://ssp.sdwan.cisco.com/>.
For the government version, log in at <https://ssp-gov.sdwangov.fedramp.cisco>
2. Enter your appropriate login credentials.
3. When prompted, set up or enter your multi-factor authentication (MFA) credentials. MFA is required for all users.

Configure additional MFA options or update an existing MFA option

You can add an additional MFA option or update an existing MFA option using the [Cisco SD-WAN portal](#).

Before You Begin

Ensure that you can log in successfully to the Cisco Catalyst SD-WAN Portal.

Add or Update an MFA Option

1. After you successfully log in to the [Cisco SD-WAN Self-Service Portal](#), go to [Cisco SD-WAN SSO](#).
2. On the SSO page, you will see Cisco Catalyst SD-WAN Portal under the **Work** tab.
3. From the drop-down list by your name in the top right corner of the page, click **Settings**.
4. In the **Extra Verification** section, add an MFA option or update an existing MFA option.



CHAPTER 5

Configure an Identity Provider for the Cisco Catalyst SD-WAN Portal

- [Configure an identity provider for the Cisco Catalyst SD-WAN Portal, on page 17](#)

Configure an identity provider for the Cisco Catalyst SD-WAN Portal

When you log in to the Cisco Catalyst SD-WAN Portal for the first time, you have the option to configure the Cisco Catalyst SD-WAN Portal to use the identity provider (IdP) of your organization, such as Okta Identity Management.



Note Configuring an IdP for the Cisco Catalyst SD-WAN Portal is optional.

After you configure your IdP and assign roles, you can log in using your organization's IdP instead of your account credentials on Cisco.com. For details on role configuration, refer to [Configure Cisco Catalyst SD-WAN Portal Roles for IdP Users](#).



Note When you set up an IdP in the Cisco Catalyst SD-WAN Portal, the issuer, login URL, and privacy-enhanced mail (PEM) key are not available from the IdP of your organization. This information is available after you set up the Assertion Consumer Service (ACS) URL and audience in your organization's IdP. When setting up your organization's IdP, we recommend that you add placeholder values for the ACS URL and audience. Later, you can configure the IdP on the Cisco Catalyst SD-WAN Portal and update your organization's IdP with the correct value of the ACS URL and audience Uniform Resource Identifier (URI) that is editable in the Cisco Catalyst SD-WAN Portal.

Before you begin

Before you configure an IdP in Cisco Catalyst SD-WAN Portal, create these variables on your organization's IdP. These variables are required for each user who logs in.

- `firstName`

- `lastName`
- `email`
- `SSP_User_Role`

For more information on roles, refer to [Configure Cisco Catalyst SD-WAN Portal Roles for IdP Users](#).

Configure an IdP for the Cisco Catalyst SD-WAN Portal

1. Specify the following information for your IdP.
 - Domain Name
 - IdP Issuer URL
 - IdP SSO URL
 - IdP Signature Certificate in PEM format
2. In federal environments only, check the **I acknowledge that this is a Federal IDP** check box.
3. To submit your IdP details, click **Submit Request**.
4. On your IdP site, confirm the IdP creation.



CHAPTER 6

Manage Role-Based Access

- [Configure Cisco Catalyst SD-WAN Portal roles for IdP users](#), on page 19
- [Create additional roles](#), on page 19

Configure Cisco Catalyst SD-WAN Portal roles for IdP users

Before you begin



Note Configuring Cisco Catalyst SD-WAN Portal roles for an identity provider (IdP) is optional.

Configure roles for IdP users

1. From the Cisco Catalyst SD-WAN Portal menu, choose **Manage Roles**.
2. Enter a name for the role.
3. For each of your virtual accounts, assign a role from this list:
 - **Monitor**: You can view and monitor all the overlay options in the Cisco Catalyst SD-WAN Portal.
 - **Overlay Management**: You can create, change, and monitor overlay networks.
 - **Administration**: You can perform the tasks defined by the monitor and overlay network roles, and onboard a secondary IdP.
4. Click **Add Role**.
5. After adding all the roles, click **Done**.
6. Log in to the Cisco Catalyst SD-WAN Portal again using your IdP credentials.

Create additional roles

To create an additional role, repeat the procedure described in the [Configure Cisco Catalyst SD-WAN Portal roles for IdP users](#) section.



CHAPTER 7

Manage fabrics

- [Create a Cisco SD-WAN Cloud-Pro fabric, on page 21](#)
- [Configure advanced options for a Cisco SD-WAN Cloud-Pro fabric, on page 25](#)
- [Delete a fabric, on page 29](#)
- [Specify the allowed list of IP addresses for managing control component access, on page 29](#)
- [Create Predefined Inbound Rules, on page 30](#)
- [Create additional fabrics, on page 31](#)

Create a Cisco SD-WAN Cloud-Pro fabric

The Cisco Catalyst SD-WAN Portal provisions Cisco Catalyst SD-WAN fabrics using the information you provide during this procedure.

Before you begin

Ensure that you have these items:

- An active Cisco Smart Account.
- An active Cisco Virtual Account.
- The SA-Admin role for your Cisco Smart Account. (This role is required to access the Cisco Catalyst SD-WAN Portal and create a fabric.)
- A valid order for control components on Cisco Commerce (formerly CCW).

Create a Cisco SD-WAN Cloud-Pro fabric

1. Go to the URL that you received in the email from Cisco to access the Cisco Catalyst SD-WAN Portal, and log in.
2. From the Cisco Catalyst SD-WAN Portal menu, choose **Create Fabric**.
The **Create Cisco SD-WAN Fabric** page appears.
3. From the **Smart Account** drop-down list, choose the name of the Cisco Smart Account to which you want to associate the fabric.

**Note**

If your Cisco Smart Account is not listed in the drop-down, click  to refresh the list and search for your account by its domain ID.

4. From the **Virtual Account** drop-down list, choose the name of the Cisco Virtual Account to which you want to associate the fabric.
5. Select a Cisco SD-WAN Cloud or Cisco SD-WAN Cloud-Pro Fabric. See the Cisco SD-WAN Cloud Guide to create a Cisco SD-WAN Cloud fabric. If you select Cisco SD-WAN Cloud-Pro, a questionnaire dialog box appears. Provide the required details in the dialog box.
6. Check the appropriate boxes if you intend to use any of the listed features on the fabric. Select “None of the options” if you do not use any additional features. (required)
7. Enter the number of devices you plan to add to the fabric (required).
8. Enter the sales order number for any SD-WAN subscriptions you have (optional).
9. Click **Next**.

Based on your responses, you are directed to the Cisco SD-WAN Cloud or Cisco SD-WAN Cloud-Pro fabric creation workflow. See the Cisco SD-WAN Cloud to create a Cisco SD-WAN Cloud fabric. The remaining instructions apply to creating a Cisco SD-WAN Cloud-Pro fabric.

10. Click **Assign Control Components** and perform these actions in the **Assign Control Components** area:
 - a. Configure the options for the number of control component types in a Cisco SD-WAN Cloud-Pro fabric.

Option	Description
Assign (for the SD-WAN Manager control component type)	Enter the number of Cisco SD-WAN Manager control components in your deployment. Valid values are 1, 3, or 6 .
Assign (for the SD-WAN Validator control component type)	Enter the number of Cisco SD-WAN Validators in your deployment. The minimum value is 2 .
Assign (for the SD-WAN Controller control component type)	Enter the number of Cisco SD-WAN control components in your deployment. The minimum value is 2 .
Enable Cluster	Applies only if you choose a value of 3 or 6 for the number of Cisco SD-WAN Manager controllers. Turn on this option to create a Cisco SD-WAN Manager cluster.

Option	Description
Cluster Type	Applies only if you turn on the Enable Cluster option. Choose Single Tenant Cluster to enable a single tenant cluster.

b. Click **Assign**.

11. In the **Fabric** field, enter a name for your fabric.
12. Under **Cloud Provider**, choose **AWS** or **Azure** as the cloud provider at which you want the control components for your fabric to be hosted. Government sites use only Amazon Web Services (AWS).



Note IPv6 provisioning is only supported for Single Tenant fabrics hosted on AWS.

13. From the **SD-WAN Version** drop-down list, choose the version of Cisco Catalyst SD-WAN that you want to use on your control components.

Use the recommended version unless you require features that are offered only in another version. To see recommended versions, visit [Cisco Software Central](#).

Cisco Catalyst SD-WAN releases are described in the Cisco Catalyst SD-WAN Release Notes in the **Release Information** area in [User Documentation for Cisco IOS XE \(SD-WAN\) Release 17](#).

14. Under **Locations**, perform these actions:
 - a. From the **Primary Location** drop-down list, choose the geographical location where the Cisco SD-WAN Manager is provisioned.
We recommend that you choose a location that is relatively close to your network.
 - b. From the **Secondary Location** drop-down list, choose the geographical location for backed up data storage and load balancing. If you choose the same region for both primary and secondary, then the Cisco Catalyst SD-WAN Portal automatically places the instances in two different Zones within the same region.
We recommend that you choose the location that is closest to the primary location.
 - c. From the **Data Location** drop-down list, choose the geographical location for Cisco SD-WAN Analytics data storage.
We recommend that you choose the location that is closest to the primary location.
15. Enter this information under **Contacts**:
 - In the **Fabric Admins** field, enter one or more comma-separated email addresses or mailing list names to which the Cisco Catalyst SD-WAN Portal sends notifications about the fabric.
 - In the **Cisco Contact Email** field, enter the email address of a contact at Cisco that can be reached if there is an urgent issue and the administrator of the fabric cannot be reached.
 - In the **Enter Contract Number of Service** field, enter the number of your Cisco Catalyst SD-WAN Portal service contract.

- In the **Enter CCO ID of Service Requester** field, enter the Cisco Connection Online (CCO) ID of the person who created the ticket for your Cisco Catalyst SD-WAN Portal.

Alert Notifications: The Cisco Catalyst SD-WAN Portal generates alert notifications for various events, such as expiring subscriptions, maintenance windows, and feature changes. Notifications are sent to the registered Overlay Admin contact email addresses configured under Overlay Details. Keep your email addresses updated. You can register multiple email addresses. To update your registered email addresses, perform these steps:

- a. Log in to Cisco Catalyst SD-WAN Portal at <https://ssp.sdwan.cisco.com> for commercial sites or <https://ssp-gov.sdwan.gov.fedramp.cisco> for government sites. You must have PNP Smart Account Administrator role to be able to log in.

Alternatively, if your Smart Account Administrator has already set up an identity provider (IdP) on the Cisco Catalyst SD-WAN Portal, then you can log in with the role provided by your Administrator.

- b. Go to **Overlay Details > Description > Overlay Admin**
- c. Click on the pencil icon to edit.
- d. Type in your email address and hit **Tab**.
- e. Click on the check mark icon to save.

16. Configure the **Advanced Options** as needed.

For detailed information about these options, refer to [Configure Advanced Options for a Cisco SD-WAN Cloud-Pro Fabric](#).

- **Custom Subnets:** Configure private IP addresses for control component interfaces.
- **Custom Domain Settings:** Configure custom domains for accessing Cisco SD-WAN Validator and Cisco SD-WAN Manager.
- **Snapshot Settings:** Configure how often the system takes a snapshot of Cisco SD-WAN Manager instances in your deployment.
- **Custom Organization Name:** Configure a unique organization name to identify your network.
- **Compliance:** Select certification compliances for the fabric. Compliance is on by default in the government version of the Cisco Catalyst SD-WAN Portal.
- **Dual Stack:** Enable IPv6 dual stack.

17. Click **Click here to review and agree to Terms and Conditions before proceeding**. In the **Terms and Conditions** dialog box, review the displayed information and click **I Agree**.

18. Click **Create Fabric**.

Your request is submitted. Manual approval for a Cisco SD-WAN Cloud-Pro fabric can take up to 24 hours (1 day). You can view the progress of your request in the **Requests** area.

In addition, a password appears in the Cisco Catalyst SD-WAN Portal **Notification** page. Use this password to access the fabric for the first time.

After logging in, change this password immediately to secure your environment.



Note The system-provided control component password is no longer visible in the Cisco Catalyst SD-WAN Portal after seven days. We recommend that you keep a copy of the password if you want to retain it.

19. Once you receive a notification that your fabric is ready, follow these steps:
- Install control component certificates on your devices. For more details about certificate installation, refer to [Use Case: Cisco-Hosted Cloud Overlays with Software Version 19.x and Above](#).
 - Install web server certificates. For information about installing web server certificates, refer to [Web Server Certificates](#).

Configure advanced options for a Cisco SD-WAN Cloud-Pro fabric

Advanced options allow you to configure various settings for your fabric if the default settings are not what you need.

To configure advanced options for your fabric, click **Advanced Options** on the Cisco Catalyst SD-WAN Portal, then configure options as described in these sections:

- [Custom Subnets](#)
- [Custom Domain Settings](#)
- [Snapshot Settings](#)
- [Custom Organization Name](#)
- [Compliance](#)
- [Dual Stack](#)

Custom Subnets

The **Custom Subnets** area includes options for configuring private IP addresses to be used for control component interface IP addresses.

For use cases such as connecting to an enterprise TACACS+, connecting to an authentication, authorization, and accounting (AAA) server, sending messages to a syslog server, or enabling management access to instances over the fabric, you may want to deploy the control components with private IP addresses in specific prefixes which are unique and are not used elsewhere within your fabric.

Option	Description
Primary Subnet	

Option	Description
VPC Subnet	Enter a private IP address block for the VPC for the primary region, For example, 192.168.0.0/24. This IP address block must be reachable from your private network.
Primary Location	Shows the primary region for the fabric.
Management Subnet	Enter a private IP address block for the management subnet for the primary region. This address must be within the IP address block that you enter for the VPC. The minimum size of the IP address block is 16 bits.
Control Subnet	Enter a private IP address block for the control subnet for the primary region. This address must be within the IP address block that you entered for the VPC. The minimum size of the IP address block is 16 bits.
Cluster Subnet	Enter a private IP address block for the cluster subnet for the primary region. This address must be within the IP address block that you entered for the VPC. The minimum size of the IP address block is 16 bits.
Secondary Subnet	
VPC Subnet	Enter a private IP address block for the VPC for the secondary region, for example, 192.168.1.0/24. This IP address block must be reachable from your private network.
Primary Location	Shows the secondary region for the fabric.
Management Subnet	Enter a private IP address block for the management subnet for the secondary region. This address must be within the IP address block that you entered for the VPC. The minimum size of the IP address block is 16.
Control Subnet	Enter a private IP address block for the control subnet for the secondary region. This address must be within the IP address block that you entered for the VPC. The minimum size of the IP address block is 16.

Option	Description
Cluster Subnet	Enter a private IP address block for the cluster subnet for the secondary region. This address must be within the IP address block that you entered for the VPC. The minimum size of the IP address block is 16.

Custom Domain Settings

The **Custom Domain Settings** area includes options for configuring custom domains for accessing Cisco SD-WAN Validator and Cisco SD-WAN Manager.



Note For government deployments, the default domain is sdwangov.fedramp.cisco and cannot be changed.

By default, the domain name for commercial deployments is cisco.com. You can specify another domain, if needed.

If you specify a custom domain, you must create your own domain name systems for the Cisco SD-WAN Validator and Cisco SD-WAN Manager because we do not have access to your domains.

After you configure a custom domain, make these mappings to allow control component certificates to come up:

- Map the Cisco SD-WAN Validator DNS to all VPN 0 IP addresses.
- Map the Cisco SD-WAN Manager DNS to all VPN 512 IP addresses.

Option	Description
SD-WAN Validator	Enter the name of the DNS for the Cisco SD-WAN Validator.
SD-WAN Manager	Enter the name of the DNS for the Cisco SD-WAN Manager.

Snapshot Settings

The **Snapshot Settings** area includes an option for configuring how often the system takes a snapshot of Cisco SD-WAN Manager instances in your deployment.

By default, the network overlay configuration is backed up once a day and seven snapshots are stored.

For more detailed information about snapshots, see [Information About Snapshots](#).

Option	Description
Frequency	Choose how often the system takes a snapshot of Cisco SD-WAN Manager instances: • Once a day • Once in 2 days • Once in 3 days • Once in 4 days

Custom Organization Name

The **Custom Organization Name** area includes an option for configuring a unique organization name to identify your network.

Option	Description
Custom Organization Name	Enter a unique name for your organization. You can enter a name of up to 56 characters. To ensure that each organization's name is unique, the Cisco Catalyst SD-WAN Portal automatically appends a hyphen and your virtual account ID at the end of the name you enter.

Certification Compliance Modes

The **Compliance Configuration** area includes certification compliance options for the fabric in commercial deployments only. These compliance modes are available:

Table 2: Supported Certifications

Option	Description
PCI-DSS	Payment Card Industry Data Security Standard, Service Provider, Level 1
SOC2	System and Organization Controls
ISO27001, ISO27017, ISO27018, ISO27701	International Organization for Standardization
C5	Cloud Computing Compliance Controls Catalog (Germany)
ENS	Esquema Nacional de Seguridad (Spain)
Tx-RAMP	Texas Risk and Authorization Management Program Level 2

Dual Stack

The **Dual Stack** area includes an option for enabling IPv6 for control components on AWS hosted fabrics. IPv6 provisioning is only supported for Single Tenant fabrics hosted on AWS.

Enabling this option is required if your enterprise network is configured with IPv6. After this option is enabled, the fabric subnets are configured with both IPv4 and IPv6. IPv6 addresses are assigned by your cloud service provider.



Note After this option is enabled for a fabric, it cannot be disabled.

Option	Description
IPv6 Dual Stack	Select the checkbox to enable IPv6 dual stack for control components.

Delete a fabric

You cannot delete a fabric. If you need assistance, contact Cisco Catalyst SD-WAN Technical Support.

Specify the allowed list of IP addresses for managing control component access

For Cisco SD-WAN Cloud-Pro fabrics, you can specify trusted IP addresses, including prefixes, from which you can manage access to control components. To enable management access, specify a rule type, protocol, port range, and the source IP (IP addresses and prefixes) for which you require access.



Note You do not need to add the IP addresses of WAN edge devices for them to join the fabric. Devices with any IP address can join the fabric, using Datagram Transport Layer Security (DTLS) or Transport Layer Security (TLS) tunnels, as long as Cisco SD-WAN Manager allows the device serial numbers.

- You can add up to 200 rules per fabric.
 - Each rule is uniformly applied to all Cisco SD-WAN Cloud-Pro control components within the fabric.
 - The same rules are automatically applied when new Cisco SD-WAN Cloud-Pro instances are added, or when existing instances are replaced. Each rule can specify either a single IP address or a larger IP prefix.
1. From the Cisco Catalyst SD-WAN Portal dashboard, navigate to your fabric.
 2. In the **List View** tab, click the name of your fabric.
 3. Click **Inbound Rules**.
 4. Click **Add Inbound Rule**.
 5. Specify the following parameters for your IP address or prefix:
 - **Rule type:** Choose a rule type: **All**, **SSH**, **HTTPS**, **Custom TCP rule**, or **Custom UDP rule**.
 - **Port range:** For custom TCP and UDP rules, specify a port range.

- **Source:** Specify one or more IP addresses or IP address prefixes. For multiple entries, press tab to enter the next IP address or prefix.
- **Descriptions:** Enter a description of the inbound rule.

6. Click **Add Rule**.

7. Click **Add New Inbound Rule** and add other IP addresses or IP address prefixes that you want to allow. (Optional)

Create Predefined Inbound Rules

Table 3: Feature History

Feature Name	Release Information	Description
Predefined Inbound Rules	March 2023 Release	With this feature you can specify trusted IP addresses. These IP addresses are applied to any new overlay that you create under the Smart Account for which you configure this feature. These IP addresses can also be applied to existing overlays under the Smart Account for which you configure this feature.

Information About Predefined Inbound Rules

With this feature you can create inbound rules, each of which specifies trusted IP addresses. These IP addresses are applied to any new overlay that you create under the Smart Account for which you configure this feature. These IP addresses can also be applied to existing overlays under the Smart Account for which you configure this feature.

An inbound rule includes the rule name, protocol and port range to which the rule applies, and source IP address or prefix information. You can create up to 200 inbound rules.

Use Cases for Predefined Inbound Rules

Predefined inbound rules provide a convenient way to add the same group of trusted IP addresses to existing and new overlays. By creating predefined inbound rules, you avoid having to configure trusted IP address for each overlay manually.

Configure Predefined Inbound Rules

1. From the Cisco Catalyst SD-WAN Portal menu, choose **Admin Settings**.
2. Click ... adjacent to the Smart Account for which you want to configure a predefined inbound rule and click **Manage Predefined Inbound Rules**.

A list of the inbound rules that have been configured appears.

3. Click **Add Predefined Inbound Rules**.
4. In the **Add Inbound Rule** area, perform these actions:
 - a. In the **Name** field, enter a unique name for the rule.
 - b. From the **Rule Type** drop-down list, choose the type of protocol to which the rule applies (**All**, **SSH**, **HTTPS**, **Custom TCP rule**, or **Custom UDP rule**).
 - c. If you choose a rule type of **Custom TCP rule** or **Custom UDP rule**, in the **Port Range** field, enter a port range to which the rule applies.
 - d. In the **Source** field, enter an IP address or IP address prefix.
 - e. In the **Description** field, enter a descriptions of the predefined inbound rule.
 - f. (Optional) Click **Automatically add this rule to ALL overlays** to add this new rule to existing overlays under this Smart Account, in addition to future overlays that are created under this Smart Account.

If you do not click this option, this rule is added to future overlays only.
 - g. Click **Add**.

Create additional fabrics

To create additional Cisco SD-WAN Cloud-Pro fabrics, use the procedure described in [Create a Cisco SD-WAN Cloud-Pro fabric](#).



CHAPTER 8

Use Cisco Catalyst 8000V as a Cloud Gateway for a fabric

- [Information about Cisco Catalyst 8000V as a cloud gateway for a fabric, on page 33](#)
- [Use cases for Cisco Catalyst 8000V as a cloud gateway for a fabric, on page 34](#)
- [Prerequisites for Cisco Catalyst 8000V as a cloud gateway for a fabric, on page 34](#)
- [Restrictions for Cisco Catalyst 8000V as a cloud gateway for a fabric, on page 34](#)
- [Configure Cisco Catalyst 8000V as a cloud gateway for a fabric, on page 34](#)

Information about Cisco Catalyst 8000V as a cloud gateway for a fabric

Table 4: Feature History

Feature Name	Release Information	Description
Cisco Catalyst 8000V as a cloud gateway for a fabric	SD-WAN Portal: 2023-05 Cisco Catalyst SD-WAN Control Components Release 20.6.1	This feature lets you configure a Cisco Catalyst 8000V device as the cloud gateway for connecting a virtual private cloud with a private data center.

The Cisco Catalyst 8000V serves as the cloud gateway for connecting a virtual private cloud (VPC) with a private data center.

You can configure a Cisco Catalyst 8000V device as a cloud gateway in these ways, depending on your requirements:

- Create a new fabric and add a Cisco Catalyst 8000V device as the cloud gateway for each region in the fabric.
- Add a Cisco Catalyst 8000V device to each region in an existing fabric.
- Replace Cisco vEdge Cloud in an existing fabric with a Cisco Catalyst 8000V device.

Use cases for Cisco Catalyst 8000V as a cloud gateway for a fabric

You can use Cisco Catalyst 8000V as a cloud gateway in these scenarios:

- Integrating your fabric with a TACACS or RADIUS server for AAA (authentication, authorization, and accounting) when the server resides in a private data center that you access through a VPN.
- Sending syslog information to a private data center that you access through a VPN.

Prerequisites for Cisco Catalyst 8000V as a cloud gateway for a fabric

Before deploying the 8000V as a gateway, confirm these requirements:

- You must have a Cisco SD-WAN Manager administrator username and password.
- You must have a Smart Account administrator username and password.
- You must know the serial number of the 8000V that you are adding to a fabric.

Restrictions for Cisco Catalyst 8000V as a cloud gateway for a fabric

You can use the 8000V as a cloud gateway only in Cisco SD-WAN Cloud-Pro environments.

Configure Cisco Catalyst 8000V as a cloud gateway for a fabric

Before you begin

Obtain the serial number of each 8000V device that you are configuring. Go to [Cisco Software Central](#). In the **Smart Licensing** area, click **Manage Devices** under **Network Plug and Play**.

Configuration procedures

Use this table to find the steps for configuring an 8000V device as a cloud gateway in various scenarios. Choose the scenario that corresponds to your requirements. For each scenario, the table provides the general steps and links to more detailed information.

Scenario	General Steps	Reference
Create a new fabric and add an 8000V device as the cloud gateway for every region in the fabric.	Step 1: In the Cisco Catalyst SD-WAN Portal, create a new fabric.	See Create a Cisco Catalyst SD-WAN Cloud Hosted Fabric .
	Step 2: In the Cisco Catalyst SD-WAN Portal, configure a cloud gateway.	See Configure a cloud gateway in the Cisco Catalyst SD-WAN Portal, on page 35 .
Add an 8000V device to every region in an existing fabric.	In the Cisco Catalyst SD-WAN Portal, configure a cloud gateway.	See Configure a cloud gateway in the Cisco Catalyst SD-WAN Portal, on page 35 .
Replace Cisco vEdge Cloud with an 8000V device in an existing fabric.	Step 1: In the Cisco Catalyst SD-WAN Portal, configure a cloud gateway.	See Configure a cloud gateway in the Cisco Catalyst SD-WAN Portal, on page 35 .
	Step 2: You can open a support case to request that the existing vEdge Cloud be removed.	See Open a support case for a fabric update, on page 37 .

Configure a cloud gateway in the Cisco Catalyst SD-WAN Portal

1. Log in to the Cisco Catalyst SD-WAN Portal with administrator credentials.
2. Click the fabric for which you want to configure a cloud gateway.
3. From the **Actions** drop-down menu, choose **Add Cloud Gateways**.
4. Configure the fields listed in this table.



Note The Cisco Catalyst SD-WAN Portal does not save the usernames and passwords that you enter in these fields.

Field	Description
vManage Admin Credentials	
Username	Enter your Cisco SD-WAN Manager administrator username.
Password	Enter your Cisco SD-WAN Manager administrator password.
Smart Account Admin Credentials	
Username	Enter your Cisco Smart Account administrator username.
Password	Enter your Cisco Smart Account administrator password.

Field	Description
Cloud Gateway Serials	
Serial	The number of fields that appear equals the number of regions in your fabric. Enter the serial number of the Cisco 8000V in each Serial field to designate it as a cloud gateway for each region. Ensure that each serial number you enter is unique.
Custom IPs	
System IPs	The number of System IPs fields equals the number of regions in your fabric. Optionally, enter an IP address in each field to configure a system interface for the cloud gateway that you are adding. A system interface IP address is persistent and identifies the device. It works like a router ID, which identifies the router from which packets originate. Specify a system IP address using decimal four-part dotted notation as an IPv4 address. Enter only the address because the prefix length (/32) is implicit. Select any IPv4 address except for 0.0.0.0/8, 127.0.0.0/8, and 224.0.0.0/4, or 240.0.0.0/4 and later. If you do not specify a system IP address, the Cisco Catalyst SD-WAN Portal assigns a random IP address. This address might duplicate the IP address of another device. Ensure that the IP address you enter is unused in the existing fabric. This prevents conflicts when provisioning the cloud gateway.

Field	Description
Enable Webhook via Cloud Gateway	This option applies only when Amazon Web Services (AWS) is the cloud provider for a dedicated fabric. To route webhook messages from Cisco SD-WAN Manager through a cloud gateway, select this option. Enabling this option is useful when your webhook server is hosted in your private network and no internet traffic is forwarded to this server. When this option is enabled, a connection is provisioned between your SD-WAN fabric and your private network. Once you enable this option, add a routing table entry on the server to forward network traffic to the webhook server through the cloud gateway. Refer to the email that you receive after the cloud gateway is provisioned for instructions.

5. Click **Submit**.

Open a support case for a fabric update

To open a support case for a fabric update, go to Cisco [Support Case Manager](#), log in with your Cisco credentials, and click **Open New Case**.



CHAPTER 9

Monitor overlay networks

- [Monitor control components and devices in fabrics, on page 39](#)
- [View fabric and control component details, on page 39](#)
- [View change window notifications, on page 40](#)

Monitor control components and devices in fabrics

1. From the Cisco Catalyst SD-WAN Portal dashboard, click the **List View** tab.
The list of fabrics appears.
2. Select your fabric.
3. In the **Controller View** area, click the control component that you want to monitor—**SD-WAN Manager**, **SD-WAN Validator**, **SD-WAN Controller**, **Cloud Gateways**, or **vEdge**.
4. In the **Control Components** window, you can filter by network usage, CPU usage, or duration. Filter by state, type, version, or region to further narrow the list.



Note To align with Cisco Catalyst SD-WAN rebranding, the **Controllers** tab is renamed as the **Control Components** tab from Cisco IOS XE Catalyst SD-WAN Release 17.13.1a.

View fabric and control component details

1. From the Cisco Catalyst SD-WAN Portal dashboard, click the **List View** tab.
The list of fabrics appears.
2. Click the name of the fabric.
The **Dashboard > Overlays > Details** page displays detailed information for your fabric.

View change window notifications

Table 5: Feature History

Feature Name	Release Information	Description
Change Window Notifications	2021-02 Release	Change window notifications let you view when your Cisco Catalyst SD-WAN fabric maintenance events start or end. You can also access details about the scheduled change notification and the planned maintenance operation. Cisco Catalyst SD-WAN Portal customers can only view change window notifications. A CloudOps user needs to schedule or start a change window notification.

Change window notifications let you view the start and end times of your Cisco Catalyst SD-WAN fabric maintenance events. You can also access details about the scheduled change notification and the planned maintenance operation.

Banner alerts are displayed for notifications scheduled to start or that begin within 10 days. If a notification is completed or scheduled to start in more than 10 days, banner alerts are not displayed on the Cisco Catalyst SD-WAN Portal dashboard.

If a change notification has started, it shows as ongoing in the banner alert.

If a change notification is scheduled, it shows as started in the banner alert.

Before you begin

Cisco Catalyst SD-WAN Portal customers can only view change window notifications.

Only a CloudOps user can schedule or start a change window notification.

View change window notifications for all fabrics

1. From the Cisco Catalyst SD-WAN Portal dashboard, under **Change Window Notifications**, click a fabric that is scheduled or started.

The **Dashboard > Change Window Notifications** page is displayed with the list of fabrics.

A banner alert is displayed for every change window notification.

View all change window notifications for your fabrics on this page.

2. Optionally, filter by status to change the number of fabrics displayed.
3. Click **Change Window Notifications** to display all change window notifications and view their descriptions in the details column.

The **Dashboard > Overlays > Details > Change Window Notifications** page displays.

View change window notifications for specific fabrics

1. To view a change notification for a specific fabric, from the Cisco Catalyst SD-WAN Portal dashboard, click a fabric that has a scheduled or started change notification.

The **Dashboard > Overlays > Details** page is displayed.

2. Click an overlay that has a scheduled or started change window notification.

For change window notifications specific to a fabric, the banner alert is displayed without the fabric name because you are already viewing it.

On this page, view change window notifications for the selected fabric.

View the list of change window notifications

1. From the Cisco Catalyst SD-WAN Portal dashboard, click the fabric for which you have a scheduled or started change window notification.

The **Dashboard > Overlays** page displays.

2. Click the fabric name.

The **Dashboard > Overlays > Details** page displays.

3. In **Change Window Notifications**, choose the scheduled or started change window notification.

The **Dashboard > Overlays > Details > Change Window Notifications** page displays where you can view detailed information about your change notification event.



CHAPTER 10

Manage account settings

The table lists the feature history for managing account settings.

Table 6: Feature History

Feature Name	Release Information	Description
Support for managing predefined inbound rules	2022-11 Release	This feature enables you to specify trusted IP addresses and prefixes to manage control component access. You can also apply predefined inbound rules to all fabrics.

- [Information about predefined inbound rules, on page 43](#)
- [Benefits of predefined inbound rules, on page 43](#)
- [Manage predefined inbound rules, on page 44](#)

Information about predefined inbound rules

You can specify predefined inbound rules for allowing trusted IP addresses, including prefixes, to manage control component access. The predefined rules apply to any existing or new fabric created with the associated Smart Account.

You can add up to two hundred rules per fabric.

Benefits of predefined inbound rules

With predefined inbound rules, you can:

- automatically apply rules to any overlay that you create with the associated Smart Account, and
- support audit log entries for allowed IP addresses.

Manage predefined inbound rules

Before you begin

1. Create a Smart Account.

For more information on creating a Smart Account, see [Workflow for Smart Account and Virtual Accounts for Provisioning the Controllers](#).

2. Create a fabric.

For more information on creating a Cisco SD-WAN Cloud-Pro fabric, see [Create a Cisco SD-WAN Cloud-Pro Overlay Network](#).

Manage predefined inbound rules

1. From the Cisco Catalyst SD-WAN Portal menu, choose **Admin Settings**.
2. Under **Actions**, click . . . and choose **Manage Predefined Inbound Rules** from the drop-down list.
3. Click **Add Predefined Inbound Rules** to add a predefined inbound rule.
4. Configure the following fields:

Field	Description
Name	Enter a name for the predefined inbound rule.
Rule Type	Choose one of the available options from the drop-down list. • All • SSH • HTTPS • Custom TCP rule • Custom UDP rule
Protocol	Protocol is automatically populated depending on which Rule Type you choose.
Port Range	Enter a port range. If you chose Custom TCP rule or Custom UDP rule , the port range was automatically populated.
Source	Enter an IP address or an IP address prefix.
Description	Enter a description for the predefined inbound rule.

Field	Description
Automatically add this rule to ALL fabrics	Select this option to apply the predefined rules to all the fabrics associated with your Smart Account. If you do not select this option, the rule is not added to your existing fabrics.

5. Click **Add**.



CHAPTER 11

Configure certification compliance

- [Cisco Catalyst SD-WAN compliance and certification, on page 47](#)
- [Benefits of a certified environment, on page 48](#)
- [Enable compliance with industry certifications for a new fabric, on page 48](#)
- [Enable compliance with industry certifications for an existing fabric, on page 49](#)
- [View certification compliance, on page 49](#)

Cisco Catalyst SD-WAN compliance and certification

Commercial certification and compliance help your business meet customer requirements in many industries. You may need commercial certification for cloud services due to issues such as:

- regulatory compliance,
- data security and privacy,
- reduced risk based on audits and assessments,
- trust and credibility,
- disaster recovery and business continuity,
- improved service quality,
- competitive advantage,
- interoperability, and
- easier audits,

Your organization can obtain these internationally recognized certifications with Cisco Catalyst SD-WAN for regulated industries:

- Payment Card Industry Data Security Standard (PCI DSS)
- System and Organization Controls (SOC) 2 Type 2 and SOC 3
- International Organization for Standardization (ISO) 27001, ISO 27701, ISO 27017, and ISO 27018
- Cloud Computing Compliance Criteria Catalogue (C5)
- Esquema Nacional de Seguridad (ENS)

- Texas Risk and Authorization Management Program (Tx-RAMP)

Contact your channel partner for a report on Cisco Catalyst SD-WAN certifications.

Benefits of a certified environment

Configure a certified environment to gain these benefits.

- Maintain a secure network with centralized configuration management using secure configuration baseline standards from Center for Internet Security (CIS) or Security Technical Implementation Guide (STIG).
- Protect data in transit and at rest across networks using encryption.
- Use centralized user account management to identify, access, and authenticate with unique credentials and strict role-based access control.
- Ensure Cisco Catalyst SD-WAN Control Components are subject to ongoing penetration testing and vulnerability scans.

Enable compliance with industry certifications for a new fabric

You can benefit from a certified environment by purchasing a DNA subscription, using a certified release version, and selecting the certifications options in Cisco Catalyst SD-WAN Portal before creating a fabric.



Note All commercial certifications are managed through the shared Cisco SD-WAN Cloud.

Procedure

-
- | | |
|---------------|--|
| Step 1 | Open https://ssp.sdwan.cisco.com to access the Cisco Catalyst SD-WAN Portal. |
| Step 2 | Sign in to the Cisco Catalyst SD-WAN Portal using your credentials. |
| Step 3 | From the Create Cisco SD-WAN Cloud-Pro Fabric page, enter your Smart Account and Virtual Account. |
| Step 4 | In the Fabric Name field, enter a fabric name. |
| Step 5 | Select Assign Control Components . |
| Step 6 | In Advanced Options , select the Compliance Configuration option and then choose the required industry certifications. |
| Step 7 | Click Create Fabric . |
-

Enable compliance with industry certifications for an existing fabric

Before you begin

You can enable compliance with industry certifications only if your Cisco SD-WAN Cloud-Pro fabric is encrypted. If your fabric is not encrypted, encryption is required to enable compliance.

Procedure

- Step 1** Sign in to the Cisco Catalyst SD-WAN Portal.
 - Step 2** Click **Fabric** to find your fabric.
 - Step 3** In the **Actions** drop-down list choose **Compliance Mode**.
 - Step 4** In the **Compliance** panel, select the required industry certifications.
 - Step 5** Click **Apply**.
-

View certification compliance

Procedure

- Step 1** Open <https://ssp.sdwan.cisco.com> to access the Cisco Catalyst SD-WAN Portal.
 - Step 2** Log in to the Cisco Catalyst SD-WAN Portal using your credentials.
 - Step 3** Select the desired fabric and click **View Details**.
-

You can view the active compliances for the fabric in the **Description** pane.



CHAPTER 12

Configuring system snapshots

- [Information about system snapshots, on page 51](#)
- [Take an on-demand snapshot, on page 52](#)
- [View snapshots, on page 53](#)

Information about system snapshots

A Cisco SD-WAN Manager snapshot is a saved state of a Cisco SD-WAN Manager instance. Snapshots provide recovery points that the CloudOps team can use to restore your system. The SD-WAN Portal automatically saves the snapshots.

By contrast, you do not need to create snapshots for SD-WAN Controllers or SD-WAN Validators because they are stateless.

Which Cisco Catalyst SD-WAN installations store snapshots?

In Cisco SD-WAN Cloud and Cisco SD-WAN Cloud-Pro environments, the SD-WAN Portal manages saving snapshots of SD-WAN Manager, which are saved to cloud storage managed by Cisco. The system stores snapshots in the primary region that you select when you set up the SD-WAN fabric.

Viewing snapshot details

You can view details of the saved snapshots in the SD-WAN Portal. You cannot download the snapshots themselves.

Snapshot types

This table describes the available snapshot types.

Table 7: Snapshot types

Snapshot type	Description	When they are taken	How many are retained	How long they are retained
On-demand	You can take an on-demand snapshot at any time, such as before a major change to your Cisco SD-WAN Manager configuration. Before the change window, freeze configuration changes and allocate up to eight hours (480 minutes) to create and save the on-demand snapshot. See Take an On-Demand Snapshot.	On-demand	1	15 days. If you take another on-demand snapshot, retention ends sooner.
Regular	Regular snapshots are saved at a configurable interval of one to four days. The snapshot typically occurs at midnight in the region of SD-WAN Manager. Set the interval during fabric creation: Advanced Options > Edit > Snapshot Settings See Create a Cisco SD-WAN Cloud-Pro Overlay Network. For an existing fabric, you can edit the snapshot interval in the SD-WAN Portal: View details > Snapshots > Actions > Edit snapshot frequency	Interval you define: one to four days.	7	The oldest of seven is discarded when a new snapshot is created. The retention duration is: (7 * use-configured) which is seven to 28 days.
Golden	You can mark a single regular or on-demand snapshot as Golden to save it for a longer period. Use this when SD-WAN Manager is in an ideal state for a long-term recovery point. Marking a new snapshot as Golden removes the Golden designation from the previous Golden snapshot. The previous Golden snapshot is then subject to removal according to its expiration schedule.	This is an existing regular or on-demand snapshot manually marked as Golden.	1	90 days

Take an on-demand snapshot

You can take an on-demand snapshot of Cisco SD-WAN Manager configuration when needed. We recommend that you take a snapshot before any major change window.

When you take an on-demand snapshot, freeze configuration changes. Allocate up to 8 hours before the change window to ensure the snapshot is completed.

An on-demand snapshot is stored for 15 days after its creation, then it is deleted automatically. Only one on-demand snapshot is retained at any given time, as a new on-demand snapshot replaces the existing stored snapshot.



Note On-demand snapshots are not available for shared tenants.

1. From the Cisco Catalyst SD-WAN Portal, navigate to the list of available overlays.
The **Dashboard > Overlays** page appears.
2. Click the name of the fabric for which you want to take a snapshot.
3. From the **Dashboard > Cisco Hosted Overlays > Details** page, click the **Snapshot** tile.
4. From the **Actions** drop-down menu, choose **On-Demand Snapshot**.
5. In the **On-Demand Snapshot** area, turn on the switch for the Cisco SD-WAN Manager instance for which you want to take the snapshot.

For a Cisco SD-WAN Manager cluster, turn on the switches for each Cisco SD-WAN Manager instance in the cluster.

6. Click **Submit**.

Snapshot creation starts. Completing the snapshot can take up to 8 hours to complete, depending on the amount of data in Cisco SD-WAN Manager.

View snapshots

Before you begin

To view snapshot details, ensure that your overlay is associated with a Cisco SD-WAN Cloud-Pro controller.

For more information, see [Create a Cisco SD-WAN Cloud-Pro Overlay Network](#).

For more information on snapshots, see [Information About Snapshots](#).

View snapshots

1. From the Cisco Catalyst SD-WAN Portal dashboard, navigate to the list of available overlays.
The **Dashboard > Overlays** page displays.
2. Click the name of an overlay for which you want to view a snapshot.
3. From the **Dashboard > Cisco Hosted Overlays > Details** page, click on the tile for **Snapshot**.
The **Dashboard > Cisco Hosted Overlays > Details > Snapshots** page displays.

Table 8: Snapshot Fields

Field	Description
Snapshot ID (*denotes golden snapshot)	Specifies the snapshot ID. If a snapshot is a golden snapshot, it is denoted by an asterisk.
Name	Specifies the name of the snapshot.
Version	Specifies the version number of the Cisco SD-WAN Manager software.
Progress	Specifies the progress of the snapshot creation process.
Duration	Specifies the duration of the snapshot creation process.
State	Specifies the state of the snapshot creation process.
Device	Specifies the disk on Cisco SD-WAN Manager for which the snapshot was taken. There are either two or three disks on the Cisco SD-WAN Manager instance, depending on which version the device was originally provisioned on. Snapshots of all disks, taken at the same time, enable recovery and reconstruction of the Cisco SD-WAN Manager instance during disaster recovery.
Golden	Specifies if the snapshot is a golden snapshot. Available values are as follows: • false • true
Region	Specifies the region where this snapshot is stored.
Type	Specifies the type of snapshot. Available values include: • REGULAR, • ON-DEMAND, and • GOLDEN.
Overlay ID	Specifies the overlay ID.
Overlay	Specifies the overlay name and an ID.

Field	Description
Instance ID	Specifies the Cisco SD-WAN Manager instance ID.
Instance	Specifies the Cisco SD-WAN Manager instance name and ID.
Actions	To mark a specific date snapshot as golden, click Make Golden Snapshot .



CHAPTER 13

Configure webhooks

- [Information about webhooks, on page 57](#)
- [Configure a webhook, on page 57](#)
- [Send a webhook notification, on page 58](#)

Information about webhooks

A webhook is a method that enables HTTP communication between two systems and is initiated by a specified event. The SD-WAN Portal uses webhooks to send event notifications about the fabric. You can configure and manage webhooks through a tab in the **Administration Settings** area of the SD-WAN Portal.

Configure a webhook

Procedure

- Step 1** From the SD-WAN Portal menu, click **Administration** and select **Admin Settings**.
- Step 2** Select the **Webhooks** tab.
- Step 3** Click **Configure Webhook**.
- Step 4** Enter or select this information:
- Smart Account name
 - Virtual Account name
 - URL of webhook endpoint (must begin with https://)
 - Authorization type (choose Basic [username/password] or None).
- Step 5** Click **Add**.
The system displays a table of defined webhooks.
-

Send a webhook notification

Procedure

- Step 1** Right-click the webhook you want to edit in the table of defined webhooks, then choose **Send**.
- Step 2** Enter the plaintext notification for the webhook. Click **Send** to send the notification to the webhook server.
-



CHAPTER 14

Configuration Conversion Tool

- [Configuration Conversion Tool feature history, on page 59](#)
- [Information about the Configuration Conversion Tool, on page 59](#)
- [Restrictions for the Configuration Conversion Tool, on page 60](#)
- [Prerequisites for the Configuration Conversion Tool, on page 60](#)
- [Use the Configuration Conversion Tool, on page 60](#)

Configuration Conversion Tool feature history

Table 9: Feature History

Feature Name	Release Information	Description
Configuration Conversion Tool	April 2025	The Configuration Conversion Tool converts templates and policies to configuration groups, policy groups, and topology groups.

Information about the Configuration Conversion Tool

Use the Catalyst SD-WAN Configuration Conversion Tool to collect templates and policies from your SD-WAN Manager instance, convert them, and create new configuration groups, policy groups, and topology groups in a new SD-WAN Manager instance.

Conversion details

The Configuration Conversion Tool:

- converts device templates to configuration groups,
- converts policies into policy groups and topology groups where applicable, and
- transfers global device values and variable names.

Restrictions for the Configuration Conversion Tool

- The Configuration Conversion Tool is considered to be in beta.
- The Configuration Conversion Tool does not convert features that do not have a configuration group or policy group equivalent.

Prerequisites for the Configuration Conversion Tool

- Your site must be using Cisco Catalyst SD-WAN Manager Release 20.12.x or later.
- Your network firewall must accept incoming traffic from 74.207.103.254.

Use the Configuration Conversion Tool

Procedure

- Step 1** For the commercial version of the Cisco Catalyst SD-WAN Portal, navigate to <https://ssp.sdwan.cisco.com/>. For the government version, log in at <https://ssp-gov.sdwan.gov.fedramp.cisco>.
- Step 2** Launch the Configuration Conversion Tool. If you do not have full access to the Cisco Catalyst SD-WAN Portal, a message with a link for limited access appears. Click the displayed link to open the Configuration Conversion Tool.
- Step 3** Enter your SD-WAN Manager IP address or URL along with user credentials. Port and subdomain fields are optional.
- Step 4** Click **Collect** to retrieve all legacy constructs, including device templates, feature templates, policies, and associated constructs, from SD-WAN Manager.
- When the collection is complete, download the JSON file containing all configurations. Use this file to repeat the process later without collecting the data again from SD-WAN Manager.
- Step 5** Click **Templates** and select the device templates you want to convert to their new equivalents.
- The tool converts the device templates and associated feature templates.
- Step 6** If you need to convert policies, click **Policies** and select the option to enable policy conversion. This action converts all defined policies referenced by device templates.
- Step 7** Click **Convert** to convert the selected items.
- The **Converted Configurations** page displays all the newly converted constructs.
- Step 8** Confirm the list and click **Upload** to add the configurations to SD-WAN Manager.
- You can cancel an upload in progress.
- After the upload is complete, a summary of the configurations that were uploaded appears.
- If needed, you can click **Rollback** to remove all the constructs added to SD-WAN Manager during this session.
-

The new constructs are now ready to use.

What to do next

To migrate your devices to the newly converted configuration groups, complete the steps in the [Existing Deployments](#) section of the *Quick Start Guide - Catalyst SD-WAN Simplified Configuration and Policies*.



CHAPTER 15

Frequently Asked Questions

- [Frequently Asked Questions, on page 63](#)
- [How to, on page 64](#)
- [Troubleshooting, on page 64](#)

Frequently Asked Questions

What types of Cisco Catalyst SD-WAN deployments are supported on the Cisco Catalyst SD-WAN Portal?

You can deploy the following types of Cisco Catalyst SD-WAN on the Cisco Catalyst SD-WAN Portal:

- [Cisco SD-WAN Cloud](#)
- Cisco SD-WAN Cloud-Pro

See more details in [Types of Fabric Network in Cisco Catalyst SD-WAN](#).

What cloud providers are supported to provision SD-WAN control components in the Cisco Catalyst SD-WAN Portal?

The supported cloud providers for provisioning SD-WAN Control Components in the Cisco Catalyst SD-WAN Portal are Amazon Web Services (AWS) and Microsoft Azure.

What is the role of a Virtual Account in Cisco Catalyst SD-WAN Portal controller provisioning?

The Cisco Catalyst SD-WAN Portal uses SD-WAN subscriptions linked to a Virtual Account to determine which cloud SD-WAN Control Component entitlements are available and to facilitate SD-WAN Control Component provisioning. This information shows whether your Virtual Account supports SD-WAN. Provide a Virtual Account when you order an SD-WAN license to ensure successful provisioning through the Catalyst SD-WAN Portal.

How to

How do I access the Cisco Catalyst SD-WAN Portal?

Use the instructions in [Access the Cisco Catalyst SD-WAN Portal for the First Time](#) to access the Cisco Catalyst SD-WAN Portal.

If you want to use an identity provider (IdP) to access the portal, refer to [Configure an IdP for the Cisco Catalyst SD-WAN Portal](#).

How do I configure role-based access in the Cisco Catalyst SD-WAN Portal?

The role-based access control feature in the Cisco Catalyst SD-WAN Portal allows users to be assigned specific roles (Monitor, Overlay Management, or Administration) within designated virtual accounts. This process ensures granular visibility and streamlines provisioning and monitoring of new overlays. To configure role-based access, refer to the instructions provided in [Manage role-based access](#).

How do I set up multifactor authentication (MFA)?

The Cisco Catalyst SD-WAN Portal supports MFA by default, and it is mandatory for users. These one-time password generation options are available:

- Google Authenticator
- Email Authenticator
- Fingerprint sensor on supported computers (such as Apple MacBook)

For more information, refer to [Configure Additional MFA Options or Update an Existing MFA Option](#).

How do I move SD-WAN Control Component SKUs from one Virtual Account to another Virtual Account?

To reassign an order containing SD-WAN Control Component SKUs to a different Virtual Account, open a support case as described in [Troubleshooting, on page 64](#).

How do I add IP addresses to an allow list for managing fabric access through the Cisco Catalyst SD-WAN Portal?

To add IP addresses to an allow list through the Cisco Catalyst SD-WAN Portal, refer to the instructions in [Specify the Allowed List of IP Addresses for Managing Controller Access](#).

Troubleshooting

How do I get support for Cisco Catalyst SD-WAN Portal?

Follow these steps to open a Cisco support case for Catalyst SD-WAN Portal.

1. Go to <https://mycase.cloudapps.cisco.com/case>.
2. Select **Open New Case** > **Products & Services** > **Open Case**.

3. Enter the appropriate entitlement information. You typically need to include the serial number of a WAN edge device.
4. Click **Next**.
5. Enter your case details.
6. Select **Technology** and search for the appropriate Sub Tech keyword. For Cisco Catalyst SD-WAN Portal issues, select these keywords:
 - Technology: SDWAN - Cisco-Hosted
 - SubTechnology: SDWAN Cloud Infra



CHAPTER 16

Troubleshooting the Cisco Catalyst SD-WAN Portal

- [Update an expired IdP certificate, on page 67](#)
- [Reset a Misconfigured IdP, on page 67](#)
- [Troubleshoot Smart Account issues, on page 68](#)
- [Troubleshoot Virtual Account issues, on page 68](#)
- [Troubleshoot browser security issues, on page 69](#)

Update an expired IdP certificate

To update an expired identity provider (IdP) certificate, use the **Need help signing in** link in the Cisco Catalyst SD-WAN Portal **Sign In** window.

1. Navigate to the Cisco Catalyst SD-WAN Portal URL.
2. Click the **Need help signing in** link.
3. Click the **Need to reset IdP** link.
You are redirected to your Cisco account.
4. Enter your Cisco login credentials.
5. When prompted, set up or enter your MFA credentials.

Reset a Misconfigured IdP

If your identity provider (IdP) is misconfigured and you cannot log in, you can configure a new IdP.

1. Go to the Cisco Catalyst SD-WAN Portal URL.
2. Click **Need help signing in**.
3. Click **Need to reset IdP**.
You are redirected to your account.
4. Enter your login credentials.

5. When prompted, set up or enter your multifactor authentication (MFA) credentials.

Delete an IdP

1. Go to the Cisco Catalyst SD-WAN Portal URL.
2. Click **Need help signing in**.
3. Click the **Need to reset IdP**.
4. You are redirected to your account.
5. Enter your login credentials.
6. When prompted, set up or enter your MFA credentials.
7. Select **IdP details** > **Actions** and delete the IDP.



Note Only the IdP administrator is able to delete an IdP from Cisco Catalyst SD-WAN Portal. If you are not the IdP administrator or the administrator is no longer active, open a TAC case.

Troubleshoot Smart Account issues

Problem

A Smart Account is not visible in the **Smart Account** drop-down list after logging in to the Cisco Catalyst SD-WAN Portal. This can occur when there is no SD-WAN-capable attribute associated with the Smart Account.

Solution

Associate your DNA subscription with your Smart Account and Virtual Account.

For more information, see [Workflow for Smart Account and Virtual Accounts for Provisioning the Controllers](#).

Contact Technical Support to have your Smart Account associated with your DNA cloud subscription.

Troubleshoot Virtual Account issues

Problem

The Cisco Catalyst SD-WAN Portal displays an error that the Virtual Account is not SD-WAN capable. This error indicates that a DNA subscription is not associated with the Virtual Account.

Solution

If you have an enterprise agreement, you cannot automatically associate Virtual Accounts to an SD-WAN-capable attribute.

As an enterprise customer, complete these steps to associate a Virtual Account with your DNA subscription:

1. Submit a cloud-controller provisioning request form through the Enterprise Agreement Workspace for the CloudOps team to provision the controllers.
2. Contact Cisco Catalyst SD-WAN Technical Support to request that the desired Virtual Account become available on the Cisco Catalyst SD-WAN Portal.
3. After the desired Virtual Account is available on the Cisco Catalyst SD-WAN Portal, provide the necessary enterprise agreement contract information to provision the controllers.

For more information, see [Smart Account and Virtual Accounts](#).

For more information, see [Workflow for Smart Account and Virtual Accounts for Provisioning the Controllers](#).

If you are unable to associate your Virtual Account with your DNA subscription, contact Technical Support to associate the Virtual Account with your DNA cloud subscription.

Troubleshoot browser security issues

Problem

You see this error:

```
CSRF Failed: CSRF token missing or incorrect
```

You see a cross-site request forgery (CSRF) token mismatch when the browser is unable to create a secure cookie or to access the cookie required for you to log in.

Solution

This error appears because of certain security settings in your web browser.

Clear the cache on your browser, or try another browser.

