

devices between fabrics according to [Scope Of User Consent](#).

The following are example configurable options:

- The Fabric Synchronization feature MAY ask the user for consent for all Synchronized Devices or consent for smaller subsets independently.
- The Fabric Synchronization feature MAY ask the user for consent to perform this operation automatically when new Synchronized Devices are commissioned.
- The Fabric Synchronization feature MAY ask the user for consent to share Synchronized Device metadata such as device names and locations.

Fabric Synchronization

Once commissioning and configuration are complete, the ecosystems are now ready to synchronize their fabrics.

The Fabric Synchronizing Administrator SHALL commission the synchronized devices as configured by the user.

Commissioning of Matter devices SHALL be performed by:

1. Discover available Synchronized Devices to commission by identifying endpoints specified in the PartsList of the Aggregator within the Fabric Synchronizing Administrator.
2. Identify if the Synchronized Device supports the BridgedICDSupport feature in the Bridged Device Basic Information Cluster by presence of the BridgedICDSupport feature.
 - a. If the BridgedICDSupport feature is present, the client MAY use the BridgedICDSupport feature to ensure the device is active.
3. Initiate commissioning by sending an OpenCommissioningWindow command to the Administrator Commissioning Cluster exposed on the endpoint with the Bridged Node device type specified in the PartsList and the Administrator Commissioning Cluster present.
4. Complete commissioning using the Enhanced Commissioning Method.

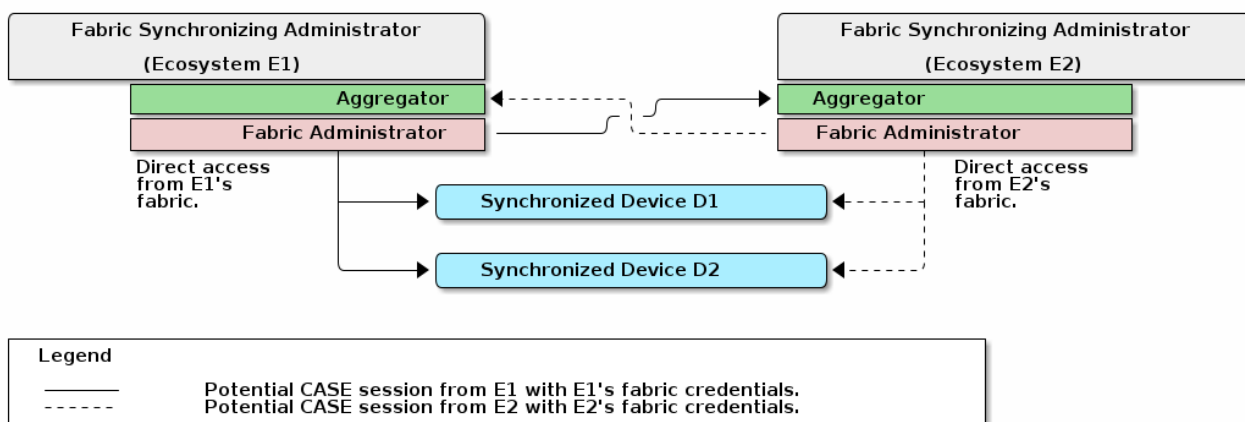


Figure 116. Fabric Synchronization Setup - Setup Complete.