

side (position value 1) or the bottom side (position value 2). It is not possible to go directly from position 1 to position 2 or vice versa - the switch will always need to go through the neutral position 0.

So when the user presses the top side of the switch, the InitialPress (NewPosition=1) event will be generated. When they release the top side, the ShortRelease (PreviousPosition=1) event will be generated. The user continues to press the bottom side, and the event InitialPress (NewPosition=2) is generated. Upon release of the bottom side, the event ShortRelease (PreviousPosition=2) is generated.

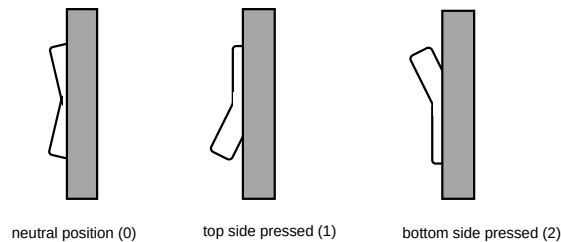


Figure 11. Up/down control switch device

Another variant (figure below, example: joystick) has a control handle with a neutral position in the middle (left figure) which corresponds to CurrentPosition=0. The handle can be moved along the dotted lines.

In the middle figure, the user moves the handle to the East position and then releases it (which makes it return to the neutral middle position). This generates this sequence of events:

```
InitialPress (NewPosition=3)    // move to East
ShortRelease (PreviousPosition=3) // back to middle (from East)
```

In the righthand figure, the user moves the handle to the SouthWest position, then to the South position and then releases it (which makes it return to the neutral middle position). This generates this sequence of events:

```
InitialPress (NewPosition=6)    // move to SouthWest
InitialPress (NewPosition=5)    // move to South
ShortRelease (PreviousPosition=5) // back to middle (from South)
```