



- Zone A or B independently cannot join as a client (always Zone A AND B should join as clients at the same time).

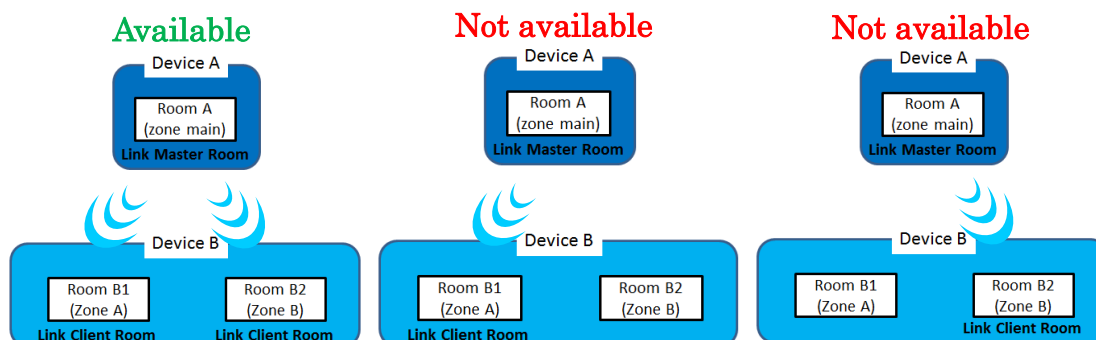

- Each Zone is unable to be set as a Master or a Client in the same group.

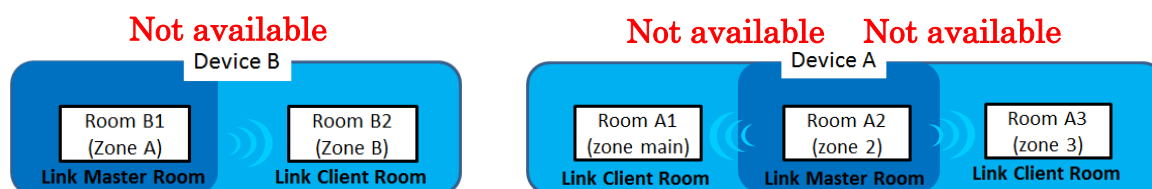

Available to make pseudo-Group that Main Zone is Master and Zone2 or Zone3 equipped Main Zone Sync feature is Client. In this case, no network distribution among Master and Client.

- Group can be made between devices that have different Location IDs. The max number of MusicCast Devices within one Group is up to the number specified by `get_max` of `getFeatures` +1. (this is valid with API Version 2.00 or later. The maximum number before Version 2.00 was limited up to 10).
- Devices not included in the group may respond "Client". Please refer to the information below and control.
 - If the device is not included in the group, if any Input of the Zone is MusicCast Link, the information of "Role" acquired by `getDistributionInfo` is "Client".
 - If the device is not included in the group, the Group ID is "empty text". Please use this information to determine whether it is included in the group or not included in the group.

It is basically a specification that can create multiple Groups within the same Location. When creating a group, you can not display accurate information unless you use both the Role and Group ID information.

9.1.8. Cautions when creating Group on MusicCast devices before 2017 and after 2018

- There are combinations that can not create a group depending on device generation and firmware version.