

installed.

4.17.4. Distribution of Key Material

The operational group keys mechanism relies on a key distribution Administrator to reliably distribute select epoch key material to appropriate participants. It is assumed the key distribution Administrator is in possession of all epoch keys, has knowledge of the set of group security domain members which require access to those keys, and is responsible for pushing updates of these credentials to all authorized Nodes in those groups it manages.

Key material is distributed to key holders using the [Group Key Management Cluster](#). In general, the key material of a Node is exposed via Attributes with ACL entries that only allow access by the key distribution Administrator. The information exposed in the [Section 11.2, “Group Key Management Cluster”](#) includes the group epoch keys and associated group session identifiers.

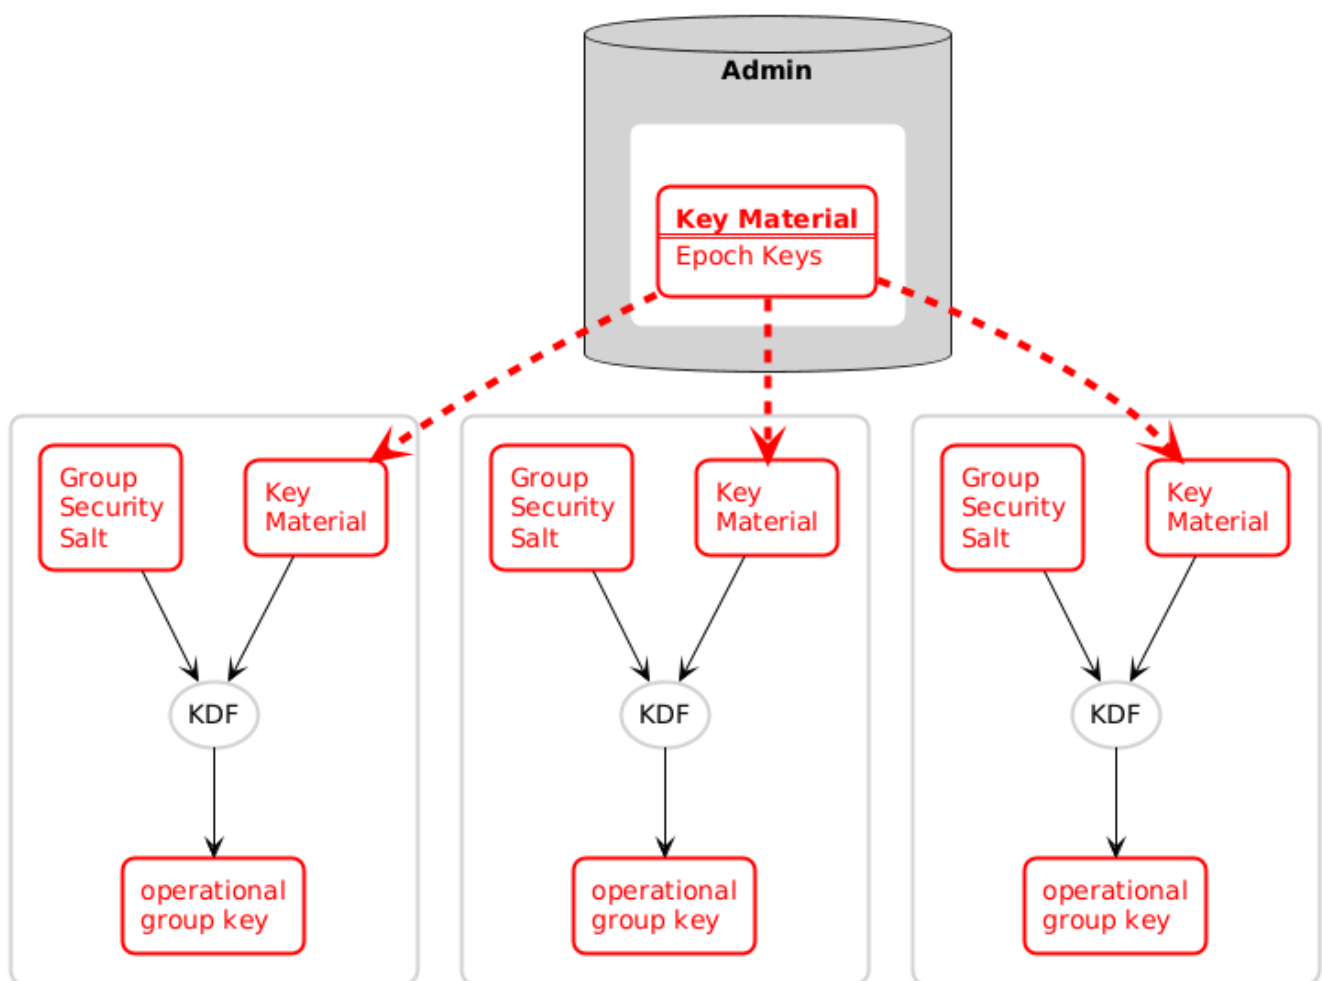


Figure 19. Group Key Distribution

4.17.4.1. Installing a Group onto a Newly Commissioned Node

This section provides an example of the operations required to install a group onto a newly commissioned node.