

with the same duration when it receives a handshake request from a client. If this timer expires before the server receives a subscription request on C2, the server SHALL close the BTP session and report an error to the application. The state machine in [Figure 23, “BTP session handshake”](#) illustrates the function of these timers as part of the BTP session establishment procedure.

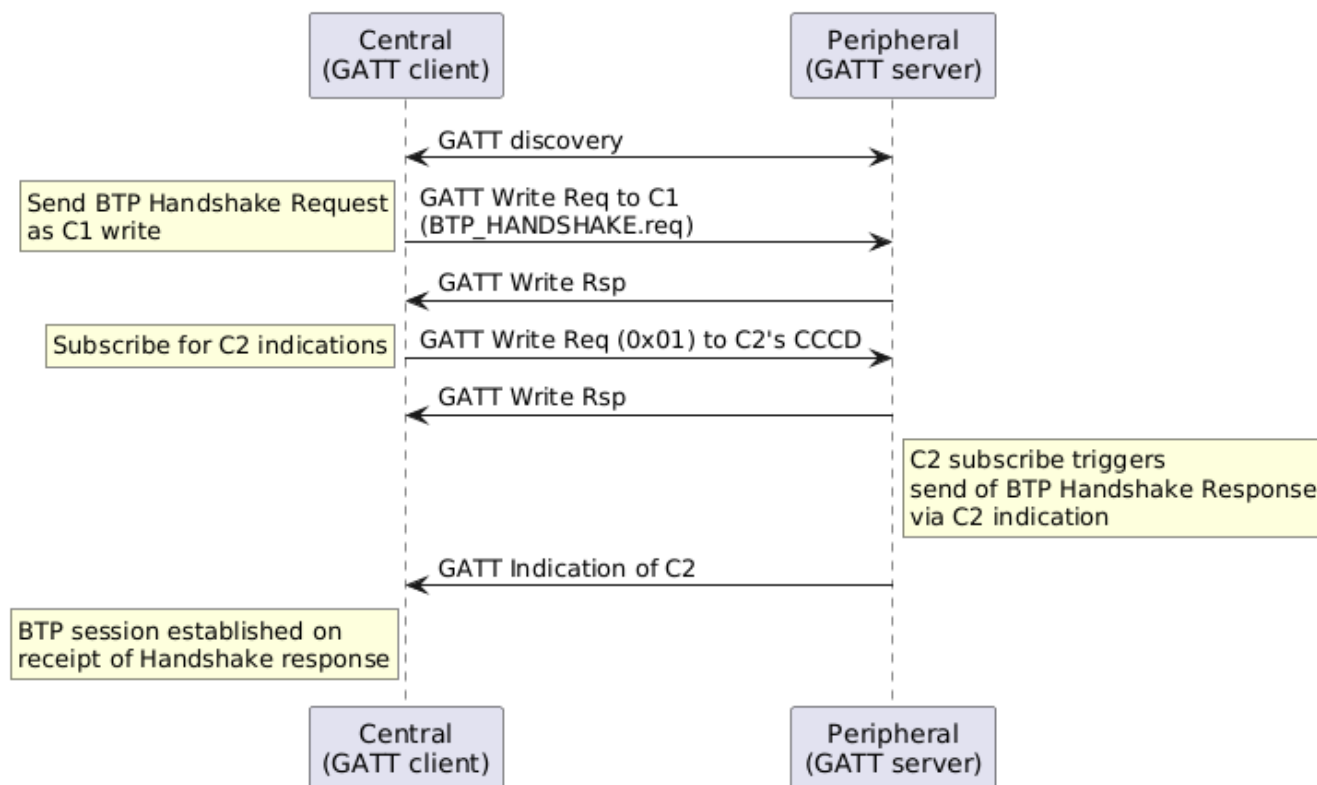


Figure 23. BTP session handshake

4.19.4.4. Data Transmission

Once a BTP session has been established, the next-higher-layer application on both peers may use this BLE connection to send and receive data via GATT writes or indications, according to a peer's GATT role. Clients SHALL exclusively use GATT Write Characteristic Value sub-procedure to send data to servers and servers SHALL exclusively use GATT Indication sub-procedure to send data to clients.

All BTP packets sent on an open BLE connection SHALL adhere to the BTP Packet PDU binary data format specified in BTP Frame Formats. All BTP packets SHALL include a header flags byte and an 8-bit unsigned sequence number. All other packet fields are optional. These optional fields include an 8-bit unsigned received packet acknowledgement number, 16-bit unsigned buffer length indication, and variable-length buffer segment payload.

This section is defined entirely within the scope of a single BTP session. Concurrent BTP sessions between the same peer and multiple remote hosts SHALL maintain separate and independent acknowledgement timers, sequence numbers, and receive windows.

4.19.4.5. Message Segmentation and Reassembly

When the session layer (that is, MATTERoBLE) sends a Matter Message as a BTP SDU over a BTP session, that BTP SDU SHALL be split into ordered, non-overlapping BTP segments so the set of all BTP segments may be reassembled into the original BTP SDU (see [Figure 22, “MATTERoBLE: Matter Mes-](#)