

alive mechanism, as it will cause a peer to close a BLE connection automatically if the remote BTP stack crashes or becomes unresponsive. This scenario is illustrated in [Figure 25, “Idle connection scenario”](#).

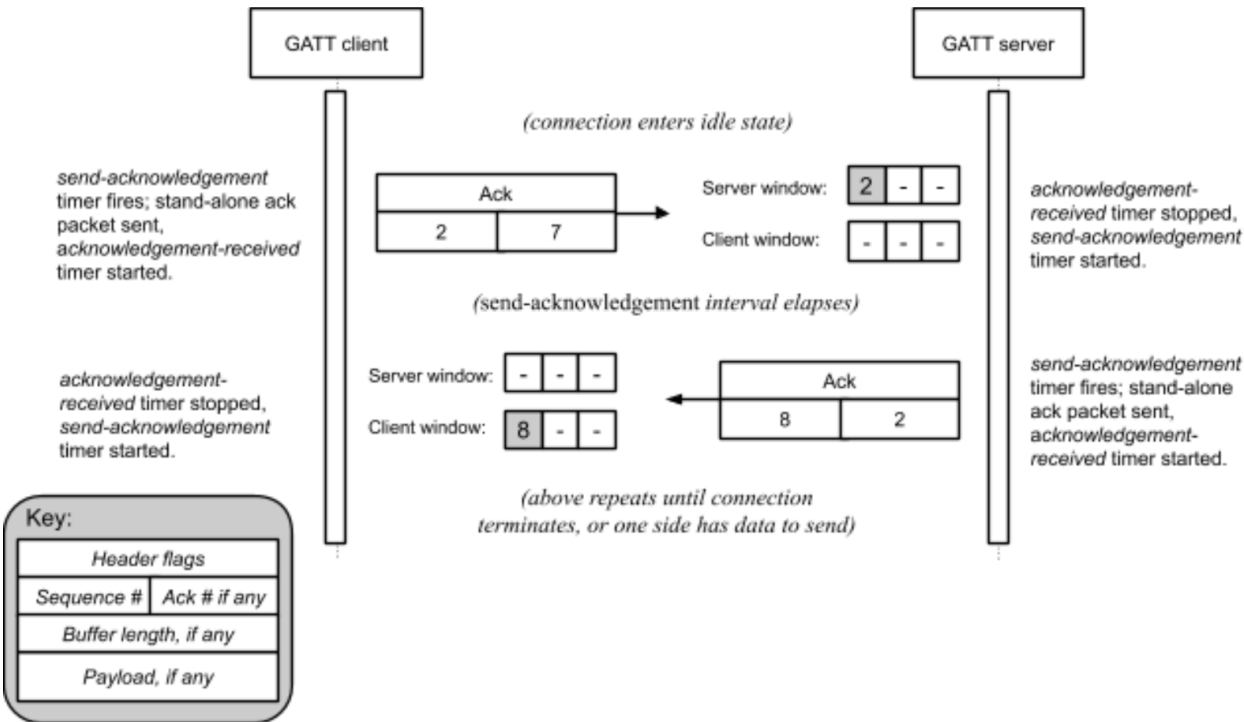


Figure 25. Idle connection scenario

4.19.4.10. Connection Shutdown

To close a BTP session, a GATT client SHALL unsubscribe from characteristic C2. The GATT server SHALL take this action to indicate closure of any BTP session open to the client.

If a BTP Server needs to close the BTP session, it SHALL terminate its BLE connection to the client.

4.19.4.11. Protocol State Diagrams

[Figure 26, “BTP session lifecycle for Central acting as GATT Client”](#) shows the state machine for BTP session management of a BTP Client Device.