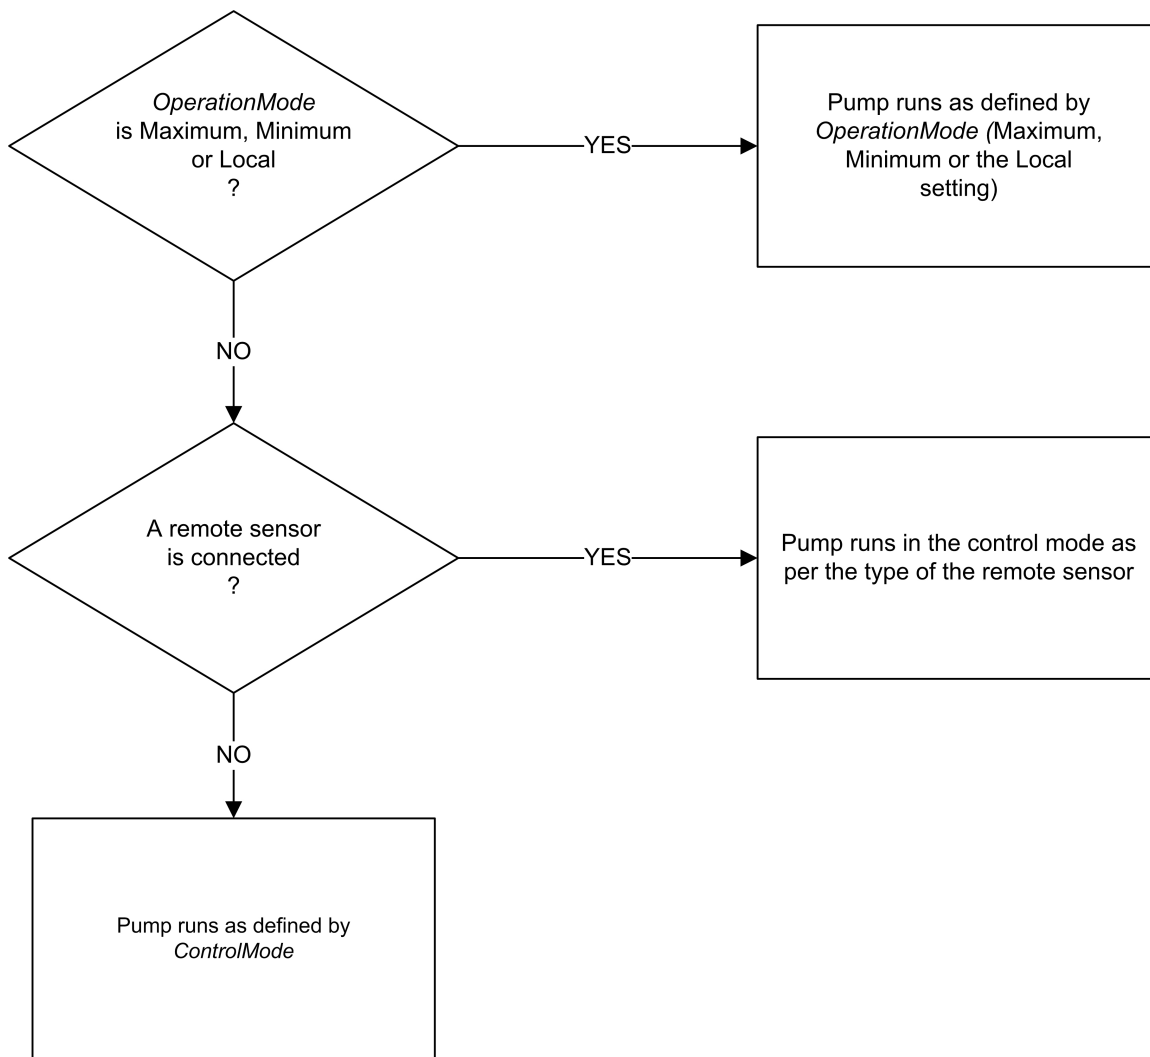


Priority Scheme of Pump Operation and Control

If this attribute is Maximum, Minimum or Local, the OperationMode attribute decides how the pump is operated.

If this attribute is Normal and a remote sensor is connected to the pump, the type of the remote sensor decides the control mode of the pump. A connected remote pressure sensor will make the pump run in control mode Constant pressure and vice versa for flow and temperature type sensors. This is regardless of the setting of the ControlMode attribute.

If this attribute is Normal and no remote sensor is connected, the control mode of the pump is decided by the ControlMode attribute.

OperationMode MAY be changed at any time, even when the pump is running. The behavior of the pump at the point of changing the value of this attribute is vendor-specific.

In the case a device does not support a specific operation mode, the write interaction to this attribute with an unsupported operation mode value SHALL be ignored and a response containing the status of CONSTRAINT_ERROR SHALL be returned.

4.2.7.23. ControlMode Attribute

This attribute specifies the control mode of the pump as defined in [ControlModeEnum](#).