
Huntleigh King Sleigh Uph. Bed Assembly Instructions

Page 1 of 5

Made in Viet Nam

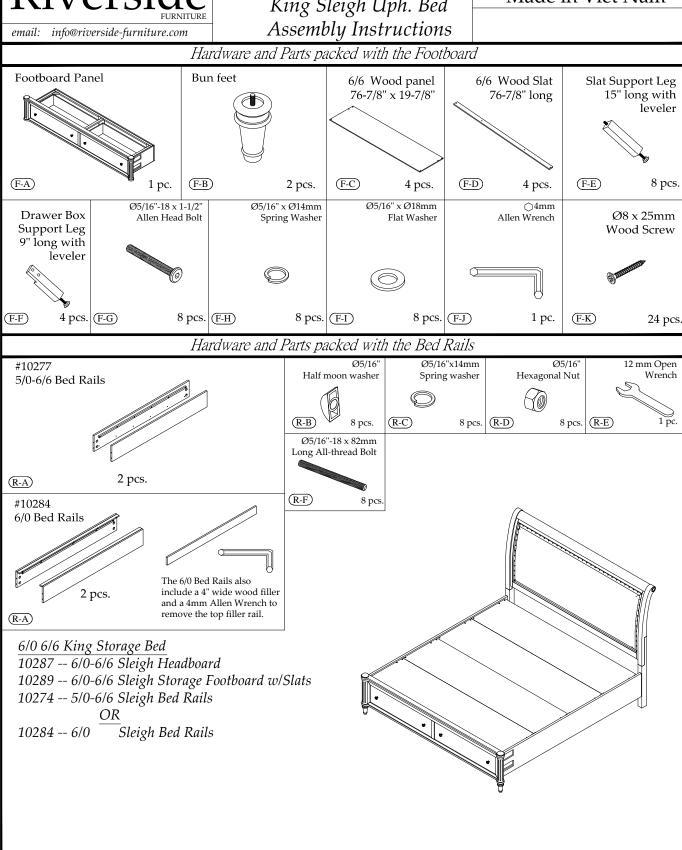


Huntleigh King Sleigh Uph. Bed Assembly Instructions

Page 2 of 5
Made in Viet Nam

email: info@riverside-furniture.com

ASSEMBLY STEPS:

- 1. Place the Storage Footboard (F-A) face down on a clean and soft surface.
- 2. Insert hanger bolt on Bun feet (F-B) into metal connector on bottom of Footboard as shown. Tighten all align Bun foot. (see Detail C).
- 3. Attach the Drawer Box Support Legs (F-F) using the Flat Washers (F-I), Spring Washers (F-H) and Bolts (F-G). Tighten with the Allen Wrench (F-J). (See Detail D).
- 4. Install the \emptyset 5/16" x 82mm Long All-Thread Bolts (R-F) to the threaded inserts of the Headboard and Footboard (see Detail E) .

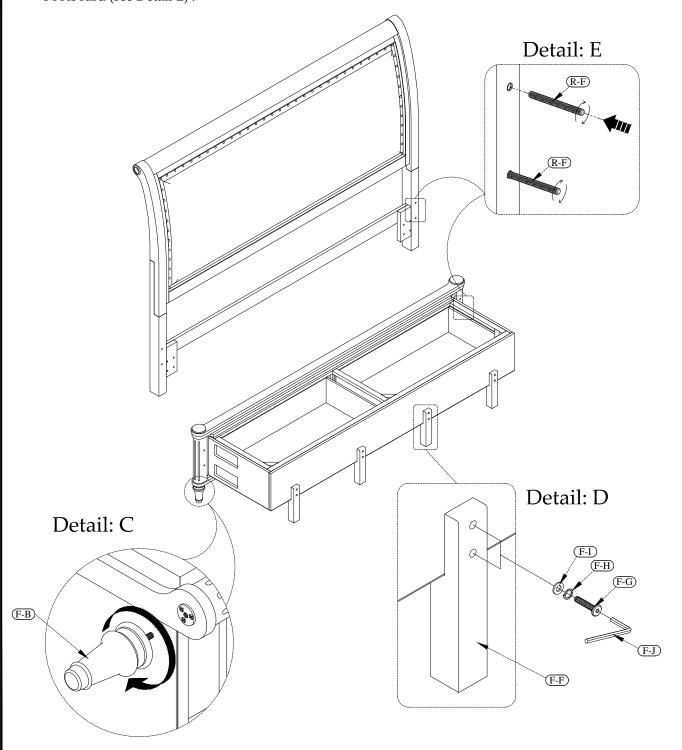

Huntleigh King Sleigh Uph. Bed Assembly Instructions


Page 3 of 5
Made in Viet Nam

email: info@riverside-furniture.com

ASSEMBLY STEPS:

To prevent possible damage to furniture and personal injury, it is recommended that two people are used to perform the following steps.

- 5. Carefully position one end of one Bed Rail (R-A) onto the All-thread Bolts installed on the Headboard and connect using the Half moon washers (R-B), Spring washer (R-C) & Hexagonal Nuts (R-D). Only partially tighten the Nuts until the Footboard has been connected. Repeat for other Bed Rail.
- 6. Open both drawers of the Footboard. Position and connect the Footboard to the other end of the Bed Rails, attaching as in the previous Steps.
- 7. Carefully align the Footboard to be 'square' with the Headboard. Using the Open Wrench (R-E) tighten all Hex Nuts attaching the Side Rails to the Headboard and Footboard. (See Detail F).
- 8. Attach the eight Support Legs (F-E) to the bottom side of four Wood Slats (F-D). (See Detail G).
- 9. Position and attach the Slats to the Bed Rails using the Wood Screws (F-K) and your Phillips Screwdriver (See Detail H)

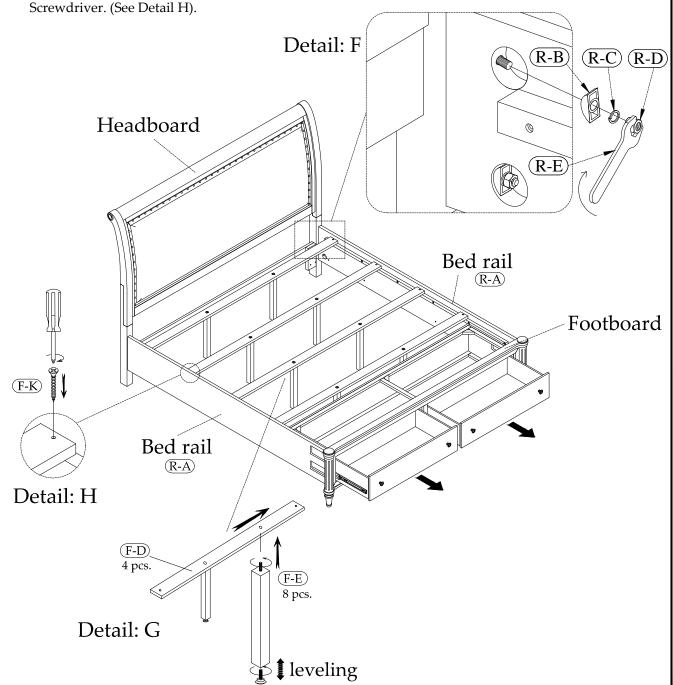



Huntleigh King Sleigh Uph. Bed Assembly Instructions

Page 4 of 5
Made in Viet Nam

email: info@riverside-furniture.com

ASSEMBLY STEPS:

To prevent possible damage to furniture and personal injury, it is recommended that two people are used to perform the following steps.


10. The levelers located at the bottom of the Support Legs can be adjusted if necessary to help support the Slats. Position and attach the Wood panel (F-C) to the Slats using the Wood Screws (F-K) and your Phillips Screwdriver. (See Detail I).

6/6 Eastern King Storage Bed

10287 -- 6/0-6/6 Sleigh Headboard

10289 -- 6/0-6/6 Sleigh Storage Footboard w/Slats

10274 -- 5/0-6/6 Sleigh Bed Rails

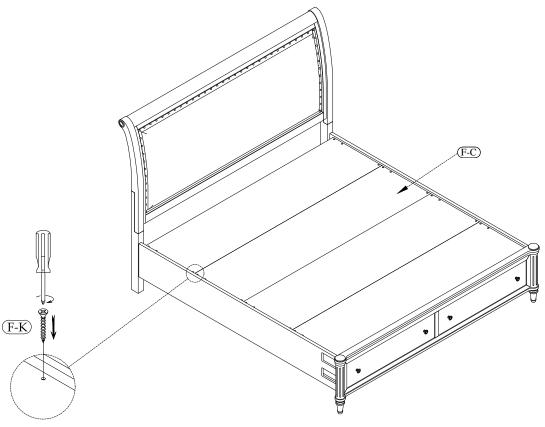

Detail: I

Huntleigh King Sleigh Uph. Bed Assembly Instructions

Page 5 of 5
Made in Viet Nam

email: info@riverside-furniture.com

ASSEMBLY STEPS:

To prevent possible damage to furniture and personal injury, it is recommended that two people are used to perform the following steps.

For the California King Bed, using the Allen Wrench provided with the Bed Rail, remove the filler rails attached at the top edge of both Bed Rails and lay them and the Bolts aside to be reattached.

- 11. The levelers located at the bottom of the Support Legs can be adjusted if necessary to help support the Slats. Position and attach the Wood Panels (F-C) to the Slats using the Wood Screws (F-K) and your Phillips Screwdriver. (See Detail I). Place the 4" wide Wood Panel next to the back of the Footboard.
- 12. Reattach the Filler Rails to the top edges of the Bed Rails.

