


LAB TOPOLOGY

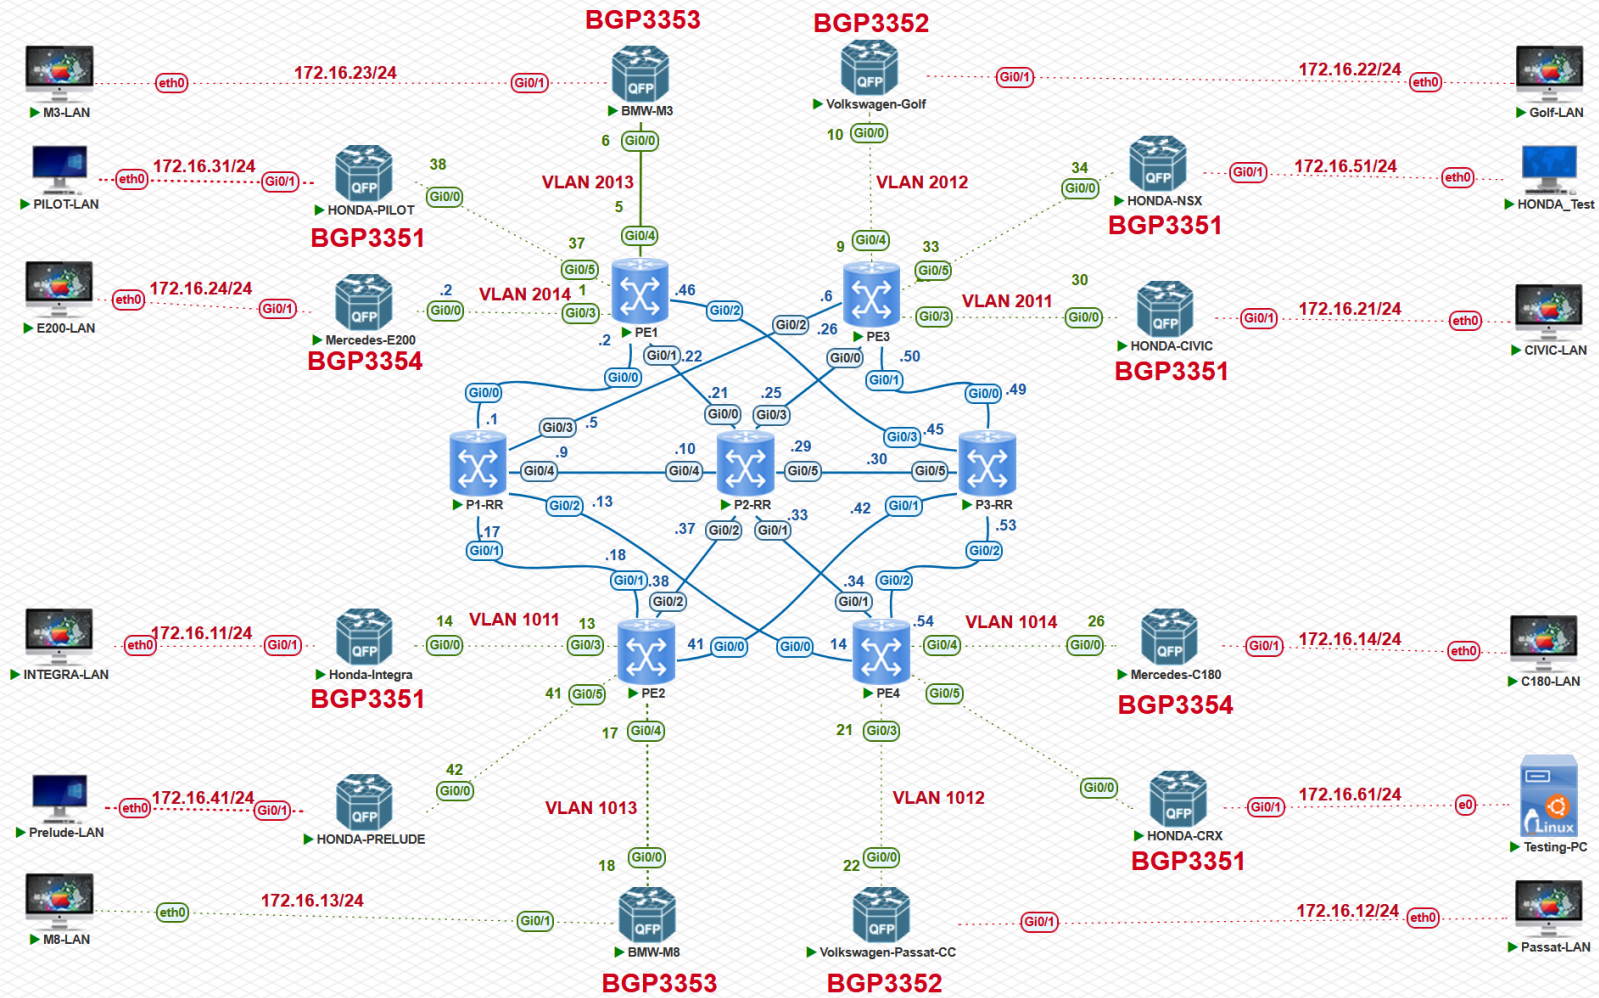

MPLS CORE 10.100/16 Loopbacks 10.255/16
Customer Transit 10.200/16
Customer LAN 172.16/16

BGP3356

1- Core Network Config

P / Router Reflector Router 1:

```
hostname P1-RR
!
no ip domain lookup
ip cef
no ipv6 cef
!
no cdp log mismatch duplex
!
interface Loopback0
 ip address 10.255.255.210 255.255.255.255
!
interface GigabitEthernet0/0
 description To PE 1
 ip address 10.100.101.1 255.255.255.252
 mpls ip
!
interface GigabitEthernet0/1
 description To PE 2
 ip address 10.100.101.17 255.255.255.252
 mpls ip
!
interface GigabitEthernet0/2
 description To PE 4
 ip address 10.100.101.13 255.255.255.252
 mpls ip
!
interface GigabitEthernet0/3
 description To PE 3
 ip address 10.100.101.5 255.255.255.252
 mpls ip
!
interface GigabitEthernet0/4
 description To P-RR2
 ip address 10.100.101.9 255.255.255.252
 mpls ip
!
router ospf 1
 mpls ldp autoconfig
 router-id 10.255.255.210
 network 10.100.101.0 0.0.0.255 area 0
 network 10.255.255.0 0.0.0.255 area 0
!
router bgp 3356
 bgp router-id 10.255.255.210
 bgp log-neighbor-changes
 bgp listen range 10.255.255.0/24 peer-group KWSP
```

```

neighbor KWSP peer-group
neighbor KWSP remote-as 3356
neighbor KWSP cluster-id 10.255.255.210
neighbor KWSP update-source Loopback0
!
address-family vpnv4
  neighbor KWSP activate
  neighbor KWSP send-community extended
  neighbor KWSP route-reflector-client
exit-address-family
!
mpls ldp router-id Loopback0 force
!
```

P / Router Reflector Router 2:

```

hostname P2-RR
!
no ip domain lookup
ip cef
no ipv6 cef
!
username admin privilege 15 password 0 admin
!
interface Loopback0
  ip address 10.255.255.202 255.255.255.255
!
interface GigabitEthernet0/0
  description To PE 1
  ip address 10.100.101.21 255.255.255.252
  mpls ip
!
interface GigabitEthernet0/1
  description To PE 4
  ip address 10.100.101.33 255.255.255.252
  mpls ip
!
```

```
interface GigabitEthernet0/2
  description To PE 2
  ip address 10.100.101.37 255.255.255.252
  mpls ip
!
interface GigabitEthernet0/3
  description To PE 3
  ip address 10.100.101.25 255.255.255.252
  mpls ip
!
interface GigabitEthernet0/4
  description To P-RR1
  ip address 10.100.101.10 255.255.255.252
  mpls ip
!
interface GigabitEthernet0/5
  description To P-RR3
  ip address 10.100.101.29 255.255.255.252
!
router ospf 1
  mpls ldp autoconfig
  router-id 10.255.255.202
  network 10.100.101.0 0.0.0.255 area 0
  network 10.255.255.0 0.0.0.255 area 0
!
router bgp 3356
  bgp router-id 10.255.255.202
  bgp log-neighbor-changes
  bgp listen range 10.255.255.0/24 peer-group KWSP
  neighbor KWSP peer-group
  neighbor KWSP remote-as 3356
  neighbor KWSP cluster-id 10.255.255.210
```

```
neighbor KWSP update-source Loopback0
!
address-family vpnv4
    neighbor KWSP activate
    neighbor KWSP send-community extended
    neighbor KWSP route-reflector-client
exit-address-family
!
ip forward-protocol nd
!
!
no ip http server
no ip http secure-server
!
mpls ldp router-id Loopback0 force
!
control-plane
```

P / Router Reflector Router 3:

```
hostname P3-RR
!
no ip domain lookup
ip cef
no ipv6 cef
!
username admin privilege 15 password 0 admin
!
interface Loopback0
    ip address 10.255.255.203 255.255.255.255
!
interface GigabitEthernet0/0
```

```
description To PE 3
ip address 10.100.101.49 255.255.255.252
mpls ip
!
interface GigabitEthernet0/1
description To PE 2
ip address 10.100.101.42 255.255.255.252
mpls ip
!
interface GigabitEthernet0/2
description To PE 4
ip address 10.100.101.53 255.255.255.252
mpls ip
!
interface GigabitEthernet0/3
description To PE 1
ip address 10.100.101.45 255.255.255.252
mpls ip
!
interface GigabitEthernet0/5
description To P-RR2
ip address 10.100.101.30 255.255.255.252
mpls ip
!
router ospf 1
mpls ldp autoconfig
router-id 10.255.255.203
network 10.100.101.0 0.0.0.255 area 0
network 10.255.255.0 0.0.0.255 area 0
!
router bgp 3356
bgp router-id 10.255.255.203
```

```
bgp log-neighbor-changes
bgp listen range 10.255.255.0/24 peer-group KWSP
neighbor KWSP peer-group
neighbor KWSP remote-as 3356
neighbor KWSP cluster-id 10.255.255.210
neighbor KWSP update-source Loopback0
!
address-family vpnv4
  neighbor KWSP activate
  neighbor KWSP send-community extended
  neighbor KWSP route-reflector-client
exit-address-family
!
ip forward-protocol nd
!
no ip http server
no ip http secure-server
!
mpls ldp router-id Loopback0 force
```

PE 1 Router:

```
hostname PE-1
!
vrf definition BMW
  rd 3353:2013
  route-target export 3353:1013
  route-target import 3353:1013
!
address-family ipv4
exit-address-family
!
vrf definition HONDA
```

```
rd 3351:3011
route-target export 3351:1011
route-target import 3351:1011
!
address-family ipv4
exit-address-family
!
vrf definition MB
rd 3354:2014
route-target export 3352:1014
route-target import 3352:1014
!
address-family ipv4
exit-address-family
!
no ip domain lookup
ip cef
no ipv6 cef
!
username admin privilege 15 password 0 admin
!
interface Loopback0
ip address 10.255.255.101 255.255.255.255
!
interface GigabitEthernet0/0
ip address 10.100.101.2 255.255.255.252
ip ospf bfd
mpls ip
bfd interval 100 min_rx 100 multiplier 5
!
interface GigabitEthernet0/1
ip address 10.100.101.22 255.255.255.252
```

```
mpls ip
!
interface GigabitEthernet0/2
 ip address 10.100.101.46 255.255.255.252
 mpls ip
!
interface GigabitEthernet0/3.2014
 encapsulation dot1Q 2014
 vrf forwarding MB
 ip address 10.200.101.1 255.255.255.252
!
interface GigabitEthernet0/4.2013
 encapsulation dot1Q 2013
 vrf forwarding BMW
 ip address 10.200.101.5 255.255.255.252
!
interface GigabitEthernet0/5
 vrf forwarding HONDA
 ip address 10.200.101.37 255.255.255.252
!
router ospf 1
 mpls ldp autoconfig
 router-id 10.255.255.101
 network 10.100.0.0 0.0.255.255 area 0
 network 10.255.0.0 0.0.255.255 area 0
!
router bgp 3356
 bgp router-id 10.255.255.101
 bgp log-neighbor-changes
 neighbor 10.255.255.202 remote-as 3356
 neighbor 10.255.255.202 update-source Loopback0
 neighbor 10.255.255.203 remote-as 3356
```

```
neighbor 10.255.255.203 update-source Loopback0
neighbor 10.255.255.210 remote-as 3356
neighbor 10.255.255.210 update-source Loopback0
!
address-family vpnv4
    neighbor 10.255.255.202 activate
    neighbor 10.255.255.202 send-community extended
    neighbor 10.255.255.203 activate
    neighbor 10.255.255.203 send-community extended
    neighbor 10.255.255.210 activate
    neighbor 10.255.255.210 send-community extended
exit-address-family
!
address-family ipv4 vrf BMW
    redistribute connected
    neighbor 10.200.101.6 remote-as 3353
    neighbor 10.200.101.6 activate
exit-address-family
!
address-family ipv4 vrf HONDA
    redistribute connected
    neighbor 10.200.101.38 remote-as 3351
    neighbor 10.200.101.38 activate
exit-address-family
!
address-family ipv4 vrf MB
    redistribute connected
    neighbor 10.200.101.2 remote-as 3354
    neighbor 10.200.101.2 activate
exit-address-family
!
ip forward-protocol nd
```

```
!  
mpls ldp router-id Loopback0 force  
!  
control-plane
```

PE 2 Router:

```
hostname PE-2  
!  
vrf definition BMW  
    rd 3353:1011  
    route-target export 3353:1013  
    route-target export 3353:2013  
    route-target import 3353:1013  
    route-target import 3353:2013  
    !  
    address-family ipv4  
    exit-address-family  
    !  
vrf definition HONDA  
    rd 3351:1013  
    route-target export 3351:1011  
    route-target import 3351:1011  
    !  
    address-family ipv4  
    exit-address-family  
    !  
no ip domain lookup  
ip cef  
no ipv6 cef  
!  
interface Loopback0
```

```
ip address 10.255.255.102 255.255.255.255
!
interface GigabitEthernet0/0
ip address 10.100.101.41 255.255.255.252
mpls ip
no shut
!
interface GigabitEthernet0/1
ip address 10.100.101.18 255.255.255.252
mpls ip
no shut
!
interface GigabitEthernet0/2
ip address 10.100.101.38 255.255.255.252
mpls ip
no shut
!
interface GigabitEthernet0/3.1013
encapsulation dot1Q 1013
vrf forwarding HONDA
ip address 10.200.101.13 255.255.255.252
!
interface GigabitEthernet0/4.1011
encapsulation dot1Q 1011
vrf forwarding BMW
ip address 10.200.101.17 255.255.255.252
!
interface GigabitEthernet0/5
vrf forwarding HONDA
ip address 10.200.101.41 255.255.255.252
!
router ospf 1
```

```
mpls ldp autoconfig
router-id 10.255.255.102
network 10.100.101.0 0.0.0.255 area 0
network 10.255.255.0 0.0.0.255 area 0
!
router bgp 3356
  bgp router-id 10.255.255.102
  bgp log-neighbor-changes
  neighbor 10.255.255.202 remote-as 3356
  neighbor 10.255.255.202 update-source Loopback0
  neighbor 10.255.255.203 remote-as 3356
  neighbor 10.255.255.203 update-source Loopback0
  neighbor 10.255.255.210 remote-as 3356
  neighbor 10.255.255.210 update-source Loopback0
  !
  address-family vpnv4
    neighbor 10.255.255.202 activate
    neighbor 10.255.255.202 send-community extended
    neighbor 10.255.255.203 activate
    neighbor 10.255.255.203 send-community extended
    neighbor 10.255.255.210 activate
    neighbor 10.255.255.210 send-community extended
  exit-address-family
  !
  address-family ipv4 vrf BMW
    redistribute connected
    neighbor 10.200.101.18 remote-as 3353
    neighbor 10.200.101.18 activate
  exit-address-family
  !
  address-family ipv4 vrf HONDA
    redistribute connected
```

```
neighbor 10.200.101.14 remote-as 3351
neighbor 10.200.101.14 activate
neighbor 10.200.101.42 remote-as 3351
neighbor 10.200.101.42 activate
exit-address-family
!
mpls ldp router-id Loopback0 force
!
control-plane
```

PE 3 Router:

```
hostname PE-3
!
vrf definition HONDA
rd 3351:2013
route-target export 3351:1011
route-target import 3351:1011
!
address-family ipv4
exit-address-family
!
vrf definition VW
rd 3352:2012
route-target export 3352:1012
route-target import 3352:1012
!
address-family ipv4
exit-address-family
!
no ip domain lookup
ip cef
```

```
no ipv6 cef

!

username admin privilege 15 password 0 admin

!

interface Loopback0

  ip address 10.255.255.103 255.255.255.255

!

interface GigabitEthernet0/0

  ip address 10.100.101.26 255.255.255.252

  mpls ip

  no shut

!

interface GigabitEthernet0/1

  ip address 10.100.101.50 255.255.255.252

  mpls ip

  no shutdown

!

interface GigabitEthernet0/2

  ip address 10.100.101.6 255.255.255.252

  mpls ip

  no shut

!

interface GigabitEthernet0/3

  no shutdown

!

interface GigabitEthernet0/3.2011

  encapsulation dot1Q 2011

  vrf forwarding HONDA

  ip address 10.200.101.29 255.255.255.252

!

interface GigabitEthernet0/4

  no shutdown
```

```
!  
interface GigabitEthernet0/5  
    no shutdown  
!  
interface GigabitEthernet0/4.2012  
    encapsulation dot1Q 2012  
    vrf forwarding VW  
    ip address 10.200.101.9 255.255.255.252  
!  
interface GigabitEthernet0/5  
    vrf forwarding HONDA  
    ip address 10.200.101.33 255.255.255.252  
!  
router ospf 1  
    mpls ldp autoconfig  
    router-id 10.255.255.103  
    network 10.100.101.0 0.0.0.255 area 0  
    network 10.255.255.0 0.0.0.255 area 0  
!  
router bgp 3356  
    bgp router-id 10.255.255.103  
    bgp log-neighbor-changes  
    neighbor 10.255.255.202 remote-as 3356  
    neighbor 10.255.255.202 update-source Loopback0  
    neighbor 10.255.255.203 remote-as 3356  
    neighbor 10.255.255.203 update-source Loopback0  
    neighbor 10.255.255.210 remote-as 3356  
    neighbor 10.255.255.210 update-source Loopback0  
!  
address-family vpnv4  
    neighbor 10.255.255.202 activate  
    neighbor 10.255.255.202 send-community extended
```

```
neighbor 10.255.255.203 activate
neighbor 10.255.255.203 send-community extended
neighbor 10.255.255.210 activate
neighbor 10.255.255.210 send-community extended
exit-address-family
!
address-family ipv4 vrf HONDA
neighbor 10.200.101.30 remote-as 3351
neighbor 10.200.101.30 activate
neighbor 10.200.101.34 remote-as 3351
neighbor 10.200.101.34 activate
exit-address-family
!
address-family ipv4 vrf VW
redistribute connected
neighbor 10.200.101.10 remote-as 3352
neighbor 10.200.101.10 activate
exit-address-family
!
control-plane
```

PE 4 Routers:

```
hostname PE-4
!
vrf definition HONDA
rd 3351:4444
route-target export 3351:1011
route-target import 3351:1011
!
address-family ipv4
exit-address-family
!
```

```
vrf definition MB
  rd 3354:1014
  route-target export 3352:1014
  route-target import 3352:1014
!
  address-family ipv4
  exit-address-family
!

vrf definition VW
  rd 3352:1012
  route-target export 3352:1012
  route-target import 3352:1012
!
  address-family ipv4
  exit-address-family
!

no ip domain lookup
ip cef
no ipv6 cef
!

username admin privilege 15 password 0 admin
!

interface Loopback0
  ip address 10.255.255.104 255.255.255.255
!

interface GigabitEthernet0/0
  ip address 10.100.101.14 255.255.255.252
  mpls ip
  no shutdown
!

interface GigabitEthernet0/1
  no shutdown
```

```
ip address 10.100.101.34 255.255.255.252
mpls ip
!
interface GigabitEthernet0/2
no shutdown
ip address 10.100.101.54 255.255.255.252
mpls ip
!
interface GigabitEthernet0/3
no shutdown
!
interface GigabitEthernet0/3.1012
encapsulation dot1Q 1012
vrf forwarding VW
ip address 10.200.101.21 255.255.255.252
!
interface GigabitEthernet0/4
no shutdown
!
interface GigabitEthernet0/4.1014
encapsulation dot1Q 1014
vrf forwarding MB
ip address 10.200.101.25 255.255.255.252
!
interface GigabitEthernet0/5
no shutdown
!
interface GigabitEthernet0/5
vrf forwarding HONDA
ip address 10.200.101.45 255.255.255.252
!
router ospf 1
```

```
mpls ldp autoconfig
router-id 10.255.255.104
network 10.100.101.0 0.0.0.255 area 0
network 10.255.255.0 0.0.0.255 area 0
!
router bgp 3356
  bgp router-id 10.255.255.104
  bgp log-neighbor-changes
  neighbor 10.255.255.202 remote-as 3356
  neighbor 10.255.255.202 update-source Loopback0
  neighbor 10.255.255.203 remote-as 3356
  neighbor 10.255.255.203 update-source Loopback0
  neighbor 10.255.255.210 remote-as 3356
  neighbor 10.255.255.210 update-source Loopback0
  !
  address-family vpnv4
    neighbor 10.255.255.202 activate
    neighbor 10.255.255.202 send-community extended
    neighbor 10.255.255.203 activate
    neighbor 10.255.255.203 send-community extended
    neighbor 10.255.255.210 activate
    neighbor 10.255.255.210 send-community extended
  exit-address-family
  !
  address-family ipv4 vrf HONDA
    redistribute connected
    neighbor 10.200.101.46 remote-as 3351
    neighbor 10.200.101.46 activate
  exit-address-family
  !
  address-family ipv4 vrf MB
    redistribute connected
```

```
neighbor 10.200.101.26 remote-as 3354
neighbor 10.200.101.26 activate
exit-address-family
!
address-family ipv4 vrf VW
redistribute connected
neighbor 10.200.101.22 remote-as 3352
neighbor 10.200.101.22 activate
exit-address-family
!
ip forward-protocol nd
!
mpls ldp router-id Loopback0 force
!
control-plane
```

Customer: HONDA

CE - Router 1

```
hostname HONDA-INTERGRA
!
ip cef
no ipv6 cef
!
interface GigabitEthernet0/0
no shut
!
interface GigabitEthernet0/0.1011
encapsulation dot1Q 1011
ip address 10.200.101.14 255.255.255.252
!
interface GigabitEthernet0/1
```

```
ip address 172.16.11.1 255.255.255.0
no shutdown
!
router bgp 3351
  bgp log-neighbor-changes
  network 172.16.11.0 mask 255.255.255.0
  neighbor 10.200.101.13 remote-as 3356
  neighbor 10.200.101.13 allowas-in
!
```

CE Router 2:

```
hostname VW
!
no ip domain lookup
ip cef
no ipv6 cef
!
interface GigabitEthernet0/0
no shut
!
interface GigabitEthernet0/0.1012
  encapsulation dot1Q 1012
  ip address 10.200.101.22 255.255.255.252
!
interface GigabitEthernet0/1
  ip address 172.16.12.1 255.255.255.0
no shut
router bgp 3352
  bgp log-neighbor-changes
  network 172.16.12.0 mask 255.255.255.0
  neighbor 10.200.101.21 remote-as 3356
  neighbor 10.200.101.21 allowas-in
!
```

```
line con 0
  exec-timeout 0 0
  privilege level 15
!
line vty 0 4
  login local
  transport input all
  privilege level 15
  exec-timeout 0 0
!
```

CE 3 Router:

```
hostname HONDA-PRELUDE
!
no ip domain lookup
ip cef
no ipv6 cef
!
interface GigabitEthernet0/0
  ip address 10.200.101.42 255.255.255.252
  no shut
interface GigabitEthernet0/1
  ip address 172.16.41.1 255.255.255.0
  no shutdown
router bgp 3351
  bgp log-neighbor-changes
  neighbor 10.200.101.41 remote-as 3356
!
address-family ipv4
  network 172.16.41.0 mask 255.255.255.0
  neighbor 10.200.101.41 activate
  neighbor 10.200.101.41 allowas-in
exit-address-family
```

```
!  
line con 0  
    exec-timeout 0 0  
    privilege level 15  
    logging synchronous
```

```
!  
line vty 0 4  
    exec-timeout 0 0  
    privilege level 15  
    login local  
    transport input all
```

```
!
```

CE 3 Router:

```
hostname HONDA-CRX
```

```
!
```

```
ip dhcp excluded-address 172.16.61.10 172.16.61.254
```

```
!
```

```
ip dhcp pool LAN  
    network 172.16.61.0 255.255.255.0  
    default-router 172.16.61.1
```

```
!
```

```
no ip domain lookup
```

```
ip cef
```

```
no ipv6 cef
```

```
!
```

```
interface GigabitEthernet0/0  
    ip address 10.200.101.46 255.255.255.252  
    no shutdown
```

```
!
```

```
interface GigabitEthernet0/1  
    ip address 172.16.61.1 255.255.255.0  
no shut
```

```
!  
router bgp 3351  
  bgp log-neighbor-changes  
  neighbor 10.200.101.45 remote-as 3356  
!  
  address-family ipv4  
    network 172.16.61.0 mask 255.255.255.0  
    neighbor 10.200.101.45 activate  
    neighbor 10.200.101.45 allowas-in  
  exit-address-family  
!  
line con 0  
  exec-timeout 0 0  
  privilege level 15  
  logging synchronous  
!  
line vty 0 4  
  privilege level 15  
  login local  
  transport input all
```

CE 4 Router:

```
hostname HONDA-CIVIC  
!  
no ip domain lookup  
ip cef  
no ipv6 cef  
!  
interface GigabitEthernet0/0  
no shut  
!
```

```
interface GigabitEthernet0/0.2011
  encapsulation dot1Q 2011
  ip address 10.200.101.30 255.255.255.252
!
interface GigabitEthernet0/1
  ip address 172.16.21.1 255.255.255.0
no shutdown
!
router bgp 3351
  bgp log-neighbor-changes
  neighbor 10.200.101.29 remote-as 3356
!
  address-family ipv4
    network 172.16.21.0 mask 255.255.255.0
    neighbor 10.200.101.29 activate
    neighbor 10.200.101.29 allowas-in
!
```

CE 4 Router:

```
hostname HONDA-NSX
!
interface GigabitEthernet0/0
  ip address 10.200.101.34 255.255.255.252
  no shutdown
!
interface GigabitEthernet0/1
  ip address 172.16.51.1 255.255.255.0
  no shutdown
!
!
router bgp 3351
  bgp log-neighbor-changes
  neighbor 10.200.101.33 remote-as 3356
```

!

address-family ipv4

network 172.16.51.0 mask 255.255.255.0

network 172.16.100.0 mask 255.255.255.0

neighbor 10.200.101.33 activate

neighbor 10.200.101.33 allowas-in

exit-address-family

!

CE 5 Router:

hostname HONDA-PILOT

!

no ip domain lookup

ip cef

no ipv6 cef

!

!

interface GigabitEthernet0/0

ip address 10.200.101.38 255.255.255.252

no shutdown

!

interface GigabitEthernet0/1

ip address 172.16.31.1 255.255.255.0

no shutdown

!

router bgp 3351

bgp log-neighbor-changes

neighbor 10.200.101.37 remote-as 3356

!

address-family ipv4

network 172.16.31.0 mask 255.255.255.0

neighbor 10.200.101.37 activate

```
neighbor 10.200.101.37 allowas-in
exit-address-family
!
```

Customer VW:

CE Router 1:

```
hostname VW-Passat-CC
!
interface GigabitEthernet0/0
no shutdown
!
interface GigabitEthernet0/0.1012
encapsulation dot1Q 1012
ip address 10.200.101.22 255.255.255.252
!
interface GigabitEthernet0/1
ip address 172.16.12.1 255.255.255.0
no shutdown
!
router bgp 3352
bgp log-neighbor-changes
neighbor 10.200.101.21 remote-as 3356
!
address-family ipv4
network 172.16.12.0 mask 255.255.255.0
neighbor 10.200.101.21 activate
neighbor 10.200.101.21 allowas-in
exit-address-family
!
```

CE Router 2:

```
hostname VW-Golf
!
```

```
no ip domain lookup
ip cef
no ipv6 cef
!
!
interface GigabitEthernet0/0
  no shutdown
!
interface GigabitEthernet0/0.2012
  encapsulation dot1Q 2012
  ip address 10.200.101.10 255.255.255.252
!
interface GigabitEthernet0/1
  ip address 172.16.22.1 255.255.255.0
  no shutdown
!
router bgp 3352
  bgp log-neighbor-changes
  neighbor 10.200.101.9 remote-as 3356
!
  address-family ipv4
    network 172.16.22.0 mask 255.255.255.0
    neighbor 10.200.101.9 activate
    neighbor 10.200.101.9 allowas-in
  exit-address-family
!
```

Customer BW:

CE Router 1:

```
hostname BMW-M8
!
interface GigabitEthernet0/0
  no shutdown
```

```

!
interface GigabitEthernet0/0.1013
    encapsulation dot1Q 1013
    ip address 10.200.101.18 255.255.255.252
!
interface GigabitEthernet0/1
    ip address 172.16.13.1 255.255.255.0
    no shutdown
!
!
router bgp 3353
    bgp log-neighbor-changes
    neighbor 10.200.101.17 remote-as 3356
    !
    address-family ipv4
        network 172.16.13.0 mask 255.255.255.0
        neighbor 10.200.101.17 activate
        neighbor 10.200.101.17 allowas-in
    exit-address-family
!

```

CE Router 2:

```

hostname BMW-M3
!
interface GigabitEthernet0/0
    no shutdown
!
interface GigabitEthernet0/0.2013
    encapsulation dot1Q 2013
    ip address 10.200.101.6 255.255.255.252
!
interface GigabitEthernet0/1
    ip address 172.16.23.1 255.255.255.0

```

```
no shutdown
!
router bgp 3353
  bgp log-neighbor-changes
  neighbor 10.200.101.5 remote-as 3356
!
  address-family ipv4
    network 172.16.23.0 mask 255.255.255.0
    neighbor 10.200.101.5 activate
    neighbor 10.200.101.5 allowas-in
  exit-address-family
!
```

Customer MB:

CE Router 1:

```
hostname MB-C180
!
interface GigabitEthernet0/0
no shutdown
!
interface GigabitEthernet0/0.1014
  encapsulation dot1Q 1014
  ip address 10.200.101.26 255.255.255.252
!
interface GigabitEthernet0/1
  ip address 172.16.14.1 255.255.255.0
no shutdown
!
router bgp 3354
  bgp log-neighbor-changes
  neighbor 10.200.101.25 remote-as 3356
!
  address-family ipv4
```

```
network 172.16.14.0 mask 255.255.255.0
neighbor 10.200.101.25 activate
neighbor 10.200.101.25 allowas-in
exit-address-family
```

CE Router 2:

```
hostname MB-E200
!
interface GigabitEthernet0/0
no shutdown
!
interface GigabitEthernet0/0.2014
encapsulation dot1Q 2014
ip address 10.200.101.2 255.255.255.252
!
interface GigabitEthernet0/1
ip address 172.16.24.1 255.255.255.0
no shutdown
!
router bgp 3354
bgp log-neighbor-changes
network 172.16.24.0 mask 255.255.255.0
neighbor 10.200.101.1 remote-as 3356
neighbor 10.200.101.1 allowas-in
!
```