# Ch6: Microprocessors and Microcontrollers – Part 2

### **Contents:**

**Arduino Boards** 

C/C++ Language Overview

Arduino Programming

Digital I/O

Amin Fakhari, Fall 2023

## **Arduino Boards**

**Arduino Boards** 



### What Is an Arduino?

Digital I/O

The **Arduino** is a **microcontroller development platform** paired with an intuitive programming language that you develop using the Arduino integrated development environment (IDE).





By equipping the Arduino with sensors, actuators, lights, speakers, add-on modules (called shields), and other integrated circuits, you can turn the Arduino into a programmable "brain" for just about any control system.



Arduino Boards




## **Arduino Is an Open-Source Hardware**

Because the Arduino is open-source hardware, all the design files, schematics, and source code are freely available to everybody.

You can integrate the Arduino platform into your designs, make and sell Arduino clones, and use the Arduino software libraries in other projects.

### Three Examples of **Arduino Clones**:

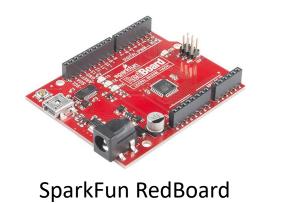






Freeduino

Seeduino

Arduino Boards



## **Some Arduino Shields**

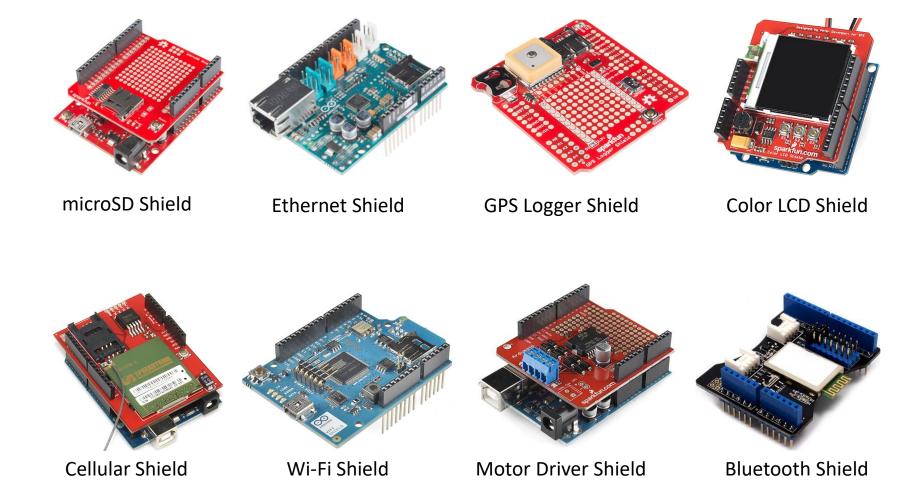

**Arduino Boards** 



### **Arduino Boards**

There are many different official Arduino boards, each with different capabilities (Applications, number of inputs and outputs, speed, operating voltage, form factor, etc.).



### **Arduino Uno**

is the best board to get started with electronics and Arduino Programming.



is the first Arduino board based on a 32-bit ARM core microcontroller and it is the perfect board for powerful larger scale Arduino projects.

### **Arduino Mega 2560**

is UNO's big brother with many general I/O pins to interface with many more devices. It is designed for more complex projects (e.g., 3D printers and robotics projects).

#### **Arduino Nano**

is a compact board similar to the UNO and designed to be mounted right into a breadboard socket.

A full range of official Arduino products: https://www.arduino.cc/en/hardware

Arduino Boards




## **Arduino-Based Projects**

Digital I/O


Three main components of Arduino based projects:

- **Arduino IDE** (Integrated Development Environment)
- One of the Arduino boards
- External hardware (including shields and hand-made circuits)

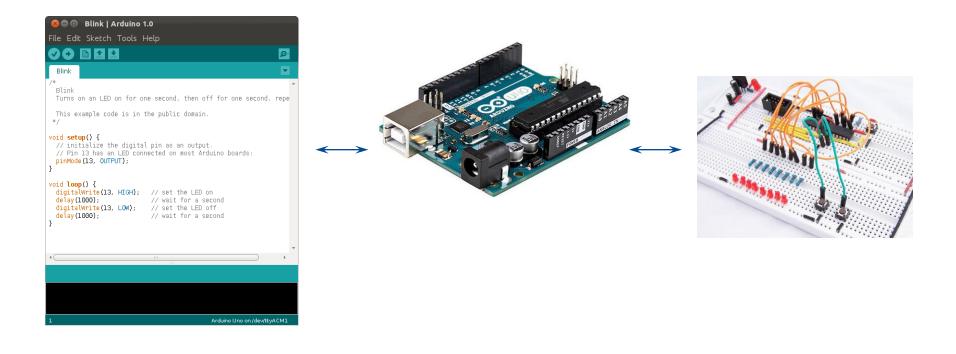

**Arduino Boards** 

## **Arduino Uno Components**

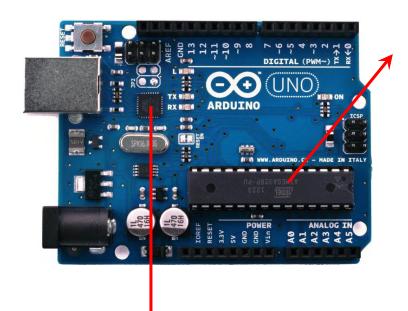


### **ATmega328P Microcontroller**

Arduino Uno uses an AVR ATMega328P microcontroller. It has 32 KB (with 0.5 KB occupied by the bootloader for programming the MCU). It also has 2 KB of SRAM and 1 KB of EEPROM


### **ATmega16U2 Microcontroller**

It takes care of the USB connection and serves as an interface between a USB cable and the serial USART pins on the main microcontroller.

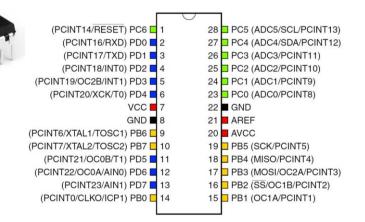

Arduino Boards

## ATmega328P-Arduino Pin Mapping

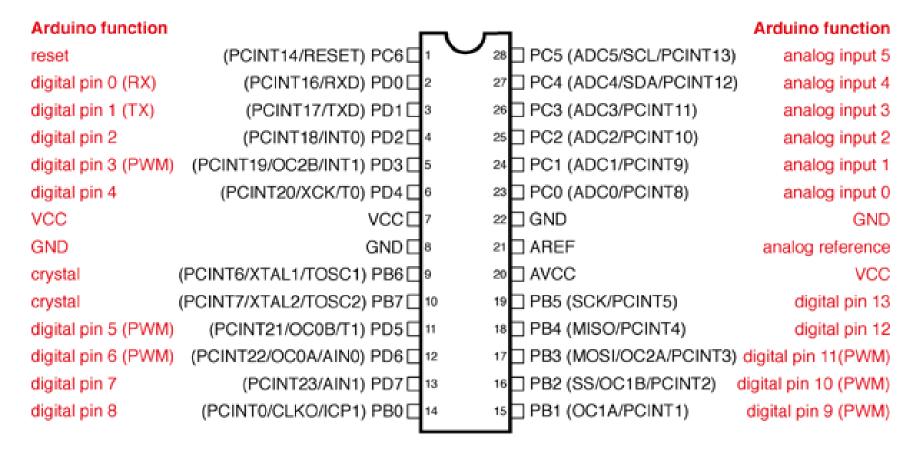


A few pins are already irreversibly wired up and unavailable for use. For instance, PB6 and PB7 are already hard-wired up to the crystal oscillator.

Arduino Boards



## **Arduino Uno Components**

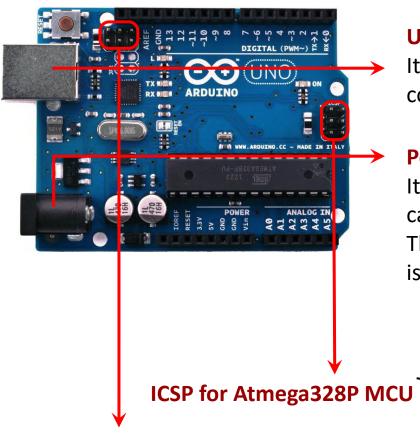

### **USB Connector**

It is used to power the Arduino and also load code onto the Arduino.

### **Power Jack**


It is used to power the Arduino when **no** USB cable is connected to the USB Connector. The recommended voltage for Arduino Uno is between 7 and 12 volts.

**ICSP for ATmega16U2 MCU** 

ICSPs (In-Circuit Serial Programming) are used to update or load the firmware into the microcontroller.

Arduino Boards


## **Arduino Uno Components**

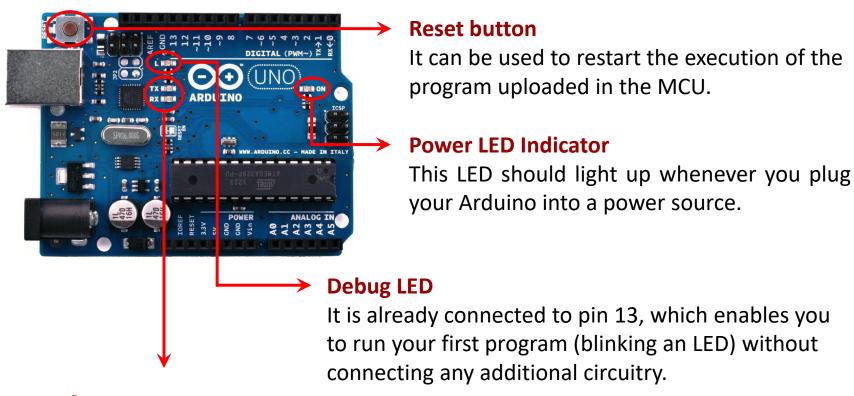

### TX & RX LEDs

These LEDs will give us visual indications whenever the Arduino is receiving or transmitting data like when we are loading a new program onto the board (TX: Transmit, RX: Receive).

Arduino Boards

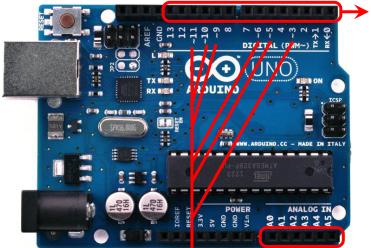

### **DIGITAL Pins (1-13)**

Digital I/O

These pins can be used for both digital **input** (like telling if a button is pushed) and digital **output** (like powering an LED). Each pin can provide (source) or receive (sink) 20 mA as recommended operating condition and 40mA as maximum value to avoid permanent damage to the microcontroller. Each digital pin has an internal pull-up resistor (disconnected by default) of 20-50k ohm.

### **ANALOG IN Pins (A0-A5)**

These pins can read the signal from an analog sensor and convert it into a digital value that we can read. Each can provide 10 bits of resolution (i.e., 10<sup>10</sup>=1024 different values).


### PWM Pins (~)

These pins act as normal digital pins, but can also be used for something called Pulse-Width Modulation (PWM). Think of these pins as being able to simulate analog output (like fading an LED in and out).

Arduino Boards



## **Arduino Uno Components**

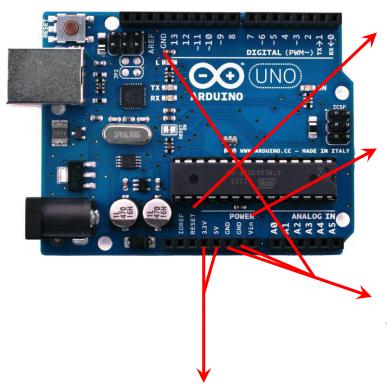

#### RESET

It is used to reset the microcontroller when the reset button on the board is blocked by shields.

### Vin

It is used to supply voltage for Arduino through this pin (7-12V), **or**, if supplying voltage via the power jack, access it through this pin.

### **GND**

There are 3 GND (Ground) pins on the Arduino, any of which can be used to ground your circuit.

### 5V & 3.3V


These pins supply 5 & 3.3 volts generated by the on-board regulators. Maximum current draw is 50 mA.

Arduino Boards



## **Arduino Uno Components**

Digital I/O

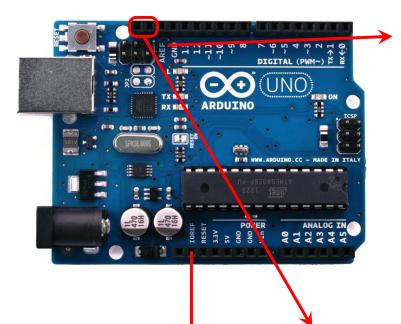

### **AREF**

It is used as reference voltage for the analog inputs (upper end of the input range). By default, it is the same as the chip supply voltage (5V on most Arduino boards), so the analog inputs can measure between 0 and 5V. If you connect the AREF pin to a lower voltage and set the analog reference to EXTERNAL by analogReference(), you can then measure between 0 and AREF voltage to increase the measuring resolution.

### I<sup>2</sup>C (TWI) Interface

It actually uses two of the analog pins (A4 or SDA and A5 or SCL).

#### **IOREF**

Arduino Boards

0000000000000

It provides the voltage reference with which the microcontroller operates. A properly configured shield can read the IOREF pin voltage and select the appropriate power source or enable voltage translators on the outputs to work with the 5V or 3.3V.

### Arduino vs. AVR Microcontroller

- Arduino's microcontroller comes pre-flashed with a bootloader that can flash the chip for you, without need for a hardware programmer. However, the bootloader take up a portion of the flash memory so uploaded program must be smaller.
- A few pins of Arduino's microcontroller are already irreversibly wired up and unavailable for use.
- Arduino board comes with a built-in USB-to-serial converter, so you don't have to buy a separate one.
- Arduino can easily be powered by your computer's **USB power supply**. However, for some small projects, Arduino is still **bulky** (since cannot be installed directly on breadboard) and expensive.


Arduino Boards

## **Powering Arduino**

Digital I/O

 For testing your project, use USB power or wall adapter power supply for powering Arduino.

 For actual demonstration, use an external 9V battery for powering Arduino, and AA batteries for powering motors.

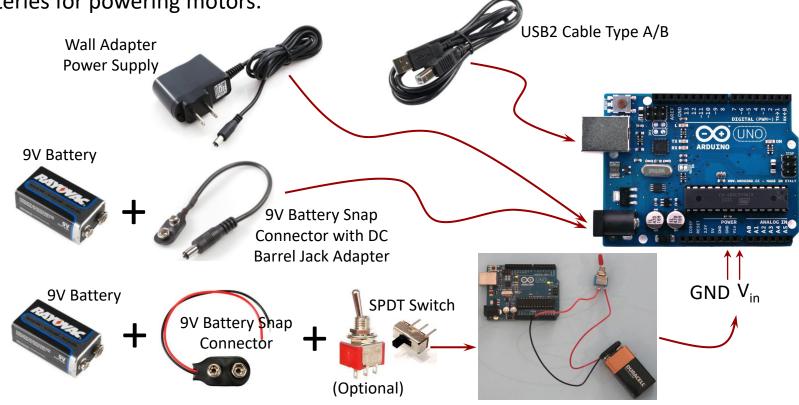

**Arduino Boards** 

Digital I/O



## C/C++ Language Overview

Arduino Boards

## The C Programming Language

**C** is a **middle-level** language that is often used in place of **assembly language** for the programming of microprocessors.

### **Advantages of C Language:**


• It is easier to use.

Arduino Boards

0000000000000

• It is **standardized**, i.e., the **same** program can be used with different microprocessors (an appropriate compiler is used to translate the C program into the machine language for the specific microprocessor). Assembly language is different for the different microprocessors.

## **Basic Structure of C Programming**

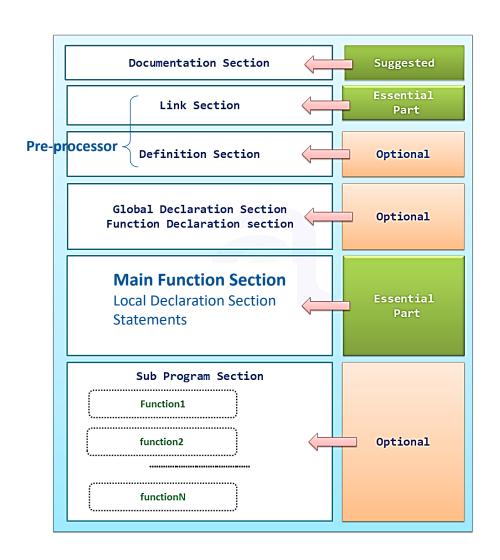

```
/*Documentation Section:
 Program Name: program to find the area of circle
 Author: Rumman Ansari
 Date: 12/01/2013
#include"stdio.h" //Link section
#include"conio.h" //Link section
#define PI 3.14 //Definition section
float area; //Global declaration section
void message(); //function prototype declaration section
void main()
  float r;
                                  //Declaration part
  printf("Enter the radius \n"); //Executable part
  scanf("%f",&r);
  area=PI*r*r;
                                  // Calculation Part
  printf("Area of the circle=%f \n",area);
                                  // Function Calling
  message();
     // Sub function
     void message()
       printf("This Sub Function \n");
       printf("we can take more Sub Function \n");
```

Arduino Boards



## **C** Programming

Digital I/O

### 1. Keywords:

Arduino Boards

000000000000

In C, certain words (in lower case letters) are reserved as **keywords** with specific meanings and should not be used for any other purpose in a C program. The ANSI C standard keywords:

auto	double	int	struct
break	else	long	switch
case	enum	register	typedef
char	extern	return	union
const	float	short	unsigned
continue	for	signed	void
default	goto	sizeof	volatile
do	if	static	while



## **C Programming**

### 2. Statements:

Arduino Boards

0000000000000

- Statements are the entries which make up a program.
- Every statement is terminated by a Semicolon (;). Forgetting to end a line in a semicolon will result in a compiler error.
- Statements can be grouped together in blocks by putting them between braces, i.e., { }.

```
statement 1;
statement 2;
```

**Note**: Normally, statements in a program execute one after the other in the order in which they are written, which is called **sequential execution**.

### 3. Comments:

Comments are **important** for annotating specific lines of code and documentation.

- ❖ When // is put on any line, the compiler ignores all text after that symbol on the same line (single-line comment).
- Everything written between /\* and \*/ will not be compiled (multiline comment).

```
// comment...
Comments...
```

## **C Programming**

Digital I/O

00000000000000000000000

### 4. Main Function:

Arduino Boards

0000000000000

Every C program must have a function called main(). By convention, a return value of 0 from main() is used to indicate normal program termination.

### **Example: Addition operation in C**

```
#include <stdio.h>
int main() {
  int op1, op2, sum; // variable declaration
  op1 = 5; // variable definition
  op2 = 3;
  sum = op1 + op2; // addition operation
  printf("sum of %d and %d is %d", op1, op2, sum);
  return (0);
```

Note that in C programs all spaces are ignored by the compiler.

```
int main (void) {
 return (0);
```

## **Arduino Programming**

Arduino Boards

## Installing and Running the Arduino IDE

Digital I/O

- Access the Arduino website at <u>www.arduino.cc</u> and download the newest version of the IDE from the Download page.
- Install Arduino IDE and the required drivers.
- Connect the Arduino to your computer via USB 2.0 cable type A to B.
- Launch the Arduino IDE and go to **Tools** → **Board** and ensure that the right board is selected i.e., **Arduino Uno**.
- Navigate to **Tools** → **Port** and select the appropriate port.



If you still have a problem, refer to https://www.arduino.cc/en/Guide/HomePage or https://learn.sparkfun.com/tutorials/installing-arduino-ide



- To compile and upload your program onto your Arduino, Click the Upload button

Arduino Boards

## **Programming Arduino**

Digital I/O

Arduino IDE provides a set of Arduino core functions and libraries to make programming much easier. Arduino Boards can also be programmed in **pure C** (which is faster and more optimum) using Arduino IDE.

```
Arduino Programming
void setup() {
pinMode(8,OUTPUT);
void loop() {
digitalWrite(8, HIGH);
delay(1000);
digitalWrite(8, LOW);
delay(1000);
```

Sketch uses **928 bytes** (2%) of program storage space.

```
C
#include <avr/io.h>
#include <util/delay.h>
int main (void) {
 DDRB = 0b00000001;
 while (1) {
    PORTB = 0b00000001;
    delay ms(1000);
    PORTB = 0b000000000;
    delay ms(1000);
  return (0);
```

Sketch uses **178 bytes** ( $\sim$ 0%) of program storage space.

Arduino Boards



## Types of Interfaces to MCUs

You can use three types of interfaces to your microcontroller:

- **Digital I/O**: Switches as inputs, LEDs or buzzers as outputs
- Analog I/O: Sensors of various types, PWM
- Serial: A serial communications protocol of which there are four main types: TTL Serial, I<sup>2</sup>C, 1-Wire, and Serial Peripheral Interface (SPI).

Arduino Boards

## Digital I/O

Arduino Boards

## **Arduino Programming: Digital I/O**

```
void setup() {
    // put your setup code here, to run once:
    pinMode(LED BUILTIN, OUTPUT); // Pin 13
void loop() {
    // put your main code here, to run repeatedly:
    digitalWrite(LED BUILTIN, HIGH);
    delay(1000);
    digitalWrite(LED BUILTIN, LOW);
    delay(1000);
```

Digital I/O

setup() and loop() functions must be included in all Arduino programs and by convention, do not return anything

Code within the curly braces of the setup() function is executed once at the start of the program. This is useful for one-time settings. Code within the curly braces of the loop() function **repeats forever** as long as the Arduino is on.

Arduino Boards

## **Arduino Programming**

```
void setup()
    // put your setup code here, to run once:
    pinMode(LED BUILTIN, OUTPUT); // Pin 13
void loop()
    // put your main code here, to run repeatedly:
    digitalWrite(LED BUILTIN, HIGH);
    delay(1000);
    digitalWrite(LED BUILTIN, LOW);
    delay(1000);
```

### for the amount of time (in **milliseconds**)

**Pauses** the program

delay(time)

### **Configuring pin direction:**

pinMode( pin , direction) **Pin Number** 

digitalWrite(pin, state) **Pin Number** Pin State: HIGH or LOW (5V) (0V)

**Setting the pin state:** 

**Pin Direction:** INPUT (to sink current)

(It remains in this state until it is changed again)

or OUTPUT (to sourse current)

(Pins are INPUTs by default)

**Note**: Arduino language is C/C++. Arduino Language Reference:

https://www.arduino.cc/reference/en/

Arduino Boards

## **Basic Variable Types**

Digital I/O

A **Variable** is a named memory location that can **hold** various **values**. To declare a variable, the type is inserted before the variable name.

VariableType VariableName = Value;

Туре	Size	Value range	
char	1 byte	0 to 255 (2 <sup>8</sup> -1)	char myChar = 'A';
int	2 bytes	-32,768 to 32,767 (-2 <sup>15</sup> to 2 <sup>15</sup> -1)	
float	4 bytes	-3.4028235E+38 t0 3.4028235E+38	Precision: 6 digits
double	8 bytes		Precision: 14 digits

**Qualifiers** alters the meaning of base data types to yield a new data type:

- Size qualifiers: long and short
- Sign qualifiers: unsigned and signed (a variable is signed by default)
- Constant qualifier: const (value of cost cannot be changed in the program)
- Volatile qualifier: volatile


```
Boolean: boolean myBool = true;
        boolean myBool = false;
```

Arduino Boards

## Turn On an LED Using Arduino

Digital I/O

```
const int LED = 9;
void setup()
  pinMode (LED, OUTPUT);
  digitalWrite(LED, HIGH);
void loop()
  //we are not doing anything in the loop!
```

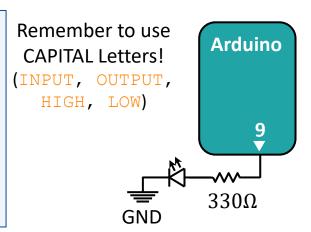

- → This code is a variable declaration. All instances of LED in the program will be **replaced** with 9 when they are called.
- const is a variable qualifier and makes a variable "read-only" and its value cannot be changed during program execution.

(When you are defining values that will not change, using the **const** qualifier is **recommended**.)

**Note**: **loop**() repeats forever as long as the Arduino is on. If you want your Arduino to do something once at boot only, you still need to include the loop() function, but you can leave it empty.

Arduino Boards

## "for" Loop

Digital I/O

The **for loop** is used to **repeat** a **block of statements** enclosed in **curly braces**.

```
for (initialization; condition; increment or decrement) {
 statement(s);
```


The **initialization** happens first and exactly once. Each time through the loop, the condition is tested; if it's *true*, the statement block, and the increment or decrement is executed; then, the **condition** is tested again. When the condition becomes **false**, the loop ends.

```
specifies what should happen
                                  Start Value
                                                            to the index variable at the
Ex.
        sets an index variable
                              specifies when the
                                                           end of each loop execution.
                                                        A simpler form: 1+=100
             for the loop
                               loop should stop
         for (int i=100; i <=1000; i=i+100)
              digitalWrite(LED, HIGH); -
                                                               statement
 Index
Variable
```

Arduino Boards

## **LED with Changing Blink Rate**

```
const int LED=9;
void setup() {
  pinMode (LED, OUTPUT);
void loop()
  for (int i=100; i<=1000; i=i+100) {
    digitalWrite(LED, HIGH);
    delay(i);
    digitalWrite(LED, LOW);
    delay(i);
```

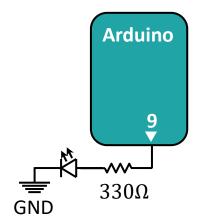

"for" Loop

Arduino Boards



## "for" Loop Description

Digital I/O

```
void loop()
  for (int i=100; i<=1000; i=i+100) {
    digitalWrite(LED, HIGH);
    delay(i);
    digitalWrite(LED, LOW);
    delay(i);
```

- 1. i equals 100. The condition is true, hence,
- 2. The LED is set high, and stays high for 100ms (i.e., the current value of i).
- 3. The LED is set low, and stays low for 100ms, (i.e., the current value of i).
- 4. At the end of the loop,  $\pm$  is incremented by 100, so it is now 200.
- 5. 200 is less than or equal to 1000, so the loop repeats again.
- 6. The LED is set high, and stays high for 200ms, (i.e., the current value of i).
- 7. The LED is set low, and stays low for 200ms, (i.e., the current value of i).
- 8. At the end of the loop,  $\dot{\perp}$  is incremented by 100, so it is now 300.
- 9. This process repeats until i surpasses 1000 and loop ends.


The outer **loop() function** repeats again, sets the  $\pm$  value back to 100 and starts the process again.

Arduino Boards


## **Reading Digital Inputs**

Till now, you are able to generate (write) digital outputs (like Blinking LEDs), the next step is to read digital inputs, such as switches and buttons, so that you can interact with your project in real time. Not Connected



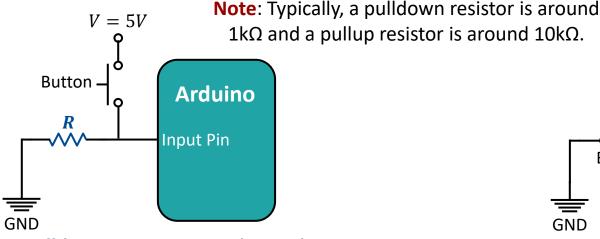

**Pulldown** Resistor is used to make the initial state of input pin **LOW** 

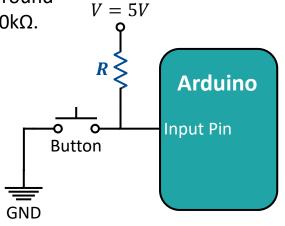

Pullup Resistor is used to make the initial state of input pin **HIGH** 

Arduino Boards

## "if/else" Statement

Digital I/O

"if" statement tests whether a certain condition is true.

If its **condition** is true, the **statement(s)** A is executed, if not, the **statement(s) B** (i.e., "**else**" statement) is executed.

```
if ( condition ) {
 statement(s) A;
else {
 statement (s) B;
```

### **Two** Other Formats:

```
if ( condition 1 ) {
 statement(s) A;
else if (condition 2) {
 statement(s) B;
else {
 statement(s) C;
```

An unlimited number of such else if branches is allowed.

```
if ( condition ) {
statement(s) A;
```

"if" statement without "else" statement

Arduino Boards



### **Comparison and Boolean Operators**

**Comparison Operators** can be used inside the **condition** of an "if" statement.

Beware of accidentally using the single equal sign (=), which is the assignment operator (puts a value into a variable), in "if" statements. Instead, use the double equal sign (==), which is the comparison operator (tests whether the values on the both sides of the sign are equal).

#### **Comparison Operators:**

== (equal to)

!= (not equal to)

< (less than)


> (greater than)

<= (less than or equal to)

>= (greater than or equal to)

**Boolean Operators** can be used with a **condition** or between the different **conditions** of an "if" statement.

- True only if **both** conditions are true: "if (x > 0 && y > 0)" is true only if both x and y are greater than 0.
- True if either condition is true: "if  $(x > 0 \mid | y > 0)$ " is true if either x or y is greater than 0.
- True if the condition is **false**: "if (!(x>0))" is true if x is not greater than 0.

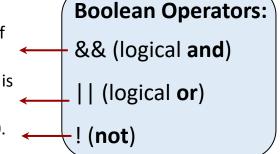

Arduino Boards

### **LED Control with a Button (1)**

The LED stay ON while the button is held down, it stay off while the button is unpressed.

```
V = 5V
const int LED=9;
const int BUTTON=2;
                                                           Button
                                                                      Arduino
void setup()
  pinMode (LED, OUTPUT);
                                                             10k\Omega
  pinMode (BUTTON, INPUT);
void loop()
                                                           GND
  if (digitalRead(BUTTON) ==
    digitalWrite(LED, HIGH);
                                                                       330\Omega
                                                              GND
  else
                                             Since pins are inputs by default,
    digitalWrite(LED, LOW);
                                             this line is not necessary.
```

Value of a digital input, either HIGH or LOW, is read by digitalRead(pin)

Pin Number

Arduino Boards



## "while" Loop

A while loop is used to repeat a block of statements enclosed in curly braces continuously, and infinitely, until the expression inside the parenthesis, becomes false.

```
while (condition) {
 statement(s);
```

**Note**: Something must change the **condition** state, or the while loop will never exit.

Arduino Boards

## **LED Control with a Button (2)**

Digital I/O

The LED blinks while the button is held down, it stay ON while the button is unpressed.

```
const int LED=9;
const int BUTTON=2;
void setup()
 pinMode (LED, OUTPUT);
  pinMode (BUTTON, INPUT);
void loop() {
  while (digitalRead(BUTTON)) {
     digitalWrite(LED, HIGH);
     delay(500);
     digitalWrite(LED, LOW);
     delay(500);
  digitalWrite(LED, HIGH);
```

```
V = 5V
Button
                 Arduino
  10k\Omega
GND
                  330\Omega
     GND
```

**Note**: Both expressions have the same meaning:

```
while (digitalRead(BUTTON)) {
```

```
while (digitalRead(BUTTON) == HIGH) {
```

Arduino Boards



### **Functions**

Digital I/O

**Functions** are blocks of code that can accept input arguments, execute code based on those arguments, and optionally return a result.

Functions are created to **simplify** a program and also to **encapsulate** actions which are needed to be performed **multiple times** in a program.

```
outputType functionName (input1Type input1, input2Type input2, ...) {
                                 Datatype of output (returned value)
             statement(s);
Function
 Body
                                       Note: outputType is "void" if nothing is returned.
             return output;
```

There are two required functions in an Arduino sketch, **setup()** and **loop()**. Both does not have any input and returned value. Other functions must be created everywhere outside the brackets of those two functions.


```
Functions can be "called" from everywhere in
                                                   output = functionName (Arg1, Arg2, ...);
the program.
```

Arduino Boards

### Blinking an LED Using a Function

Digital I/O

In this example, the LED blinks every "i" second.

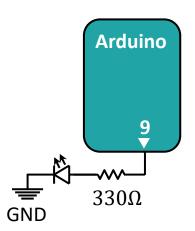

```
const int LED=9;
void setup() {
pinMode (LED, OUTPUT);
void loop() {
int i = 2;
int k;
k = secondFunction(i);
digitalWrite(LED, HIGH);
delay(k);
digitalWrite(LED, LOW);
delay(k);
int secondFunction(int x) {
int result;
result = x * 1000;
return result;
```

Arduino Boards

### **Code Description**

Digital I/O

#### **Global and Local Variables:**

The variables which are declared outside of all functions in the program are global variables. These variables can be used and changed by any function within the program.

For example, Global variable: LED

The variables which are declared within a specific function are **local variables**. These variables can be used and changed only within that specific function.

```
For example, Local variables:
in loop function: i, k
in secondFunction function: x, result
```

```
const int LED=9;
void setup()
pinMode (LED, OUTPUT);
                              Function is
void loop()
                             "called" here.
int i = 2;
int k;
k = secondFunction(i)
digitalWrite(LED, HIGH);
delay(k);
                            A function to
digitalWrite(LED, LOW);
                          multiply a number
delay(k);
                              by 1000.
int secondFunction(int x)
int result;
result = x * 1000;
return result;
```

Arduino Boards




### Buzzer

Digital I/O

A **buzzer** or **beeper** is an audio signaling device, which is usually **piezoelectric**. Typical uses of buzzers and beepers include alarm devices, timers, and confirmation of user input.



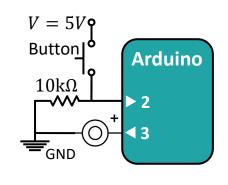



Arduino Boards

0000000000000

An Active Buzzer has an internal oscillator and generates the sound itself. Hence, you can simply turn it ON/OFF with an Arduino digital pin, just like turning ON/OFF an LED.

A Passive Buzzer has no internal oscillator and needs a signal source that provides the sound signal. You need to use a function in your code to create frequencies.

### **Array**

Digital I/O

An Array is a collection of variables which have the same data type and are accessed with an index number.

```
❖ Different ways to create (declare) an array: Size of the array is indicated
int myInts[6]; // without initialization
                                                between square brackets [].
int myArray[5] = \{9,3,2,4,3\}; // with initialization
int myPins[] = \{2, 4, 8, 3, 6\}; // without array size
```

■ The compiler counts the elements and creates an array of the appropriate size.

```
array[1]
array[0]
                   array[2]
                             array[3]
```

Accessing an Array: Arrays are zero indexed (the first element is at index 0).

myArray[0] contains 9

myArray[4] contains 3

myArray[5] is invalid and contains random information (other memory address)

Arduino Boards

### **Array**

Digital I/O

```
Assigning a value to an array:
                                           int myInts[5]=\{9,3,2,4,3\};
myInts[3] = 10;
```

\* Retrieving a value from an array:

```
x = myInts[2];
```

Arduino Boards

0000000000000

Similarly, **multidimensional arrays** can be defined as: array[x][y];


```
char keys [4][3] = {
{'1','2','3'},
{'4','5','6'},
{ '7', '8', '9'},
{ '*', '0', '#'} };
```

```
array[0][0]
                 array[0][1]
array[1][0]
                 array[1][1]
array[2][0]
                 array[2][1]
```

# **Using a Matrix Keypad**

Digital I/O

**Keypads** use switches arranged in a **matrix**. To determine which keys are pressed, the microcontroller will take each of the output pins Q0 to Q2 high in turn, and see what value is presented at each of the inputs I0 to I3.

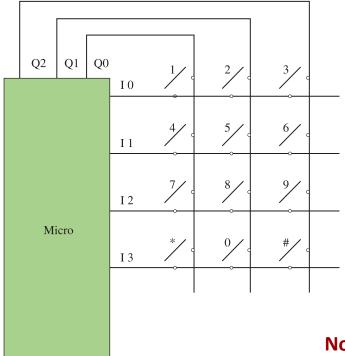

**Note** that if the microprocessor does not support internal pullup resistors, then pullup resistors would be required on each input.

Arduino Boards

## **Using a Matrix Keypad**

```
#include <Keypad.h>.
char keys [4][3] = {
                                        #include is used to include outside
{'1','2','3'},
                                        libraries in the code. Note that
{ '4', '5', '6' },
                                        #include has no semicolon terminator.
{ '7', '8', '9' },
{ '*', 'O', '#'} };
byte rowPins[4] = \{2, 7, 6, 4\};
byte colPins[3] = \{3, 8, 5\};
Keypad myKeypad = Keypad (makeKeymap (keys), rowPins, colPins, 4, 3);
void setup()
void loop()
char key = myKeypad.getKey();
                                         To prepare the Arduino to control a
if (key != null) {
                                         keypad, first, a keypad "object" must
// Do something...
                                         be created. Using this object, you can
                                         control the keypad during the code.
```

Arduino Boards

### **Switch Debouncing**


Here is one of the software methods for debouncing the pushbutton:


```
const int debouncePeriod = 100; //ms
long lastKeyPressTime = 0;
void loop()
long timeNow = millis();
  if (digitalRead(5) == LOW && lastKeyPressTime > timeNow + debouncePeriod) {
  // button pressed, and enough time elapsed since last press
  // do what you need to do
  lastKeyPressTime = timeNow;
```

Arduino Boards


### **High-Power Digital Outputs**

Most microcontrollers will reliably provide us with only around 40 mA of source or sink current as a direct digital output. If you want to drive a higher power load, such as a relay or a high-power LED, then you need to use a **transistor** (BJT or MOSFET).

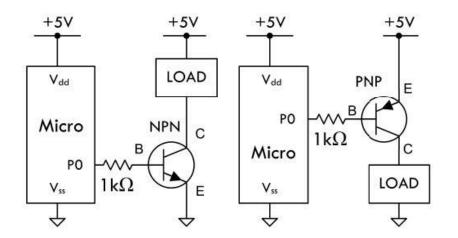

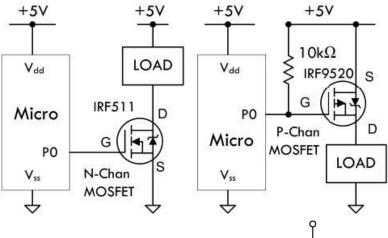

Remember to use a reverse-biased fly-back diode across the inductive loads (DC Motors, Solenoids, Relays, ...), to prevent voltage spikes damaging the transistor during switching.

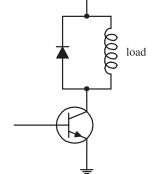

Arduino Boards