Ch6: Microprocessors and Microcontrollers – Part 1

Contents:

Microprocessors and Microcomputers

Microcontrollers

AVR Microcontrollers

Amin Fakhari, Fall 2023

Microprocessors and Microcomputers

Microprocessors and Microcomputers

0000000000000




Hardware vs. Software Solutions

When using only digital ICs for a task (hardware solution), to make a change in functionality, the hardware circuitry must be modified and may require a redesign. However, in complex tasks with many inputs and outputs, a strictly hardware solution is impractical.

Thus, use of a microprocessor-based system to implement a software solution is more appropriate. Software is a procedural program consisting of a set of instructions to execute logic and arithmetic functions and to access input signals and control output signals.

Advantage: without making changes in hardware, the program can be easily modified to alter the system's functionality.

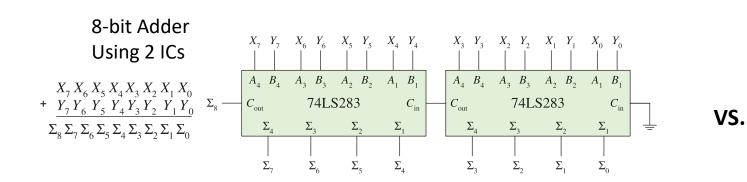


Microcontroller





Microprocessor

Microprocessor Unit (MPU) or Central Processing Unit (CPU) is a single, very-large-scale-integration (VLSI) chip that contains many digital circuits that perform arithmetic, logic, communication, and control functions.

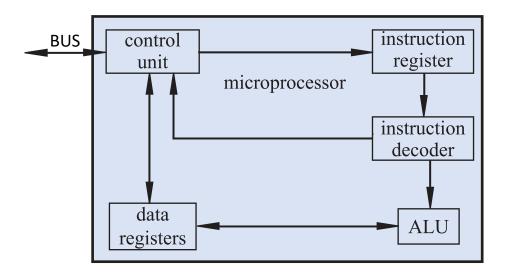


Arithmetic Logic Unit (ALU) executes mathematical functions on data structured as binary words (an ordered set of bits, usually 8, 16, 32, or 64 bits long).



Microprocessor

Instructions are fetched sequentially from memory by the control unit through bus and stored in the instruction register. These instructions are interpreted by the instruction decoder. Each instruction is a set of coded bits that commands the ALU to perform bit manipulation (e.g., binary addition and logic functions) on words stored in the data registers. The ALU results are also stored in data registers and then transferred to memory by the control unit.


- **Instructions** are defined by a binary code called **Machine Code**.
- The instructions are microprocessor dependent.
- Each instruction is represented by a
 unique binary string that causes the
 microprocessor to perform a low-level
 function (e.g., add a number to a register
 or move a register's value to a memory
 location).

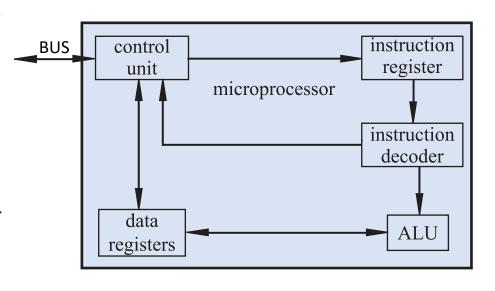

Microcomputer

When a microprocessor is packaged on a printed circuit board (PCB) with other components (e.g., interface and memory chips) the resulting assembly is referred to as a Microcomputer or single-board computer.



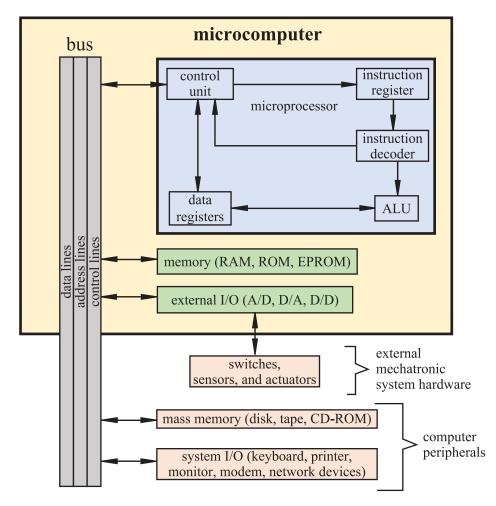




Microcomputer

Bus is a set of shared communication lines. that serves as the central nervous system of the computer. Data, Address, and **Control** signals are shared by all system components via the **bus**.

Each component connected to the bus communicates information to and from the bus via its own **bus controller**.

Data lines are used to communicate words to and from data registers in the various system components (e.g., memory, CPU, and input/output (I/O) peripherals).

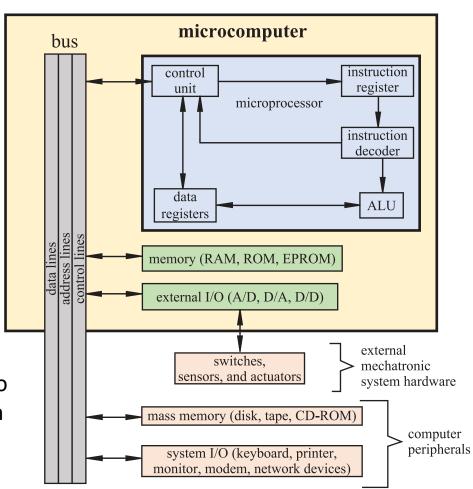




Microcomputer

Address lines are used to select devices on the bus or specific data locations within memory. Devices usually have an address decoder that identifies the address code and activates the device.


Control lines transmit read and write signals, the system **clock signal**, and other control signals such as system interrupts.

Communication to and from the microcomputer occurs through I/O devices connected to the bus. Analog-to-Digital (A/D), Digital-to-Analog (D/A), and Digital I/O (D/D) devices provide interfaces to switches, sensors, actuators, etc.

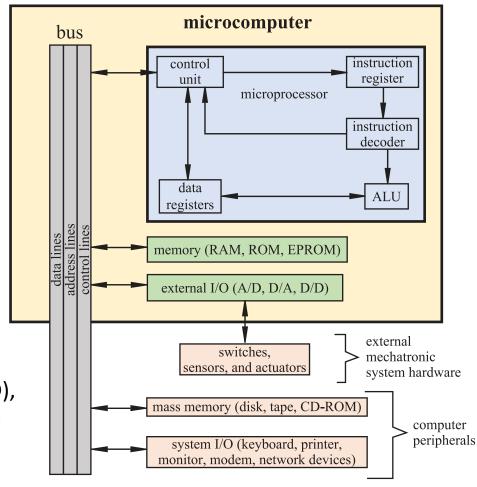



Memory Types

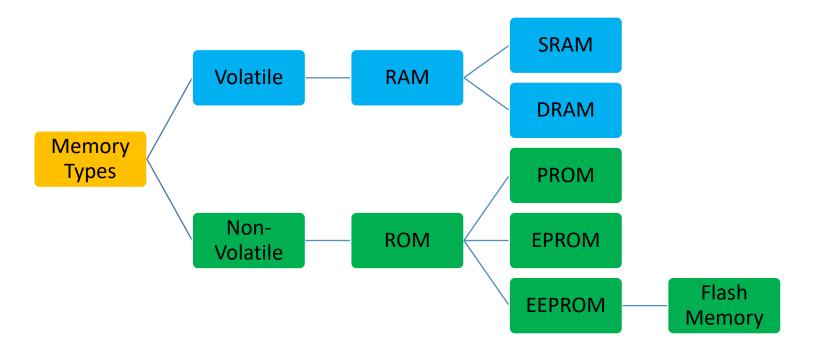

Volatile Memory, in contrast to **Non-Volatile Memory** (**NVM**), is computer memory that **requires power** to maintain the stored information; it retains its contents while powered on but when the power is interrupted, the stored data is quickly lost.



Volatile Memory

Random-Access Memory (RAM) allows data items to be read or written in almost the same amount of time irrespective of the physical location of data inside the memory, as long as power is maintained.

Static RAM (**SRAM**) uses <u>flip-flops</u> to store each bit.



Dynamic RAM (**DRAM**) stores each bit of data in a separate tiny <u>capacitor</u> within an IC. The capacitor can either be charged or discharged ($\equiv 0$ or 1). To prevent charge leakage, DRAM requires an external memory refresh circuit which periodically refreshes (rewrites) the data in the capacitors, restoring them to their original charge.

SRAM is faster and more expensive than DRAM; it is typically used for CPU cache while DRAM is used for a computer's main memory.




Non-Volatile Memory (NVM)

Read-Only Memory (**ROM**) is used for permanent storage of data that the CPU can read, but the CPU cannot write data to ROM. Data stored in ROM cannot be modified, so it is mainly used to store firmware (software that is closely tied to specific hardware, and unlikely to need frequent updates). The data is written into a ROM during manufacture.

Programmable ROM (**PROM**) is manufactured blank and the data is programmed into it only one-time.

Data stored in an **Erasable-Programmable ROM** (**EPROM**) can be erased with strong ultraviolet light (such as from a mercury-vapor light) applied through a <u>transparent quartz</u> <u>window</u> on top of the EPROM IC. Then, new data can be stored on the EPROM.

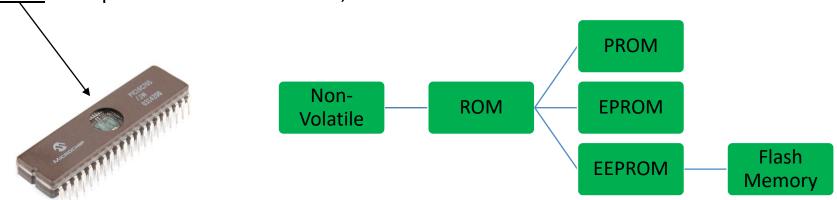


Non-Volatile Memory (NVM)

Data stored in an **Electrically Erasable-Programmable ROM** (**EEPROM**) can be erased electrically and rewritten through its <u>data lines</u> without the need for ultraviolet light. It has a limited life (typically 1,000,000 cycles) for erasing and reprogramming. Erase cycles are slow because of the small block sizes used in erasing.

Flash Memory is a type of EEPROM designed for high speed and high density, at the expense of large erase blocks (typically 512 bytes or larger) and limited number of write cycles (often 10,000).

Many microcontrollers include both: flash memory and a small EEPROM for parameters and history.

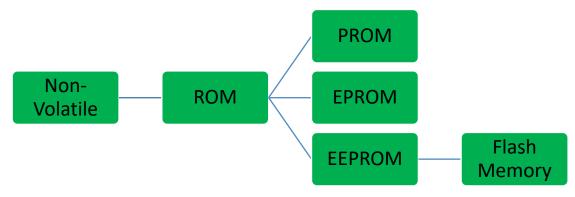




Clock

All computers need a sense of time. **Clock** is used to synchronize all the actions of the microprocessor system.

An oscillator is a device that can give you a clock, which oscillates between a high and a low state, at a certain frequency.

There are many ways to generate a 'beat' for the microprocessor:

- Internal RC: It is limited to a certain speed and its noise level is higher than external oscillators.
- External RC
- External Oscillator: Using a quartz crystal.
- External Resonator
- External Clock

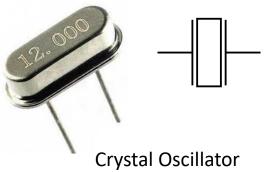




Programming Languages

Microprocessors can be programmed using **low-level** programming languages like **Assembly** language, **high-level** programming languages like **BASIC**, or **middle-level** programming languages like **C/C++**. These programming languages consists of a series of processor **instructions**, comments, and data.

Assembly language (asm) has a very strong correspondence between the **program's** statements and the architecture's machine code instructions (e.g., ADD to add a number to a register and MOV to move a register's value to a memory location).

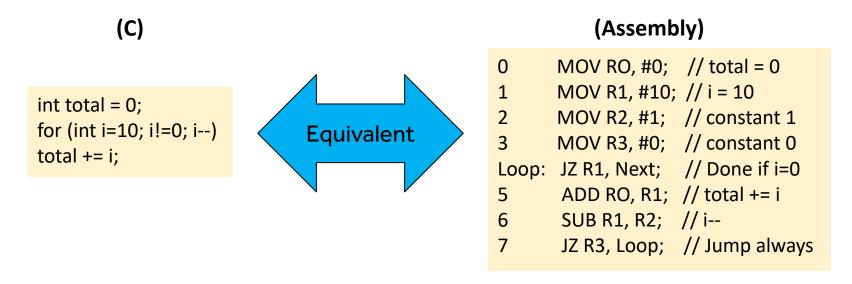



Programming Languages

e.g., the instruction below tells a processor to move an 8-bit value into an AL register:

register identifier

instruction data

Machine Code (Binary): 10110000 01100001

Machine Code (Hexadecimal): B0 61

Assembly: MOV AL, 61h

Load AL with 61 hex (97 decimal)

The **advantages** of using a high-level language are that it is easier to learn and use, programs are easier to **debug** (the process of finding and removing errors), and programs are easier to comprehend. A **disadvantage** is that the resulting machine code may be less efficient (i.e., slower and require more memory) than a corresponding well-written low-level language program.



Programming Languages

Programming languages must be first converted to machine code (binary code) for the specific microprocessor using software called **Compiler** (for assembly it is also called assembler).




Microprocessors and Microcomputers

000000000000




Microcontroller (μ C or MCU) is a single IC which contains a microprocessor (CPU), RAM, ROM, digital I/O ports, serial communication interface, timers, analog-to-digital (A/D) converters, and digital-to-analog (D/A) converters. Because of low cost, versatility, ease of programming, and small size, microcontrollers are used in a wide array of applications.

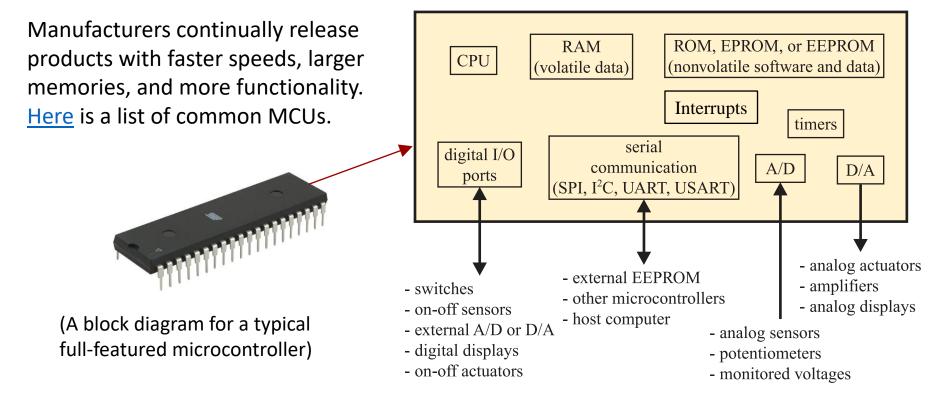




CPU retrieves and executes the program instructions stored in **ROM** and controls all the microcontroller components. The **ROM/EPROM/EEPROM** is used to store the program and any permanent data like settings. The **RAM** is used to store temporary settings and values needed during program execution.

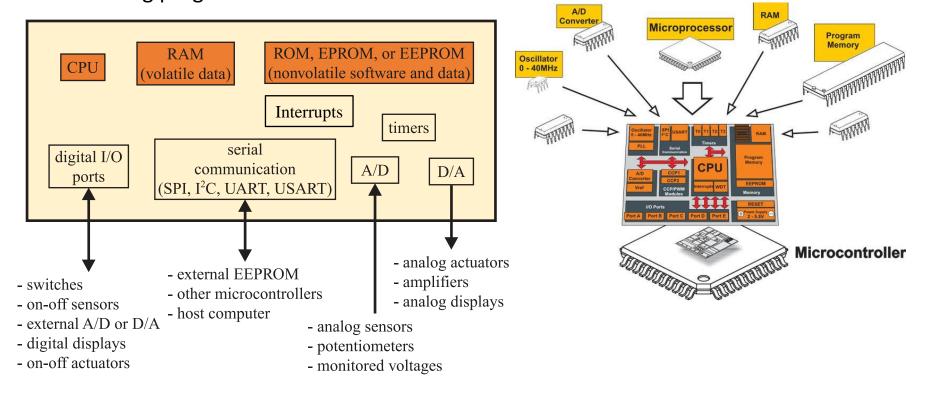

The digital I/O ports allow binary data to be transferred to and from the microcontroller using external pins on the IC.

Serial communication can be used to transmit data to and from external devices which support the same protocol.

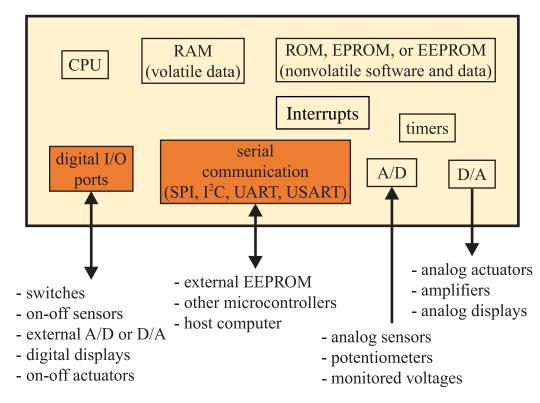


Various protocols for serial communication:

SPI (Serial Peripheral Interface), **I**²**C** (Inter-Integrated Circuit), **UART** (Universal Asynchronous Receiver-Transmitter), **USART** (Universal Synchronous-Asynchronous Receiver-Transmitter), and **USB** (Universal Serial Bus).

The A/D converter converts an external analog voltage to a digital value that can be processed or stored by the CPU.

The **D/A converter** outputs an analog voltage to a nondigital device.

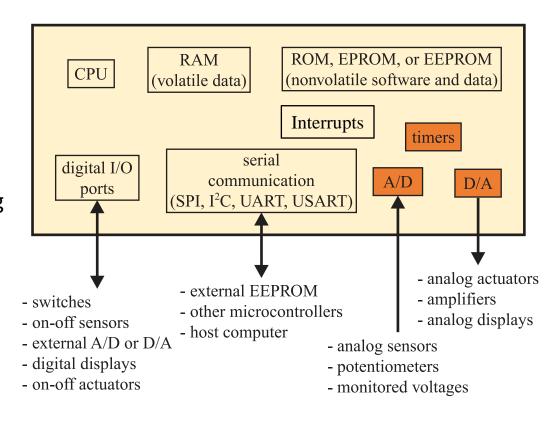


Onboard **Timers/Counters** are usually provided to help create delays or ensure events occur at precise time intervals (e.g., reading the value of a sensor).



An **interrupt** system is used to interrupt a running program in order to process a special routine called the **interrupt service routine** (ISR).



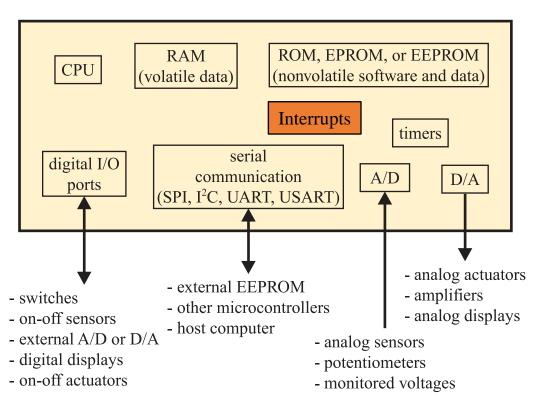



This is the ability of the MCU to respond to external data that requires immediate attention, such as data conveyed by an external sensor indicating important shutdown information.



Microcontroller Programmer

Microcontroller Programmer is a hardware device accompanied with software which is used to transfer the compiled machine code (usually a HEX file) from a PC directly to the EEPROM of the microcontroller. The code is transferred using serial, parallel, or USB port.

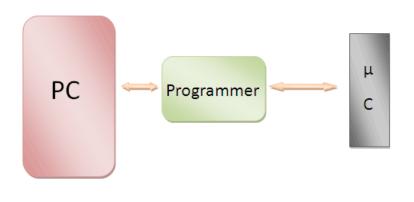

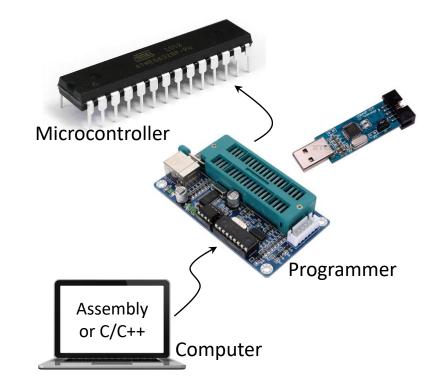

AVR Microcontrollers



AVR Microcontrollers

AVR is a family of microcontrollers developed since 1996 by **Atmel**, acquired by **Microchip Technology** in 2016. These are **modified Harvard architecture 8-bit RISC** single-chip microcontrollers. AVR was one of the first microcontroller families to use on-chip **flash memory** for program storage.

AVRs are generally classified into following:

- tinyAVR (ATtiny series)
 - 0.5–32 KB program memory 6–32-pin package Limited peripheral set
- megaAVR (ATmega series)


4–256 KB program memory 28–100-pin package Extended instruction set Extensive peripheral set XMEGA (ATxmega series)

16–384 KB program memory
44–64–100-pin package (A4, A3, A1)
32-pin package: XMEGA-E
(XMEGA8E5)
Extended performance features
Extensive peripheral set with ADCs

32-bit AVRs



ATtiny85 Microcontroller is a low-power CMOS 8-bit microcontroller based on the AVR enhanced RISC architecture. It is an 8-pin IC available in both surface-mount and throughhole DIL packages.

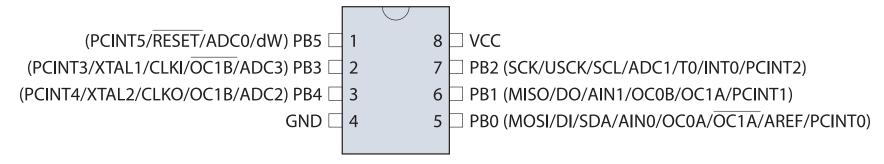

VCC: Supply voltage (0-10 MHz @ 2.7-5.5V, 0-20 MHz @ 4.5-5.5V)

GND: Ground

RESET: Reset input (a low level on this pin will generate a reset)

Port B (PB5:PB0): It is a 6-bit bi-directional I/O port with internal pull-up resistors.

- Port B also serves the functions of various special features.


(Refer to datasheet for more information)




Three different types of **Memory**:

- 8 kB of **flash** memory in which the program instructions are stored.
- 256 bytes of **SRAM**, which is used to contain data during execution of instructions.
- 512 bytes of **EEPROM** that is used to store nonvolatile data that needs to be retained after a loss of power.


Watchdog Timer allows the microcontroller to be put into a sleep mode, which it consumes negligible power. The watchdog timer will wake up the microcontroller after a certain amount of time has passed.

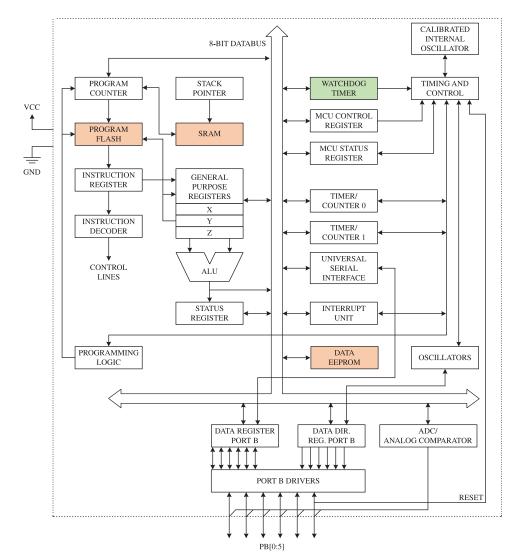

The device can either use the **internal oscillator** or two of the pins that would otherwise be used for inputs or outputs can be sacrificed to use an **external crystal oscillator**.

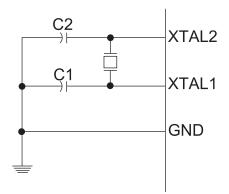


All of the I/O pins can also be used with the internal 10-bit **ADC**.

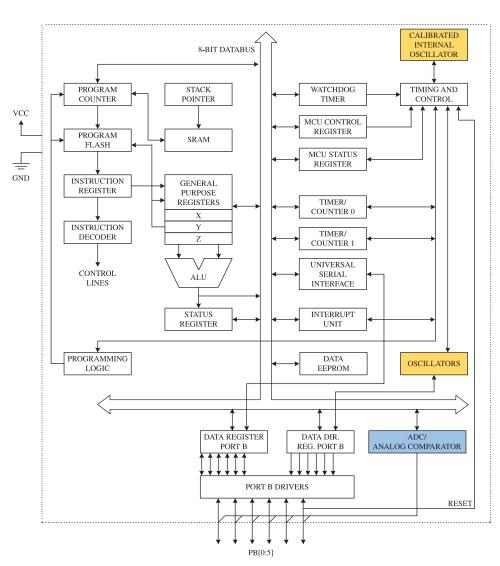

Two **timers** can be used to generate timer interrupts (to trigger some code to be executed periodically), increments, delays, and PWM outputs.

Interrupt Unit is triggered by a change in the level at a pin.

It has a **Universal Serial Interface**, which can communicate with a number of different types of serial buses including USB, I²C, and serial.

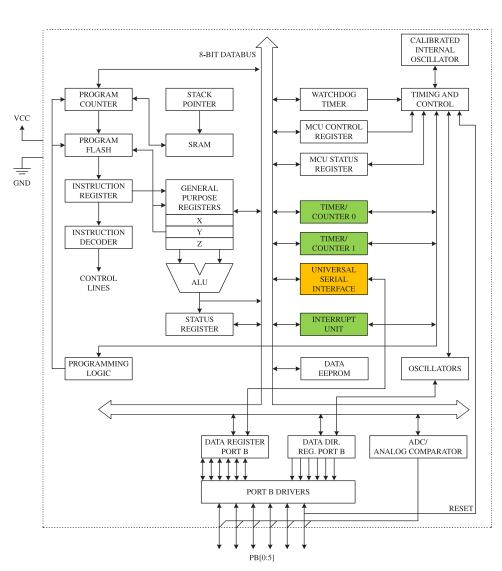


000000




ATmega328P Microcontroller

ATmega328 Microcontroller is a low-power CMOS 8-bit microcontroller based on the AVR enhanced RISC architecture. It is an IC available in different packages; 28-pin PDIP, 28-pin QFN, 32-pin QFN, 32-pin TQFP.

- Plastic Dual Inline Package (PDIP)
- Quad-Flat No-Leads (QFN)
- Thin Quad Flat Package (TQFP)

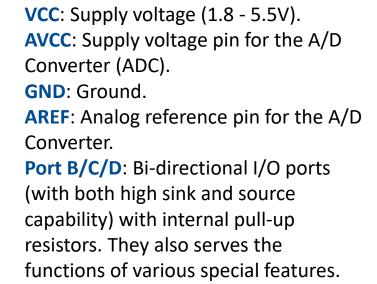


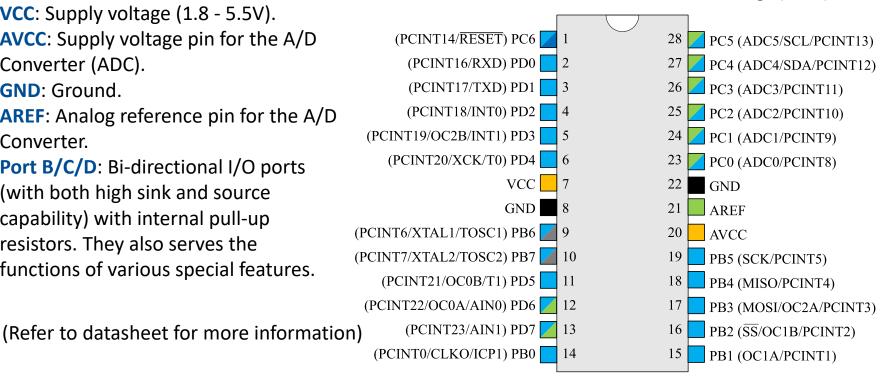




ATmega328P Microcontroller: Block Diagram

Features	ATmega328/P
Pin Count	28/32
Flash (Bytes)	32K
SRAM (Bytes)	2K
EEPROM (Bytes)	1K
General Purpose I/O Lines	23
SPI	2
TWI (I2C)	1
USART	1
ADC	10-bit 15 kSPS
ADC Channels	8
8-bit Timer/Counters	2
16-bit Timer/Counters	1

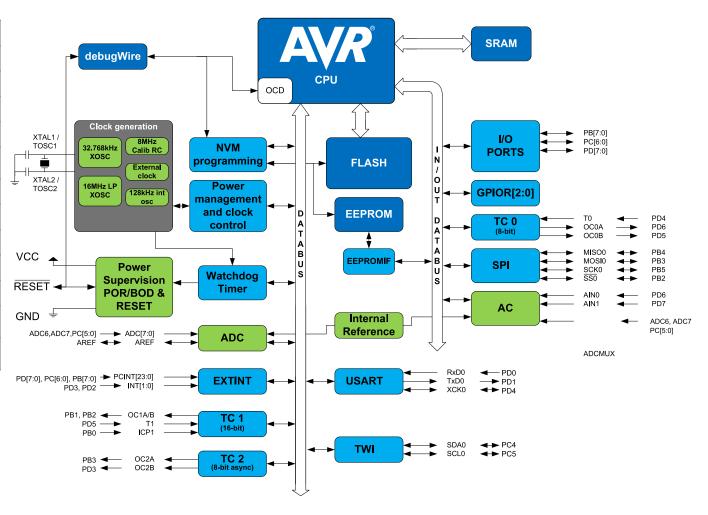


Example: Blinking LED using ATtiny85

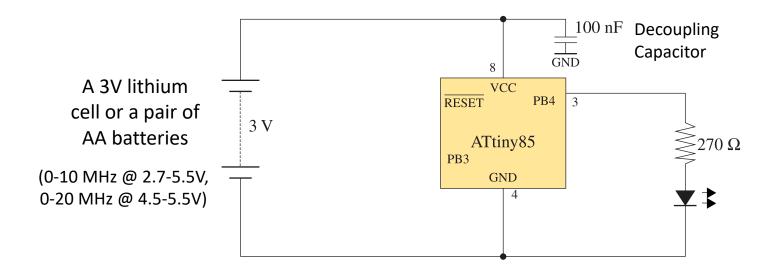

- This simple circuit can also be made with a **555 timer**. Although the microcontroller is more expensive and it also needs programming, it has more flexibility.
- The clock frequency can be set during programming, and it can also be changed from program code while the MCU is actually running. The main reason for controlling the clock frequency is to reduce the power consumption.

Example: Adjustable LED Blinker using ATtiny85

The potentiometer is connected to a pin that will be used as an analog input, which can be used to control the rate at which the LED flashes.

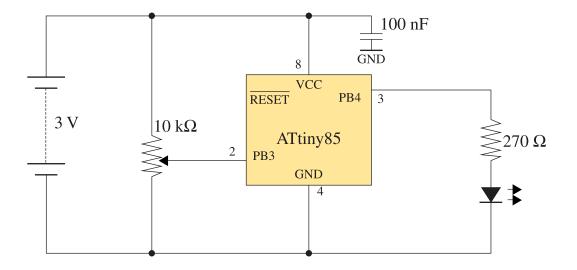


Once you know how to interface and program one microcontroller, it is easy to extend that knowledge to other microcontrollers with different features and programming options.




Programming AVR MCU

The AVR MCUs are usually programmed in C, which offers a good compromise between performance and readability, using two methods:

(1) Atmel AVR GNU Toolchain which is a collection of tools/libraries includes compiler, assembler, linker and Standard C & math libraries.

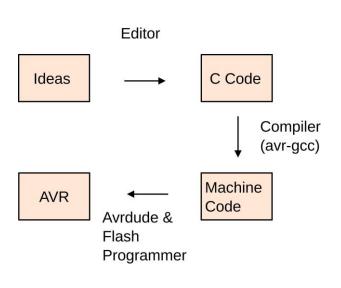

(2) Atmel Studio which is a seamless and easy-to-use integrated development platform (IDP) to write, build and debug your applications written in C/C++ or assembly code.

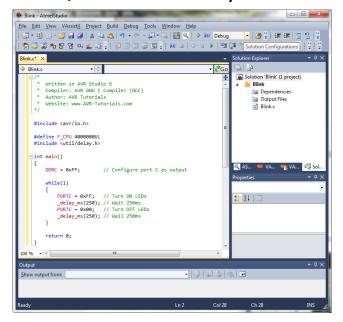




Programming AVR MCU by Arduino Language

The Arduino IDE can be used to simplify the writing of code for most processors in the AVR 8-bit range, including the ATtiny85, although the size of the compiled code is not efficient.

Arduino IDE

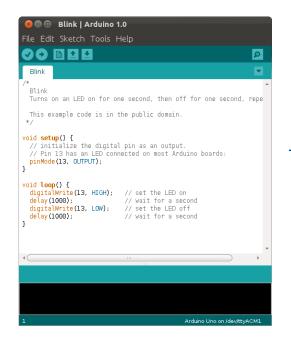





Tutorials:

http://highlowtech.org/?p=1695

https://www.instructables.com/id/Program-an-ATtiny-with-Arduino/