
SOLENOID VALVE(ACCESSORIES) MANIFOLD



Ordering code




200M: 200 Series manifold

300M: 300 Series manifold 400M: 400 Series manifold

Number of stations

100M: 1-16 Stations 200M: 1-16 Stations 300M: 1-12 Stations 400M: 1-7 Stations

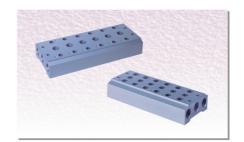

Manifold for choosing list


Manifold\Valve type	4V100	4V200	4V300	4V400
100M	•			
200M		•		
300M			•	
400M				•


Ordering code for blanking plate



200M: 200 Series 300M: 300 Series 400M: 400 Series

Dimensions

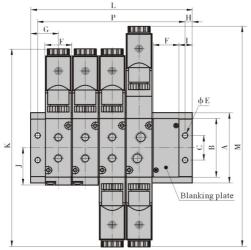

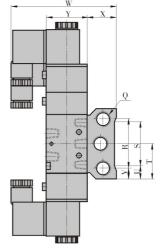

Type\Item	Α	D	C	E	E	C	П	1	1	K	L															
Typeatem	A	ь	C	E	r	G	п	J	K	1F	2F	3F	4F	5F	6F	7F	8F	9F	10F	11F	12F	13F	14F	15F	16F	
100M□F	58	43.2	20	4.5	18.3	19	5	10	28.2	139.4	38	57	76	95	114	133	152	171	190	209	228	247	266	285	304	323
200M□F	61	50.7	21	4.5	22.4	23	6	12	31.7	170	46	69	92	115	138	161	184	207	230	253	276	299	322	345	368	391
300M□F	75	64.8	26	4.5	27.3	27	6	13.5	40	188.8	54	82	110	138	166	194	222	250	278	306	334	362	_	_	-	-
400M□F	104	94.5	32	5.5	34.3	31.5	7	14.5	57	221.8	63	98	133	168	203	238	273				_	_	_	_	-	

Type\Item	М		P													0	В	S	т	п	V	W	v	v		
rypeutem M	1F	2F	3F	4F	5F	6F	7F	8F	9F	10F	11F	12F	13F	14F	15F	16F	Ą	п	3	1		ľ	W	A		
100M□F	154.5	28	47	66	85	104	123	142	161	180	199	218	237	256	275	294	313	PT1/4	40	30	29	14	9	79	25	27
200M□F	189	34	57	80	103	126	149	172	195	218	241	264	287	310	333	356	379	PT1/4	43	32	30.5	14.5	9	93	26	35
300M□F	208	42	70	98	126	154	182	210	238	266	294	322	350	-	-	-	-	PT3/8	53	48	37.5	13.5	11	99.5	30	40
400M□F	243	49	84	119	154	189	224	259	_	-	-	-	-	-	-	-	-	PT1/2	68	67	52	18.5	18	112.5	38	50