

A N A L O G U E D E S K C O .

INDEX-01 / User Manual

Model: INDEX-01

Batch: 001

Creator: Analogue Desk Co.

Date: 2026-02-16

01 / THE CONCEPT

INDEX-01 bridges the gap between the ephemeral nature of digital data and the tactile permanence of instrumentation. Whether tracking market volatility or environmental signals, you now have a physical anchor for your most important data.

Thank you for acquiring a unit from Batch 001, the Founder's Batch.

02 / PRE-FLIGHT CHECK

Before powering the device for the first time, please note:

- **Power Input:** Use the provided USB-C cable. Connect to a standard 5V DC (0.5A) USB power source.
- **WiFi:** INDEX-01 is designed for stability on 2.4GHz WPA2 Home Networks. It is not compatible with 5GHz-only bands or other networks requiring a secondary login (Captive Portals).
- **Mechanical Care:** The needle is driven by a precision stepper motor. Do not manually rotate the needle, as this may misalign the needle and/or damage the internal gearing.

03 / SETUP WIFI

1. **Power On:** Connect the USB-C cable to the rear USB socket. The device will glow deep blue, indicating WiFi needs to be set up.
2. **Temporary Access Point:** On your smartphone or laptop, look for a WiFi network named **INDEX-01_setup**. Connect to it.
3. **Portal:** A configuration page should open automatically. If it doesn't, navigate to <http://192.168.4.1> in your browser.
 - a. Use the password 'analoguedeskco'.
4. **Credentials:** Select your home WiFi network and enter your password.
5. **Save:** The device will reboot and begin initialisation.

04 / INITIALISATION

Once INDEX-01 has Wifi setup, the device initialisation sequence has several phases, indicated by the color of the unit:

- White (5 seconds): Reset mode. In this phase, it's possible to [factory reset](#) the device. Then:
- Light blue: Motor zeroing. The needle will sweep through its full range. If it buzzes lightly at one extreme, this is normal behaviour.
- Green: Centering. Pointer moves to midpoint.


The device then enters its current operating [mode](#). By default, this is the 'clock' mode, with the 'glacier' ambience.

05 / FIND INDEX-01 ON THE NETWORK

Now INDEX-01 has connected to Wifi, it will have been assigned an address. This is the address you use in a browser address bar to configure it.

Here's how to find the address. Wait a few minutes after INDEX-01 has started, then try these methods, which may or may not work depending on your OS and browser:

- Navigate to <http://index.local>
- Navigate to <http://index>
- On Windows, open File Explorer and go to Network. Look for 'INDEX' and click it.

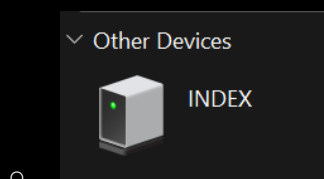

- Look up INDEX-01 in your router's device list. Enter the IP address into a browser address bar.

- It might be named differently depending on your local network. Look for a device with the manufacturer, 'Espressif'. This is the brand of the pre-certified microcontroller built into INDEX-01.
- Look up INDEX-01 in a network scanner, like <http://www.fing.com>. Enter the IP address into a browser address bar.

Please be patient. Try every minute for 10 minutes. Try different devices.

06 / CONFIGURATION

- INDEX-01 runs an internal configuration portal allowing excellent customization options, of both mode and ambience, accessed by your normal web browser.
- In the browser,
 - It can take a little while after startup for your local network to recognise the new <http://index.local> address. Typically, you'll get ERR_NAME_NOT_RESOLVED.
 -
 - If this address does not work after this time,
- In the Configuration UI:
 - MODE:** select a data source
 - AMBIENCE:** modify the LED lighting effects and night mode
 - ADVANCED:** diagnostic tools, reset options
- NOTE: The configuration UI is not available during the following situations.
 - Start up
 - Initialization
 - [Setup wifi mode](#)
 - Reboot
- NOTE: The configuration UI can take a few minutes to be available. Please retry if not found.

07 / MODE

Use this page to choose what data source INDEX-01 should reference. Each option has its own parameters.

- A simple clock function.
 - The hand sweeps across its range over 12 or 24 hours.
 - Timezones are supported
 - The default mode when new or factory reset.
- CoinMarketCap crypto price trends.
 - Enter a crypto ticker (BTC, ETH, etc.) to see changes over 24h, between -5% and +5%
 - A CMC API key is required. Sign up for a free one at <https://coinmarketcap.com/api/>

- CoinMarketCap Fear & Greed Index.
 - A CMC API key is required. Sign up for a free one at <https://coinmarketcap.com/api/>
- Alt.me Fear & Greed Index:
 - Similar to the above but no API key is required.
- Stock price trends
 - Enter a ticker symbol to see changes over 24h between -5% and +5%
- Temperature
 - Uses the supplied city location, and temperature range
- Air Quality Index
 - Uses the supplied city location
- Pomodoro timer
 - Pointer counts down from the provided duration, defaulting to 25 minutes.
- Test
 - Pointer cycles through min and max positions every 10 seconds
- Off
 - Pointer resets to vertical position useful for [calibration](#)

08 / AMBIENCE

Adjust the lighting effect, including night mode.

Any animated modes use CYCLE DURATION to control the speed of change. We recommend long durations like 600 seconds.

Modes:

- Static
 - A single unchanging colour. Mood.
- Pulse
 - A slowly undulating single colour mode. Like breathing.
- Glacial
 - Our favourite mode, breathless whites and ice blues.
- Aurora
 - Great for low-light. Electromagnetic storms of green and blue.
- Sunset
 - Hot colours to end a day.
- Chromatic
 - A dazzling spectrum of colours, best enjoyed with a truly extended CYCLE DURATION.

We'd love to hear your ideas for future Ambience modes: hello@analoguedesk.co

07.1 / AMBIENCE / NIGHT MODE

Adjust the lighting effect, including night mode. Ensure you have set your [timezone](#) if required.

09 / ADVANCED

Further capabilities and controls not needed for regular operation.

09.1 / ADVANCED / DIAGNOSTICS

This page provides useful troubleshooting information. You may be asked to copy and include this information in any support request. It includes things like:

- Software version
- Wifi status
- DNS name (defaults to index.local) - See [Device Name](#)
- Event log, showing control output messages including pointer position between 0 and 1

09.2 / ADVANCED / POINTER CALIBRATION

If the pointer is slightly misaligned, you can tweak it in software. Set the MODE to off in the [mode selection page](#). The pointer can be adjusted by -10° to +10°.

09.3 / ADVANCED / TIMEZONE

By default INDEX-01 is set to UTC (universal time). To ensure [night mode](#) works as expected, adjust to match your local timezone here.

09.4 / ADVANCED / DEVICE NAME

If you have more than one device on the same network, the device name should be changed to make each unique. The supplied name is used as a suffix for DNS and LAN identification. Once changed you need to navigate to the new config page, eg:

- `http://index-<suffix>.local`

09.5 / ADVANCED / REBOOT DEVICE

Perform a simple reboot. Settings are preserved.

09.6 / ADVANCED / RESET WIFI

Force the device to forget its current wifi connection settings and reboot. It will enter [Setup Wifi mode](#) and show deep blue.

09.7 / ADVANCED / FIRMWARE UPDATE

However INDEX-01 does have OTA (Over-The-Air) update capabilities via ElegantOTA.

Press select file and choose the .bin file to install.

No guarantee or support is provided for any software updates.

09.8 / ADVANCED / SOFTWARE FACTORY RESET

Use this option to reset the device. It will clear all settings (device name, mode, ambience) reboot and enter [Setup Wifi mode](#).

10 / HARDWARE FACTORY RESET

If you are unable to access the configuration portal after repeated attempts, and want to perform factory reset, follow these steps:

- Cycle the power 3 times, turning off while the device is in the White 'Reset Mode' phase of initialisation.
- When the device shows magenta colour, it has been factory reset.
- Refer to [Setup Wifi](#) to reconfigure the Wifi connection.

11 / CARE & MAINTENANCE

- **Acrylic Surfaces:** The case is constructed from layered, laser-cut acrylic. Clean only with a dry microfibre cloth. **Do not use isopropyl alcohol or glass cleaners**, as these can cause "crazing" (micro-cracks) in the material.
- **Hardware:** Periodically check that the M3 stainless steel bolts in the corners remain finger-tight. Do not overtighten.
- **Environmental:** For indoor use only. Keep dry.

12 / REGULATORY & SAFETY

- **Disposal:** This product is marked with the WEEE symbol. It must not be disposed of with household waste. Please return to a certified E-waste recycling centre.
- **Compliance:** Analogue Desk Co. declares that this device is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Regulations 2017.
 - See the enclosed Declaration of Conformity for full details.

13 / COLOURS

INDEX-01 uses colours at launch to talk to you:

WHITE	Starting up. You have 5 seconds to trigger reset mode
BLUE	Waiting for Wifi setup
CYAN	Initialising motor
GREEN	Moving to mid-point, then into active mode and ambience
MAGENTA	Hardware reset complete

13 / SUPPORT

This works both ways.

Thank you for supporting our dream.

Contact support@analoguedesk.co with any further issues. We'll endeavour to assist!