

DIGIX

ASSET OPS

User Manual

Version 1.0

28 September 2026

Document reference DIGIX-UM-001

Internal — DIGIX and client personnel only

Document control

Document title	DIGIX Asset Ops — User Manual
Document reference	DIGIX-UM-001
Current version	1.0
Status	Issued for review
Issue date	28 September 2026
Applies to build	feat/maintenance-tickets-sep21 (backend + frontend)
Owner	DIGIX implementation team
Classification	Internal — DIGIX and client personnel only

Revision history

Every issue of this manual is recorded here. The version number rises by a whole number when the structure changes or a module is added, and by a tenth when wording, screenshots or a procedure are corrected.

Version	Date	Author	Section (s)	Description of change	Approved by
1.0	28-Sep-2026	DIGIX implementation team	All	First issue. Covers all 21 screens, the role and permission system, and the six end-to-end workflows.	<i>pending</i>

How to revise this manual

1. Raise the change against the current version — quote the section number.
2. Edit the source file [docs/DIGIX_Asset_Ops_User_Manual.md](#) on a branch.
3. Re-take any screenshot the change affects (see §16.3) so the picture matches the words.
4. Add a row to the revision history above. Never overwrite an existing row — a superseded instruction is part of the record.
5. Raise a pull request into [staging](#). The reviewer named in the *Approved by* column signs the row off on merge.

The manual lives beside the code it describes, so the version that shipped with any build can always be recovered from the repository history.

Related documents

Reference	Document	Purpose
DIGIX-AM-002	DIGIX_Authority_Matrix_v2_signed.xlsx	The signed organogram and role mapping this system is configured from
DIGIX-CRS-001	Comment_Resolution_Sheet_CONSOLIDATED_28-9-26.xlsx	Client comments and their resolutions
DIGIX-RR-003	DIGIX_Roles_and_Responsibilities_Matrix.xlsx	The authority matrix behind the default permissions

—	DIGIX_Team_Logins.xlsx	First-login credentials. Confidential — delete after handover.
---	------------------------	---

Contents

Document control	2
Revision history.....	2
How to revise this manual.....	2
Related documents	2
Contents.....	3
Part A — Before you start.....	7
1. About this manual.....	7
1.1 Who this is for.....	7
1.2 What the system is for	7
1.3 Conventions used here.....	7
2. Signing in	8
2.1 Your first sign-in.....	8
2.2 If you cannot get in.....	8
2.3 Changing your password.....	8
3. Finding your way around.....	9
3.1 The sidebar (left)	9
3.2 The top bar.....	9
3.3 The page itself.....	9
4. What you are allowed to do	10
4.1 Two separate ideas	10
4.2 Capabilities	10
4.3 Who may change permissions	10
4.4 The default roles	11
Part B — The screens.....	12
5. Dashboard	12
5.1 What is on it.....	12
5.2 The map.....	12
5.3 Notes	13
6. Assets.....	13
6.1 The list.....	13

6.2 Registering an asset.....	13
6.3 The asset lifecycle.....	14
6.4 The other tabs.....	14
6.5 Components and serial numbers.....	14
7. Projects.....	15
7.1 The dashboard.....	15
7.2 Phases.....	15
7.3 Scope, BOQ and budget.....	15
8. Procurement.....	16
8.1 Where orders come from.....	16
8.2 Procurement Requests.....	17
8.3 Raising a purchase order.....	17
8.4 Approval and receiving.....	18
9. Inventory.....	19
9.1 Two kinds of component.....	19
9.2 Receiving.....	19
9.3 Issuing.....	19
9.4 Low stock.....	20
10. Installation Tracker.....	20
10.1 The checklist.....	20
10.2 Going live and handing over.....	20
11. Maintenance.....	21
11.1 Two kinds.....	21
11.2 Rounds.....	21
11.3 Parts for a visit.....	21
11.4 Completing a visit.....	22
12. Tickets.....	22
13. Warranties.....	23
14. Everything else.....	23
14.1 Sites, Clients, Vendors.....	23
14.2 Quotations, Work Orders, Finance.....	24
14.3 Team Management.....	24
14.4 Setup, Alerts, Documents, Attendance, Chat, Settings.....	26
Part C — Doing the work.....	27
15. The six workflows end to end.....	27
15.1 Buying something.....	27

15.2 Building an asset in-house	27
15.3 Installing it.....	27
15.4 Keeping it running — planned	27
15.5 Keeping it running — a fault.....	28
15.6 Running a project.....	28
Part D — Reference.....	29
16. Reference.....	29
16.1 Asset statuses	29
16.2 Rules the system will enforce	29
16.3 Screenshots in this manual.....	29
16.4 Getting help.....	29

Part A — Before you start

1. About this manual

1.1 Who this is for

Everyone who uses DIGIX Asset Ops: the Group Head, the Operation and CS Leads, supervisors, the store, the CS desk and the technicians in the field. It assumes no prior knowledge of the system.

You do not need to read it end to end. Part B has one chapter per screen — find the screen you are on. Part C traces the six jobs the system exists to do, from start to finish, naming the screen and the button at every step.

1.2 What the system is for

DIGIX Asset Ops follows a digital display asset through its whole life: bought or built, held in stock, assigned to a project, installed at a client's site, kept running, and eventually handed to the client or retired. Around that spine sit the things that serve it — purchasing, stock, maintenance, tickets, warranties and the money.

1.3 Conventions used here

Convention	Meaning
Bold	A button, tab or field exactly as it appears on screen
Code	A status value, a code, or something you type
→	"then", in a sequence of clicks
⚠	A rule the system enforces — it will stop you
💡	Something worth knowing that is not obvious

Where a field is marked with a star on screen — **Supplier *** — it is required and the form will not save without it.

2. Signing in

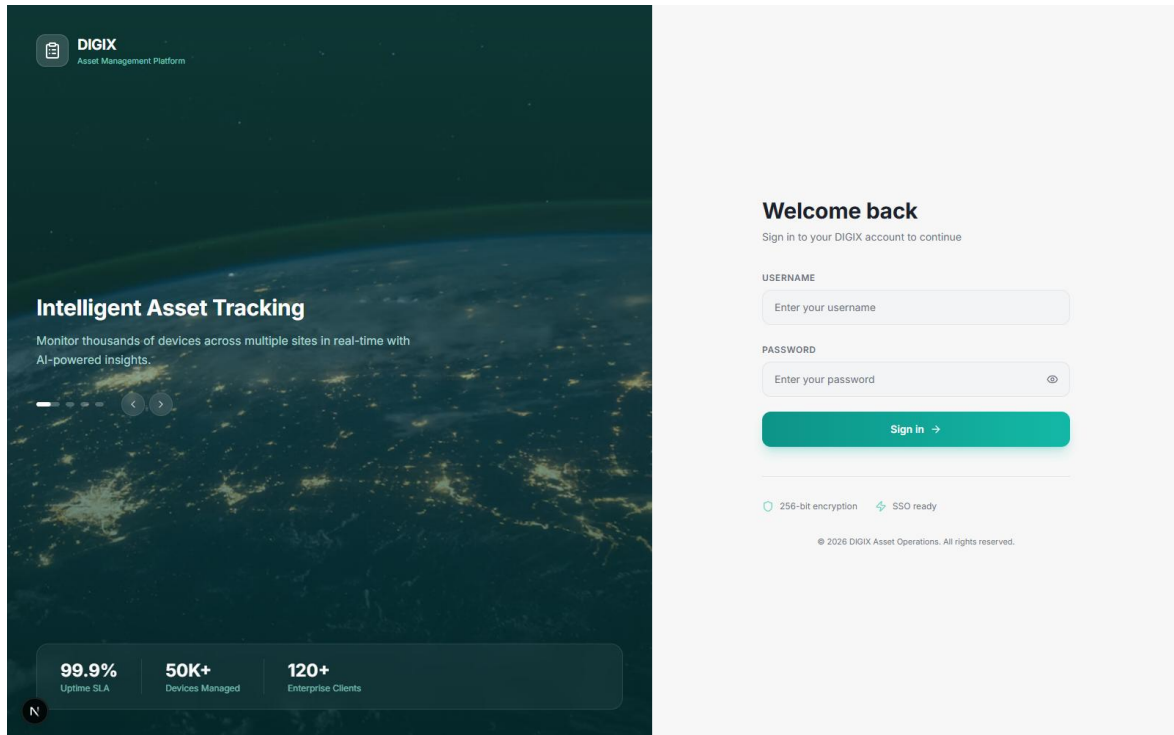


Figure 1 — The sign-in screen

2.1 Your first sign-in

6. Open the address your administrator gave you.
7. Enter your **username** and **password** from the credentials sheet you were issued.
8. Change your password immediately — see §2.3.

Your username is your own; it is usually your first name. Passwords on the issued sheet are first-login passwords only.

⚠ The credentials sheet is the only copy of those passwords. The system stores them scrambled and cannot show them again. If you lose yours, an administrator has to issue a new one.

2.2 If you cannot get in

What you see	What it means	What to do
"No account with that username"	The username is wrong	Check the sheet — it is case-sensitive
"Your account has been deactivated"	Somebody switched the account off	Ask your line manager
Wrong-password message	The password is wrong	Try again; after that ask for a reset

2.3 Changing your password

Settings (bottom of the sidebar) → change your password there. Do this on your first day.

3. Finding your way around

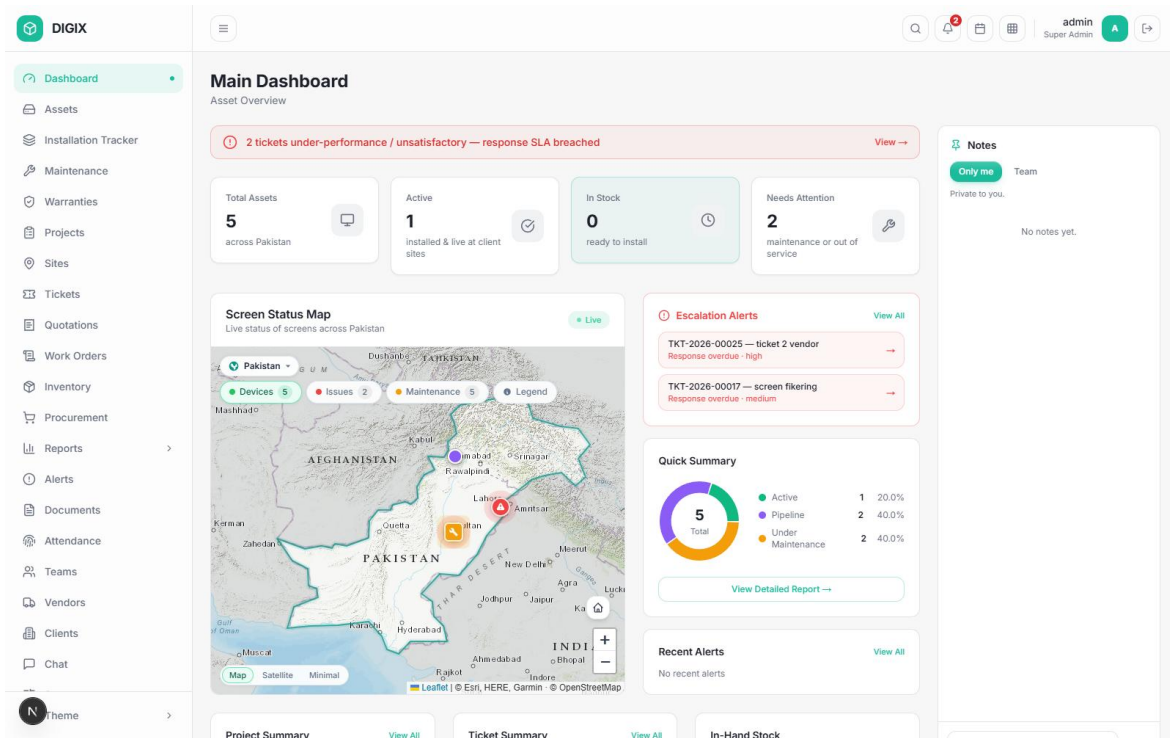


Figure 2 — The dashboard, signed in

Three parts to every screen.

3.1 The sidebar (left)

Your way into every module. **You will not see all of it** — the sidebar only shows what your role allows, so a technician's sidebar is much shorter than the Group Head's. That is normal and not a fault.

Clicking a section you are already inside takes you back to its list. If you are looking at one asset and click **Assets**, you return to the asset register.

At the bottom: **Theme**, which switches between light and dark.

3.2 The top bar

- **Search** — across the system
- **Notifications** (the bell, with a count) — click for the list, **Mark all read, or View all alerts**

- **Your name and role**
- **Logout** — the right-hand icon

3.3 The page itself

Most list screens share a shape:

- A **heading** saying what the screen is for
- **Tiles** across the top — these are also filters; click one to narrow the list to it

- A **filter bar** with dropdowns and a search box
- The **list**, ten rows to a page
- **Buttons top right** for the main actions

💡 The tiles are filters, not just counters. Clicking **Under Maintenance** on the asset screen lists exactly those assets. Clicking it again clears it.

4. What you are allowed to do

This is the part most worth understanding, because it explains why your screen differs from a colleague's.

4.1 Two separate ideas

	What it is	Where it lives
Job title	Your place in the organisation — "Store Supervisor", "Karachi SMD Operator"	Shown on your record and in the organogram
System role	What the software lets you do	Drives every button you can see

They are deliberately separate. Two people can both be "Supervisor" in the system while holding quite different jobs.

4.2 Capabilities

Underneath the roles sit **30 capabilities** — named permissions grouped into eleven areas: Money, Procurement, Inventory, Assets, Projects, Installation, Tickets, Maintenance, Commercial, People and System.

Your role grants a set of them. Any single one can then be granted or withdrawn for you personally without changing your role.

The one you will notice most is "See prices and costs". Without it, every figure in the system — unit costs, order totals, stock valuations — comes back blank. This is enforced by the server, not merely hidden on screen, so it holds however the data is reached.

4.3 Who may change permissions

You are	You may change permissions for
Super Admin	Anyone
Group Head	Anyone
A team lead (Operation Lead, CS Lead, a Supervisor)	Your own team, however far down it runs
Anyone else	Nobody

Two rules apply to everybody, including the Group Head:

⚠️ **Nobody edits their own permissions.** Authority you can widen yourself is not authority. Ask someone above you.

⚠️ **Nobody grants what they do not have.** A supervisor without "See prices" cannot give it to their technician.

4.4 The default roles

Role	Typically held by	Broadly
Super Admin	MIS Operator	Everything, including user administration
Group Head	Group Head	Everything
Operations Head	Operation Lead	Assets, projects, sites, procurement, maintenance; sees prices
Marketing Head	CS Lead	Client-facing work, quotations, tickets; sees prices
Supervisor	Production and Execution Supervisors	Their crew's work, inspections, maintenance; no prices
Warehouse Staff	Store Supervisor	Goods in, stock, issuing; no prices
Marketing	CS desk, Graphic Designer	Tickets and quotations; read-only elsewhere
Technician	Operators, workers, riders	Their own assigned work only
Finance	Finance	Money, reports; read-only on operations
Client Viewer	External client contact	Read-only, filtered to their own client
Vendor	Supplier portal	Their own tickets only

These are starting points. See §14.3 for changing them.

Part B — The screens

5. Dashboard

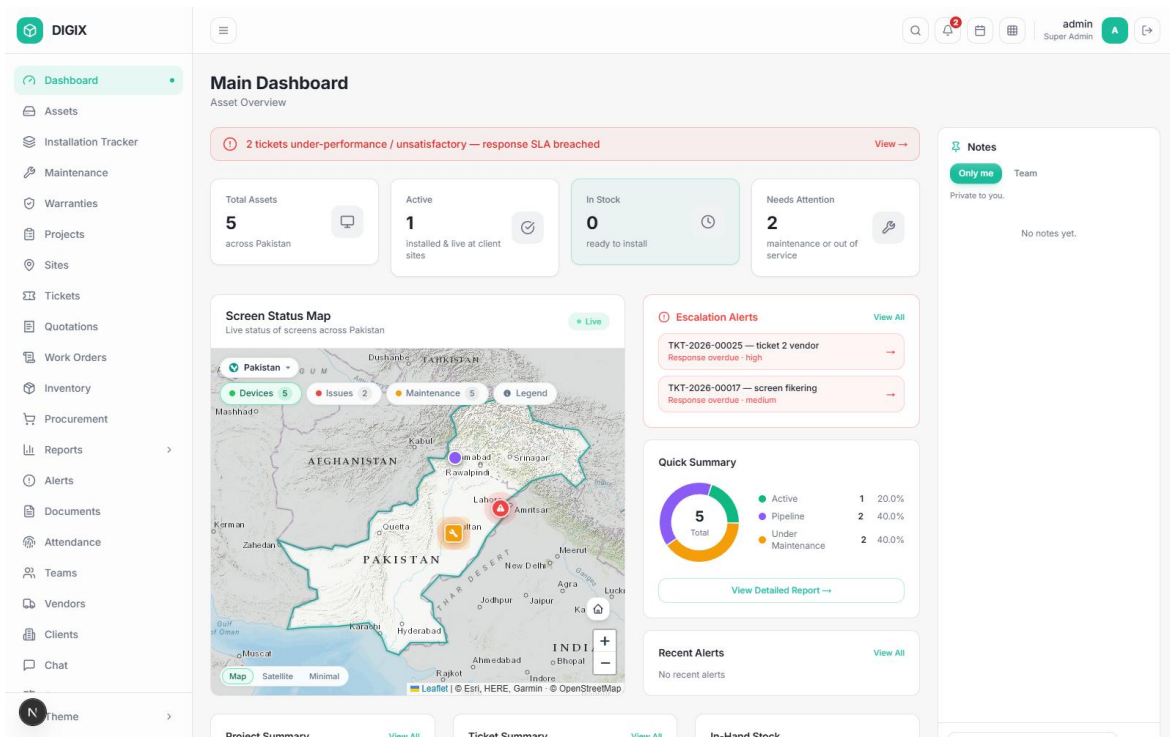


Figure 3 — Dashboard

Sidebar: Dashboard · Everyone sees this

Where you land. Read-only — nothing here changes data.

5.1 What is on it

Panel	Tells you
Four tiles	Total Assets · Active · In Stock · Needs Attention. Each is a link into a filtered asset list
Screen Status Map	Every asset with a site, pinned. Colour = status; a red pin has an open ticket, amber is in maintenance
Escalation Alerts	Tickets that have breached their response time
Quick Summary	The fleet split by status
Project / Ticket Summary	Counts by state, each a link
In-Hand Stock	Components you are watching, with quantity and value
Notes (right)	See §5.3

5.2 The map

Three grounds, chosen top-left: **Map** (roads and terrain), **Satellite**, **Minimal**. The chips along the top switch what is plotted — **Devices**, **Issues**, **Maintenance** — and **Legend** explains the markers. Zoom and the home button are bottom-right.

💡 If the legend covers something, close it with the **x** in its corner or press **Escape**.

5.3 Notes

A noticeboard down the right, in two parts:

- **Only me** — private. Nobody else ever sees these.
- **Team** — shared with everyone, and signed with your name.

Type **@** to tag a colleague; the system offers names as you type. Tagging someone on a team note puts it in their notifications. Press **Enter** to post, **Shift+Enter** for a new line.

6. Assets

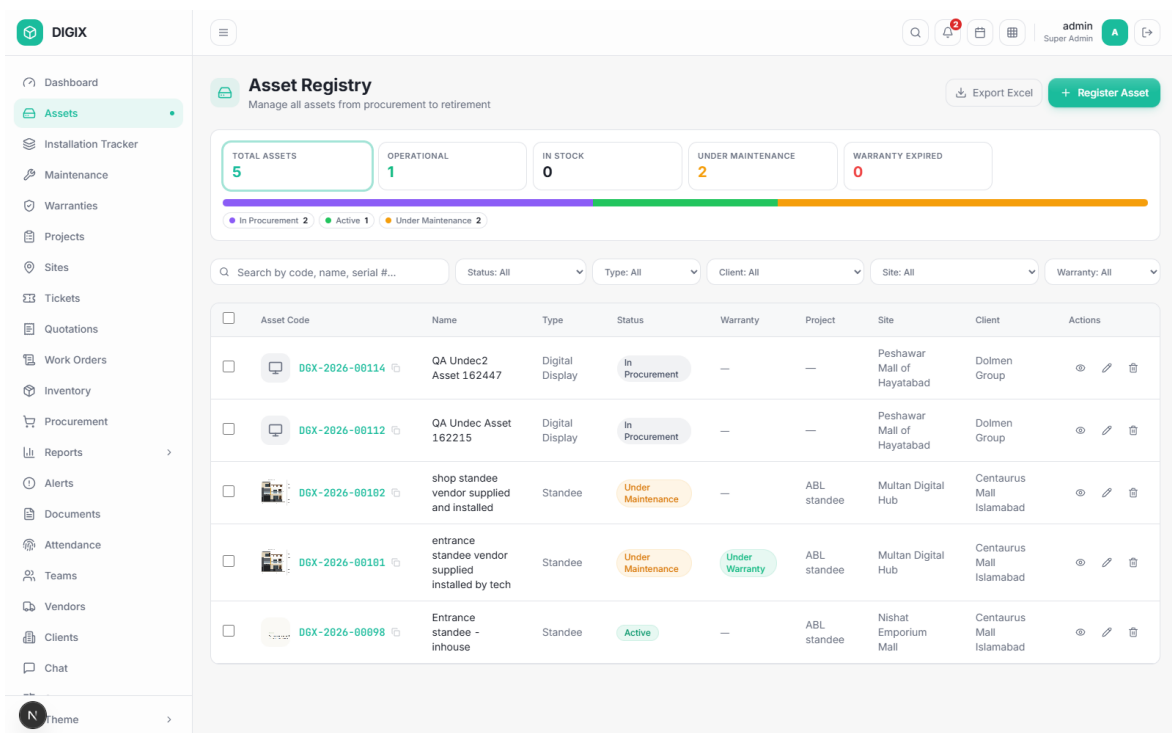


Figure 4 — Asset Registry

Sidebar: Assets · Super Admin, Group Head, Operations Head, Technician

The register of every display you own, from purchase to retirement.

6.1 The list

Tiles: Total Assets · Operational · In Stock · Under Maintenance · Warranty Expired — all clickable filters.

Filters: Status, Type, Client, Site, Warranty. **Search:** by code, name or serial number.

Columns: Asset Code · Name · Type · Status · Warranty · Project · Site · Client · Actions.

Buttons: **Export Excel**, **Print labels (n)** when rows are ticked (maximum 200 at a time), and **Register Asset**.

6.2 Registering an asset

Register Asset opens the form.

⚠ **Three fields are required: Name, Asset Type and Manufacturing Route.** The form will not save without them — this stops blank assets appearing in the register.

Manufacturing Route is the important choice:

Route	Meaning
In-house Production	You build it from components. It goes through production and consumes stock
Vendor / Turnkey	It arrives complete from a supplier. No production stage

6.3 The asset lifecycle

Open an asset and the **Product Details** tab opens on the lifecycle rail:

In Procurement → In Production → In Stock → Assigned → Installed → Active
↳ Under maintenance
└─ └─ └─ └─ Client Property · Decommissioned

Each step shows **Completed**, **In Progress** or **Not Started**, with the date it was reached.

The lifecycle follows the work. You do not drive it by hand:

Stage moves to	When
In Production	Components are issued to the build
In Stock	The build is complete
Assigned	You assign it for installation
Installed	The technician completes the installation checklist
Active	The technician confirms on site with a photo
Under Maintenance	A maintenance job opens, or a ticket is raised

Only two are a human decision, under **Next stage: Client Property** (handing it over) and **Decommissioned** (retiring it).

Under maintenance hangs below Active rather than sitting on the line, because the asset comes back from it.

6.4 The other tabs

Tab	Holds
Warranties	Cover on this asset — vendor’s to you, and yours to the client
Costs & Pricing	What it cost and what it is worth. <i>Blank if you cannot see prices</i>
Documents	Files filed against it
Maintenance History	Every visit
Lifecycle	The full audit trail — who moved it, when, and why

6.5 Components and serial numbers

The **Components** section lists what the asset is built from. Each row shows its **Kind**:

- **Generic stock** — interchangeable, counted (cable, brackets)
- **Unique item** — serialised and individually tracked

For a unique component the **Serial #** column shows exactly which physical unit went in, so you can trace any serial from goods-in to the asset it ended up inside.

⚠ Once a project is in execution its components and production route are fixed — the approved budget priced *that* parts list. The status still moves; the parts list does not.

7. Projects

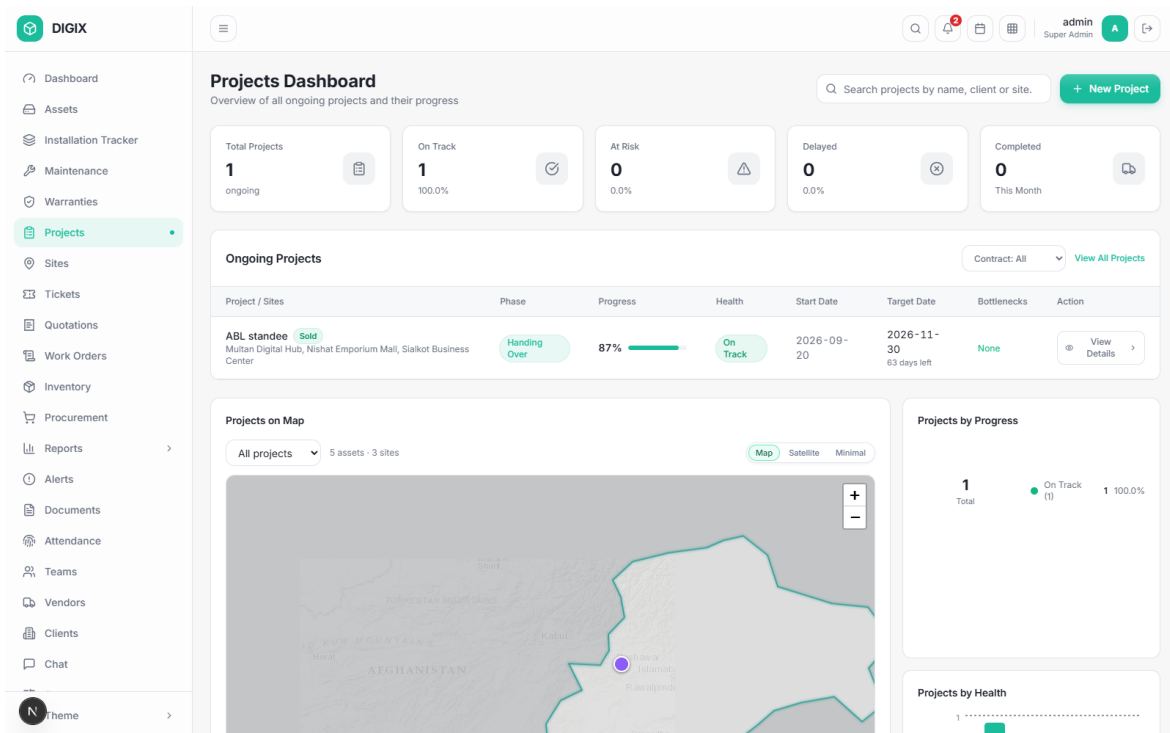


Figure 5 — Projects Dashboard

Sidebar: Projects · Super Admin, Group Head, Operations Head

A project is a client order: a number of assets, at one or more sites, to a date.

7.1 The dashboard

Tiles for Total / On Track / At Risk / Delayed / Completed, the ongoing project list, three summary cards, and **Projects on Map**.

On the map, pick a project from the dropdown and its assets light up while everything else greys back, so you can see where that job actually is.

7.2 Phases

A project moves through phases, and **the phase follows the work** — it is worked out from what is finished, not typed in.

On Hold and **Order Lost** are the exceptions: somebody chooses those, and they override the calculation. Clicking either again lifts it and the project returns to wherever the work actually stands.

7.3 Scope, BOQ and budget

9. **Scope** — which assets, how many, at which site.

10. **Planning / BOQ** — what each asset is built from, and what that costs.

11. **Budget** — arrived at from the plan.

⚠ **The budget is not typed when the project is created.** It is what planning arrives at and approval freezes. Once approved, the parts list and route are locked.

8. Procurement

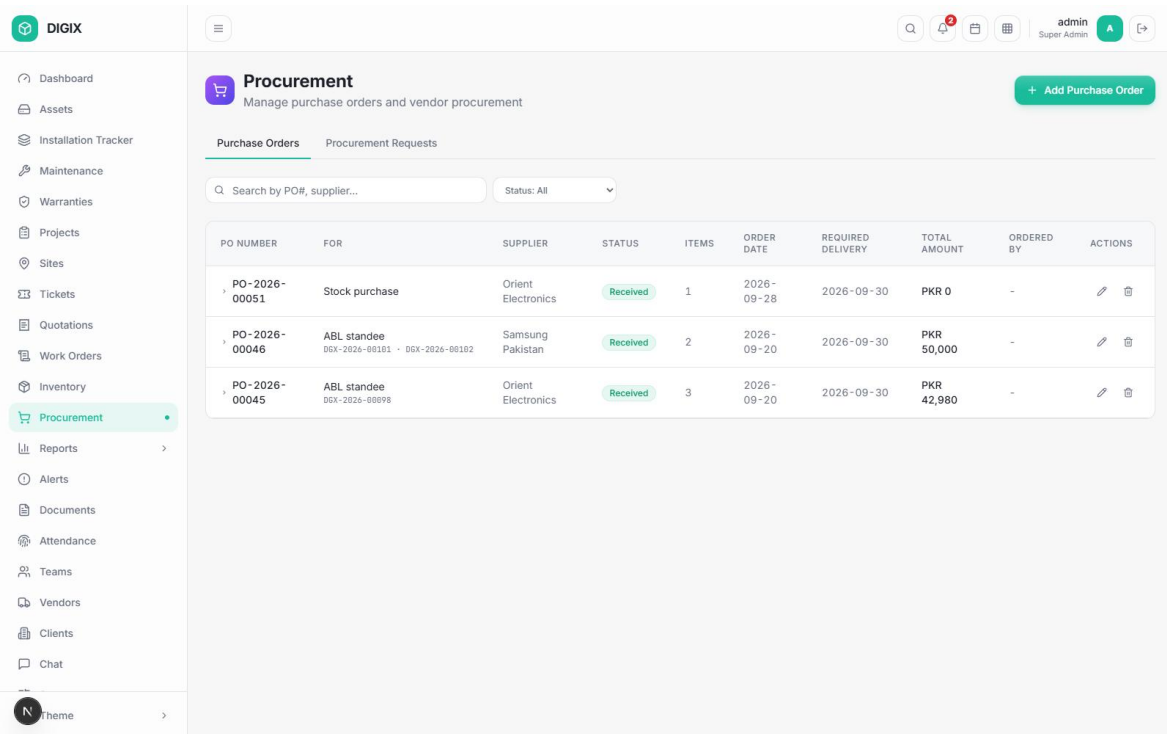


Figure 6 — Procurement

Sidebar: Procurement · Super Admin, Group Head, Operations Head, Finance, Warehouse, Supervisor

Two tabs: **Purchase Orders** and **Procurement Requests**.

8.1 Where orders come from

Source	Raised by	Appears as
A project needs a component it has not got	The project	A line under Procurement Requests
Stock fell below its minimum	Inventory	A stock replenishment request
Somebody buys something outright	You	A hand-raised order

8.2 Procurement Requests

Figure 7 — Procurement Requests

Everything waiting to be bought. Tick the lines you want on one order and press **Raise PO (n)**.

Send back returns a line to whoever raised it, with your reason — use this instead of cancelling, so the requester finds out why.

8.3 Raising a purchase order

Figure 8 — Add Purchase Order

Add Purchase Order and **Raise PO** open the same form and collect the same things:

Field	Notes
PO Number	Generated on save
Supplier *	Required. + Supplier details for this order adds a contact, quote reference or delivery address
Currency	
Order Date	Read-only — stamped when the Group Head approves
Required Delivery *	Required before the order leaves draft
Line Items *	See below
Notes, Terms & Conditions	The standard terms apply unless you change them

Each line says what it buys:

- **Generic component** — from stock definitions
- **Unique component** — a serialised type
- **Asset** — a complete asset already registered, awaiting purchase
- **Charge (free text)** — freight, installation, anything not goods

+ **Add line** adds more. On a PO raised from requests, the requested lines are listed first with their prices editable, and anything extra goes underneath.

8.4 Approval and receiving

Draft → Pending Approval → Approved → (goods arrive) → Partially Received → Received

⚠ **An order cannot leave Draft without a Required Delivery date.** If you press **Submit for Approval** without one, the bar asks you for it there and then — fill it in and press **Set date and continue**.

⚠ **Approval places the order.** The Group Head's signature is what commits the company and stamps the order date, so there is no separate "mark as ordered" step. An approved order is received against directly.

Cancelling an order returns everything it covered to the queue, so it can be raised again.

9. Inventory

CODE	COMPONENT	CATEGORY	LOCATION	ON HAND	REORDER LEVEL	UNIT COST	ACTIONS
INV-CAB-PK-0006	Cat6 Cable	-	In Transit	27 meter	7	162.00	ⓘ ✎ 🗑
INV-MOU-PK-0005	Ceiling Mount Kit	-	Warehouse	92 piece	4	164.00	ⓘ ✎ 🗑
ITM-00002	Ear pods	Tools	Warehouse	2 piece	5	5000.00	ⓘ ✎ 🗑
INV-CAB-PK-0001	HDMI Cable 2m	-	Warehouse	47 piece	8	141.00	ⓘ ✎ 🗑
INV-CAB-PK-0002	HDMI Cable 5m	-	Warehouse	96 piece	6	52.00	ⓘ ✎ 🗑
INV-ACC-PK-0007	Media Player Stand	-	In Transit	89 piece	7	132.00	ⓘ ✎ 🗑
INV-CAB-PK-0003	Power Cable 3-pin	-	Warehouse	73 piece	4	102.00	ⓘ ✎ 🗑
ITM-00006	QA Empty Bracket	-	Warehouse	2 piece	2	-	ⓘ ✎ 🗑
ITM-00005	QA Opening Tape 182419	-	Warehouse	12 roll	5	45.00	ⓘ ✎ 🗑
ITM-00003	Screen	screen	Warehouse	3 piece	5	-	ⓘ ✎ 🗑
INV-ACC-PK-0008	Screen Protector 55"	-	In Transit	36 piece	3	114.00	ⓘ ✎ 🗑

Figure 9 — Inventory

Sidebar: Inventory · Super Admin, Group Head, Operations Head, Warehouse

9.1 Two kinds of component

	Generic	Unique
Example	Cat6 cable, brackets	A media player, an SMD module
Tracked by	Quantity	Individual serial number
On issue	A number comes off the count	A named unit leaves

Both are managed the same way, with the same vocabulary throughout.

9.2 Receiving

Goods arrive against a purchase order. Receiving records what actually turned up, which may be less than ordered. Each line is then **inspected** — passed into stock or rejected.

For unique components the serial numbers are captured at the door, which is what makes an individual unit traceable from then on.

⚠ Charges (freight and the like) are not goods and do not appear on the receiving form.

9.3 Issuing

⚠ **Stock is issued against a request, not handed out.** The technician or project asks, a supervisor approves, the store issues. This is what keeps the count honest.

The issue queue shows who asked, for which asset and project, and what it is for — a build requirement or a maintenance job.

9.4 Low stock

Components with a minimum level raise a replenishment request automatically when they fall below it. If Procurement sends one back, the reason appears here so nobody raises it again blind.

10. Installation Tracker

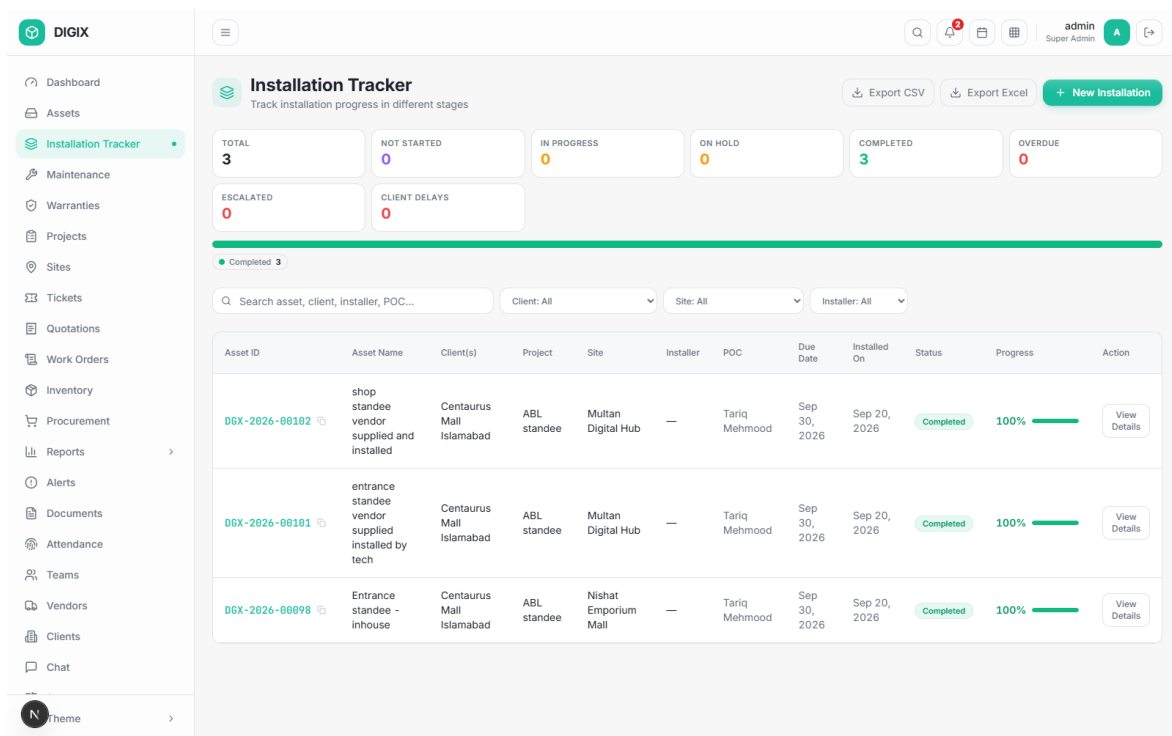


Figure 10 — Installation Tracker

Sidebar: Installation Tracker · Super Admin, Group Head, Operations Head, Technician

10.1 The checklist

Each installation has a pipeline of steps — Survey, Wiring, Metal Structure, Testing, and any you add.

Pipelines can be 3 steps or 10: untick what does not apply and add your own when creating the installation.

Each step is Not Started, In Progress, On Hold, Completed or Skipped. **Flag Delay** records who caused it — Client, Internal, Vendor or Other.

10.2 Going live and handing over

After the checklist, two fixed steps:

12. **Mark Active** — requires a photo of the installed asset running.

The registry follows automatically.

13. **Handover** — requires the signed handover document. Download the certificate, take it to site, upload the signed copy. A scan or a photograph both count.

Recording the handover assigns the asset to the client and completes the installation.

⚠ **Once handed over or activated, the checklist is a record, not a draft.** Steps cannot be added, edited, reordered or deleted afterwards.

11. Maintenance

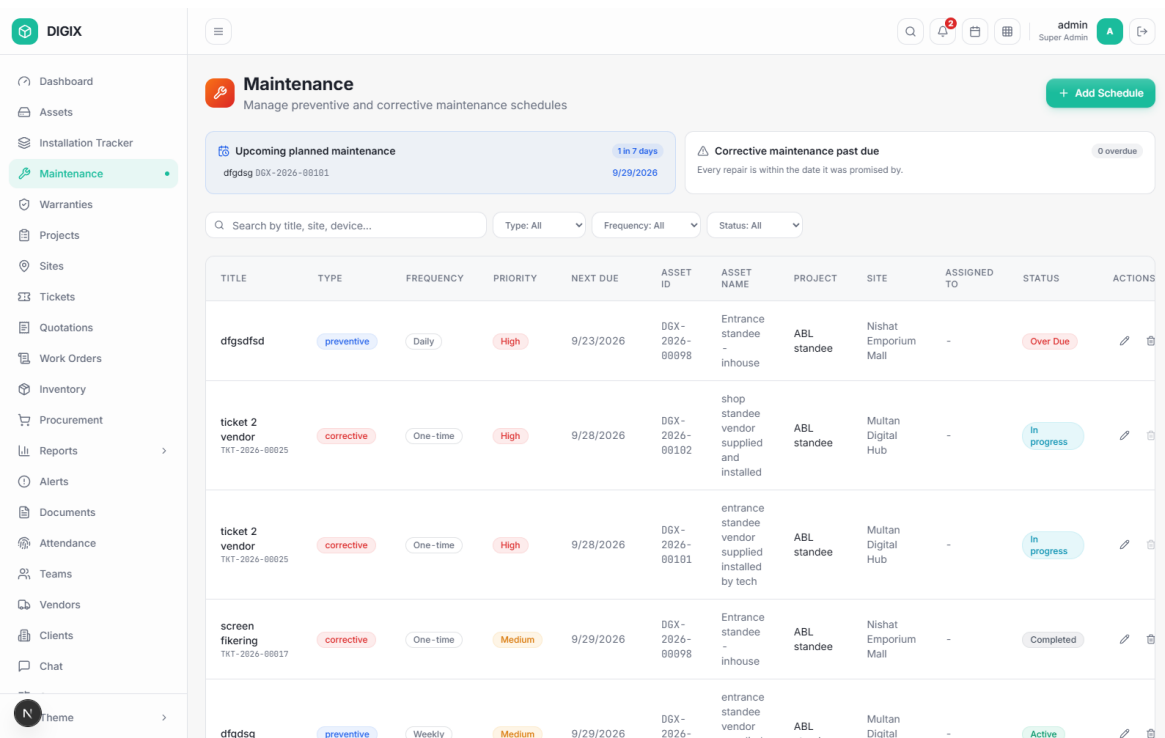


Figure 11 — Maintenance

Sidebar: Maintenance · Super Admin, Group Head, Operations Head, Technician

11.1 Two kinds

	Preventive	Corrective
Why	Planned servicing	Something broke
Recurs	Yes — in rounds	No — one job
Starts from	A schedule you create	A ticket

11.2 Rounds

A recurring schedule is worked **one round at a time**. Each round has its own **assigned technician, due date** and **actual date** — because the same person will not do every visit for the next two years.

The card shows **Next visit · round N** with **Start work** and **Complete visit**. Below, **Past visits** lists every round already done.

11.3 Parts for a visit

"The technician asks, a supervisor releases, the store issues."

When you start a visit the system asks whether you need components. Raise a request per component, choosing **Stock item** or **Unique item**. A supervisor approves or rejects each line, then the store issues it.

11.4 Completing a visit

Complete visit asks for:

- **Components issued** — how many were **used**. Everything else goes back

to the store, and the return appears in receiving under its own reference. For unique items you tick the individual serials going back

- Work done, cost, photos
- Whether it is **under warranty** or **billable**

Completing the visit opens the next round. A one-time job closes out.

12. Tickets

Tickets
Track, complete, and approve field tasks

Export Excel + Add Ticket

TOTAL TICKETS: 2 UNASSIGNED: 2 SLA BREACHED: 2 PAST DUE DATE: 0 IN REVIEW: 0 CLOSED: 0

Open 2

Search by title, site... Status: All Priority: All Category: All

TICKET #	TITLE	ASSETS	PRIORITY	STATUS	CATEGORY	SITE	ASSIGNED TO	DUE DATE	ACTIONS
TKT-2026-00025	ticket 2 vendor	DEX-2026-00101 DEX-2026-00102	High	Open	Replacement	Multan Digital Hub	-	2026-09-28	
TKT-2026-00017	screen flickering	DEX-2026-00098	Medium	Open	Other	Nishat Emporium Mall	-	2026-09-29	

Figure 12 — Tickets

Sidebar: Tickets · most roles

A fault reported by anybody.

⚠ **Raising a ticket creates maintenance work.** A corrective maintenance job opens automatically, the asset goes **Under Maintenance**, and it returns to service when the job closes. You do not move the asset yourself.

⚠ **One ticket covering several assets produces one job per asset**, handled separately — two screens with the same fault are two repairs.

13. Warranties

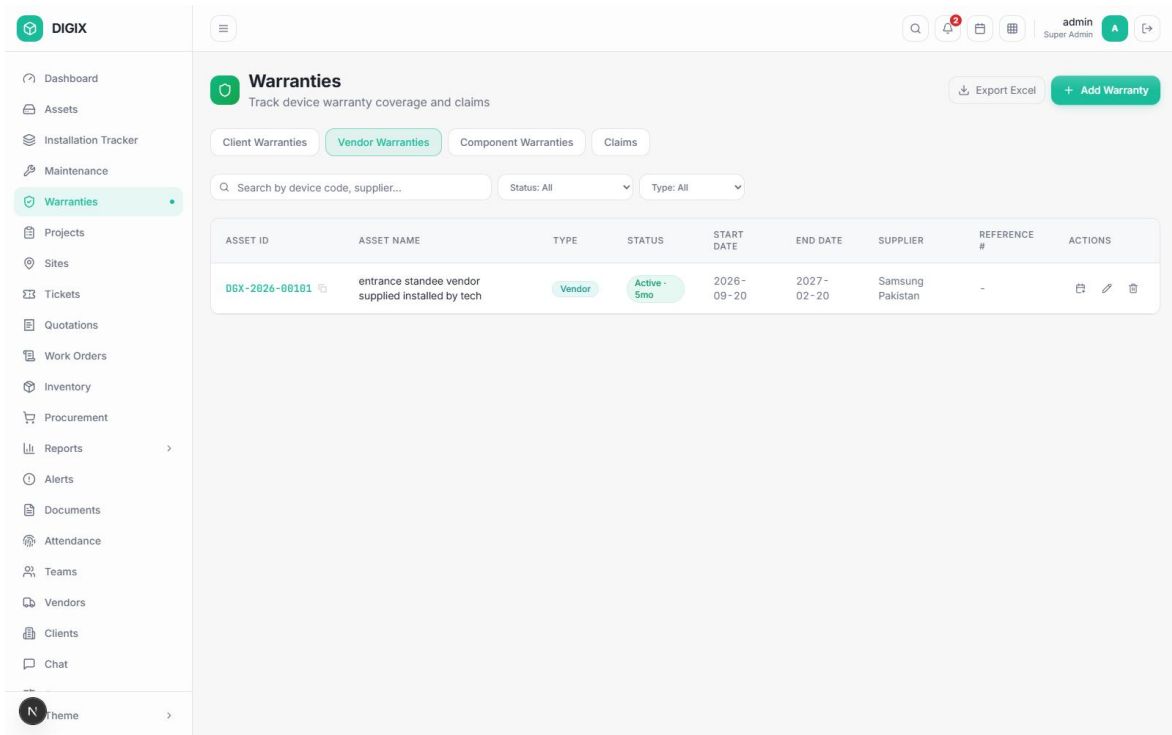


Figure 13 — Warranties

Sidebar: Warranties · Super Admin, Group Head, Operations Head

Two different things are called "warranty", and the system keeps them apart:

	Covers	Given by
Vendor / Component	The asset or part coming in	Your supplier, to you
Client	The asset at the client's site	You, to your client

Tabs: **Client Warranties** · **Vendor Warranties** · **Component Warranties** · **Claims**. Client-facing roles see a reduced set.

💡 A client warranty with a term in months re-anchors itself to the installation date when the installation completes, so the cover starts when the asset actually went live.

14. Everything else

14.1 Sites, Clients, Vendors

Screen	Sidebar	For
Sites	Sites	Physical locations, with coordinates for the map
Clients	Clients	Who the work is for. Client IDs are generated
Vendors	Vendors	Suppliers, their terms and their warranties

14.2 Quotations, Work Orders, Finance

Screen	For
Quotations	Enquiry → quotation → negotiation → order confirmation
Work Orders	Internal jobs, approved against a value
Finance	Invoices and payments

14.3 Team Management

DIGIX

Dashboard
Assets
Installation Tracker
Maintenance
Warranties
Projects
Sites
Tickets
Quotations
Work Orders
Inventory
Procurement
Reports
Alerts
Documents
Attendance
Teams
Vendors
Clients
Chat
Theme

Team Management
Manage users and their roles

+ Add User

Employees | Organogram | Roles & Rights

Search by name, username, email... Role: All Status: All

NAME	EMPLOYEE ID	USERNAME	EMAIL	ROLE	FIELD STAFF	STATUS	ACTIONS
Zeeshan	—	zeeshan	zeeshan@digix.pk	Technician	Yes	Active	🛡️ ✎️ 🗑️ Deactivate
Jaleel	—	jaleel	jaleel@digix.pk	Technician	Yes	Active	🛡️ ✎️ 🗑️ Deactivate
Salman	—	salman	salman@digix.pk	Technician	Yes	Active	🛡️ ✎️ 🗑️ Deactivate
Sharoon	—	sharoon	sharoon@digix.pk	Technician	Yes	Active	🛡️ ✎️ 🗑️ Deactivate
Sharjeel	—	sharjeel	sharjeel@digix.pk	Technician	Yes	Active	🛡️ ✎️ 🗑️ Deactivate
Badr	—	badr	badr@digix.pk	Client Viewer	No	Active	🛡️ ✎️ 🗑️ Deactivate
Haris	—	haris	haris@digix.pk	Marketing	No	Active	🛡️ ✎️ 🗑️ Deactivate
Hamza	—	hamza	hamza@digix.pk	Marketing	No	Active	🛡️ ✎️ 🗑️ Deactivate
Adeel	—	adeel	adeel@digix.pk	Marketing	No	Active	🛡️ ✎️ 🗑️ Deactivate
Irfan	—	irfan	irfan@digix.pk	Marketing	No	Active	🛡️ ✎️ 🗑️ Deactivate
Zain	—	zain	zain@digix.pk	Super Admin	No	Active	🛡️ ✎️ 🗑️ Deactivate

Figure 14 — Team Management

Sidebar: Teams · anyone who may see the team

Three tabs.

Employees — the roster. Each row has a shield button showing what that person may do. Anyone may look; only the people in §4.3 may change it.

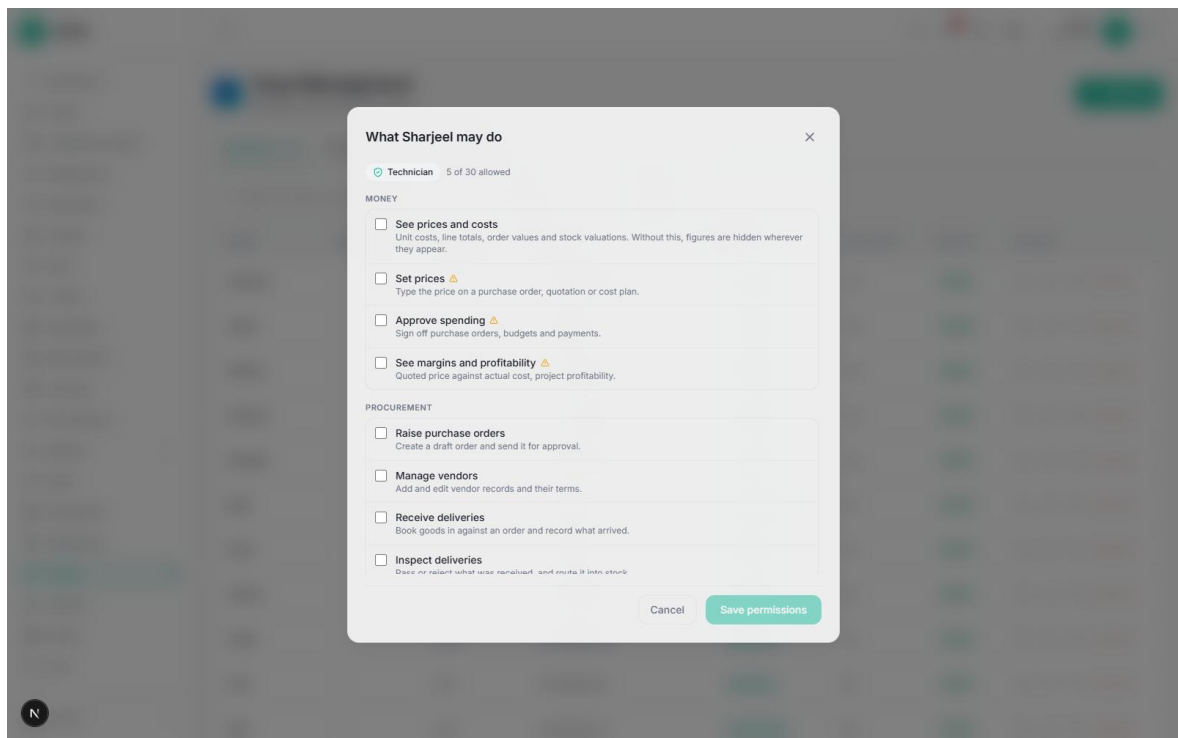


Figure 15 — Permissions for one person

A row tinted amber differs from the role — it reads *granted · role says no or withdrawn*, with who did it and why. **Back to what {role} allows** resets the person.

Organogram — who reports to whom, drawn from each person's *Reports To*.

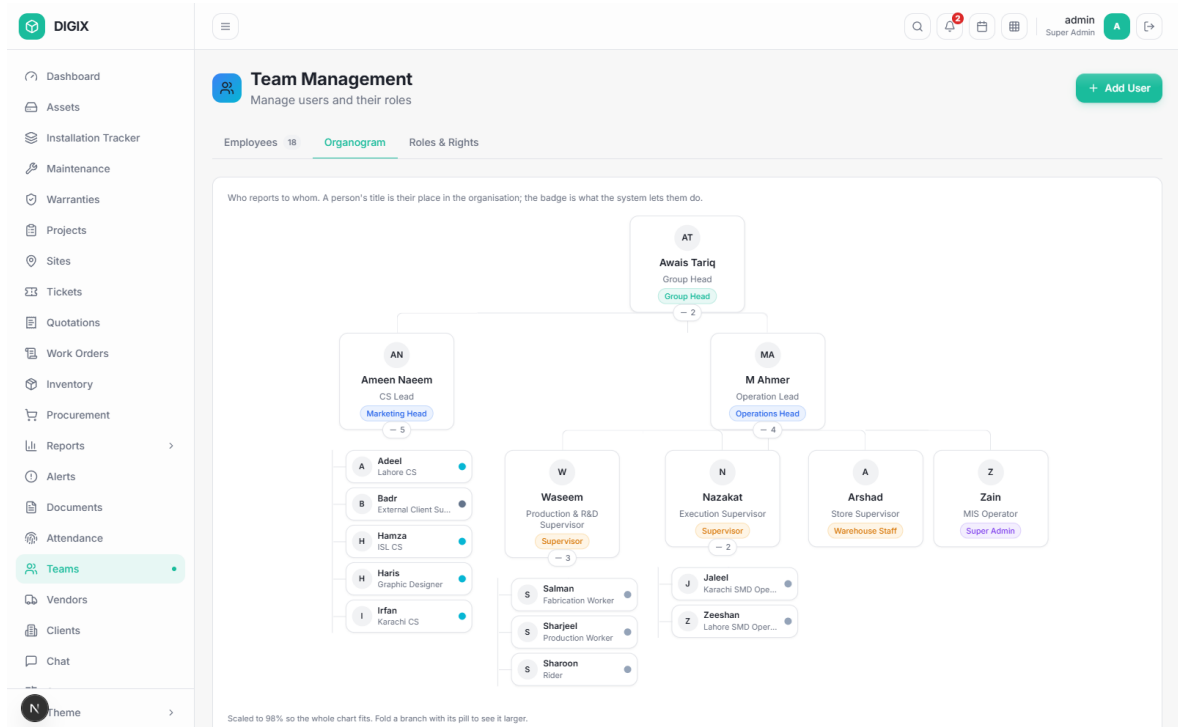


Figure 16 — Organogram

Roles & Rights — the whole grid: every role across the top, every capability down the side.

Team Management
Manage users and their roles

Employees | Organogram | **Roles & Rights**

Tick what each role may do. Everybody holding that role is affected at once — a single person can still be adjusted from their own row on the Employees tab.

CAPABILITY	Client Viewer 1 person	Finance 0 people	Group Head 1 person	Marketing 4 people	Marketing Head 1 person	Operations Head 1 person	Super Admin 2 people	Supervisor 2 people	Technician 5 people
MONEY									
See prices and costs Unit costs, line totals, order values and stock valuations. Without this, figures are hidden wherever they appear.	☐	☒	☒	☐	☒	☒	☒	☐	☐
Set prices ⚠️ Type the price on a purchase order, quotation or cost plan.	☐	☒	☒	☐	☒	☒	☒	☐	☐
Approve spending ⚠️ Sign off purchase orders, budgets and payments.	☐	☐	☒	☐	☐	☐	☒	☐	☐
See margins and profitability ⚠️ Quoted price against actual cost, project profitability.	☐	☒	☒	☐	☐	☐	☒	☐	☐
PROCUREMENT									
Raise purchase orders Create a draft order and send it for approval.	☐	☐	☒	☐	☐	☒	☒	☐	☐
Manage vendors Add and edit vendor records and their terms.	☐	☐	☒	☐	☐	☒	☒	☐	☐
Receive deliveries Book goods in against an order and record what arrived.	☐	☐	☒	☐	☐	☒	☒	☐	☐
Inspect deliveries Pass or reject what was received, and route it into stock.	☐	☐	☒	☐	☐	☒	☒	☒	☐

Figure 17 — Roles and Rights

Tick a box and **everyone holding that role** gains it — each column says how many people that is, and saves on its own. **New role** writes one from scratch for a job you actually have.

⚠️ A built-in role cannot be deleted, because accounts are stored against it. A custom role can be, once nobody holds it.

14.4 Setup, Alerts, Documents, Attendance, Chat, Settings

Screen	For
Setup	Reference data — asset types, models, material types, routes
Alerts	System alerts needing attention
Documents	The document library
Attendance	Registers and corrections
Chat	Internal messaging; the sidebar badge counts unread
Settings	Your profile, your password, your preferences

Part C — Doing the work

15. The six workflows end to end

15.1 Buying something

#	Who	Where	Does
1	Project / Inventory	—	A requirement appears under Procurement Requests
2	Procurement	Procurement > Procurement Requests	Ticks the lines → Raise PO
3	Procurement	The PO form	Supplier, Required Delivery , prices, extra lines → Raise draft PO
4	Procurement	Purchase Orders	Submit for Approval
5	Group Head	Purchase Orders	Approve — this places the order and stamps its date
6	Store	Procurement	Receive items — records what arrived, with serials
7	Store / Supervisor	Inventory > Receiving	Inspect — pass into stock or reject

15.2 Building an asset in-house

#	Who	Where	Does
1	Operations	Assets	Register Asset — Name, Type, Route = In-house
2	Operations	Asset > Components	Defines what it is built from
3	Production	—	Requests components; the store issues them → In Production
4	Production	Production steps	Works the route
5	—	—	Build complete → In Stock

15.3 Installing it

#	Who	Where	Does
1	Operations	Asset > Next stage	Assigns it → Assigned
2	Operations	Installation Tracker	New Installation — site, installer, steps
3	Technician	Installation Tracker	Works the checklist
4	—	—	Checklist complete → Installed
5	Technician	Installation Tracker	Mark Active (photo required) → Active
6	Supervisor	Installation Tracker	Handover (signed document required)

15.4 Keeping it running — planned

#	Who	Where	Does
1	Operations	Maintenance	Add Schedule — asset, frequency, start date
2	Supervisor	The job	Assigns round N to a technician

3	Technician	The job	Start work ; asks for components if needed
4	Supervisor	The job	Approves each part line
5	Store	Inventory	Issues them
6	Technician	The job	Complete visit — used vs returned, work done, cost
7	Store	Inventory › Receiving	Checks the returned parts back in
8	—	—	The next round opens automatically

15.5 Keeping it running — a fault

#	Who	Where	Does
1	Anyone	Tickets	Raises a ticket against the asset
2	System	—	Opens a corrective job per asset; asset → Under Maintenance
3	Technician	Maintenance	Works it, as §15.4 steps 3–6
4	—	—	Job closes; the asset returns to service

15.6 Running a project

#	Who	Where	Does
1	Operations	Projects	Creates it — client, sites, target date
2	Operations	Project › Scope	Which assets, how many, where
3	Operations	Project › Planning	BOQ — what each is built from
4	Group Head	Project › Budget	Approves. ⚠ Parts list and route lock
5	—	—	Execution: build, install, hand over
6	—	—	The phase follows the work throughout

Part D — Reference

16. Reference

16.1 Asset statuses

Status	Meaning
In Procurement	On order or awaiting purchase
In Production	Being built
In Stock	Built, ready to install
Assigned	Allocated to an installation
Installed	Physically up, not yet confirmed live
Active	Live at the client's site
Under Maintenance	Temporarily out of service
Client Property	Handed over to the client
Decommissioned	Retired
In Transit · RMA · Lost/Stolen	Off the normal line

16.2 Rules the system will enforce

Rule	Where
Name, Type and Manufacturing Route are required	Register Asset
An order cannot leave Draft without a Required Delivery date	Procurement
Only the Group Head or Super Admin approves an order	Procurement
Stock is issued only against a request	Inventory
A handed-over installation's steps cannot be changed	Installation
Marking active requires a photo	Installation
Recording handover requires the signed document	Installation
An approved project's parts list and route are locked	Projects
Nobody edits their own permissions	Teams
Nobody grants a capability they do not hold	Teams
A built-in role cannot be deleted	Teams
A custom role cannot be deleted while anyone holds it	Teams

16.3 Screenshots in this manual

All images live in [docs/manual-images/](#), named for the section they illustrate. When a screen changes, re-take its screenshot at **1600 × 1000** in the light theme, signed in as an administrator so the full sidebar shows, and keep the filename. Then add a revision-history row.

16.4 Getting help

14. Check the rule in §16.2 — most surprises are a deliberate rule.
15. Check §4 — a missing button is usually a permission.

16. Ask your line manager; the organogram (§14.3) shows who that is.
17. Beyond that, raise it with the MIS Operator.

End of document — DIGIX-UM-001 v1.0, 28 September 2026.