


S4 — Mounting guide (NOT TO SCALE — nothing on this page is a target)

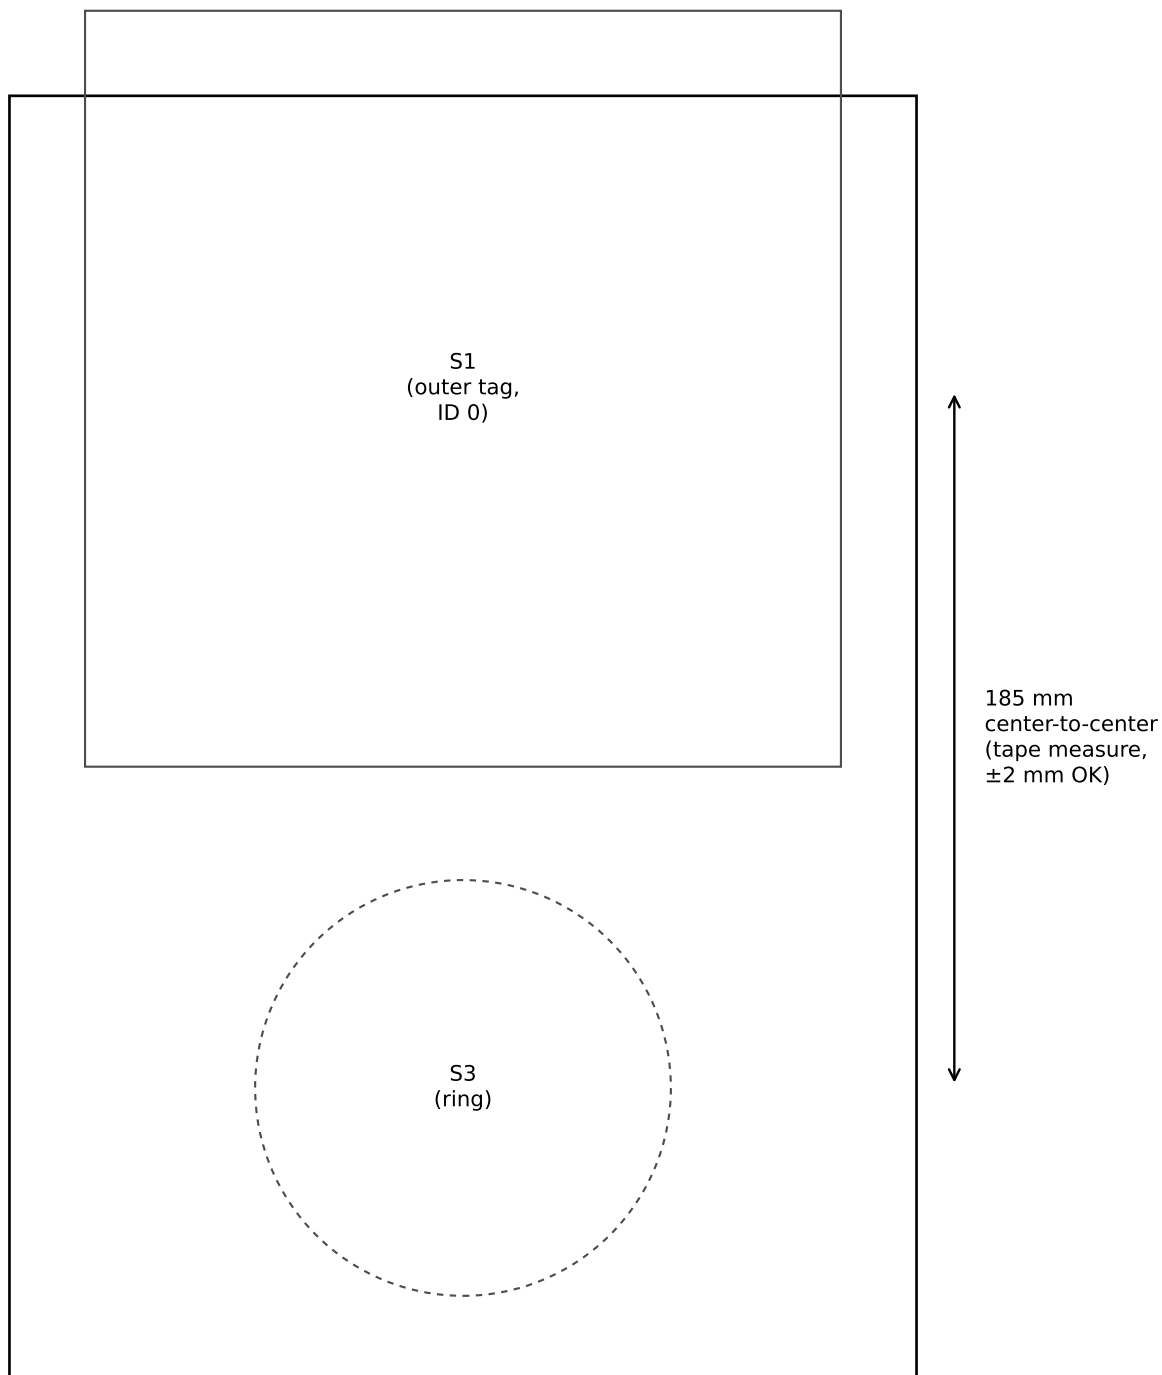

1. Rigid board on tripod A; camera (iPhone) on tripod B.

2. Mount S1 with its tag center 185 mm above the S3 ring center (dimension at right); both level, centers on a vertical line.

3. Layout L-A (coplanar): S3 taped flat on the board.

4. Layout L-B (collar): S3 on a shop-bought spacer stack — board → spacer → S3. Measure the standoff with the tape and RECORD it in the checklist. Use ≥ 2 different arbitrary heights across the day. NEVER cut or machine a spacer to a spec value (NO_HARDWARE rev 2).

5. Set view angles with the protractor at the board edge ($\pm 2^\circ$ is fine); camera positions per checklist: axial, then 30° oblique (D-025).