

U. S. Department of Transportation

Federal Aviation Administration

Interface Requirements Document

Operational and Supportability Implementation System (OASIS)
to
External Users

**Interface Requirements Document
Approval Signature Page
Operational and Supportability Implementation System (OASIS) to
External Users**

Approval Signatures

Name	Organization	Signature	Date Signed
Gina Oliver	AJW-17		03/26/2025

NAS

FOR OFFICIAL USE ONLY

Revision History

Revision/Level	Date	Notes
A	December 17, 1999	Initial OASIS CONUS delivery
B	August 11, 2014	OASIS Alaska Implementation
C	March 26th, 2025	New ICAO Format Implementation, Decommissioned Systems Removal, New Interfaces Additions (HUMA, NDP). See SDR-OASIS-013.

Table of Contents

1	SCOPE	1
1.1	Summary	1
1.2	Subsystem Responsibility	1
2	Applicable Documents	3
2.1	Government Documents	3
2.1.1	FAA Specifications	3
2.1.2	FAA Standards	3
2.1.3	FAA Orders	4
2.2	Non-Government Documents	4
3	Interface Requirements	5
3.1	General Requirements	5
3.1.1	Security Requirements	5
3.1.1.1	Information System Security (ISS)	5
3.1.1.2	Internet Interface	5
3.1.1.3	Web Service	5
3.1.1.4	Non-FAA Connections	5
3.1.1.5	Personnel Security	5
3.1.2	OASIS Required External Interfaces	5
3.1.3	Data Types	6
3.2	Functional Requirements	7
3.2.1	General Services Requirements	7
3.2.2	APs and Message Requirements	7
3.2.2.1	Identification of Each AP	7
3.2.2.2	AP Capability Requirements	7
3.2.2.3	Message Content Requirements	8
3.2.2.4	Relationship Among Messages	8
3.2.2.5	Quality of Service (QoS) Requirements	8
3.2.2.6	Error Handling Requirements	9
3.2.2.7	Interface Summary Tables	9
3.2.3	Protocol Implementation	24
3.2.3.1	Application Layer Services	24
3.2.3.2	Transport Layer Services	24
3.2.3.3	Naming and Addressing	25
3.3	Physical Requirements	25
3.3.1	Electrical Power and Electronic Requirements	25
3.3.1.1	Connectors	25
3.3.1.2	Wire/Cable	25
3.3.1.3	Grounding	25
3.3.1.4	Fasteners	25
3.3.1.5	Electromagnetic Compatibility	25
4	Quality Assurance Provisions	26
4.1	Responsibility for Verification	26
4.2	Special Verification Requirements	26

FOR OFFICIAL USE ONLY

Table of Contents (Continued)

4.3	Verification Levels and Methods	26
4.3.1	Verification Levels	26
4.3.2	Verification Methods	26
4.4	VRTM	27
5	Preparation for Delivery	29
6	Notes	30
6.1	Definitions	30
6.2	Abbreviations and Acronyms	30
Appendix A.	Message Formats	34
A.1	NMR Message Format	34
A.2	Information Unit Format	36
A.3	Acknowledgment Message	37
A.4	QALQ Request	37
A.5	QALQ Cancellation	38
A.6	QALQ Response	38
A.7	INREQ Request	38
A.8	INREQ Cancellation	38
A.9	INREQ Response	38
A.10	ALNOT Request	39
A.11	ALNOT Cancellation	39
A.12	ALNOT Response	39
A.13	Change ETA	39
A.14	Civil Domestic Flight Notification	40
A.15	Flight Plan Closure and Cancellation	41
A.16	Proposed VFR Flight Plan	41
A.17	Proposed IFR Flight Plan	42
A.18	Military Flight Notification	43
A.19	Military Stopover Flight Notification	44
A.20	Military Departure	45
A.21	Military Operations	46
A.21.1	IR Message	46
A.21.2	IR Cancellation	47
A.21.3	VR	47
A.21.4	VR Cancellation Message	48
A.21.5	MOA	49
A.21.6	MOA Cancellation	50
A.22	Mexican Flight Notification	51
A.23	IFR Flight Plan	52
A.24	General Facility	53
A.25	Law Enforcement	53
A.25.1	NDP LE Contact	53
A.25.2	EPIC Law Enforcement	54
A.26	ATCSCC	56

FOR OFFICIAL USE ONLY

Table of Contents (Continued)

A.26.1	Single Part ATCSCC	56
A.26.2	Multiple Part ATCSCC	57
A.27	Stereo Flight Plan	59
A.28	Cancellation	60
A.29	ICAO SAR Request	60
A.30	ICAO SAR Cancellation	61
A.31	ICAO SAR Response	61
A.32	ICAO Acknowledgment (ACK) Message	61
A.33	ICAO Reject (REJ) Message	62
A.34	Error Message	63
A.35	ICAO Supplementary Flight Plan (SPL) Message	63
A.36	Proposed ICAO Modification (CHG) Message	65
A.37	Active ICAO Modification (MOD) Message	67
A.38	ICAO Arrival (ARR) Message	68
A.39	ICAO Cancellation (CNL) Message.	69
A.40	ICAO Departure (DEP) Message	70
A.41	Proposed ICAO Flight Plan (FPL) Message	71
A.42	ICAO Flight Plan (FPL) Message (Proposed-Inbound)	73
A.43	ICAO Logical Acknowledgment (LAM) Message.	75
A.44	ICAO Logical Rejection (LRM) Message	76

List of Figures

Figure 1-1.	End-To-End Communications	1
Figure 3-1.	OASIS Interfaces.	7
Figure 3-2.	Subsystem/Service Interconnectivity	24

List of Tables

Table 1-1.	OASIS Interfaces System Responsibility List	1
Table 1-2.	OASIS Communications Subsystem Responsibility List	2
Table 3-1.	OASIS to NDP: Core Message Set	9
Table 3-2.	OASIS to ATOP: Core Message Set	11
Table 3-3.	OASIS to ERAM: Core Message Set	12
Table 3-4.	OASIS to OFDPS: Core Message Set	14
Table 3-5.	OASIS to FDP2000: Core Message Set	15
Table 3-6.	OASIS to Foreign ATC: Core Message Set.	17
Table 3-7.	OASIS to NAV/Canada: Core Message Set	18
Table 3-8.	OASIS to FFSP: Core Message Set.	19
Table 3-9.	OASIS to NORAD: Core Message Set	20
Table 3-10.	OASIS to MBO: Core Message Set	21
Table 3-11.	OASIS to ATCSCC: Core Message Set	22
Table 3-12.	OASIS to USNS/FNS: Core Message Set.	23
Table 3-13.	OASIS to WMSCR: Core Message Set.	23
Table 3-14.	OASIS to WMSCR: Core Message Set.	24
Table 4-1.	OASIS VRTM.	27

1 SCOPE

This Interface Requirements Document (IRD) provides the requirements for the interface between the Operational and Supportability Implementation System (OASIS) and external users.

1.1 Summary

The OASIS is an operational Federal Aviation Administration (FAA) National Airspace System (NAS) system that transmits, receives, processes, and stores alphanumeric (A/N) weather products, graphic weather products, aeronautical data, and flight plan information. This data is used to support weather briefing, pre-flight planning, and in-flight aeronautical decision making as well as search and rescue operations.

The OASIS interfaces with other NAS systems using the FAA Telecommunications Infrastructure (FTI) Operational Internet Protocol (IP) network. Non-NAS systems will also be able to access the OASIS via the FTI Enterprise Security Gateway (ESG) as defined in the Draft FTI Operational IP User Guide.

The OASIS utilizes a hub and spoke network architecture centered at the Anchorage (ZAN) Air Route Traffic Control Center (ARTCC). This hub system, identified as the ANC OASIS Data Center, contains data access points at the ZAN ARTCC to provide a common master database of aeronautical, flight planning, and weather information. The ANC OASIS Data Center equipment provides external communications through the OASIS router via the FTI to the 17 Alaskan Flight Service Stations (FSS) as depicted in Figure 1-1, End-To-End Communications.

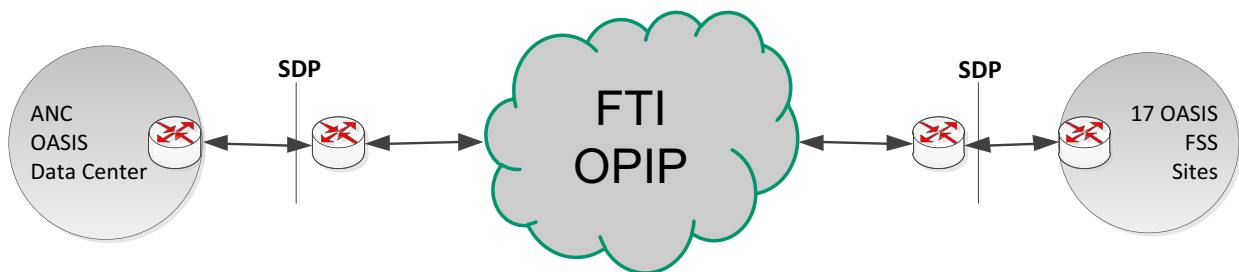


Figure 1-1. End-To-End Communications

This IRD lists only those interfaces that are required. Some data for the OASIS is available from multiple sources; where no specific source is required, no interface is listed.

1.2 Subsystem Responsibility

Table 1-1. OASIS Interfaces System Responsibility List

Subsystem/Equipment	Common Name	Responsible FAA Program Office
AKWeatherCams	Alaska Weather Cameras	ATO-R
ATCSCC	Air Traffic Control Systems Command Center	ATO-W

FOR OFFICIAL USE ONLY

Table 1-1. OASIS Interfaces System Responsibility List (Continued)

Subsystem/Equipment	Common Name	Responsible FAA Program Office
ATOP	Advanced Technologies and Oceanic Procedures	ATO-M
EPIC	El Paso Intelligence Center	ATO-R
ERAM	En-Route Automation Modernization	ATO-M
OFDPS	Offshore Flight Data Processing System	ATO-M
FDP2000	Flight Data Processing 2000	ATO-E
Foreign ATC	Foreign Air Traffic Control	N/A
FFSP	Future Flight Service Program	ATO-R
MBO	Military Base Operation (s)	ATO-R
NAV/Canada	NAV/Canada	
NMR	NAS Messaging Replacement	ATO-W
NORAD	North American Aerospace Defense Command	
OASIS	Operational and Supportability Implementation System	ATO-R
USNS	United States Notice To Air Missions (NOTAM) Service	ATO-M
WMSCR	Weather Message Switching Center Replacement	ATO-W

Table 1-2. OASIS Communications Subsystem Responsibility List

Subsystem/Equipment	Common Name	Responsible FAA Program Office
ASTI	Alaska Satellite Telecommunication Infrastructure	ATO-W
FTI	FAA Telecommunications Infrastructure	ATO-W
NMR	NAS Messaging Replacement	ATO-W

FOR OFFICIAL USE ONLY

2 APPLICABLE DOCUMENTS

2.1 Government Documents

The following documents, of the exact issue shown, form a part of this IRD to the extent specified. If there is a conflict between the following documents and the content of this IRD, the content of the IRD supersedes all prior documents.

2.1.1 FAA Specifications

FAA-E-3008	System Specification for OASIS
FAA-G-2100H May 9, 2005	Specification, Electronic Equipment, General Requirements
FTI Version 2E March 2012	FAA Telecommunications Infrastructure (FTI) Enterprise Security Gateway Users Guide, Volume II — For Non-NAS Users
NAS-IC-25070002-02 7/12/2010	Interface Control Document Weather Message Switching Center Replacement (WMSCR) to Transmission Control Protocol (TCP)/Internet Protocol (IP)-based User Subsystems
NAS-IC-43010002-01C April 13, 2016	National Airspace Data Interchange Network (NADIN) Message Switch Network (MSN) to Transmission Control Protocol (TCP)/Internet Protocol (IP) User Subsystems, Interface Control Document
NAS-RD-2012 September 28, 2012	National Airspace System System Requirement Specification

2.1.2 FAA Standards

FAA Advisory Circular (AC) 00-62 November 1, 2002	Internet Communications of Aviation Weather and NOTAMs
FAA-C-1217g April 16, 2015	Electrical Work, Interior
FAA-STD-019e December 22, 2005	Lightning and Surge Protection, Grounding, Bonding and Shielding Requirements for Facilities and Electronic Equipment
FAA-STD-039c August 14, 2003	Open System Architecture and Protocols

2.1.3 FAA Orders

Order JO 1370.114 January 4, 2012	Implementation of FAA Telecommunications Infrastructure Services and IS Requirements in the NAS	
Order 1370.121B April 25, 2022	FAA Information Security and Privacy: Policy	
Order JO 1370.98 April 15, 2007	ATO Information Technology (IT) Infrastructure Requirements for Non-FAA Connectivity	
Order 1600.1F November 4, 2021	Personnel Security Program	
Order 1600.72A 12/28/05	Contractor and Industrial Security Program	
Order 7930.2T November 14, 2023	Notices to Air Missions (NOTAM)	

2.2 Non-Government Documents

International Civil Aviation Organization (ICAO) DOC 9896, Second Edition 2015	Manual on the Aeronautical Telecommunications Network (ATN) using Internet Protocol Suite (IPS) Standards and Protocols	
ICAO Annex 10, Volume II, Seventh Edition July 2016	Aeronautical Telecommunications, Volume II, Communication Procedures Including those with PANS Status	
ICAO Annex 10, Volume III, Second Edition July 2007	Aeronautical Telecommunications, Volume III, Communication Systems	
National Institute of Standards and Technology (NIST) NIST SP 800-53A Revision 4, December 18, 2014	Assessing Security and Privacy Controls in Federal Information Systems and Organizations: Building Effective Assessment Plans	
International Telecommunication Union (ITU) T.50 November 1988	Series T: Terminal Equipment and Protocols for Telematic Services	

3 INTERFACE REQUIREMENTS

This section provides the general functional requirements for the interfaces between the OASIS and the user subsystems.

3.1 General Requirements

This section provides a list of the types of messages received from and transmitted to the OASIS and required interfaces.

3.1.1 Security Requirements

3.1.1.1 Information System Security (ISS)

For ISS requirements, the OASIS follows Order 1370.121. |

3.1.1.2 Internet Interface

The OASIS Internet interface follows Order 1370.121. |

3.1.1.3 Web Service

The web service follows Order 1370.121 and FAA Advisory Circular AC 00-62. |

3.1.1.4 Non-FAA Connections

- a. All connections to non-FAA systems must have a Memorandum of Understanding negotiated per Order JO 1370.98.
(OASIS-EXT-001)
- b. The external interfaces will follow the moderate controls defined in NIST SP 800-53, specifically the moderate controls SC-1 thru SC-23, if applicable, or appropriate compensating controls.
- c. The use of the compensating controls must be documented with sufficient justification.
(OASIS-EXT-002)

3.1.1.5 Personnel Security

For personnel security, the OASIS follows Order 1600.1 and Order 1600.72.

3.1.2 OASIS Required External Interfaces

- a. NAS Enterprise Messaging System (NEMS) (paragraph 3.2.2.7.14) |
- b. NDP (paragraph 3.2.2.7.1)
- c. ATCSCC (paragraph 3.2.2.7.11)
- d. ATOP (paragraph 3.2.2.7.2)
- e. EPIC (paragraph 3.2.2.7.14) |
- f. ERAM (paragraph 3.2.2.7.3)
- g. FDP2000 (paragraph 3.2.2.7.5)
- h. Foreign ATC (paragraph 3.2.2.7.6)

FOR OFFICIAL USE ONLY

- i. FFSP (paragraph 3.2.2.7.8)
- j. MBO (paragraph 3.2.2.7.10)
- k. NAV/Canada (paragraph 3.2.2.7.7)
- l. NORAD (paragraph 3.2.2.7.9)
- m. OFDPS (paragraph 3.2.2.7.4)
- n. USNS/FNS — Candidate and Cancellation NOTAMs (paragraph 3.2.2.7.12)
- o. WMSCR — Weather Observations, Pilot Reports (PIREP) (paragraph 3.2.2.7.13)

3.1.3 Data Types

- a. Accepted Data from External Sources:
 - (1) Flight Data
 - (2) Aircraft Movement Messages
 - (3) General Messages
 - (4) Search and Rescue (SAR) Messages
 - (5) Control Messages
 - (6) Law Enforcement (LE) data
 - (7) Two-Way text messages from accepted electronic devices
 - (8) eSRS messages from accepted electronic devices
- b. Transmitted Data to External Sources:
 - (1) Flight Data
 - (2) Aircraft Movement Messages
 - (3) General Messages
 - (4) SAR Messages
 - (5) Weather Data
 - (6) Weather Observation data
 - (7) PIREP data
 - (8) NOTAM data
 - (9) Candidate NOTAM data and NOTAM Cancellations

The specific interfaces are discussed in Figure 3-1, OASIS Interfaces.

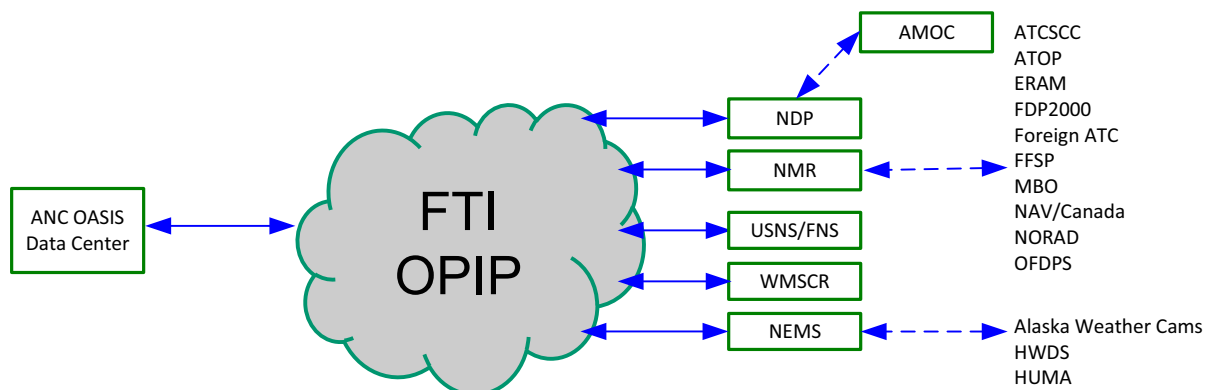


Figure 3-1. OASIS Interfaces

3.2 Functional Requirements

This section describes the functional requirements of the OASIS interfaces. It identifies the types of interfaces based on the data listed in section 3.2.2.7, the Application Processes (AP) for those interfaces and the information transferred between the OASIS and the user subsystems.

The following interfaces are described in this IRD and are supported by OASIS:

- a. NMR Subsystem
- b. FAA Weather Camera

3.2.1 General Services Requirements

This section lists the required subsystem interfaces that are connected to OASIS via FTI and their message flow. For clarity, all AP message requirements are listed in Appendix A, Message Formats.

3.2.2 APs and Message Requirements

3.2.2.1 Identification of Each AP

See Appendix A, Message Formats for identification of each AP.

3.2.2.2 AP Capability Requirements

The OASIS services are considered essential, as defined in NAS-RD-2012. Availability of this service is equal to or greater than 99.9 percent. The AP exchanges Aeronautical Fixed Telecommunication Network (AFTN)-formatted messages. This IRD imposes no requirements on the processing of the actual AFTN-formatted data.

3.2.2.3 Message Content Requirements

a. **Transmission to NMR.**

- (1) For transmission to an NMR subsystem interface, the OASIS must format an information unit into an NMR message as specified in NAS-IC-43010002-01. The Additional Data Field (ADF) will not be used.
(OASIS-EXT-003)
- (2) The information unit must be transmitted in the text field of an NMR message.
(OASIS-EXT-004)

b. **Messages Received from NMR.**

- (1) A message received from an NMR subsystem interface to the OASIS will be formatted as specified in NAS-IR-4301002, except that ADF will not be present.
- (2) An information unit must be extracted from the text field of the NMR message.
(OASIS-EXT-005)

c. **Message Text.** The text portion of the information units transmitted between the OASIS and the NMR subsystem interfaces may be up to and including 3600 characters in length.

3.2.2.4 Relationship Among Messages

This IRD imposes no explicit relationship among messages. ICAO Doc 9896 defines the relationship between the AFTN messages.

3.2.2.5 Quality of Service (QoS) Requirements

a. This IRD defines the following QoS requirements:

- (1) Availability: The availability of the interfaces is a function of the FTI Service Delivery Points (SDP).
- (2) Data Integrity: Data integrity is provided by the underlying TCP/IP protocols.
- (3) Latency: The latency for message transfer is a function of the FTI services associated with the FTI SDP's for the OASIS servers and the user subsystems.
- (4) Throughput: Throughput is a function of the FTI services level and the access bandwidth of the OASIS servers and the user subsystem equipment.

b. This IRD imposes no explicit requirements on the following QoS parameters:

- (1) Message Size: The OASIS imposes no requirements on the throughput for incoming messages.
- (2) Priority
- (3) Urgency

FOR OFFICIAL USE ONLY

- (4) Importance
- (5) Expected Bit Error Rate

3.2.2.6 Error Handling Requirements

All error handling for this interface is performed by the underlying TCP/IP protocols.

3.2.2.7 Interface Summary Tables

3.2.2.7.1 NDP Interface Summary Table

When transmitting a flight plan or other flight movement related messages to an external user, the OASIS must transmit a copy of that message to the NDP. A summary of the messages to be transmitted across the NDP interface is shown in Table 3-1, OASIS to NDP: Core Message Set.

[\(OASIS-EXT-006\)](#)

Table 3-1. OASIS to NDP: Core Message Set

Reference	DIRECTION OASIS ⇔ NDP	MESSAGE NAME
A.3	⇒	Acknowledgment (Roger)
A.17	⇒	IFR Flight Plan
A.27	⇒	Stereo Flight Plan
A.1	⇔	General Message
A.13	⇒	Change of ETA
A.15	⇒	Flight Plan Cancellation
A.15	⇒	Flight Plan Closure
A.4	⇒	QALQ Request
A.7	⇒	INREQ Request
A.10	⇒	ALNOT Request
A.6	⇒	QALQ Response
A.9	⇒	INREQ Response
A.12	⇒	ALNOT Response
A.5	⇒	QALQ Cancellation
A.8	⇒	INREQ Cancellation
A.11	⇒	ALNOT Cancellation
A.29	⇒	INCERFA Request
A.29	⇒	ALERFA Request

FOR OFFICIAL USE ONLY

Table 3-1. OASIS to NDP: Core Message Set (Continued)

Reference	DIRECTION OASIS ⇌ NDP	MESSAGE NAME
A.29	⇒	DESTRESFA Request
A.31	⇒	INCERFA Response
A.31	⇒	ALERFA Response
A.31	⇒	DESTRESFA Response
A.30	⇒	INCERFA Cancellation
A.30	⇒	ALERFA Cancellation
A.30	⇒	DESTRESFA Cancellation
A.14	⇒	Civil Domestic Flight Notification
A.22	⇒	Mexican Flight Notification
A.18	⇒	Military Flight Notification
A.20	⇒	Military Departure
A.16	⇒	Proposed VFR Flight Plan
A.17	⇒	Proposed IFR Flight Plan
A.25	⇒	Law Enforcement Contact
A.37	⇒	ICAO Supplementary Flight Plan (SPL) Message
A.38	⇒	Proposed ICAO Modification (CHG) Message
A.39	⇒	Active ICAO Modification (MOD) Message
A.40	⇒	ICAO Arrival (ARR) Message
A.41	⇒	ICAO Cancellation (CNL) Message
A.42	⇒	ICAO Departure (DEP) Message
A.43	⇒	Proposed ICAO Flight Plan (FPL) Message
A.44	⇒	ICAO Flight Plan (FPL) Message (Proposed-Inbound)
A.34	⇒	ICAO Acknowledgment (ACK) Message
A.42	⇒	ICAO Logical Acknowledgment (LAM) Message
A.43	⇒	ICAO Logical Rejection (LRM) Message

FOR OFFICIAL USE ONLY

3.2.2.7.2 ATOP Interface Summary Table

The OASIS must transmit and receive flight movement and control messages to and from ATOP as specified in FAA-E-3008 and acknowledge the receipt of the messages, if required. A summary of the messages to be transmitted across the ATOP interface is shown in Table 3-2, OASIS to ATOP: Core Message Set.

(OASIS-EXT-007)

Table 3-2. OASIS to ATOP: Core Message Set

Reference	DIRECTION OASIS ⇔ ATOP	MESSAGE NAME
A.1	⇔	General Message
A.17	⇒	IFR Flight Plan
A.27	⇒	STEREO Flight Plan
A.3	⇔	Acknowledgment (Roger)
A.34	⇐	Error
A.33	⇐	ICAO Reject
A.28	⇒	Cancellation Message
A.4	⇔	QALQ Request
A.7	⇔	INREQ Request
A.10	⇔	ALNOT Request
A.29	⇔	INCERFA Request
A.29	⇔	ALERFA Request
A.29	⇔	DESTRESFA Request
A.6	⇔	QALQ Response
A.9	⇔	INREQ Response
A.12	⇔	ALNOT Response
A.31	⇔	INCERFA Response
A.31	⇔	ALERFA Response
A.31	⇔	DESTRESFA Response
A.5	⇔	QALQ Cancellation
A.8	⇔	INREQ Cancellation
A.11	⇔	ALNOT Cancellation
A.30	⇔	INCERFA Cancellation
A.30	⇔	ALERFA Cancellation

FOR OFFICIAL USE ONLY

Table 3-2. OASIS to ATOP: Core Message Set (Continued)

Reference	DIRECTION OASIS ⇔ ATOP	MESSAGE NAME
A.30	⇔	DESTRESFA Cancellation
A.21.1	⇔	IFR Training Route (IR)
A.21.3	⇔	VFR Training Route (VR)
A.21.5	⇔	Military Operations Area (MOA)
A.21.2	⇔	IR Cancellation
A.21.4	⇔	VR Cancellation
A.21.6	⇔	MOA Cancellation
A.36	⇒	Proposed ICAO Modification (CHG) Message
A.39	⇒	ICAO Cancellation (CNL) Message
A.42	⇒	ICAO Flight Plan (FPL) Message (Proposed-Inbound)

3.2.2.7.3 ERAM Interface Summary Table

The OASIS must transmit and receive flight movement and control messages to and from ERAM as specified in FAA-E-3008 and acknowledge the receipt of the messages, if required. A summary of the messages to be transmitted across the ERAM interface is shown in Table 3-3, OASIS to ERAM: Core Message Set.

(OASIS-EXT-009)

Table 3-3. OASIS to ERAM: Core Message Set

Reference	DIRECTION OASIS ⇔ ERAM	MESSAGE NAME
A.1	⇔	General Message
A.17	⇒	IFR Flight Plan
A.27	⇒	Stereo Flight Plan
A.3	⇔	Acknowledgment (Roger)
A.32	⇐	ICAO Acknowledgment (ACK) Message
A.34	⇐	Error
A.33	⇐	ICAO Reject
A.28	⇒	Cancellation Message
A.4	⇔	QALQ Request
A.7	⇔	INREQ Request
A.10	⇔	ALNOT Request

FOR OFFICIAL USE ONLY

Table 3–3. OASIS to ERAM: Core Message Set (Continued)

Reference	DIRECTION OASIS ⇔ ERAM	MESSAGE NAME
A.29	⇔	INCERFA Request
A.29	⇔	ALERFA Request
A.29	⇔	DESTRESFA Request
A.6	⇔	QALQ Response
A.9	⇔	INREQ Response
A.12	⇔	ALNOT Response
A.31	⇔	INCERFA Response
A.31	⇔	ALERFA Response
A.31	⇔	DESTRESFA Response
A.5	⇔	QALQ Cancellation
A.8	⇔	INREQ Cancellation
A.11	⇔	ALNOT Cancellation
A.30	⇔	INCERFA Cancellation
A.30	⇔	ALERFA Cancellation
A.30	⇔	DESTRESFA Cancellation
A.21.1	⇔	IFR Training Route (IR)
A.21.3	⇔	VFR Training Route (VR)
A.21.5	⇔	Military Operations Area (MOA)
A.21.2	⇔	IR Cancellation
A.21.4	⇔	VR Cancellation
A.21.6	⇔	MOA Cancellation
A.36	⇒	Proposed ICAO Modification (CHG) Message
A.39	⇒	ICAO Cancellation (CNL) Message
A.42	⇒	ICAO Flight Plan (FPL) Message (Proposed-Inbound)

3.2.2.7.4 OFDPS Interface Summary Table

The OASIS must transmit and receive flight movement and control messages to and from OFDPS as specified in FAA-E-3008 and acknowledge the receipt of the messages, if required. A summary of the messages to be transmitted across the OFDPS interface is shown in Table 3–4, OASIS to OFDPS: Core Message Set.

[\(OASIS-EXT-036\)](#)

FOR OFFICIAL USE ONLY

Table 3-4. OASIS to OFDPS: Core Message Set

Reference	DIRECTION OASIS ⇔ OFDPS	MESSAGE NAME
A.1	⇔	General Message
A.17	⇒	IFR Flight Plan
A.27	⇒	Stereo Flight Plan
A.3	⇔	Acknowledgment (Roger)
A.32	⇐	ICAO Acknowledgment (ACK) Message
A.34	⇐	Error
A.33	⇐	ICAO Reject
A.28	⇒	Cancellation Message
A.4	⇔	QALQ Request
A.7	⇔	INREQ Request
A.10	⇔	ALNOT Request
A.29	⇔	INCERFA Request
A.29	⇔	ALERFA Request
A.29	⇔	DESTRESFA Request
A.6	⇔	QALQ Response
A.9	⇔	INREQ Response
A.12	⇔	ALNOT Response
A.31	⇔	INCERFA Response
A.31	⇔	ALERFA Response
A.31	⇔	DESTRESFA Response
A.5	⇔	QALQ Cancellation
A.8	⇔	INREQ Cancellation
A.11	⇔	ALNOT Cancellation
A.30	⇔	INCERFA Cancellation
A.30	⇔	ALERFA Cancellation
A.30	⇔	DESTRESFA Cancellation
A.21.1	⇔	IFR Training Route (IR)
A.21.3	⇔	VFR Training Route (VR)
A.21.5	⇔	Military Operations Area (MOA)

FOR OFFICIAL USE ONLY

Table 3-4. OASIS to OFDPS: Core Message Set (Continued)

Reference	DIRECTION OASIS ⇔ OFDPS	MESSAGE NAME
A.21.2	⇔	IR Cancellation
A.21.4	⇔	VR Cancellation
A.21.6	⇔	MOA Cancellation
A.36	⇒	Proposed ICAO Modification (CHG) Message
A.39	⇒	ICAO Cancellation (CNL) Message
A.42	⇒	ICAO Flight Plan (FPL) Message (Proposed-Inbound)

3.2.2.7.5 FDP2000 Interface Summary Table

The OASIS must transmit and receive flight movement and control messages to and from FDP2000 as specified in FAA-E-3008 and acknowledge the receipt of the messages, if required. A summary of the messages to be transmitted across the FDP2000 interface is shown in Table 3-5, OASIS to FDP2000: Core Message Set.

(OASIS-EXT-010)

Table 3-5. OASIS to FDP2000: Core Message Set

Reference	DIRECTION OASIS ⇔ FDP2000	MESSAGE NAME
A.1	⇔	General Message
A.17	⇒	IFR Flight Plan
A.27	⇒	Stereo Flight Plan
A.3	⇔	Acknowledgment (Roger)
A.32	⇐	ICAO Acknowledgment (ACK) Message
A.34	⇐	Error
A.33	⇐	ICAO Reject
A.28	⇒	Cancellation Message
A.4	⇔	QALQ Request
A.7	⇔	INREQ Request
A.10	⇔	ALNOT Request
A.29	⇔	INCERFA Request
A.29	⇔	ALERFA Request
A.29	⇔	DESTRESFA Request
A.6	⇔	QALQ Response

FOR OFFICIAL USE ONLY

Table 3-5. OASIS to FDP2000: Core Message Set (Continued)

Reference	DIRECTION OASIS ⇔ FDP2000	MESSAGE NAME
A.9	⇔	INREQ Response
A.12	⇔	ALNOT Response
A.31	⇔	INCERFA Response
A.31	⇔	ALERFA Response
A.31	⇔	DESTRESFA Response
A.5	⇔	QALQ Cancellation
A.8	⇔	INREQ Cancellation
A.11	⇔	ALNOT Cancellation
A.30	⇔	INCERFA Cancellation
A.30	⇔	ALERFA Cancellation
A.30	⇔	DESTRESFA Cancellation
A.21.1	⇔	IFR Training Route (IR)
A.21.3	⇔	VFR Training Route (VR)
A.21.5	⇔	Military Operations Area (MOA)
A.21.2	⇔	IR Cancellation
A.21.4	⇔	VR Cancellation
A.21.6	⇔	MOA Cancellation
A.36	⇒	Proposed ICAO Modification (CHG) Message
A.39	⇒	ICAO Cancellation (CNL) Message
A.42	⇒	ICAO Flight Plan (FPL) Message (Proposed-Inbound)

FOR OFFICIAL USE ONLY

3.2.2.7.6 Foreign ATC Interface Summary Table

The OASIS must transmit and receive flight movement messages to and from Foreign ATC systems (except NAV/Canada) as specified in FAA-E-3008 and acknowledge the receipt of the messages, if required. A summary of the messages to be transmitted across the Foreign ATC interface is shown in Table 3-6, OASIS to Foreign ATC: Core Message Set.

(OASIS-EXT-011)

Table 3-6. OASIS to Foreign ATC: Core Message Set

Reference	DIRECTION OASIS ↔ Foreign ATC	MESSAGE NAME
A.1	↔	General Message
A.17	⇒	IFR Flight Plan
A.42	↔	ICAO Flight Plan (FPL) Message (Proposed-Inbound)
A.40	↔	ICAO Departure (DEP) Message
A.14	↔	Civil Domestic Flight Notification
A.3	↔	Acknowledgment (Roger)
A.32	⇒	ICAO Acknowledgment (ACK) Message
A.29	↔	INCERFA Request
A.29	↔	ALERFA Request
A.29	↔	DESTRESFA Request
A.31	↔	INCERFA Response
A.31	↔	ALERFA Response
A.31	↔	DESTRESFA Response
A.30	↔	INCERFA Cancellation
A.30	↔	ALERFA Cancellation
A.30	↔	DESTRESFA Cancellation

3.2.2.7.7 NAV/Canada Interface Summary Table

The OASIS must transmit and receive flight movement messages to and from the NAV/Canada system as specified in FAA-E-3008 and acknowledge the receipt of the messages, if required. A summary of the messages to be transmitted across the NAV/Canada interface is shown in Table 3-7, OASIS to NAV/Canada: Core Message Set.

(OASIS-EXT-013)

FOR OFFICIAL USE ONLY

Table 3-7. OASIS to NAV/Canada: Core Message Set

Reference	DIRECTION OASIS ⇔ NAV/ Canada	MESSAGE NAME
A.1	⇔	General Message
A.17	⇒	IFR Flight Plan
A.14	⇔	Civil Domestic Flight Notification
A.15	⇔	Flight Plan Cancellation
A.15	⇔	Flight Plan Closure
A.13	⇔	Change ETA
A.3	⇔	Acknowledgment (Roger)
A.29	⇔	INCERFA Request
A.29	⇔	ALERFA Request
A.29	⇔	DESTRESFA Request
A.31	⇔	INCERFA Response
A.31	⇔	ALERFA Response
A.31	⇔	DESTRESFA Response
A.30	⇔	INCERFA Cancellation
A.30	⇔	ALERFA Cancellation
A.30	⇔	DESTRESFA Cancellation
A.35	⇔	ICAO Supplementary Flight Plan (SPL) Message
A.36	⇔	Proposed ICAO Modification (CHG) Message
A.37	⇔	Active ICAO Modification (MOD) Message
A.38	⇔	ICAO Arrival (ARR) Message
A.39	⇔	ICAO Cancellation (CNL) Message
A.40	⇔	ICAO Departure (DEP) Message
A.41	⇒	Proposed ICAO Flight Plan (FPL) Message
A.42	⇔	ICAO Flight Plan (FPL) Message (Proposed-Inbound)
A.32	⇐	ICAO Acknowledgment (ACK) Message
A.33	⇐	ICAO Reject (REJ) Message
A.43	⇔	ICAO Logical Acknowledgment (LAM) Message
A.44	⇔	ICAO Logical Rejection (LRM) Message

FOR OFFICIAL USE ONLY

3.2.2.7.8 FFSP Interface Summary Table

The OASIS must transmit and receive flight movement messages to and from FFSP as specified in FAA-E-3008 and acknowledge the receipt of the messages, if required. A summary of the messages to be transmitted across the FFSP interface is shown in Table 3-8, OASIS to FFSP: Core Message Set.

(OASIS-EXT-014)

Table 3-8. OASIS to FFSP: Core Message Set

Reference	DIRECTION OASIS ⇔ FS21	MESSAGE NAME
A.1	⇔	General Message
A.14	⇔	Civil Domestic Flight Notification
A.18	⇔	Military Flight Notification
A.20	⇔	Military Departure message
A.16	⇔	Proposed VFR Flight Plan
A.17	⇔	Proposed IFR Flight Plan
A.15	⇔	Flight Plan Cancellation
A.15	⇔	Flight Plan Closure
A.13	⇔	Change ETA
A.3	⇔	Acknowledgment (Roger)
A.4	⇔	QALQ Request
A.7	⇔	INREQ Request
A.10	⇔	ALNOT Request
A.6	⇔	QALQ Response
A.9	⇔	INREQ Response
A.12	⇔	ALNOT Response
A.5	⇔	QALQ Cancellation
A.8	⇔	INREQ Cancellation
A.11	⇔	ALNOT Cancellation
A.29	⇔	INCERFA Request
A.29	⇔	ALERFA Request
A.29	⇔	DESTRESFA Request
A.31	⇔	INCERFA Response
A.31	⇔	ALERFA Response

FOR OFFICIAL USE ONLY

Table 3–8. OASIS to FFSP: Core Message Set (Continued)

Reference	DIRECTION OASIS ⇔ FS21	MESSAGE NAME
A.31	⇔	DESTRESFA Response
A.30	⇔	INCERFA Cancellation
A.30	⇔	ALERFA Cancellation
A.30	⇔	DESTRESFA Cancellation
A.35	⇔	ICAO Supplementary Flight Plan (SPL) Message
A.36	⇔	Proposed ICAO Modification (CHG) Message
A.37	⇔	Active ICAO Modification (MOD) Message
A.38	⇔	ICAO Arrival (ARR) Message
A.39	⇔	ICAO Cancellation (CNL) Message
A.40	⇔	ICAO Departure (DEP) Message
A.41	⇔	Proposed ICAO Flight Plan (FPL) Message
A.42	⇔	ICAO Flight Plan (FPL) Message (Proposed-Inbound)
A.43	⇔	ICAO Logical Acknowledgment (LAM) Message
A.44	⇔	ICAO Logical Rejection (LRM) Message

3.2.2.7.9 NORAD Interface Summary Table

The OASIS must transmit Defense Visual Flight Rules (DVFR) Flight Plan messages to NORAD as specified in FAA-E-3008 and acknowledge the receipt of the messages, if required. A summary of the messages to be transmitted across the NORAD interface is shown in Table 3–9, OASIS to NORAD: Core Message Set.

[\(OASIS-EXT-015\)](#)

Table 3–9. OASIS to NORAD: Core Message Set

Reference	DIRECTION OASIS ⇔ NORAD	MESSAGE NAME
A.1	⇔	General Message
A.14	⇒	Civil Domestic Flight Notification
A.37	⇒	Active ICAO Modification (MOD) Message
A.39	⇒	ICAO Cancellation (CNL) Message
A.40	⇒	ICAO Departure (DEP) Message

FOR OFFICIAL USE ONLY

3.2.2.7.10 MBO Interface Summary Table

The OASIS must transmit and receive flight movement and control messages to and from MBOs as specified in FAA-E-3008 and acknowledge the receipt of the messages, if required. A summary of the messages to be transmitted across the MBO interface is shown in Table 3-10, OASIS to MBO: Core Message Set.

(OASIS-EXT-016)

Table 3-10. OASIS to MBO: Core Message Set

Reference	DIRECTION OASIS ⇔ MBO	MESSAGE NAME
A.3	⇔	Acknowledge (Roger)
A.1	⇔	General Message
A.13	⇔	Change of ETA
A.15	⇔	Flight Plan Cancellation
A.15	⇔	Flight Plan Closure
A.4	⇔	QALQ Request
A.7	⇔	INREQ Request
A.10	⇔	ALNOT Request
A.6	⇔	QALQ Response
A.9	⇔	INREQ Response
A.12	⇔	ALNOT Response
A.5	⇔	QALQ Cancellation
A.8	⇔	INREQ Cancellation
A.11	⇔	ALNOT Cancellation
A.29	⇔	INCERFA Request
A.29	⇔	ALERFA Request
A.29	⇔	DESTRESFA Request
A.31	⇔	INCERFA Response
A.31	⇔	ALERFA Response
A.31	⇔	DESTRESFA Response
A.30	⇔	INCERFA Cancellation
A.30	⇔	ALERFA Cancellation
A.30	⇔	DESTRESFA Cancellation
A.14	⇔	Civil Domestic Flight Notification

FOR OFFICIAL USE ONLY

Table 3–10. OASIS to MBO: Core Message Set (Continued)

Reference	DIRECTION OASIS ⇔ MBO	MESSAGE NAME
A.18	⇔	Military Flight Notification
A.19	⇔	Military Stopover Notification
A.20	⇔	Military Departure
A.42	⇔	ICAO Flight Plan (FPL) Message (Proposed-Inbound)
A.40	⇔	ICAO Departure (DEP) Message
A.16	⇔	Proposed VFR Flight Plan
A.17	⇔	Proposed IFR Flight Plan
A.21.1	⇔	Military Operations-IR
A.21.3	⇔	Military Operation-VR
A.21.5	⇔	Military Operations-MOA
A.21.2	⇔	IR Cancellation
A.21.4	⇔	VR Cancellation
A.21.6	⇔	MOA Cancellation

3.2.2.7.11 ATCSCC Interface Summary Table

The OASIS must receive ATCSCC data as shown in Table 3–11, OASIS to ATCSCC: Core Message Set.

(OASIS-EXT-017)

Table 3–11. OASIS to ATCSCC: Core Message Set

Reference	DIRECTION OASIS ⇔ ATCSCC	MESSAGE NAME
A.26	⇔	ATCSCC MESSAGE

3.2.2.7.12 USNS/FNS Interface Summary Table

The OASIS must transmit candidate NOTAMs and NOTAM Cancellations to the USNS. The USNS system is scheduled to be replaced with the Federal NOTAM System (FNS). A summary of the messages to be transmitted across the USNS interface is shown in Table 3-12, OASIS to USNS/FNS: Core Message Set.
(OASIS-EXT-018)

Table 3-12. OASIS to USNS/FNS: Core Message Set

Reference	DIRECTION OASIS ⇔ USNS	MESSAGE NAME
	⇒	Unprocessed NOTAM
	⇒	NOTAM Cancellation
	⇐	USNS Response Message

3.2.2.7.13 WMSCR Interface Summary Table

WMSCR is an FAA NAS subsystem that receives, processes, and stores alphanumeric aviation weather products and disseminates these products to NAS and non-NAS users. NAS-IC-25070002-02 documents the interface between WMSCR and user systems that are required to send data via TCP/IP sockets.

The OASIS must transmit Weather Observation messages to WMSCR. A summary of the messages to be transmitted across the WMSCR interface is shown in Table 3-13, OASIS to WMSCR: Core Message Set.
(OASIS-EXT-020)

Table 3-13. OASIS to WMSCR: Core Message Set

Reference	DIRECTION OASIS ⇔ WMSCR	MESSAGE NAME
	⇔	PIREP
	⇔	METAR, or SPECI

3.2.2.7.14 NAS Enterprise Messaging System (NEMS)

OASIS receives weather products including Alaska Weather Camera data via NEMS on the Harris Weather Data Systems (HWDS) data channel. Using the Harris Universal Message Acquisition (HUMA) data channel, OASIS receives eSRS messages from approved GPS devices. In addition, OASIS receives and transmits text messages from SMS and approved satellite communication devices via the HUMA data channel.

3.2.2.7.15 EPIC Interface Summary Table

The OASIS must receive LE addition, deletion, and summary data from EPIC. A summary of the messages to be transmitted across the EPIC interface is shown in Table 3-14, OASIS to WMSCR: Core Message Set.
(OASIS-EXT-019)

Table 3-14. OASIS to WMSCR: Core Message Set

Reference	DIRECTION OASIS ⇔ EPIC	MESSAGE NAME
A.1	⇒	General Message
A.25.2.1	⇐	LE Stolen Addition
A.25.2.2	⇐	LE Stolen Deletion
A.25.2.3	⇐	LE Stolen Summary

3.2.3 Protocol Implementation

The protocol implementation must be in accordance with the IP Suite, as depicted in Figure 3-2, Subsystem/Service Interconnectivity.

[\(OASIS-EXT-021\)](#)

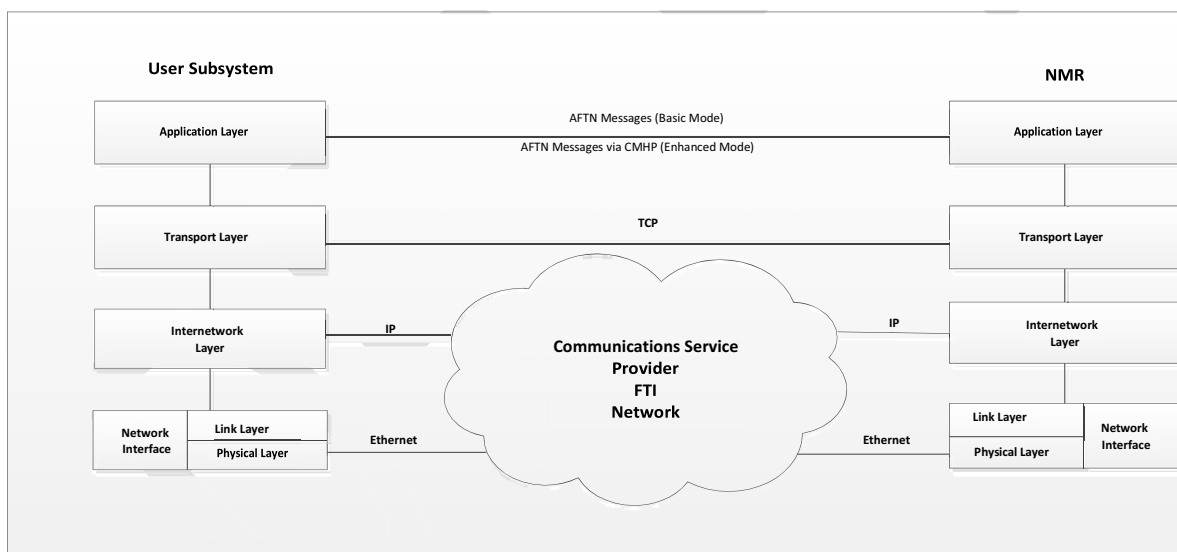


Figure 3-2. Subsystem/Service Interconnectivity

3.2.3.1 Application Layer Services

This IRD requires that the application layer services must be in accordance with NAS-IC-43010002-01 for interoperability with NMR enhanced services.

[\(OASIS-EXT-022\)](#)

3.2.3.2 Transport Layer Services

This IRD requires that Transport Layer Service must be TCP, in accordance with the latest edition of FAA-STD-039.

[\(OASIS-EXT-023\)](#)

3.2.3.3 Naming and Addressing

The OASIS servers and user subsystems must be in accordance with FAA-STD-039.
(OASIS-EXT-024)

3.3 Physical Requirements

3.3.1 Electrical Power and Electronic Requirements

3.3.1.1 Connectors

The OASIS must be connected to facility critical power.
(OASIS-EXT-025)

3.3.1.2 Wire/Cable

Reference FAA-C-1217 and FAA-STD-019.

3.3.1.3 Grounding

Within the electrical interfaces, grounding complies with FAA-G-2100, section 3.1.1.9 and FAA-STD-019.

3.3.1.4 Fasteners

Reference FAA-G-2100.

3.3.1.5 Electromagnetic Compatibility

This IRD imposes no explicit electromagnetic compatibility requirements.

4 QUALITY ASSURANCE PROVISIONS

The Test and Evaluation process guidelines within the Verification and Validation section of the System Engineering Manual section 4 is used, and tailored as necessary for the levels and methods of verification identified in the Verification Requirements Traceability Matrix (VRTM).

4.1 Responsibility for Verification

The FAA is responsible for the development and implementation of the verification of requirements for each project. The FAA may delegate verification activities to other organizations, independent contractors, and/or the prime project contractor.

4.2 Special Verification Requirements

This IRD imposes no explicit special verification requirements.

4.3 Verification Levels and Methods

The levels and methods of verification appropriate for use in the VRTM are defined in the following paragraphs.

4.3.1 Verification Levels

The three levels of verification are Subsystem, Integration, and Site. All requirements imposed by this IRD are verified at one or more of these three levels:

- a. **Subsystem-Level.** This level of verification is usually accomplished at the contractor's facility and culminates in the formal acceptance of the contractual end items.
- b. **Integration-Level.** This level of verification is conducted at the FAA Technical Center or at a key site. The verification conducted will determine if the hardware, software, or subsystem to be deployed for site installation will perform in a National Airspace System (NAS) environment and in accordance with the NAS system-level operational and functional requirements.
- c. **Site-Level.** This level of verification is usually performed at the designated site. The verification portion of the subsystem installation and checkouts will emphasize the demonstration to the overall system performance requirements. It includes the demonstration of an end item, subsystem and/or system, the final acceptance demonstrations, and commissioning activities.

4.3.2 Verification Methods

The following verification methods are to be used at any of the three verification levels:

- a. **Inspection.** Inspection is a method of verification to determine compliance without the use of special laboratory equipment, procedures, or services, and consists of non-destructive, static-state examination of the hardware, software, and/or technical data and documentation.
- b. **Test.** Test is a method of verification wherein performance is measured during or after the controlled application of functional and/or environmental

FOR OFFICIAL USE ONLY

- stimuli. Quantitative measurements are analyzed to determine the degree of compliance. The process uses standardized laboratory equipment, procedures, and/or services.
- c. **Demonstration.** Demonstration is a method of verification where qualitative determination of properties is made for a configuration item, including software and/or the use of technical data and documentation. The items being verified are observed, but not quantitatively measured, in a dynamic state.
 - d. **Analysis.** Analysis is a method of verification where hardware and software designs are compared with known scientific and technical principles, procedures, and practices to estimate the capability of the proposed design to meet the mission and system requirements.

4.4 VRTM

Each requirement imposed in this IRD is verified in accordance with Table 4-1, OASIS VRTM.

Table 4-1. OASIS VRTM

A = Analysis D = Demonstration I = Inspection T = Test X = Not Applicable					
Verification Level and Method					
Requirement	Subsection	Subsystem Level	Integration Level	Site Level	Remarks
(OASIS-EXT-001)	3.1.1.4a	D	D	D	
(OASIS-EXT-002)	3.1.1.4c	D	D	D	
(OASIS-EXT-003)	3.2.2.3a(1)	D	D	D	
(OASIS-EXT-004)	3.2.2.3b(2)	D	D	D	
(OASIS-EXT-005)	3.2.2.3c(2)	D	D	D	
(OASIS-EXT-006)	3.2.2.7.1	D	D	D	
(OASIS-EXT-007)	3.2.2.7.2	D	D	D	
(OASIS-EXT-009)	3.2.2.7.3	D	D	D	
(OASIS-EXT-010)	3.2.2.7.4	D	D	D	
(OASIS-EXT-011)	3.2.2.7.5	D	D	D	
(OASIS-EXT-013)	3.2.2.7.7	D	D	D	
(OASIS-EXT-014)	3.2.2.7.8	D	D	D	
(OASIS-EXT-015)	3.2.2.7.9	D	D	D	
(OASIS-EXT-016)	3.2.2.7.10	D	D	D	
(OASIS-EXT-017)	3.2.2.7.11	D	D	D	

FOR OFFICIAL USE ONLY

Table 4-1. OASIS VRTM (Continued)

A = Analysis D = Demonstration I = Inspection T = Test X = Not Applicable					
Verification Level and Method					
Requirement	Subsection	Subsystem Level	Integration Level	Site Level	Remarks
(OASIS-EXT-018)	3.2.2.7.12	D	D	D	
(OASIS-EXT-020)	3.2.2.7.13	D	D	D	
(OASIS-EXT-021)	3.2.3	I, T	I, T	D	
(OASIS-EXT-022)	3.2.3.1	T	T	D	
(OASIS-EXT-023)	3.2.3.2	I, T	I, T	I, D	
(OASIS-EXT-024)	3.2.3.3	I, T	I, T	I, D	
(OASIS-EXT-025)	3.3.1.1	I	I	I	
(OASIS-EXT-026)	A.1i(5)	D	D	D	
(OASIS-EXT-027)	A.21.1e	D	D	D	
(OASIS-EXT-028)	A.21.2e	D	D	D	
(OASIS-EXT-029)	A.21.2f	D	D	D	
(OASIS-EXT-030)	A.21.3e	D	D	D	
(OASIS-EXT-031)	A.21.4e	D	D	D	
(OASIS-EXT-032)	A.21.4f	D	D	D	
(OASIS-EXT-033)	A.21.5e	D	D	D	
(OASIS-EXT-034)	A.21.6e	D	D	D	
(OASIS-EXT-035)	A.21.6f	D	D	D	
(OASIS-EXT-036)	3.2.2.7.4	D	D	D	
(OASIS-EXT-037)	A.36i	D	D	D	
(OASIS-EXT-038)	A.36i	D	D	D	

FOR OFFICIAL USE ONLY

5 PREPARATION FOR DELIVERY

This IRD imposes no explicit preparations for delivery.

6 NOTES

6.1 Definitions

None.

6.2 Abbreviations and Acronyms

Acronym	Definition
A/N	Alphanumeric
AC	Advisory Circular
ACID	Aircraft ID
ADF	Additional Data Field
AFSIAG	Alaska Flight Services Information Area Group
AFSS	Automated Flight Service Station
AFTN	Aeronautical Fixed Telecommunication Network
ALERFA	Alert Phase
ALNOT	Alert Notice
AP	Application Processes
ARTCC	Air Route Traffic Control Center
ASCII	American Standard Code for Information Interchange
ASTI	Alaskan Satellite Telecommunication Infrastructure
ATC	Air Traffic Control
ATCSCC	Air Traffic Control System Command Center
ATN	Aeronautical Telecommunications Network
ATO	Air Traffic Organization
ATOP	Advanced Technologies and Oceanic Procedures
AWP	Aviation Weather Processor
CMHP	Common Message Handling Protocol
CR	Carriage Return
DESTRESFA	Distress Phase
DVFR	Defense Visual Flight Rules
EOL	End of Line
EPIC	El Paso Intelligence Center
ERAM	En Route Automation Modernization

FOR OFFICIAL USE ONLY

Acronym	Definition
ESG	Enterprise Security Gateway
eSRS	Enhanced Special Reporting Service
ETA	Estimated Time of Arrival
ETC	End of Text
FAA	Federal Aviation Administration
FDP2000	Flight Data Processing 2000
FFSP	Future Flight Service Program
FNS	Federal NOTAM System
FS	File Separator
FS21	Flight Service for the 21st Century
FSDPS	Flight Service Data Processing System
FSS	Flight Service Station
FTI	FAA Telecommunications Infrastructure
FTP	File Transfer Protocol
HTTP	Hypertext Transfer Protocol
HUMA	Harris Universal Message Acquisition
HWDS	Harris Weather Data Systems
IA	International Alphabet
IAW	In Accordance With
ICAO	International Civil Aviation Organization
ICD	Interface Control Document
IFR	Instrument Flight Rules
INCERFA	Uncertainty Phase
INREQ	Information Request
IP	Internet Protocol
IR	IFR Training Route
IRA	International Reference Alphabet
IRD	Interface Requirements Document
ISS	Information System Security
IT	Information Technology
ITU	International Telecommunication Union

FOR OFFICIAL USE ONLY

Acronym	Definition
LCM	LE Contact Message
LE	Law Enforcement
LF	Line Feed
LOCID	Location Identifier
MBO	Military Base Operations
METAR	Meteorological Aviation Routine Weather Report
MOA	Military Operations Area
MSN	Message Switched Network
NADIN	National Airspace Data Interchange Network
NAS	National Airspace System
NEMS	NAS Enterprise Messaging System
NDP	National Defense Program
NIST	National Institute of Standards and Technology
NMR	NAS Messaging Replacement
NORAD	North American Aerospace Defense Command
NOTAM	Notice to Air Missions
OASIS	Operational and Supportability Implementation System
OCS	Oceanic Computer System
OFDPS	Offshore Flight Data Processing System
PIREP	Pilot Report
QALQ	Information Request to Departure Station
QoS	Quality of Service
RT	Report Type
SAR	Search and Rescue
SDP	Service Delivery Point
SOH	Start of Header
SPECI	Special METAR
STX	Start of Text
TCP	Transmission Control Protocol
USNS	United States NOTAM System
VFR	Visual Flight Rules

FOR OFFICIAL USE ONLY

Acronym	Definition
VR	VFR Training Route
VRTM	Verification Requirements Traceability Matrix
VT	Vertical Tab
WCPO	Weather Camera Program Office
WMSCR	Weather Message Switching Center Replacement
XHTML	Extensible Hypertext Markup Language
XML	Extensible Markup Language
ZAN	Anchorage ARTCC

APPENDIX A. MESSAGE FORMATS

For transmission to the External Users, OASIS will format an information unit into a message as specified in this appendix. An information unit will be transmitted in the text field of a message. A message received from the External Users by OASIS will be formatted as specified in this appendix. An information unit will be extracted from the text field of the message. Messages transmitted to, or received from, External Users will not exceed 3700 characters in length.

Information exchanged between OASIS and External Users will be encoded in International Alphabet (IA5) characters, as defined in ICAO Annex 10, Volume III, paragraph 8.6.1.

A.1 NMR Message Format

The following is the NMR message format:

START OF HEADER		PRIORITY		ADDRESS		ALIGNMENT		END OF ADDRESS INDICATOR	
DATE TIME GROUP		ORIGIN		PRIORITY ALARM		ADDITIONAL DATA FIELD		ALIGNMENT	
START OF TEXT	TEXT								
END OF TEXT									

- a. Start of Header.
 - (1) Start of Header (SOH) character.
 - (2) Always present.
- b. Priority.
 - (1) Two alpha characters denoting message priority.
 - (2) Space character.
 - (3) Always present.
- c. Address.
 - (1) Eight-character ICAO address of destination station.
 - (2) Additional eight-character alpha addresses may be added with each address preceded by a space character, up to 8 addresses and 80 characters per line.
 - (3) Maximum of three lines of addresses.
 - (4) Always present.
- d. Alignment.
 - (1) Each line will be followed by the alignment of Carriage Return (CR); Line Feed (LF).

FOR OFFICIAL USE ONLY

- (2) Always present.
- (3) The alignment is inserted between an address and its preceding space. Note that the final alignment follows immediately after the final address.
- e. End of Address Indicator.
 - (1) File Separator (FS) character.
 - (2) Following CR, LF of last line of addresses.
 - (3) Optional.
- f. Date Time Group.
 - (1) Six numerics indicating time of message origination.
 - (2) Space character.
 - (3) Always present.
- g. Origin.
 - (1) Eight-character ICAO address of message originator.
 - (2) Always present.
- h. Priority Alarm.
 - (1) Conditional. Present only for SS priority message.
 - (2) Five Bell characters.
- i. Additional Data Field.
 - (1) ADF is transparent to NMR.
 - (2) ADF will conform to ICAO Annex 10 Volume II, paragraph 4.4.15.2.2.6.
 - (3) When used, first character is a "space" and there will be a limit of 52 characters.
 - (4) Transmission control characters are not permitted.
 - (5) If an "SS" message is originated, the priority alarm sequence must precede any additional data, which then is limited to 47 characters.
(OASIS-EXT-026)
- j. Alignment.
 - (1) Alignment of CR, LF follows ORIGIN, PRIORITY ALARM, or ADF as appropriate.
 - (2) Always present.
- k. Start of Text.
 - (1) Start of Text (STX) character.
 - (2) Following CR, LF of originator line.
 - (3) Always present.

- l. Text.
 - (1) The TEXT field will contain an Information Unit as defined in section A.2.
 - (2) Text drafted in accordance with ICAO Annex 10, Volume II, section 4.4.15.
 - (3) Maximum 80 characters per line.
 - (4) Each line separated by End of Line (EOL) (CR CR LF).
 - (5) Always present.
- m. End of Text.
 - (1) Vertical Tab (VT) character.
 - (2) End of Text (ETX) character.
 - (3) Following CR, LF, or EOL of the last line of text.
 - (4) Always present.

A.2 Information Unit Format

This paragraph describes the format of an information unit to be transmitted in the text field of an NMR message between OASIS and the External Users.

TEXT

TEXT is a string of 1 to 3600 displayable characters including embedded EOL sequences. If a message requires acknowledgment by a message number, the first line (Number Line) in the TEXT field will have the following format:

Number Line:

MSG ORIGIN	MSGNUM	SP	ACK ADDR
------------	--------	----	----------

where:

- a. MSG ORIGIN is a string of 3 alpha characters indicating the origin of the message.
- b. MSGNUM is a string of 3 numerics within the range 001 and 999 and indicates the number to be used in the acknowledgment.
- c. SP is a single American Standard Code for Information Interchange (ASCII) space character.
- d. ACK ADDR is a string of alphabetic and space characters, and contains the address(es) needing the acknowledgment.

NOTE

Lines are limited to 69 characters so addresses are aligned. Addresses are aligned using a carriage return followed by a line feed.

FOR OFFICIAL USE ONLY

The following paragraphs describe the format of the information unit text field for the messages identified in tables 3-1 through 3-13.

A.3 Acknowledgment Message

The Acknowledgment message confirms receipt of the message from an addressee.

ACK ID	SP	ENTRY ID	TEXT	FILLER	EOL
--------	----	----------	------	--------	-----

- a. ACK ID is the character string 'ACP' or 'R.'
- b. SP is optional. If present, SP is a single ASCII space character.
- c. ENTRY ID is either ACID or MSGNUM.
 - (1) ACID is Aircraft ID and is defined to be 1 alpha character followed by 1 to 6 alphanumeric characters.
 - (2) MSGNUM is a string of 3 numerics within the range 001 and 999.
- d. TEXT is optional. If present, TEXT is a single ASCII space character followed by a single ASCII 'Z' character and 2 alpha characters.
- e. FILLER is optional. If present, FILLER is a string of characters including embedded EOL sequences. The number of characters between each EOL will not exceed 69 characters.
- f. EOL is a string of 2 carriage returns followed by a line feed.

NOTE

The requirement for the OASIS to transmit 95 percent of acknowledgment messages to the External User within 0.5 seconds of receipt of a message from the External User has been waived. The OASIS requirement for this capability has been established to be within 3.0 seconds average response time.

A.4 QALQ Request

An Initial Action Domestic SAR message, the QALQ Request, is originated by a site that is the destination of an aircraft, which has been determined to be overdue. The QALQ is the initial message to be sent for a search and rescue procedure. This message does not require acknowledgment.

'QALQ'	SP	ACID	SP	TEXT	EOL
--------	----	------	----	------	-----

- a. 'QALQ' is the actual string of ASCII characters required for a QALQ Message.
- b. SP is a single ASCII space character.
- c. ACID is Aircraft ID and is defined to be 1 alpha character followed by 1 to 6 alphanumeric characters.
- d. TEXT is a string of characters including embedded EOL sequences. The number of characters between each EOL will not exceed 69 characters.
- e. EOL is a string of 2 carriage returns followed by a line feed.

FOR OFFICIAL USE ONLY

A.5 QALQ Cancellation

The QALQ Cancellation format is the same as the QALQ Request format with 'CNLD' as the first four characters in the TEXT field. The QALQ Cancellation is sent by the site that originated the QALQ Request message to notify all recipients of the QALQ that the aircraft has been located. This message does not require acknowledgment.

A.6 QALQ Response

The QALQ Response format is the same as the QALQ Request format with the response in the TEXT field. This message is originated by the site that is the recipient of a QALQ Request. The response to the QALQ Request provides the results or status of the communications search. Also, the QALQ Response can provide pertinent information about the missing aircraft, or provides notification to the destination site if the aircraft is located. This message does not require acknowledgment.

A.7 INREQ Request

An Information Request Domestic SAR message, the INREQ Request, is originated by a site that is the destination of an aircraft that has been determined to be overdue. The INREQ Request is a follow-up message to a QALQ message. An INREQ Request is issued when the originating station has had a negative response to a previously issued QALQ for an overdue aircraft. This message requires acknowledgment; therefore, the Number Line is present in the Information Unit as described in section A.2.

'INREQ'	SP	ACID	SP	TEXT	EOL
---------	----	------	----	------	-----

- 'INREQ' is the actual string of ASCII characters required for an INREQ Request Message.
- SP is a single ASCII space character.
- ACID is Aircraft ID and is defined to be 1 alpha character followed by 1 to 6 alphanumeric characters.
- TEXT is a string of characters including embedded EOL sequences. The number of characters between each EOL will not exceed 69 characters.
- EOL is a string of 2 carriage returns followed by a line feed.

A.8 INREQ Cancellation

The INREQ Cancellation format is the same as the INREQ Request format with 'CNLD' as the first four characters in the TEXT field. The INREQ Cancellation is sent by the site that originated the INREQ Request message to notify all recipients of the INREQ that the aircraft has been located. This message requires acknowledgment; therefore, the Number Line is present in the Information Unit as described in section A.2.

A.9 INREQ Response

The INREQ Response format is the same as the INREQ Request format with the response in the TEXT field. This message is originated by the site that is the recipient of the INREQ Request. The response to the INREQ Request provides the results or status of the communications search. Also the INREQ Response can provide pertinent information about the missing aircraft or provides notification to the destination site if

FOR OFFICIAL USE ONLY

the aircraft is located. This message requires acknowledgment; therefore, the Number Line is present in the Information Unit as described in section A.2.

A.10 ALNOT Request

A Domestic Alert Notice Domestic SAR message, the ALNOT Request, is originated by a site that is the destination of an aircraft that has been determined to be overdue. An ALNOT is issued when the originating station has had a negative response to a previously issued INREQ for an overdue aircraft. This message does not require acknowledgment.

'ALNOT'	SP	ACID	SP	TEXT	EOL
---------	----	------	----	------	-----

- 'ALNOT' is the actual string of ASCII characters required for an ALNOT Request Message.
- SP is a single ASCII space character.
- ACID is Aircraft ID and is defined to be 1 alpha character followed by 1 to 6 alphanumeric characters.
- TEXT is a string of characters including embedded EOL sequences. The number of characters between each EOL will not exceed 69 characters.
- EOL is a string of 2 carriage returns followed by a line feed.

A.11 ALNOT Cancellation

The ALNOT Cancellation format is the same as the ALNOT Request format with 'CNLD' as the first four characters in the TEXT field. The ALNOT Cancellation is sent by the site that originated the ALNOT Request message to notify all recipients of the ALNOT that the aircraft has been located. This message does not require acknowledgment.

A.12 ALNOT Response

The ALNOT Response format is the same as the ALNOT Request format with the response in the TEXT field. This message is originated by the site that is the recipient of an ALNOT Request. The response to the ALNOT Request provides the results or status of the communications search. Also the ALNOT Response can provide pertinent information about the missing aircraft or provides notification to the destination site if the aircraft is located. This message does not require acknowledgment.

A.13 Change ETA

A Change ETA message is a notification to the destination site of a change in the ETA for an inbound domestic flight. This message can be originated by OASIS. This message requires acknowledgment; therefore, the Number Line is present in the Information Unit as described in section A.2.

ACID	SP	RT	ETA	EOL
------	----	----	-----	-----

- ACID is Aircraft ID and is defined to be 1 alpha character followed by 1 to 6 alphanumeric characters.
- SP is an ASCII single space character.

FOR OFFICIAL USE ONLY

- c. RT is the report type. For an ETA message RT is a single ASCII character 'E.'
- d. ETA is Estimated Time of Arrival. The first two digits representing hours from 00 to 23. The last two digits representing minutes from 00 to 59.
- e. EOL is a string of 2 carriage returns followed by a line feed.

A.14 Civil Domestic Flight Notification

The Civil Domestic Flight Notification is a notice of an inbound flight to an airport associated with an addressed FSS. This message requires acknowledgment.

FP TYPE	SP	ACID	SP	ACTYPE	SP	DEP PT	SP	DEST
SP	ETA	REMARKS	EOL					

- a. FP TYPE is Flight Plan Type and is either the string of ASCII characters 'VFR' or 'IFR.'
- b. SP is a single ASCII space character.
- c. ACID is Aircraft ID and is defined to be 1 alpha character followed by 1 to 6 alphanumeric characters.
- d. ACTYPE is aircraft type. ACTYPE is 2 to 10 alphanumeric and slash characters [(d)(d)(L)(/)] La(a)(a)(/L)], where options are the number of aircraft (1 to 2 digits), the Special Aircraft Indicator (1 letter), a separator (/), the aircraft type (2 to 4 characters), a separator (/), and the Airborne Equipment Qualifier (1 letter).
- e. DEP PT is Departure Point and is 2 to 12 alphanumeric and slash characters where aa(a)(a)(a)/(a)(a)(a)(a)(a) may be any of the following fix formats:
 - (1) aa(a)(a)(a), for fix name or
 - (2) aa(a)(a)(a)dddddd, for fix radial distance or
 - (3) dddd(L)/(d)dddd(L), for lat/long.
- f. DEST is destination and is 2 to 12 alphanumeric and slash characters where aa(a)(a)(a)/(a)(a)(a)(a)(a) may be any of the following fix formats:
 - (1) aa(a)(a)(a), for fix name or
 - (2) aa(a)(a)(a)dddddd, for fix radial distance or
 - (3) dddd(L)/(d)dddd(L), for lat/long.
- g. ETA is Estimated Time of Arrival. The first two optional digits represent the day from 01 to 31. The second two required digits represent the hours from 00 to 23. The last two required digits represent minutes from 00 to 59.
- h. REMARKS is a string of 1 to 325 displayable characters preceded by a space character. REMARKS may include embedded EOL sequences.
- i. EOL is a string of 2 carriage returns followed by a line feed.

FOR OFFICIAL USE ONLY

A.15 Flight Plan Closure and Cancellation

This format defines the format of a Closure and Cancellation message. A Cancellation message notifies the destination to cancel a flight plan, which may be on the inbound list. A Closure message notifies the destination to close a flight plan, which may be on the inbound list. This message requires acknowledgment; therefore, the Number Line is present in the Information Unit as described in section A.2.

ACID	SP	RT	TIME	EOL
------	----	----	------	-----

- ACID is Aircraft ID and is defined to be 1 alpha character followed by 1 to 6 alphanumeric characters.
- SP is a single ASCII space character.
- RT is the report type. For a cancellation message RT is a single ASCII character 'C' for a closure message RT is a single ASCII character 'A.'
- TIME is 4 numeric characters. The first two characters representing hours from 00 to 23 and the last two characters representing minutes from 00 to 59.
- EOL is a string of 2 carriage returns followed by a line feed.

A.16 Proposed VFR Flight Plan

A proposed VFR Flight Plan message is a notice of a proposed flight plan that is originating outside of the flight plan area of the originating facility. This message requires acknowledgment.

MSG TYPE	SP	ACID	SP	ACTYPE	SP	DEP PT	SP	DEST
SP	PTIME	'/'	ETE	REMARKS	EOL			

- MSG TYPE is 'VFR.'
- SP is a single ASCII space character.
- ACID is Aircraft ID and is defined to be 1 alpha character followed by 1 to 6 alphanumeric characters.
- ACTYPE is aircraft type. ACTYPE is 2 to 10 alphanumeric and slash characters [(d)(d)(L)(/)] La(a)(a)(/L)], where options are the number of aircraft (1 to 2 digits), the Special Aircraft Indicator (1 letter), a separator (/), the aircraft type (2 to 4 characters), a separator (/), and the Airborne Equipment Qualifier (1 letter).
- DEP PT is Departure Point and is 2 to 12 alphanumeric and slash characters where aa(a)(a)(a)/(a)(a)(a)(a)(a) may be any of the following fix formats:
 - aa(a)(a)(a), for fix name or
 - aa(a)(a)(a)ddddd, for fix radial distance or
 - dddd(L)/(d)dddd(L), for lat/long.

FOR OFFICIAL USE ONLY

- f. DEST is destination and is 2 to 12 alphanumeric and slash characters where aa(a)(a)(a)(/) (a)(a)(a)(a)(a)(a) may be any of the following fix formats:
 - (1) aa(a)(a)(a), for fix name or
 - (2) aa(a)(a)(a)dddddd, for fix radial distance or
 - (3) dddd(L)/(d)dddd(L), for lat/long.
- g. PTIME, estimated time of departure is a 6 characters as follows: the first character is the letter 'P', followed by 2 OPTIONAL characters representing the day of the month (01 to 31), followed by 2 characters representing hours (00 to 23) and the last two characters representing minutes (00 to 59).
- h. ETE is Estimated Time Enroute. The first two digits representing hours from 00 to 99. The last two digits representing minutes from 00 to 59.
- i. REMARKS is a string of 1-325 displayable characters preceded by a space character. REMARKS may include embedded EOL sequences.
- j. EOL is a string of 2 carriage returns followed by a line feed.

A.17 Proposed IFR Flight Plan

A Proposed IFR Flight Plan message is a notice of a proposed flight plan that is originating outside of the flight plan area of the originating facility. This message requires acknowledgment.

MSG TYPE	SP	ACID	SP	ACTYPE	SP	DEP PT	SP	DEST
SP	PTIME	'/'	ETE	REMARKS	EOL			

- a. MSG TYPE is 'IFR.'
- b. SP is a single ASCII space character.
- c. ACID is Aircraft ID and is defined to be 1 alpha character followed by 1 to 6 alphanumeric characters.
- d. ACTYPE is aircraft type. ACTYPE is 2 to 10 alphanumeric and slash characters [(d)(d)(L)(/) La(a)(a)(/L)], where options are the number of aircraft (1 to 2 digits), the Special Aircraft Indicator (1 letter), a separator (/), the aircraft type (2 to 4 characters), a separator (/), and the Airborne Equipment Qualifier (1 letter).
- e. DEP PT is Departure Point and is 2 to 12 alphanumeric and slash characters where aa(a)(a)(a)/(a)(a)(a)(a)(a)(a) may be any of the following fix formats:
 - (1) aa(a)(a)(a), for fix name or
 - (2) aa(a)(a)(a)dddddd, for fix radial distance or
 - (3) dddd(L)/(d)dddd(L), for lat/long.

- f. DEST is destination and is 2 to 12 alphanumeric and slash characters where aa(a)(a)(a)/() (a)(a)(a)(a)(a)(a) may be any of the following fix formats:
 - (1) aa(a)(a)(a), for fix name or
 - (2) aa(a)(a)(a)dddddd, for fix radial distance or
 - (3) dddd(L)/(d)dddd(L), for lat/long.
- g. PTIME, estimated time of departure is a 6 characters as follows: the first character is the letter 'P', followed by 2 OPTIONAL characters representing the day of the month (01 to 31), followed by 2 characters representing hours (00 to 23) and the last two characters representing minutes (00 to 59).
- h. ETE is Estimated Time Enroute. The first two digits representing hours from 00 to 99. The last two digits representing minutes from 00 to 59.
- i. REMARKS is a string of 1-325 displayable characters preceded by a space character. REMARKS may include embedded EOL sequences.
- j. EOL is a string of 2 carriage returns followed by a line feed.

A.18 Military Flight Notification

A Military Flight Notification message is a notice of an inbound flight to an airport associated with an addressed FSS. This message requires acknowledgment.

FP TYPE		SP		ACID	SP	ACTYPE	SP	DEP PT	SP	DEST
SP	ETA	REMARKS		EOL						

- a. FP TYPE is Flight Plan Type and is either the string of ASCII characters 'VFR' or 'IFR.'
- b. SP is a single ASCII space character.
- c. ACID is Aircraft ID and is defined to be 1 alpha character followed by 1 to 6 alphanumeric characters.
- d. ACTYPE is aircraft type. ACTYPE is 2 to 10 alphanumeric and slash characters [(d)(d)(L)/() La(a)(a)/(L)], where options are the number of aircraft (1 to 2 digits), the Special Aircraft Indicator (1 letter), a separator (/), the aircraft type (2 to 4 characters), a separator (/), and the Airborne Equipment Qualifier (1 letter).
- e. DEP PT is Departure Point and is 2 to 12 alphanumeric and slash characters where aa(a)(a)(a)/(a)(a)(a)(a)(a)(a) may be any of the following fix formats:
 - (1) aa(a)(a)(a), for fix name or
 - (2) aa(a)(a)(a)dddddd, for fix radial distance or
 - (3) dddd(L)/(d)dddd(L), for lat/long.

FOR OFFICIAL USE ONLY

- f. DEST is destination and is 2 to 12 alphanumeric and slash characters where aa(a)(a)(a)(/) (a)(a)(a)(a)(a)(a) may be any of the following fix formats:
 - (1) aa(a)(a)(a), for fix name or
 - (2) aa(a)(a)(a)dddddd, for fix radial distance or
 - (3) dddd(L)/(d)dddd(L), for lat/long.
- g. ETA is Estimated Time of Arrival. The first two optional digits represent the day from 01 to 31. The second two required digits represent the hours from 00 to 23. The last two required digits represent minutes from 00 to 59.
- h. REMARKS are optional. It is a string of 1–325 displayable characters preceded by a space character. REMARKS may include embedded EOL sequences.
- i. EOL is a string of 2 carriage returns followed by a line feed.

A.19 Military Stopover Flight Notification

A Military Stopover Flight Notification message is a notice that an airport associated with an addressed FSS is part of a military stopover flight. This message requires acknowledgment.

A Military Stopover Flight Notification message format is as follows:

FP TYPE	SP	ACID	SP	ACTYPE	SP	DEP PT	SP
FIRST DEST	SP	ETA	STOPOVER ROUTE	EOL	REMARKS	EOL	

- a. FP TYPE is Flight Plan Type and is either the string of ASCII characters 'VFR' or 'IFR.'
- b. SP is a single ASCII space character.
- c. ACID is Aircraft ID and is defined to be 1 alpha character followed by 1 to 6 alphanumeric characters.
- d. ACTYPE is aircraft type. ACTYPE is 2 to 10 alphanumeric and slash characters [(d)(d)(L)(/) La(a)(a)(/L)], where options are the number of aircraft (1 to 2 digits), the Special Aircraft Indicator (1 letter), a separator (/), the aircraft type (2 to 4 characters), a separator (/), and the Airborne Equipment Qualifier (1 letter).
- e. DEP PT is Departure Point and is 2 to 12 alphanumeric and slash characters where aa(a)(a)(a)/(a)(a)(a)(a)(a)(a) may be any of the following fix formats:
 - (1) aa(a)(a)(a), for fix name or
 - (2) aa(a)(a)(a)dddddd, for fix radial distance or
 - (3) dddd(L)/(d)dddd(L), for lat/long.
- f. FIRST DEST is the first destination airport and is a valid Location Identifier (LOCID).

FOR OFFICIAL USE ONLY

- g. ETA is Estimated Time of Arrival. The first two optional digits represent the day from 01 to 31. The second two required digits represent the hours from 00 to 23. The last two required digits represent minutes from 00 to 59.
- h. STOPOVER ROUTE is a maximum of 558 displayable characters and is comprised of repetitions of the following sequence where each repetition represents a leg in the route:

'/'	EOL	LEG TYPE	SP	LEG DEST	SP	LEG ETE	LEG REMARKS
-----	-----	----------	----	----------	----	---------	-------------

- (1) EOL is a string of 2 carriage returns followed by a line feed.
- (2) LEG TYPE is optional. If present, LEG TYPE is either the string of ASCII characters 'VFR' or 'IFR.'
- (3) LEG DEST is the leg destination airport and is a valid LOCID.
- (4) LEG ETE is optional and is the Estimated Time Enroute.
- (5) LEG REMARKS is optional. If present, LEG REMARKS begins with a space character and consists of a variable number of displayable characters.
- i. EOL is a string of 2 carriage returns followed by a line feed.
- j. REMARKS are optional. It is a string of 1–325 displayable characters preceded by a space character. REMARKS may include embedded EOL sequences.

A.20 Military Departure

A Military Departure message is a notification of an inbound Military Stopover flight to an airport associated with an addressed FSS. This message requires the specialist to prefix an asterisk to the Facility Address in order to transmit the message with a Number Line; therefore, the Number Line is present in the Information Unit as described in section A.2.

ACID	SP	'D'	TIME	REMARKS	EOL
------	----	-----	------	---------	-----

- a. ACID is Aircraft ID and is defined to be 1 alpha character followed by 1 to 6 alphanumeric characters.
- b. SP is a single ASCII space character.
- c. 'D' is the ASCII character and is used for departure.
- d. TIME is 4 numeric characters. The first two characters representing hours from 00 to 23 and the last two characters representing minutes from 00 to 59.
- e. REMARKS are optional. It is a string of 1–325 displayable characters preceded by a space character. REMARKS may include embedded EOL sequences.
- f. EOL is a string of 2 carriage returns followed by a line feed.

FOR OFFICIAL USE ONLY

A.21 Military Operations

Military Operations messages are to give notification that military routes or areas are going to be used at times other than what is already published. Military Operations messages consist of IR, IR Cancellation, VR, VR Cancellation, MOA, and MOA Cancellation messages.

A.21.1 IR Message

An Instrument Route (IR) message is an advisory of activity on IFR military training routes of a particular type for a specified period of time. This message does not require acknowledgment.

An IR message is formatted as follows:

MESSAGE TYPE	SN	SP	TIME	'-'	TIME	TEXT	EOL	EOR
--------------	----	----	------	-----	------	------	-----	-----

OR

MESSAGE TYPE	SN	SP	TIME	'-'	TIME	TEXT	EOL
TIME	'-'	TIME	TEXT	EOL	(Optional)		

TIME	'-'	TIME	TEXT	EOL	EOR
------	-----	------	------	-----	-----

- a. MESSAGE TYPE is the text 'IR' for IR message.
- b. SN is the special use airspace number and is one to four numeric characters followed by an optional alphabetic character, or one to five numeric characters only.
- c. SP is a single ASCII space character.
- d. TIME is the beginning or ending time and is four or six numeric characters. The first two characters represent day from 01 to 31 (if present), the next two characters represent hours from 00 to 23, and the last two characters represent minutes from 00 to 59.
- e. TEXT is a string of 1–54 characters for the line including the 'IR', and 1–60 characters for the other lines. TEXT must begin with the ASCII space character.
(OASIS-EXT-027)
- f. EOL is a string of 2 carriage returns followed by a line feed.
- g. EOR is optional. If the EOR field is not present, the message is considered a single IR message. The EOR field is used to concatenate multiple messages together. If present, the EOR is one of the following:
 - (1) The first character of an IR or IR Cancellation message.
 - (2) The first character of a VR or VR Cancellation message.
 - (3) The first character of a MOA or MOA Cancellation message.

A.21.2 IR Cancellation

An IR Cancellation message gives notification that the activity on an IFR military training route has been cancelled before the ending time specified in the IR message. This message does not require acknowledgment.

An IR Cancellation message is formatted as follows:

MESSAGE TYPE		SN	SP	TIME	'-'	TIME	TEXT
CANCEL TEXT	EOL		EOR				

- a. MESSAGE TYPE is the text 'IR' for IR Cancellation message.
- b. SN is the special use airspace number and is one to four numeric characters followed by an optional alphabetic character, or one to five numeric characters only.
- c. SP is a single ASCII space character.
- d. TIME is the beginning or ending time and is four or six numeric characters. The first two characters represent day from 01 to 31 (if present), the next two characters represent hours from 00 to 23, and the last two characters represent minutes from 00 to 59.
- e. TEXT is optional. If present, the maximum length is 50 characters and it must begin with the ASCII space character.
(OASIS-EXT-028)
- f. CANCEL TEXT is the text 'CNL' or 'CANCEL.' CANCEL TEXT must begin with the ASCII space character.
(OASIS-EXT-029)

NOTE

The total number of characters in TEXT and CANCEL TEXT will not exceed 54 characters.

- g. EOL is a string of 2 carriage returns followed by a line feed.
- h. EOR is optional. If the EOR field is not present, the message is considered a single IR message. The EOR field is used to concatenate multiple messages together. If present, the EOR is one of the following:
 - (1) The first character of an IR or IR Cancellation message.
 - (2) The first character of a VR or VR Cancellation message.
 - (3) The first character of a MOA or MOA Cancellation message.

A.21.3 VR

A Visual Route (VR) message is an advisory of activity on VFR military training routes of a particular type for a specified period of time. This message does not require acknowledgment.

A VR message is formatted as follows:

MESSAGE TYPE	SN	SP	TIME	'-'	TIME	TEXT	EOL	EOR
--------------	----	----	------	-----	------	------	-----	-----

- a. MESSAGE TYPE is the text 'VR' for VR message.
- b. SN is the special use airspace number and is one to four numeric characters followed by an optional alphabetic character, or one to five numeric characters only.
- c. SP is a single ASCII space character.
- d. TIME is the beginning or ending time and is four or six numeric characters. The first two characters represent day from 01 to 31 (if present), the next two characters represent hours from 00 to 23, and the last two characters represent minutes from 00 to 59.
- e. TEXT is a string of 1–54 characters for the line including the 'VR', and 1 to 60 characters for the other lines. TEXT must begin with the ASCII space character.
(OASIS-EXT-030)
- f. EOL is a string of 2 carriage returns followed by a line feed.
- g. EOR is optional. If the EOR field is not present, the message is considered a single VR message. The EOR field is used to concatenate multiple messages together. If present, the EOR is one of the following:
 - (1) The first character of an IR or IR Cancellation message.
 - (2) The first character of a VR or VR Cancellation message.
 - (3) The first character of a MOA or MOA Cancellation message.

A.21.4 VR Cancellation Message

A VR Cancellation message gives notification that the activity on a VFR military training route has been cancelled before the ending time specified in the VR message. This message does not require acknowledgment.

A VR Cancellation message is formatted as follows:

MESSAGE TYPE	SN	SP	TIME	'-'	TIME	TEXT
CAN- CEL TEXT	EOL	EOR				

- a. MESSAGE TYPE is the text 'VR' for VR Cancellation message.
- b. SN is the special use airspace number and is one to four numeric characters followed by an optional alphabetic character, or one to five numeric characters only.
- c. SP is a single ASCII space character.
- d. TIME is the beginning or ending time and is four or six numeric characters. The first two characters represent day from 01 to 31 (if present), the next

FOR OFFICIAL USE ONLY

- two characters represent hours from 00 to 23, and the last two characters represent minutes from 00 to 59.
- e. TEXT is optional. If present, the maximum length is 50 characters and it must begin with the ASCII space character.
(OASIS-EXT-031)
 - f. CANCEL TEXT is the text 'CNL' or 'CANCEL.' CANCEL TEXT must begin with the ASCII space character.
(OASIS-EXT-032)

NOTE

- The total number of characters in TEXT and CANCEL TEXT will not exceed 54 characters.
- g. EOL is a string of 2 carriage returns followed by a line feed.
 - h. EOR is optional. If the EOR field is not present, the message is considered a single VR message. The EOR field is used to concatenate multiple messages together. If present, the EOR is one of the following:
 - (1) The first character of an IR or IR Cancellation message.
 - (2) The first character of a VR or VR Cancellation message.
 - (3) The first character of a MOA or MOA Cancellation message.

A.21.5 MOA

A MOA message is an advisory of activity in a military operations area regarding special use air space, for a specified period of time. The MOA message is used at times other than what has already been published to give notification of a military operations area. This message does not require acknowledgment.

An MOA message is formatted as follows:

NAME	SP	MESSAGE TYPE	SP	TIME	'-'	TIME	TEXT	EOL	EOR
------	----	--------------	----	------	-----	------	------	-----	-----

OR

NAME	SP	MESSAGE TYPE	SP	TIME	'-'	TIME	TEXT	EOL	
TIME	'-'	TIME	TEXT	EOL	(Optional)				

TIME	'-'	TIME	TEXT	EOL	EOR
------	-----	------	------	-----	-----

- a. NAME is three alpha characters followed by zero to twenty-two alphanumeric or space characters. Apostrophes and backslashes may be embedded in the NAME string. A backslash may not be in the first three characters and may not precede the first space.

FOR OFFICIAL USE ONLY

- b. SP is a single ASCII space character.
- c. MESSAGE TYPE is the text 'MOA' for MOA message.
- d. TIME is the beginning or ending time and is four or six numeric characters. The first two characters represent day from 01 to 31 (if present), the next two characters represent hours from 00 to 23, and the last two characters represent minutes from 00 to 59.
- e. TEXT is a string of 1–54 characters for the line including the 'MOA', and 1–60 characters for the other lines. TEXT must begin with the ASCII space character.
(OASIS-EXT-033)
- f. EOL is a string of 2 carriage returns followed by a line feed.
- g. EOR is optional. If the EOR field is not present, the message is considered a single MOA message. The EOR field is used to concatenate multiple messages together. If present, the EOR is one of the following:
 - (1) The first character of an IR or IR Cancellation message.
 - (2) The first character of a VR or VR Cancellation message.
 - (3) The first character of a MOA or MOA Cancellation message.

A.21.6 MOA Cancellation

A MOA Cancellation message gives notification that the activity in a military operations area has been cancelled before the ending time specified in the MOA message. This message does not require acknowledgment.

An MOA Cancellation message is formatted as follows:

NAME	SP	MESSAGE TYPE			SP	TIME	'-'	TIME	TEXT
CANCEL TEXT		EOL	EOR						

- a. NAME is three alpha characters followed by zero to twenty-two alphanumeric or space characters. Apostrophes and backslashes may be embedded in the NAME string. A backslash may not be in the first three characters and may not precede the first space.
- b. SP is a single ASCII space character.
- c. MESSAGE TYPE is the text 'MOA' for MOA Cancellation message.
- d. TIME is the beginning or ending time and is four or six numeric characters. The first two characters represent day from 01 to 31 (if present), the next two characters represent hours from 00 to 23, and the last two characters represent minutes from 00 to 59.
- e. TEXT is optional. If present, the maximum length is 50 characters and it must begin with the ASCII space character.
(OASIS-EXT-034)

- f. CANCEL TEXT is the text 'CNL' or 'CANCEL.' CANCEL TEXT must begin with the ASCII space character.
(OASIS-EXT-035)

NOTE

The total number of characters in TEXT and CANCEL TEXT will not exceed 54 characters.

- g. EOL is a string of 2 carriage returns followed by a line feed.
- h. EOR is optional. If the EOR field is not present, the message is considered a single MOA message. The EOR field is used to concatenate multiple messages together. If present, the EOR is one of the following:
- (1) The first character of an IR or IR Cancellation message.
 - (2) The first character of a VR or VR Cancellation message.
 - (3) The first character of a MOA or MOA Cancellation message.

A.22 Mexican Flight Notification

The Mexican Flight Notification message is a notice of an inbound flight to an airport associated with an addressed FSS. This message requires acknowledgment.

FP TYPE		SP	ACID	SP	ACTYPE	SP	DEP PT	SP	DEST
SP	ETA	REMARKS	EOL						

- a. FP TYPE is Flight Plan Type and is either the string of ASCII characters 'VFR' or 'IFR.'
- b. SP is a single ASCII space character.
- c. ACID is Aircraft ID and is defined to be 1 alpha character followed by 1 to 6 alphanumeric characters.
- d. ACTYPE is aircraft type. ACTYPE is 2 to 10 alphanumeric and slash characters [(d)(d)(L)(/) La(a)(a)(/L)], where options are the number of aircraft (1 to 2 digits), the Special Aircraft Indicator (1 letter), a separator (/), the aircraft type (2 to 4 characters), a separator (/), and the Airborne Equipment Qualifier (1 letter).
- e. DEP PT is Departure Point and is 2 to 12 alphanumeric and slash characters where aa(a)(a)(a)/(a)(a)(a)(a)(a) may be any of the following fix formats:
- (1) aa(a)(a)(a), for fix name or
 - (2) aa(a)(a)(a)dddddd, for fix radial distance or
 - (3) dddd(L)/(d)dddd(L), for lat/long.
- f. DEST is destination and is 2 to 12 alphanumeric and slash characters where aa(a)(a)(a)/(a)(a)(a)(a)(a) may be any of the following fix formats:
- (1) aa(a)(a)(a), for fix name or

FOR OFFICIAL USE ONLY

- (2) aa(a)(a)(a)dddddd, for fix radial distance or
- (3) dddd(L)/(d)dddd(L), for lat/long.
- g. ETA is Estimated Time of Arrival. The first 2 optional digits represent the day from 01 to 31. The second 2 required digits represent the hours from 00 to 23. The last 2 required digits represent minutes from 00 to 59.
- h. REMARKS is a string of 1-325 displayable characters preceded by a space character. REMARKS may include embedded EOL sequences.
- i. EOL is a string of 2 carriage returns followed by a line feed.

A.23 IFR Flight Plan

The IFR Flight Plan message is a notice of an inbound IFR flight to an airport associated with an addressed FSS. This message requires acknowledgment.

SOURCE	SP	MESSAGE TYPE	SP	ACID	SP	ACTYPE	SP	AIRSPEED
SP	DEP PT	SP	TIME	SP	ALTITUDE	SP	EOL	
ROUTE	'/'	ETE	EOL					
REMARKS	EOL							

- a. SOURCE is made up of the following.
 - (1) ORIGIN will be the 3 alphabetic character address of the transmitting FSS.
 - (2) TIME will be the current time in the form HHMM where:
 - (a) HH will be the current hour in the range 00-23
 - (b) MM will be the current minutes in the range 00-59
 - (3) MSGNUM will be 3 numeric characters assigned in the range 001-999
- b. SP is a single ASCII space character.
- c. MESSAGE TYPE contains the characters 'FP.'
- d. ACID is aircraft ID and is defined to be 1 alpha character followed by 1 to 6 alphanumeric characters.
- e. ACTYPE is aircraft type. ACTYPE is 2 to 10 alphanumeric and slash characters [(d)(d)(L)(/) La(a)(a)(/L)], where options are the number of aircraft (1 to 2 digits), the Special Aircraft Indicator (1 letter), a separator (/), the aircraft type (2 to 4 characters), a separator (/), and the Airborne Equipment Qualifier (1 letter).
- f. AIRSPEED is 2 to 4 numeric characters or an alpha character followed by 3 numerics.
- g. DEP PT is Departure Point and is 2 to 12 alphanumeric and slash characters where aa(a)(a)(a)/(a)(a)(a)(a)(a)(a) may be any of the following fix formats:
 - (1) aa(a)(a)(a), for fix name or

FOR OFFICIAL USE ONLY

- (2) aa(a)(a)(a)dddddd, for fix radial distance or
- (3) dddd(L)/(d)dddd(L), for lat/long.
- h. TIME is departure time, and is a 'P' followed by four numeric characters. The first 2 characters representing hours from 00 to 23 and the last 2 characters representing minutes from 00 to 59.
- i. ALTITUDE is 2 to 7 alphanumeric messages.
- j. EOL is 2 carriage returns followed by a line feed.
- k. ROUTE is 0 to 558 displayable ASCII characters.
- l. ETE is Estimated Time Enroute. The first 2 digits representing hours from 00 to 99. The last 2 digits representing minutes from 00 to 59.
- m. REMARKS is optional and if present the maximum length is 80 characters.

A.24 General Facility

There are two types of General Facility messages. They are messages requiring acknowledgment and those that do not require acknowledgment. The messages requiring acknowledgment have a Number Line in the Information Unit as described in section A.2.

TEXT	EOL
------	-----

- a. TEXT is a string of displayable characters including embedded EOL sequences.
- b. EOL is 2 carriage returns followed by a line feed.

A.25 Law Enforcement

A Law Enforcement (LE) message is originated to assist in the location or search for an aircraft, which was stolen or is otherwise being sought by LE agencies.

The OASIS system interfaces with NDP to get to AMOC for transmission of LE Contact messages and with EPIC for receipt of the LE Stolen Addition, LE Stolen Deletion, and LE Stolen Summary messages as depicted in table 3-1 and table 3-14, respectively. These messages are addressed in the following sections.

A.25.1 NDP LE Contact

The format of an NDP LE Contact Message (LCM) transmitted from OASIS to NDP is described in this paragraph. The message proper is encapsulated in the same NMR header, which encapsulates messages, sent from OASIS to other NMR destinations. However, the message is addressed directly to the IP address of NDP..

'LCM'	SP	ACID	SP	TIME	SP	CONTACT TYPE	SP	ORIGIN	EOL
-------	----	------	----	------	----	--------------	----	--------	-----

- a. 'LCM' is the ASCII string used for an LCM.
- b. SP is a single ASCII space character.
- c. ACID is Aircraft ID and is defined to be 1 alpha character followed by 1 to 6 alphanumeric characters.

FOR OFFICIAL USE ONLY

- d. TIME is 6 numeric characters. The first 2 characters represent day from 01 to 31, the next 2 characters representing hours from 00 to 23, and the last 2 characters representing minutes from 00 to 59.
- e. CONTACT TYPE is a single numeric character IAW the following:
 - (1) Inflight Briefing
 - (2) Preflight Briefing
 - (3) Flight Watch Briefing
 - (4) Contact Briefing
- f. ORIGIN is the 8 alphabetic character address of the transmitting FSS.
- g. EOL is a string of 2 carriage returns followed by a line feed.

A.25.2 EPIC Law Enforcement

EPIC transmits notices of stolen aircraft to OASIS.

The LE Addition and LE Deletion messages are transmitted as required. An LE Summary message is transmitted once per month and will replace the list of stolen aircraft at each OASIS site. The size of the text field for LE Addition and Deletion messages is approximately 800 characters in length but will not exceed the NMR limitation of 1800 characters.

A.25.2.1 LE Stolen Addition

The format of an LE Stolen Addition message within the NMR message format is as follows:

'LE'	SP	'STOLEN'	SP	'ADDITION'	SP	ACID	TEXT	EOL
------	----	----------	----	------------	----	------	------	-----

- a. 'LE' is the ASCII string used for a LE message.
- b. SP is a single ASCII space character.
- c. 'STOLEN' is the ASCII string used for stolen aircraft messages.
- d. 'ADDITION' is the ASCII string used for LE Stolen Addition Messages.
- e. ACID is Aircraft ID and is defined to be 1 alpha character followed by 1 to 6 alphanumeric characters.
- f. TEXT is optional. If present, it is a string of displayable characters preceded by a space character. TEXT may include embedded EOL sequences. The number of characters between each EOL will not exceed 69 characters.
- g. EOL is a string of 2 carriage returns followed by a line feed.

A.25.2.2 LE Stolen Deletion

The format of an LE Stolen Deletion message within the NMR message format is as follows:

'LE'	SP	'STOLEN'	SP	'DELETION'	SP	ACID	TEXT	EOL
------	----	----------	----	------------	----	------	------	-----

- a. 'LE' is the ASCII string used for a LE message.
- b. SP is a single ASCII space character.
- c. 'STOLEN' is the ASCII string used for stolen aircraft messages.
- d. 'DELETION' is the ASCII string used for LE Stolen Addition messages.
- e. ACID is Aircraft ID and is defined to be 1 alpha character followed by 1 to 6 alphanumeric characters.
- f. TEXT is optional. If present, it is a string of displayable characters preceded by a space character. TEXT may include embedded EOL sequences. The number of characters between each EOL will not exceed 69 characters.
- g. EOL is a string of 2 carriage returns followed by a line feed.

A.25.2.3 LE Stolen Summary

The LE Stolen Summary message is a composite of a number of sequential messages. The format of an LE Stolen Summary message within the NMR message format is as follows:

'LE'	SP	'STOLEN'	SP	'SUMMARY'	SP	DATE	SP	TIME	SP	'PART'
SP	M	SP	'OF'	SP	N	EOL	SUBTEXT			

- a. 'LE' is the ASCII string used for an LE message.
- b. SP is a single ASCII space character.
- c. 'STOLEN' is the ASCII string used for stolen aircraft messages.
- d. 'SUMMARY' is the ASCII string used for LE Stolen Summary messages.
- e. DATE is the month, day, and year of message origination in the form MM/DD/YYYY, where:
 - (1) MM is a 2-digit field representing month from 01 to 12
 - (2) DD is a 2-digit field representing day from 01 to 31
 - (3) YYYY is a 4-digit field representing the year

NOTE

DATE includes '/' characters.

- f. TIME is 6 numeric characters. The first 2 characters represent hours from 00 to 23, the next 2 characters representing minutes from 00 to 59, and the last 2 characters representing seconds from 00 to 59.
- g. 'PART' is the ASCII string.

NOTE

The DATE and TIME fields are identical for all PARTs of an LE Stolen Summary message.

FOR OFFICIAL USE ONLY

- h. M is a 2-digit field representing the part of the number of this LE Stolen Summary from 01 to 25. The first message will have a value of 01 and increasing by 1 in each sequential message of the LE Stolen Summary up to a maximum of 25.
- i. 'OF' is the ASCII string.
- j. N is a 2-digit field representing the total number of parts of this LE Stolen Summary.
- k. EOL is a string of two carriage returns followed by a line feed.
- l. SUBTEXT is a string of characters that include ACID and TEXT. The number of characters between each EOL will not exceed 69 characters. SUBTEXT consists of up to 10 lines of the following:
ACID TEXT EOL
 - (1) ACID is Aircraft ID and is defined to be 1 alpha character followed by 1 to 6 alphanumeric characters.
 - (2) TEXT is optional. If present, it is a string of displayable characters preceded by a space character.
 - (3) EOL is a string of 2 carriage returns followed by a line feed.

A.26 ATCSCC

An ATCSCC message is a system command center advisory informing the addressee of restrictions on operations, conditions of operations, changes in procedures, or other pertinent information pertaining to affected facilities.

A.26.1 Single Part ATCSCC

For Single Part ATCSCC messages the format is as follows:

'ATCSCC'		SP(S)		'ADVZY'		SP(S)		REPORT ID		SP(S)		ADLOC	
SP	TEXT	EOL	TIME	'-'		TIME	EOL	FILLER		EOL			

- a. The ASCII text string "ATCSCC".
- b. SP(S) is ASCII space character(s).
- c. The ASCII text string 'ADVZY'
- d. REPORT ID is a string of 3 numeric characters.
- e. ADLOC is one of the following:

AFFECTED LOCID(S)	REPORTING ARTCC
----------------------	--------------------

- (1) AFFECTED LOCID(s) is optional and is a list of up to five LOCID(s) represented by 2 to 5 alphanumeric characters. Each LOCID is followed by a './'

(2) REPORTING ARTCC is a valid ARTCC address defined in adaptation.

'DCC'

(3) The ASCII string 'DCC.'

- f. TEXT is a string of characters including embedded EOL sequences. The number of characters between each EOL will not exceed 69 characters.
- g. EOL is 2 carriage returns followed by a line feed.
- h. TIME is the beginning or ending time and is six numeric characters. The first two characters representing day from 01 to 31, the next two characters representing hours from 00 to 23, and the last two characters representing minutes from 00 to 59.
- i. FILLER is optional. If present, FILLER is a string of 1 to 69 characters.

A.26.2 Multiple Part ATCSCC

For Multiple Part ATCSCC messages, the format is described in this paragraph. Three formats for a messages of "n" parts are described:

- a. Part 1 — Format for the first part of a multiple part message (section A.26.2.1)
- b. Parts 2 through (n -1) — Format for the middle parts of a multiple part message (section A.26.2.2)
- c. Final Part — Format for the last part of a multiple part message (section A.26.2.3)

A.26.2.1 Multiple Part ATCSCC Message — Part 1

The format for Part 1 of a multiple part ATCSCC message is as follows:

'ATCSCC'		SP(S)		'ADVZY'	SP(S)		REPORT ID		SP(S)		ADLOC
SP	TEXT	EOL									
'**** PART 1 OF LONG MESSAGE (## PARTS) ****'								EOL			

- a. The ASCII text string 'ATCSCC'.
- b. SP(S) is ASCII space character(s).
- c. The ASCII text string 'ADVZY'
- d. REPORT ID is a string of 3 numeric characters.
- e. ADLOC is one of the following:

	REPORTING ARTCC
--	--------------------

- (1) AFFECTED LOCID(s) is optional and is a list of up to five LOCID(s) represented by two to five alphanumeric characters. Each LOCID is followed by a '/.'

FOR OFFICIAL USE ONLY

(2) REPORTING ARTCC is a valid ARTCC address defined in adaptation.

'DCC'

(3) The ASCII string 'DCC.'

- f. TEXT is a string of characters including embedded EOL sequences. The number of characters between each EOL will not exceed 69 characters.
- g. EOL is 2 carriage returns followed by a line feed.
- h. The ASCII text string '***** PART 1 OF LONG MESSAGE (## PARTS) *****', with ## indicating the total number of parts (including a leading zero, if necessary).

A.26.2.2 Multiple Part ATCSCC Message — Parts 2 through (n – 1)

The format for Part 2 through Part (n – 1), where n is the total number of parts, of a multiple part ATCSCC message is as follows:

'***** PART # OF ADVY MESSAGE ATCSCC ADVZY ### *****'					EOL
TEXT	EOL				
'***** PART # OF LONG MESSAGE (## PARTS) *****'			EOL		

- a. The ASCII text string '***** PART # OF ADVY MESSAGE ATCSCC ADVZY ### *****', with # indicating the part number, and ### indicating the 3 numeric characters entered as the REPORT ID in Part 1 of the message.
- b. EOL is 2 carriage returns followed by a line feed.
- c. TEXT is a string of characters including embedded EOL sequences. The number of characters between each EOL will not exceed 69 characters.
- d. The ASCII text string '***** PART # OF LONG MESSAGE (## PARTS) *****', with # indicating the part number, and ## indicating the total number of parts (including a leading zero, if necessary).

A.26.2.3 Multiple Part ATCSCC Message — Final Part

The format for the final Part of a multiple part ATCSCC message is as follows:

'***** PART # OF ADVY MESSAGE ATCSCC ADVZY ### *****'								EOL
TEXT	EOL							
TIME	'-'	TIME	EOL	FILLER	EOL			
'***** FINAL PART: # OF LONG MESSAGE (## PARTS) *****'								EOL

- a. The ASCII text string '***** PART # OF ADVY MESSAGE ATCSCC ADVZY ### *****', with # indicating the final part number, and ### indicating the 3 numeric characters entered as the REPORT ID in Part 1 of the message.
- b. EOL is 2 carriage returns followed by a line feed.

FOR OFFICIAL USE ONLY

- c. TEXT is a string of characters including embedded EOL sequences. The number of characters between each EOL will not exceed 69 characters.
- d. TIME is the beginning or ending time and is six numeric characters. The first two characters representing day from 01 to 31, the next two characters representing hours from 00 to 23, and the last two characters representing minutes from 00 to 59.
- e. FILLER is optional. If present, FILLER is a string of 1 to 69 characters.
- f. The ASCII text string `\*\*\*\*\*FINAL PART: # OF LONG MESSAGE (## PARTS)\*\*\*\*`, with # indicating the final part number, and ## indicating the total number of parts (including a leading zero, if necessary).

A.27 Stereo Flight Plan

A Stereo Flight Plan message is a routinely used route of flight established by users and ARTCCs identified by a coded name. These routes minimize flight plan handling and communications. This message requires acknowledgment, but the number line is not used. Instead of a number line, this message is acknowledged based on the SOURCE field.

SOURCE	SP	MESSAGE TYPE	SP	ACID	SP	ACTYPE	SP	AIRSPEED
SP	TIME	SP	ALTITUDE	SP	STEREO	SP	REMARKS	EOL

- a. SOURCE is made up of the following:
 - (1) ORIGIN will be the 3 alphabetic character address of the transmitting FSS.
 - (2) TIME will be the current time in the form HHMM where:
 - (a) HH will be the current hour in the range 00–23.
 - (b) MM will be the current minutes in the range 00–59.
 - (3) MSGNUM will be 3 numeric characters assigned in the range 001–999.
- b. SP is a single ASCII space character.
- c. MESSAGE TYPE contains the characters `SP.`
- d. ACID is Aircraft ID and is defined to be 1 alpha character followed by 1 to 6 alphanumeric characters.
- e. ACTYPE (optional) is aircraft type. ACTYPE is 2 to 10 alphanumeric and slash characters [(d)(d)(L)(/)]La(a)(a)(/L)], where options are the number of aircraft (1 to 2 digits), the Special Aircraft Indicator (1 letter), a separator (/), the aircraft type (2 to 4 characters), a separator (/), and the Airborne Equipment Qualifier (1 letter).
- f. AIRSPEED is optional and is 2 to 4 numeric characters or an alpha character followed by 3 numerics.
- g. TIME is departure time, and is a `P` followed by four numeric characters. The first two characters representing hours from 00 to 23 and the last two characters representing minutes from 00 to 59.

FOR OFFICIAL USE ONLY

- h. ALTITUDE is optional. ALTITUDE is requested altitude and is 2 to 7 alphanumeric.
- i. STEREO is the Route field and is 0 to 558 displayable ASCII characters.
- j. REMARKS are optional and if present, the maximum length is 325 characters.
- k. EOL is 2 carriage returns followed by a line feed.

A.28 Cancellation

The Cancellation message is sent from OASIS to ARTCC when an error message is received.

MESSAGE ORIGIN	TIME	MESSAGE ID	SP	'CM'	SP	'CXX'
-------------------	------	------------	----	------	----	-------

- a. MESSAGE ORIGIN is 3 alpha characters.
- b. TIME is 4 numeric characters in HHMM.
- c. MESSAGE ID is a 3-digit message number of the original input message.
- d. SP is a single ASCII space character.
- e. ASCII text string 'CM.'
- f. ASCII text string 'CXX.'

A.29 ICAO SAR Request

An ICAO SAR Request message consists of three different alert types: the INCERFA, the ALERFA, and the DETRESFA. These messages are similar to the QALQ, INREQ, and ALNOT messages. This message does not require acknowledgment.

An ICAO SAR message has the following format:

ALERT TYPE		ORIGIN		'/'	FILLER		EOL
'-'	ACI D	'-'	TEXT	')'	EOL		

- a. ALERT TYPE is one of the following character strings:
 - '(ALR-INCERFA/'
 - '(ALR-ALERFA/'
 - '(ALR-DETRESFA/'
- b. ORIGIN is 8 alpha characters.
- c. FILLER is a string of characters with the size dependent on the alert type.
 - (1) For INCERFA the FILLER field is a string of 1 to 47 characters
 - (2) For ALERFA the FILLER field is a string of 1 to 48 characters
 - (3) For DETRESFA the FILLER field is a string of 1 to 46 characters
- d. EOL is a string of 2 carriage returns followed by a line feed.

FOR OFFICIAL USE ONLY

- e. ACID is Aircraft ID and is defined to be 1 alpha character followed by 1 to 6 alphanumeric characters.
- f. TEXT is a string of characters including embedded EOL sequences. The number of characters between each EOL will not exceed 69 characters.

A.30 ICAO SAR Cancellation

The ICAO SAR Cancellation format is the same as the ICAO SAR message format for Foreign ATC with 'CNL' as the first three characters in the FILLER field. This message does not require acknowledgment.

A.31 ICAO SAR Response

The ICAO SAR Response format is the same as the ICAO SAR message format, with the response in the TEXT field. This message is originated by the site that is the recipient of an ICAO SAR Request. The response to the ICAO SAR provides the results or status of the communications search. Also the ICAO SAR Response can provide pertinent information about the missing aircraft or provides notification to the destination site if the aircraft is located. This message does not require acknowledgment.

A.32 ICAO Acknowledgment (ACK) Message

The ICAO Acknowledgment message is sent from an ARTCC to indicate that the receipt of a message has occurred.

ACK ID		SP	MESSAGE TYPE		MSGNUM	SP	ORIGIN	SP
ACID	SP	ICAO DEP PT		SP	TIME	SP	ICAO DEST	EOL

- a. ACK ID is the character string 'ACK.'
- b. SP is a single ASCII space character.
- c. MESSAGE TYPE contains the characters 'FPL', 'CHG', or 'CNL'.
- d. MSGNUM is only present if the original FPL message contained a message number. If present, MSGNUM is '/' followed by that message number in the format of 3 numeric characters in the range 001 to 999.
- e. ORIGIN is 3 or 4 alphabetic characters which identify the origin of the message.
- f. ACID is Aircraft ID and is defined to be 1 alphabetic character followed by 1 to 6 alphanumeric characters.
- g. ICAO DEP PT is Departure Point. ICAO DEP PT is 4 alphabetic characters.
- h. TIME is 4 numeric characters. The first two characters representing hours from 00 to 23 and the last two characters representing minutes from 00 to 59. For messages originating from Honolulu ARTCC, an optional "P" may be prepended to the TIME.

- i. ICAO DEST is Destination. ICAO DEST is four alphabetic characters. For messages originating from Honolulu ARTCC, the ICAO DEST is optional.
- j. EOL is a string of 1 carriage return followed by a line feed or 2 carriage returns followed by a line feed.

A.33 ICAO Reject (REJ) Message

The ICAO Reject message is sent from an ARTCC to indicate that the receipt of a message has occurred but rejected.

ACK ID	SP	MESSAGE TYPE	MSGNUM	SP	ORIGIN	SP	TEXT	EOL
--------	----	-----------------	--------	----	--------	----	------	-----

- a. ACK ID is the character string 'REJ.'
- b. SP is a single ASCII space character.
- c. MESSAGE TYPE contains the characters 'FPL', 'CHG', or 'CNL'.
- d. MSGNUM is only present if the original FPL message contained a message number. If present, MSGNUM is '/' followed by that message number in the format of 3 numeric characters in the range 001 to 999.
- e. ORIGIN is 3 or 4 alphabetic characters which identify the origin of the message.
- f. TEXT is a set of ASCII characters that contains the reason that the message is being rejected and the contents of the original message. TEXT may contain embedded EOL sequences. For messages originating from Honolulu ARTCC, TEXT is the following set of fields.

ACID	SP	ICAO DEP PT	SP	TIME	SP	ICAO DEST
------	----	-------------	----	------	----	-----------

- (1) ACID is Aircraft ID and is defined to be 1 alphabetic character followed by 1 to 6 alphanumeric characters.
- (2) ICAO DEP PT is Departure Point. ICAO DEP PT is 4 alphabetic characters.
- (3) TIME is 4 numeric characters. The first two characters represent hours from 00 to 23 and the last two characters represent minutes from 00 to 59. An optional "P" may be prepended to the TIME.
- (4) ICAO DEST is Destination. ICAO DEST is four alphabetic characters and is optional.
- g. EOL is a string of 1 carriage return followed by a line feed or 2 carriage returns followed by a line feed.

A.34 Error Message

The Error message is sent from an ARTCC to OASIS to identify that a message was received with a field which contains a correctable error.

'ERROR'	SP	MID	SP	ERROR DATA	EOL
---------	----	-----	----	------------	-----

- 'ERROR' is the actual string of ASCII characters required for an ERROR Message.
- SP is a single ASCII space character.
- MID is message identifier and is a 3-digit message number of the original input message.
- Error data is a variable length field which can consist of following fields followed by spaces: Reference number of field in error, field number of acronym, element or field in input message that is in error, and message describing nature of the error.
- EOL is a string of 2 carriage returns followed by a line feed.

A.35 ICAO Supplementary Flight Plan (SPL) Message

The ICAO Supplementary Flight Plan message is sent from an addressee with information additional to that already transmitted in an FPL message.

This message does require an acknowledgment within the NAS and Canada. If this message is sent to any other facility outside the NAS, an acknowledgment is not required.

'(SPL'	MN	RD	'-'	ACID	SSR	'-'	ICAO DEP PT	TIME	EOL
'-'	ICAO DEST		ETE	ICAO ALT DEST			EOL		
'-'	ICAO REMARKS			EOL					
'-'	SUPPLEMENTARY INFORMATION			'-'	EOL				

- '(SPL' is the ASCII text string used for an ICAO Flight Plan.
- MN is the message number. The format is:
a(a)(a)(a)/a(a)(a)(a)ddd
where:
a — alphabetic character
d — numeric character
Parentheses indicate optional character.
- RD is the reference data. The format is:
a(a)(a)(a)/a(a)(a)(a)ddd
where:
a — alphabetic character

FOR OFFICIAL USE ONLY

d — numeric character

Parentheses indicate optional character.

- d. ACID is Aircraft ID and is defined to be 1 alphabetic character followed by 1 to 6 alphanumeric characters.

- e. SSR is the beacon code and is optional. If present, the format is:

/adddd

where:

a — alphabetic character

d — numeric character; may contain a value from 0 to 7 (note: all zeros are not allowed)

- f. ICAO DEP PT is Departure Point. ICAO DEP PT is 4 alphabetic characters.
- g. TIME is Departure Time. The format is 4 numeric characters. The first two characters representing hours from 00 to 23 and the last two characters representing minutes from 00 to 59.
- h. EOL is a string of 1 carriage return followed by a line feed or 2 carriage returns followed by a line feed.
- i. ICAO DEST is Destination. ICAO DEST is four alphabetic characters.
- j. ETE is Estimated Time Enroute. The first two digits are 00 to 99 and the last two digits are 00 to 59.
- k. ICAO ALT DEST is optional. If present, ICAO ALT DEST is a space character followed by 4 alphabetic characters or 4 alphabetic characters followed by a space followed by 4 alphabetic characters.
- l. ICAO REMARKS is Other Information and is 1–325 displayable characters. It may include embedded EOL sequences.
- m. SUPPLEMENTARY INFORMATION is Endurance, Persons On Board, Emergency Radio, Survival Equipment, Jackets, Dinghies, Aircraft Color and Markings, Remarks, and/or Pilot-in-Command; each separated by a space. It may include embedded EOL sequences. The format is:

E/ followed by 4 NUMERICS giving the fuel endurance in hours and minutes

P/ for outside the NAS the format is:

followed by 1, 2, or 3 NUMERICS giving the total number of persons on board, or "TBN" (to be notified) if the total number of persons is not known at the time of filing, when so prescribed by the appropriate ATS authority

for inside the NAS the format is:

followed by 1–30 alphanumeric, space, and backward slash (\) characters giving the total number of persons on board, when so prescribed by the appropriate ATS authority

FOR OFFICIAL USE ONLY

- R/ followed by one or more of the following, without spaces:
 - U if frequency 243.0 MHz (UHF) is available,
 - V if frequency 121.5 MHz (VHF) is available,
 - E if emergency locator transmitter (ELT) is available
- S/ followed by one or more of the following, without spaces:
 - P if polar survival equipment is carried,
 - D if desert survival equipment is carried,
 - M if maritime survival equipment is carried,
 - J if jungle survival equipment is carried
- J/ followed by one or more of the following, without spaces:
 - L if the life jackets are equipped with lights,
 - F if they are equipped with fluorescein, followed by space followed by
 - U if any life jacket radio is equipped with UHF on frequency 243.0 MHz,
 - V if any life jacket radio is equipped with VHF on frequency 121.5 MHz
- D/ followed by one or more of the following, separated by spaces:
 - 2 NUMERICS giving the number of dinghies carried,
 - 3 NUMERICS giving the total capacity, in persons carried, of all dinghies
 - C if dinghies are covered
 - The color of the dinghies (e.g., RED)
- A/ followed by one or more of the following, separated by spaces:
 - the color of the aircraft
 - significant markings (this may include the aircraft registration)

for inside the NAS the format is:

 - 0 to 24 A/N, space, and backward slash (\) characters
- N/ followed by plain language indicating any other survival equipment carried and any other useful remarks
- C/ followed by the pilot information

A.36 Proposed ICAO Modification (CHG) Message

The Proposed ICAO Modification message is sent from an addressee when any change is to be made to basic flight plan data contained in a previously transmitted FPL message.

FOR OFFICIAL USE ONLY

If this message is sent to an ARTCC, this message requires either an ICAO Acknowledgment message or an ICAO Reject message. This message does require an acknowledgment within the NAS and Canada. If this message is sent to any other facility outside the NAS, an acknowledgment is not required.

'(CHG'	MN	RD	'-'	ACID	'-'	ICAO DEP PT	TIME	'-'	ICAO DEST
'-'	ICAO REMARKS			'-'	AMENDMENT		'-'	EOL	

- a. '(CHG' is the ASCII text string used for an ICAO Flight Plan.
- b. MN is the message number. The format is:
a(a)(a)(a)/a(a)(a)(a)ddd
where:
a — alphabetic character
d — numeric character
Parentheses indicate optional character.
- c. RD is the reference data. The format is:
a(a)(a)(a)/a(a)(a)(a)ddd
where:
a — alphabetic character
d — numeric character
Parentheses indicate optional character.
- d. ACID is Aircraft ID and is defined to be 1 alphabetic character followed by 1 to 6 alphanumeric characters.
- e. ICAO DEP PT is Departure Point. ICAO DEP PT is 4 alphabetic characters.
- f. TIME is Departure Time. The format is 4 numeric characters. The first two characters representing hours from 00 to 23 and the last two characters representing minutes from 00 to 59.
- g. ICAO DEST is Destination. ICAO DEST is four alphabetic characters.
- h. ICAO REMARKS is Other Information and is "DOF/" portion if available, else "-0".
- i. AMENDMENT is the amended data. It may include multiple fields separated by oblique strokes. It may include embedded EOL sequences. The format is:
– [a]/[b]
where:
a — 1 or 2 numeric characters representing the type number of the field to be amended
b — the complete and amended data of the field indicated in (a), constructed as specified for that field.

NOTE

If any part of Field 13 (ICAO DEP PT or TIME) is modified and ICAO DEP PT contains "ZZZZ" then the entire contents of Field 18 (Other Information) must be included in Field 22 (AMENDMENT).

(OASIS-EXT-037)

NOTE

If any part of Field 16 (ICAO DEST, ETE, or ICAO ALT DEST) is modified and ICAO DEST contains "ZZZZ" then the entire contents of Field 18 (Other Information) must be included in Field 22 (AMENDMENT).

(OASIS-EXT-038)

- j. EOL is a string of 1 carriage return followed by a line feed or 2 carriage returns followed by a line feed.

A.37 Active ICAO Modification (MOD) Message

The Active ICAO Modification message is sent from an addressee when any change is to be made to basic flight plan data contained in a previously transmitted FPL and/or DEP message for an active flight plan.

This message does require an acknowledgment within the NAS and Canada. If this message is sent to any other facility outside the NAS, an acknowledgment is not required.

'(MOD'	MN	RD	'-'	ACID	SSR	'-'	ICAO DEP PT	'-'	ICAO DEST
'-'	AMENDMENT			')'	EOL				

- a. '(MOD' is the ASCII text string used for an ICAO Flight Plan.
- b. MN is the message number. The format is:
a(a)(a)(a)/a(a)(a)(a)ddd
where:
a — alphabetic character
d — numeric character
Parentheses indicate optional character.
- c. RD is the reference data. The format is:
a(a)(a)(a)/a(a)(a)(a)ddd
where:
a — alphabetic character
d — numeric character
Parentheses indicate optional character.
- d. ACID is Aircraft ID and is defined to be 1 alphabetic character followed by 1 to 6 alphanumeric characters.

FOR OFFICIAL USE ONLY

- e. SSR is the beacon code and is optional. If present, the format is:
/adddd
where:
a — alphabetic character
d — numeric character; may contain a value from 0 to 7 (note: all zeros are not allowed)
- f. ICAO DEP PT is Departure Point. ICAO DEP PT is 4 alphabetic characters.
- g. ICAO DEST is Destination. ICAO DEST is four alphabetic characters.
- h. AMENDMENT is the amended data. It may include multiple fields separated by oblique strokes. It may include embedded EOL sequences. The format is:
– [a]/[b]
where:
a — 1 or 2 numeric characters representing the type number of the field to be amended
b — the complete and amended data of the field indicated in (a), constructed as specified for that field.
- i. EOL is a string of 1 carriage return followed by a line feed or 2 carriage returns followed by a line feed.

A.38 ICAO Arrival (ARR) Message

The ICAO Arrival message is sent from an addressee when a flight, for which basic flight plan data has been previously distributed, has been closed.

This message does require an acknowledgment within the NAS and Canada. If this message is sent to any other facility outside the NAS, an acknowledgment is not required.

'(ARR'	MN	RD	'-'	ACID	SSR	'-'	ICAO DEP PT	TIME
'-'	ICAO DEST	TIME	')	EOL				

- a. '(ARR' is the ASCII text string used for an ICAO Flight Plan.
- b. MN is the message number. The format is:
a(a)(a)(a)/a(a)(a)(a)ddd
where:
a — alphabetic character
d — numeric character
Parentheses indicate optional character.
- c. RD is for receipt only and is optional. If present it is the reference data. The format is:
a(a)(a)(a)/a(a)(a)(a)ddd

where:

- a — alphabetic character
- d — numeric character
- Parentheses indicate optional character.

- d. ACID is Aircraft ID and is defined to be 1 alphabetic character followed by 1 to 6 alphanumeric characters.
- e. SSR is the beacon code and is optional. If present, the format is:
/adddd

where:

- a — alphabetic character
- d — numeric character; may contain a value from 0 to 7 (note: all zeros are not allowed)
- f. ICAO DEP PT is Departure Point. ICAO DEP PT is 4 alphabetic characters.
- g. TIME is Departure Time. The format is 4 numeric characters. The first two characters representing hours from 00 to 23 and the last two characters representing minutes from 00 to 59.
- h. ICAO DEST is Destination. ICAO DEST is four alphabetic characters.
- i. TIME is Arrival Time. The format is 4 numeric characters. The first two characters representing hours from 00 to 23 and the last two characters representing minutes from 00 to 59.
- j. EOL is a string of 1 carriage return followed by a line feed or 2 carriage returns followed by a line feed.

A.39 ICAO Cancellation (CNL) Message

The ICAO Cancellation message is sent from an addressee when a flight, for which basic flight plan data has been previously distributed, has been cancelled.

If this message is sent to an ARTCC, this message requires either an ICAO Acknowledgment message or an ICAO Reject message. This message does require an acknowledgment within the NAS and Canada. If this message is sent to any other facility outside the NAS, an acknowledgment is not required.

'(CNL'	MN	RD	'-'	ACID	'-'	ICAO DEP PT	TIME	'-'	ICAO DEST
'-'	ICAO REMARKS			'-'	EOL				

- a. '(CNL' is the ASCII text string used for an ICAO Cancellation.
- b. MN is the message number. The format is:
a(a)(a)(a)/a(a)(a)(a)ddd

where:

- a — alphabetic character
- d — numeric character
- Parentheses indicate optional character.

FOR OFFICIAL USE ONLY

- c. RD is the reference data. The format is:
a(a)(a)(a)/a(a)(a)(a)ddd
where:
a — alphabetic character
d — numeric character
Parentheses indicate optional character.
- d. ACID is Aircraft ID and is defined to be 1 alphabetic character followed by 1 to 6 alphanumeric characters.
- e. ICAO DEP PT is Departure Point. ICAO DEP PT is 4 alphabetic characters.
- f. TIME is estimated Departure Time. The format is 4 numeric characters. The first two characters representing hours from 00 to 23 and the last two characters representing minutes from 00 to 59.
- g. ICAO DEST is Destination. ICAO DEST is four alphabetic characters.
- h. ICAO REMARKS is Other Information and is "DOF/" portion if available, else "-0".
- i. EOL is a string of 1 carriage return followed by a line feed or 2 carriage returns followed by a line feed.

A.40 ICAO Departure (DEP) Message

An ICAO Departure message is a notice of an inbound ICAO flight to an airport associated with an addressed FSS.

This message does require an acknowledgment within the NAS and Canada. If this message is sent to any other facility outside the NAS, an acknowledgment is not required.

'(DEP'	MN	RD	'-'	ACID	SSR	'-'	ICAO DEP PT	TIME	'-'
ICAO DEST	'-'	ICAO REMARKS	'-'	EOL					

- a. '(DEP' is the ASCII text string used for an ICAO Departure.
- b. MN is the message number. The format is:
a(a)(a)(a)/a(a)(a)(a)ddd
where:
a — alphabetic character
d — numeric character
Parentheses indicate optional character.
- c. RD is the reference data. The format is:
a(a)(a)(a)/a(a)(a)(a)ddd
where:
a — alphabetic character

d — numeric character

Parentheses indicate optional character.

d. ACID is Aircraft ID and is defined to be 1 alphabetic character followed by 1 to 6 alphanumeric characters.

e. SSR is the beacon code and is optional. If present, the format is:

/adddd

where:

a — alphabetic character

d — numeric character; may contain a value from 0 to 7 (note: all zeros are not allowed)

f. ICAO DEP PT is Departure Point. ICAO DEP PT is 4 alphabetic characters.

g. TIME is Departure Time. The format is 4 numeric characters. The first two characters representing hours from 00 to 23 and the last two characters representing minutes from 00 to 59.

h. ICAO DEST is Destination. ICAO DEST is four alphabetic characters.

i. ICAO REMARKS is Other Information. If Other Information is present, ICAO REMARKS is 1–325 displayable characters and may include embedded EOL sequences. If Other Information is blank, ICAO REMARKS is "0".

j. EOL is a string of 1 carriage return followed by a line feed or 2 carriage returns followed by a line feed.

A.41 Proposed ICAO Flight Plan (FPL) Message

A Proposed ICAO Flight Plan message is a notice of a proposed ICAO flight that is departing outside of the flight plan area of the originating facility.

This message does require an acknowledgment within the NAS and Canada. If this message is sent to any other facility outside the NAS, an acknowledgment is not required.

'(FPL'	MN	RD	'-'	ACID	SSR	'-'	TYPE FLT	EOL
'-'	ICAO ACTYPE			'-'	EQUIP	EOL		
'-'	ICAO DEP PT		TIME		EOL			
'-'	AIRSPEED		ALTITUDE		SP	ROUTE	EOL	
'-'	ICAO DEST		ETE	ICAO ALT DEST		EOL		
'-'	ICAO REMARKS			CLOSURE POINTS			')	EOL

a. '(FPL' is the ASCII text string used for an ICAO Flight Plan.

b. MN is the message number. The format is:

a(a)(a)/a(a)(a)ddd

where:

a — alphabetic character

FOR OFFICIAL USE ONLY

d — numeric character

Parentheses indicate optional character.

- c. RD is for receipt only and is optional. If present it is the reference data. The format is:

a(a)(a)(a)/a(a)(a)(a)ddd

where:

a — alphabetic character

d — numeric character

Parentheses indicate optional character.

- d. ACID is Aircraft ID and is defined to be 1 alphabetic character followed by 1 to 6 alphanumeric characters.
- e. SSR is the beacon code and is optional. If present, the format is:

/adddd

where:

a — alphabetic character

d — numeric character; may contain a value from 0 to 7 (note: all zeros are not allowed)

- f. TYPE FLT is Type of Flight. TYPE FLT is 1 or 2 alphabetic characters. The first character is V, Y, Z and the second is S, N, G, M, X.
- g. EOL is a string of 1 carriage return followed by a line feed or 2 carriage returns followed by a line feed.
- h. ICAO ACTYPE is Aircraft Type. ICAO ACTYPE is 2 to 8 alphanumeric and slash characters.
- i. EQUIP is Equipment. EQUIP is up to 76 alphanumeric and slash characters. It may include embedded EOL sequences immediately prior to EQUIP and/or between the Comm/Nav and Transponder portions of EQUIP.
- j. ICAO DEP PT is Departure Point. ICAO DEP PT is 4 alphabetic characters.
- k. TIME is Departure Time. The format is 4 numeric characters. The first two characters representing hours from 00 to 23 and the last two characters representing minutes from 00 to 59.
- l. AIRSPEED is True Airspeed. AIRSPEED is the alphanumeric character 'M' followed by 3 numeric characters, or the alphanumeric character 'K' or 'N' followed by 4 numeric characters.
- m. ALTITUDE is Requested Altitude. ALTITUDE is 3 to 7 alphanumeric characters. The format is:

Fddd

Sdddd

Add

Mdddd

VFR

VFR/ddd

FOR OFFICIAL USE ONLY

where:

d — numeric character

- n. SP is a single ASCII space character.
- o. ROUTE is Route of Flight and is a string of 0 to 558 displayable characters. It may include embedded EOL sequences.
- p. ICAO DEST is Destination. ICAO DEST is four alphabetic characters.
- q. ETE is the Estimated Time Enroute. The first two digits are 00–99 and the last two digits are 00–59.
- r. ICAO ALT DEST is optional. If present, ICAO ALT DEST is a space character followed by 4 alphabetic characters or 4 alphabetic characters followed by a space followed by 4 alphabetic characters.
- s. ICAO REMARKS is Other Information and is 1–325 displayable characters. It may include embedded EOL sequences.
- t. CLOSURE POINTS is the Closure Points field address(es). It is appended to the end of the ICAO REMARKS preceded by the "RMK/" indicator. The format is:

xx=address(es)

where:

xx is 'CP'

address(es) is up to 16 8-character addresses with no embedded spaces

A.42 ICAO Flight Plan (FPL) Message (Proposed-Inbound)

The ICAO Flight Plan message is a notice of an inbound ICAO flight to an airport associated with an addressed FSS.

If this message is sent to an ARTCC, this message requires either an ICAO Acknowledgment message or an ICAO Reject message. This message does require an acknowledgment within the NAS and Canada. If this message is sent to any other facility outside the NAS, an acknowledgment is not required.

'(FPL'	MN	RD	'-'	ACID	SSR	'-'	TYPE FLT	EOL
'-'	ICAO ACTYPE			'-'	EQUIP		EOL	
'-'	ICAO DEP PT		TIME		EOL			
'-'	AIRSPEED		ALTITUDE		SP	ROUTE	EOL	
'-'	ICAO DEST		ETE	ICAO ALT DEST			EOL	
'-'	ICAO REMARKS			'-'	EOL			

- a. '(FPL' is the ASCII text string used for an ICAO Flight Plan.
- b. MN is the message number. The format is:

a(a)(a)(a)/a(a)(a)(a)ddd

FOR OFFICIAL USE ONLY

where:

a — alphabetic character

d — numeric character

Parentheses indicate optional character.

- c. RD is for receipt only and is optional. If present it is the reference data. The format is:

a(a)(a)(a)/a(a)(a)(a)ddd

where:

a — alphabetic character

d — numeric character

Parentheses indicate optional character.

- d. ACID is Aircraft ID and is defined to be 1 alphabetic character followed by 1 to 6 alphanumeric characters.

- e. SSR is the beacon code and is optional. If present, the format is:

/adddd

where:

a — alphabetic character

d — numeric character; may contain a value from 0 to 7 (note: all zeros are not allowed)

- f. TYPE FLT is Type of Flight. TYPE FLT is 1 or 2 alphabetic characters. The first character is I, V, Y, Z and the second is S, N, G, M, X.
- g. EOL is a string of 1 carriage return followed by a line feed or 2 carriage returns followed by a line feed.
- h. ICAO ACTYPE is Aircraft Type. ICAO ACTYPE is 2 to 8 alphanumeric and slash characters.
- i. EQUIP is Equipment. EQUIP is up to 76 alphanumeric and slash characters. It may include embedded EOL sequences immediately prior to EQUIP and/or between the Comm/Nav and Transponder portions of EQUIP
- j. ICAO DEP PT is Departure Point. ICAO DEP PT is 4 alphabetic characters.
- k. TIME is Departure Time. The format is 4 numeric characters. The first two characters representing hours from 00 to 23 and the last two characters representing minutes from 00 to 59.
- l. AIRSPEED is True Airspeed. AIRSPEED is the alphanumeric character 'M' followed by 3 numeric characters, or the alphanumeric character 'K' or 'N' followed by 4 numeric characters.
- m. ALTITUDE is Requested Altitude. ALTITUDE is 3 to 7 alphanumeric characters. The format is:

Fddd

Sdddd

Add

Mdddd

FOR OFFICIAL USE ONLY

VFR
VFR/ddd

where:

d — numeric character

- n. SP is a single ASCII space character.
- o. ROUTE is Route of Flight and is a string of 0 to 558 displayable characters. It may include embedded EOL sequences.
- p. ICAO DEST is Destination. ICAO DEST is four alphabetic characters.
- q. ETE is Estimated Time Enroute. The first two digits are 00 to 99 and the last two digits are 00 to 59.
- r. ICAO ALT DEST is optional. If present, ICAO ALT DEST is a space character followed by 4 alphabetic characters or 4 alphabetic characters followed by a space followed by 4 alphabetic characters.
- s. ICAO REMARKS is Other Information and is 1–325 displayable characters. It may include embedded EOL sequences.

A.43 ICAO Logical Acknowledgment (LAM) Message

The ICAO Logical Acknowledgment message is sent from an addressee to indicate that the receipt of a message has occurred. The reference data (RD) contains the reference number (i.e., message number (MN)) of the message being responded to.

'(LAM'	MN	RD	)'	EOL
--------	----	----	----	-----

- a. '(LAM' is the ASCII text string used for an ICAO Logical Acknowledgment.
- b. MN is the message number. The format is:

a(a)(a)(a)/a(a)(a)(a)ddd

where:

a — alphabetic character

d — numeric character

Parentheses indicate optional character.

- c. RD is the reference data. The format is:

a(a)(a)(a)/a(a)(a)(a)ddd

where:

a — alphabetic character

d — numeric character

Parentheses indicate optional character.

- d. EOL is a string of 1 carriage return followed by a line feed or 2 carriage returns followed by a line feed.

A.44 ICAO Logical Rejection (LRM) Message

The ICAO Logical Rejection message is sent from an addressee to indicate that the receipt of a message has occurred but contained an error and has been rejected by the receiving system. The reference data (RD) contains the reference number (i.e., message number (MN)) of the message being responded to.

'(LRM'	MN	RD	'-'	ICAO REMARKS	')	EOL
--------	----	----	-----	--------------	----	-----

- a. '(LRM' is the ASCII text string used for an ICAO Logical Rejection.
- b. MN is the message number. The format is:
a(a)(a)(a)/a(a)(a)(a)ddd
where:
a — alphabetic character
d — numeric character
Parentheses indicate optional character.
- c. RD is the reference data. The format is:
a(a)(a)(a)/a(a)(a)(a)ddd
where:
a — alphabetic character
d — numeric character
Parentheses indicate optional character.
- d. ICAO REMARKS is from the Other Information field. The format is:
RMK/code/field/text
where:
code — 2 numeric characters comprising the error code; (note that error code 57 will be used for any error that is not field specific and that is not identified in Table E — Error Codes.)
field — 2 numeric characters comprising the field in error or "00" if the error is not field specific
text — the contents of the message that caused the error when the error is field specific. When the error is non-field specific, a descriptive error message shall be included.
- e. EOL is a string of 1 carriage return followed by a line feed or 2 carriage returns followed by a line feed.