# ZYNQ-DualCore-FORTH32

Implementation Details — the two HF32 cores, their FPUs and the shared peripherals, the ARM side and the Forth kernel

ZYNQ-DualCore-FORTH32 4.2

Generated 2026-11-06 from docs/design.md

This document describes how ZYNQ-DualCore-FORTH32 is built: the two HF32 cores with their floating-point units and dividers in the FPGA, the memory, the shared I/O bus and the peripherals around them, the program on the ARM core, the Forth kernel that runs on each core, and the tools that build and check all of it. It is written for someone who wants to understand, change or extend the design. How to *use* the Forth is in the user manual, the serial protocol in Protocol.md and the pattern generator's internals in PatternGenerator.md.

All figures in this document are those of release 4.0 (firmware 4.0, protocol 3), unless a section names an earlier release for comparison. The PDF version, `docs/Implementation-Details.pdf`, is generated from this file by `python tools/manual_pdf.py design`.

## Contents


**1 Overview**

- 1.1 Design goals
- 1.2 Who does what
- 1.3 The life of a line
- 1.4 Repository map

**2 Platform and resources**

- 2.1 The Zynq-7020 and the Arty Z7-20
- 2.2 Resources used
- 2.3 Timing

**3 The HF32 CPU**

- 3.1 Machine model
- 3.2 Instruction formats
- 3.3 ALU and FALU functions
- 3.4 Primitives
- 3.5 Memory ports and timing
- 3.6 Stalls
- 3.7 Next-state logic

**4 The multi-cycle unit and the FPU**

- 4.1 Interface to the CPU
- 4.2 Number format and semantics
- 4.3 The datapath
- 4.4 Verification of the FPU

**5 Memory and I/O**

- 5.1 RAM
- 5.2 The I/O read path
- 5.3 I/O map
- 5.4 Terminal FIFOs
- 5.5 LEDs, buttons, switches and timers
- 5.6 Shield pins
- 5.7 Pin router
- 5.8 PWM
- 5.9 UART
- 5.10 SPI
- 5.11 $I^2C$

5.12 DDS
5.13 Tone generator
5.14 XADC
5.15 Pattern generator
5.16 Reset

**6 The ARM side**

6.1 AXI-Lite registers (ARM side)
6.2 Boot and loading
6.3 Pause and RAM reads
6.4 The main loop
6.5 Terminal and service requests
6.6 Saved source
6.7 Dictionary and stacks
6.8 The HASE node

**7 The Forth kernel**

7.1 Two compilers that produce the same code
7.2 Memory layout
7.3 Dictionary headers
7.4 The layers
7.5 Primitives, inlining and execute
7.6 The interpreter
7.7 The compiler
7.8 What lands in RAM
7.9 Integer arithmetic
7.10 Floating point: hardware and Forth
7.11 Board words
7.12 Pin ownership and the serial words
7.13 Compatibility with the 16-bit Forth
7.14 What is left out

**8 Tools and verification**

8.1 tools/hf32.py
8.2 Checks of the models
8.3 RTL testbenches
8.4 Checks on the board

**9 Building and booting**

9.1 The build chain
9.2 Getting it onto the board

**10 The Windows app**


**11 Design decisions and room for growth**

11.1 Decisions
11.2 Room for growth

# 1 Overview

ZYNQ-DualCore-FORTH32 turns a Digilent Arty Z7-20 into an interactive computer with **two Forths**. They do not run on the board's ARM processor: each runs on its own **HF32**, a 32-bit stack processor built in the programmable logic of the Zynq, whose instructions are Forth primitives. Everything that makes Forth Forth runs on HF32: reading the input line, looking words up, compiling new definitions, executing them, printing numbers and floats.

The two cores, **core 0** and **core 1**, are independent: each has its own 128 KB of RAM, its own copy of the kernel, its own dictionary, stacks, terminal and saved source, and neither can reach the other's memory. They share the board's I/O through one I/O bus with a register stage, and work together through a mailbox in each direction, eight locks and 4 KB of shared RAM; every pin and peripheral belongs to the core that opened it (section 5.2). The ARM core is the service processor of both: it loads the kernels, carries both terminals between the USB serial port and the cores, and answers the app's and the HASE laboratory's requests on the side.

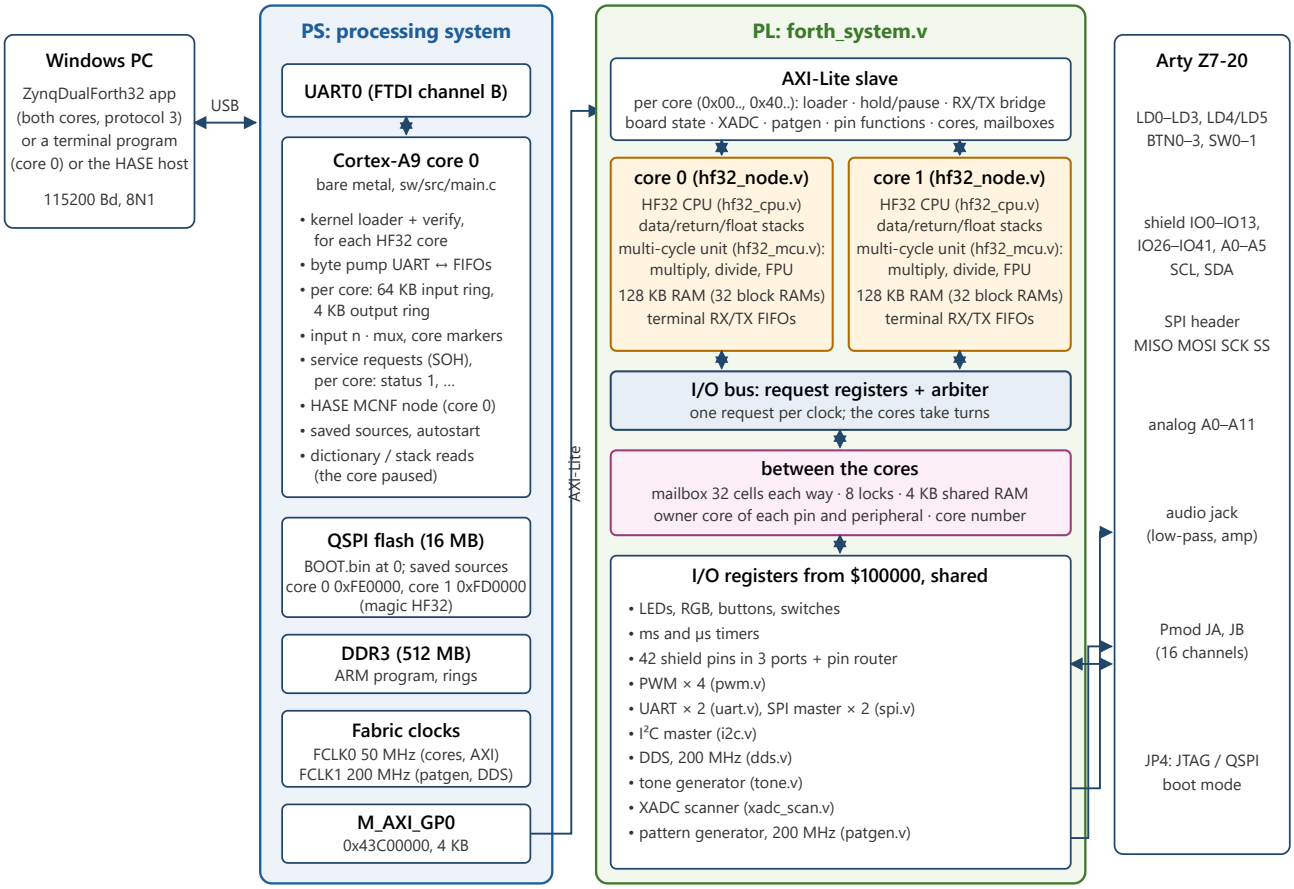


## 1.1 Design goals

- **A real Forth CPU.** Compiled Forth is native HF32 machine code: a colon definition is a sequence of 32-bit instructions, primitives are inlined as single instructions, calls and returns cost no extra clock. There is no inner interpreter.
- **Two independent Forths.** Two full systems on one board rather than a main core and a helper: either core can be restarted, loaded with a source or left looping while the other goes on, and a program written for one core runs on the other.

- **Hardware floating point and division.** IEEE 754 single precision with its own float stack, as in Forth-2012: `f+ f- f*` take 5–6 clocks, `f/` and `fsqrt` 31; a 64 / 32 divider for `um/mod` and `u/mod` in 17.
- **Correct results.** Every FPU operation rounds to nearest even; decimal input and output are correctly rounded; the elementary functions are accurate to within about two units in the last place.
- **Compatible with the 16-bit ZYNQ-FORTH.** The same board I/O, AXI registers, word names and stack effects, so 16-bit sources run unchanged, and the same HASE node type, so the HASE Forth-Lab panel works with it.
- **Hardware peripherals on any pin.** PWM, UARTs, SPI, $I^2C$ and a DDS can each be routed to any of the 42 shield pins; a tone generator drives the audio jack; a 200 MHz pattern generator drives the Pmods.
- **Standalone and HASE-compatible in one firmware.** The same boot image talks to a terminal program, to the Windows app and to a HASE host, and switches by itself.
- **Small and checkable.** About 25 % of the Zynq-7020's logic for both cores. Every layer has an executable model that the layer below is checked against: the FPU and the divider bit for bit, each CPU instruction for instruction, both cores together against the simulator's two-core run, the kernel against Python's arithmetic.

## 1.2 Who does what

| | FPGA: each HF32 core running `forth/kernel.fs` | ARM Cortex-A9: `sw/src/main.c` (bare metal) |
|---|---|---|
| Start-up | `cold` prints the banner, sets base and precision, enters `quit` | Loads the 6,219-cell kernel image into each core's RAM over AXI, reads it back to verify it, releases the core from reset |
| Terminal | Reads keys from its RX FIFO, echoes, prints into its TX FIFO | Moves UART bytes into the RX FIFO of the core the input points at, and each core's TX FIFO into the UART, through a 64 KB input ring and a 4 KB output ring per core; marks which core's output is which (protocol 3) |
| Interpreting and compiling | All of it: parsing, dictionary search, numbers, floats, compiling, executing | Nothing |
| Arithmetic | Integer ALU, multiplier and divider, FPU (hardware); decimal conversion and elementary functions (Forth) | Nothing |
| Board I/O | LEDs, pins, PWM, serial interfaces, DDS, tone, XADC, pattern generator, all as I/O registers at `$100000`, shared by both cores; the core that opens a pin or peripheral owns it | Only reads their state for the app's board view, without disturbing the cores |
| Working together | Mailboxes, locks and the shared RAM, used by the kernel's `send receive lock unlock shared` | Nothing; it only reports how many cells wait in each mailbox |
| Service requests (`words`, `stack`, `board`, `source` …) | Nothing; Forth does not notice them | Answers them itself, for the core a request names; for the dictionary and the stacks it pauses that core for a few microseconds and reads its RAM |
| Saved source | Compiles it as if it were typed | Keeps one per core in QSPI flash and feeds it into that core's input at every start (autostart) |

| | FPGA: each HF32 core running `forth/kernel.fs` | ARM Cortex-A9: `sw/src/main.c` (bare metal) |
|---|---|---|
| HASE | Nothing | The whole MCNF node, about core 0: framing, device functions, the automatic switch between terminal and HASE |

The PC tool `tools/hf32.py` comes in only at build time: it cross-compiles `kernel.fs` into the image that the ARM loads. Everything typed later is compiled by that image, on the FPGA.

## 1.3 The life of a line

What happens when `2 3 + .` and Enter are typed in the app, with core 0 shown:

1. The app writes the bytes to the board's USB serial port. The FTDI chip passes them to the Zynq's PS UART0.
2. The ARM program's main loop reads each byte from the UART. It is not SOH (a service request) and not a byte `0xA_` (an MCNF frame), so it goes into the 64 KB input ring of the core the input points at, core 0 (the app sent `input 0` when it switched to it).
3. Whenever core 0's RX FIFO is not full, the loop moves bytes from the ring into it through the AXI register `RX_PUSH`.
4. Core 0 is waiting in `key`, polling the I/O status register `$100004` over the I/O bus. It reads the byte from `$100000` (which pops its FIFO), and `accept-line` echoes it with `emit`: a store to `$100000` pushes it into its TX FIFO. Core 1 meanwhile runs whatever it runs; it only shares the I/O bus, which serves one request per clock.
5. The ARM loop pops core 0's TX FIFO through `TX_POP` into core 0's output ring, and the ring drains into the UART (after a core marker if core 1 printed last): the echo appears in core 0's terminal in the app.
6. At the CR, `accept-line` returns. `interpret` takes `2`: not in the dictionary, a number, pushed. `3` likewise. `+` is found and executed (in interpret state, the inline primitive's code is called). `.` prints `5`. Then `quit` prints `ok` and CR LF, takes a snapshot of the stacks for the app, and waits for the next line.
7. Meanwhile the app asks for the stack (`SOH stack LF`, `stack 1` for core 1). The ARM pauses that core for a few microseconds, reads the snapshot from its RAM, resumes it and answers; the answer is placed between two bytes of Forth's output. The other core is not paused.

## 1.4 Repository map

| Path | Content |
|---|---|
| `rtl/hf32_cpu.v` | the HF32 CPU: decoder, stacks, ALU, next-state logic, memory ports |
| `rtl/hf32_mcu.v` | the multi-cycle unit: 32 × 32 multiplier, 64 / 32 divider and the IEEE single-precision FPU |
| `rtl/forth_system.v` | the system around the cores: the I/O bus and its arbiter, I/O decode, timers, shield pins, pin router, AXI-Lite slave |
| `rtl/hf32_node.v` | one core with its own RAM and terminal FIFOs (instantiated twice) |
| `rtl/pwm.v`, `uart.v`, `spi.v`, `i2c.v`, `dds.v`, `tone.v`, `xadc_scan.v`, `patgen.v`, `fifo.v` | the peripherals |

| Path | Content |
| --- | --- |
| `constr/pins.xdc`, `hw/build_hw.tcl` | pin constraints; the Vivado build (block design, bitstream, `.xsa`) |
| `forth/kernel.fs` | the Forth kernel (926 lines of Forth), the same for both cores |
| `tools/hf32.py` | cross-compiler, instruction-set simulator (one core, or both together), bit-exact FPU and divider model |
| `sw/src/main.c`, `mcnf_node.c`, `flash.c` | the ARM program, the HASE MCNF framing, the QSPI flash driver |
| `sw/build_sw.tcl`, `build_boot.ps1`, `program_flash.ps1`, `run.tcl` | ARM build, boot image, flash programming, JTAG run |
| `sim/` | RTL testbenches and their input sessions |
| `app/` | the Windows app (C#, WPF, .NET 10) and its tests |
| `tools/test_*.py`, `mcnf_check.py`, `board_session.py` | model checks and board tests |

# 2 Platform and resources

## 2.1 The Zynq-7020 and the Arty Z7-20

The XC7Z020 has two halves. The **processing system (PS)** is a hard dual-core ARM Cortex-A9 with its own peripherals: UARTs, a QSPI flash controller, a DDR3 controller, timers, and general-purpose AXI ports into the programmable logic. The **programmable logic (PL)** is an Artix-7-class FPGA fabric: 53,200 LUTs, 106,400 flip-flops, 140 block RAMs of 36 Kb, 220 DSP48 slices and one XADC. The board adds 512 MB of DDR3, 16 MB of QSPI flash, an FTDI USB–JTAG/UART bridge, LEDs, buttons, switches, an Arduino/chipKIT shield connector, an SPI header, two Pmod headers and an audio output with a low-pass filter and amplifier.

This design uses only core 0 of the PS, running a bare-metal program without an operating system, and connects it to the PL through one AXI-Lite slave at `0x43C00000` (4 KB window, `M_AXI_GP0`). The PS also supplies the PL's clocks:

| Clock | Frequency | Used by |
|---|---|---|
| FCLK0 | 50 MHz | both HF32 cores, their RAM, the I/O bus, all I/O, the AXI-Lite slave (one clock domain) |
| FCLK1 | 200 MHz | pattern generator player and the DDS phase accumulator (5 ns grid) |

Settings and commands for the 200 MHz blocks cross between the two clocks with toggle handshakes (sections 5.12 and 5.15); everything else is synchronous to FCLK0.

**Why 50 MHz.** HF32 executes one instruction per clock, and its data port is addressed with the *next* top of stack (section 3.5): the RAM address is the output of the ALU in the same cycle. That path, ALU plus multiplexers plus the block RAM's address setup, is the critical one; at 100 MHz it misses by a fraction of a nanosecond. At 50 MHz it has about 4 ns to spare (section 2.3). The shared I/O bus does not lengthen it: its register stage starts a new clock behind each core's address, at the price of one more clock per I/O access. A pipelined CPU would run faster but would lose the property that every primitive takes one clock and that the compiler never has to schedule around anything except the store hazard.

## 2.2 Resources used

From the implementation report of the two-core design (ZYNQ-DualCore-FORTH32 step 3, parts 1 to 3, `build/hw/utilization.rpt`). The single core with the divider (step 2) used 8,321 LUTs, 4,409 flip-flops, 41 block RAMs and 15 DSPs; the second core with its RAM, FIFOs and the I/O arbiter added 4,164 LUTs, 688 flip-flops, 32 block RAMs and 6 DSPs; the mailboxes, locks and shared RAM another 252 LUTs, 41 flip-flops and 1 block RAM; the pin and peripheral owners with the GPIO set/clear registers 614 LUTs and 131 flip-flops; the I/O bus's register stage 118 flip-flops (and 10 LUTs fewer):

| Resource | Used | Available | % | Mostly in |
|---|---|---|---|---|
| Slice LUTs | 13,341 | 53,200 | 25.1 | two CPU datapaths with FPU and divider, peripherals, pin router, owner tables |
| of which LUT RAM | 426 | 17,400 | 2.4 | each core's three 32-entry stacks, the FIFOs and mailboxes |
| Flip-flops | 5,387 | 106,400 | 5.1 | |
| Slices | 4,327 | 13,300 | 32.5 | |

| Resource | Used | Available | % | Mostly in |
|---|---|---|---|---|
| Block RAM (36 Kb) | 74 | 140 | 52.9 | 2 × 32 for the two 128 KB Forth RAMs, 9 for the pattern memory, 1 for the shared RAM |
| DSP48 | 21 | 220 | 9.5 | per core the 32 × 32 multiplier and the FPU significand multiplier; PWM duty products, tone volume |
| Bonded I/O pins | 94 | 125 | 75.2 | LEDs 10, buttons/switches 6, shield 42, analog 18, Pmods 16, audio 2 |
| XADC | 1 | 1 | 100 | |
| BUFGCTRL | 2 | 32 | 6.3 | the two fabric clocks |

The I/O pins and the XADC are limited by the board, not by the design. 66 block RAMs and about 40,000 LUTs are still free.


## 2.3 Timing

| Clock | Worst setup slack | Worst hold slack | Critical path |
|---|---|---|---|
| FCLK0, 50 MHz (20 ns) | 3.974 ns | 0.035 ns | core 0: its RAM's data output → T → its RAM's write enable |
| FCLK1, 200 MHz (5 ns) | 0.465 ns | 0.077 ns | pattern generator: fetch register → pattern memory address |

All constraints are met. With the I/O bus shared combinationally, the 50 MHz margin had shrunk from 3.2 ns (one core) to 0.14 ns (two cores with mailboxes, locks, shared RAM and owners): the worst path ran from a core's next T through the arbiter into the shared I/O decode. The bus's register stage (section 5.2) cut that path at the request registers, for one more clock per I/O access; the worst path is now inside a core again, as with one core. The 200 MHz pattern generator has never had much margin (0.000 ns in 3.1) and depends on the placement around it. The 200 MHz pattern generator has never had much margin (0.000 ns in 3.1, 0.464 ns in step 2) and depends on the placement around it.

# 3 The HF32 CPU

`rtl/hf32_cpu.v`, about 290 lines of Verilog. HF32 follows the scheme of the J1 Forth CPU (James Bowman, 2010): a dual-stack machine with literal, jump, conditional-branch, call and ALU instructions, where one ALU instruction can change the top of stack, move the stack pointers, store to memory and return, all in one clock. HF32 widens the scheme to 32 bits and adds a third stack for floats, with its own fields in the ALU instruction.

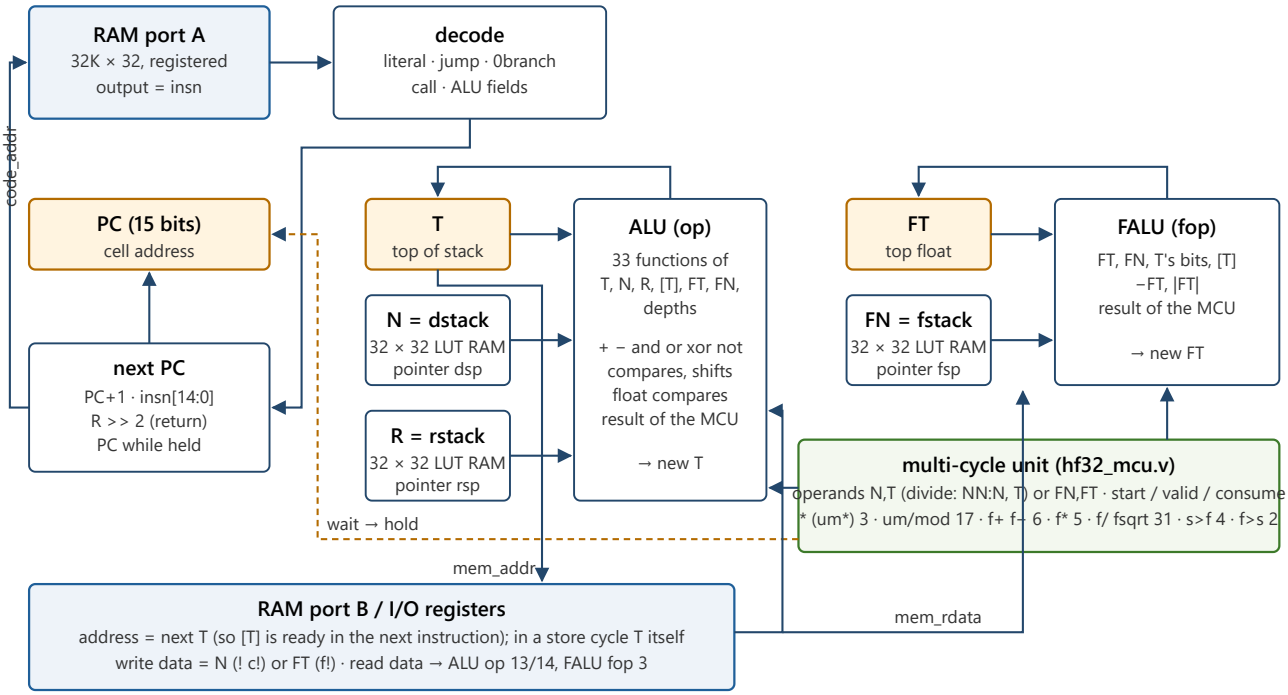



## 3.1 Machine model

- **Cells** are 32 bits. Addresses are byte addresses; a cell must be 4-aligned and is stored little-endian.
- **Instructions** are 32 bits, one per cell. The program counter is a 15-bit *cell* address (32K cells = 128 KB).
- **Data stack:** the top item T is a register; the items below it (N is the top one) are a 32-entry register file addressed by the pointer `dsp`.
- **Return stack:** a 32-entry register file addressed by `rsp`; R is its top entry. It holds return addresses as **byte** addresses (the PC is the byte address divided by 4) and the loop index and limit of `do … loop`.
- **Float stack:** the top float FT is a register; FN is the top of a 32-entry register file addressed by `fsp`. Floats are IEEE single bit patterns.
- **Memory:** 128 KB of RAM from address 0, I/O registers from `$100000` (chapter 5).
- **Speed:** one instruction per 50 MHz clock (20 ns), except the multiply and the floating- point operations, which stall the CPU until the multi-cycle unit is done (chapter 4).

The stacks live inside the CPU, not in RAM: there is no stack pointer register a program could read as an address, and the stacks wrap around silently after 32 entries. The kernel checks the depths after every word it interprets (section 7.6).

## 3.2 Instruction formats

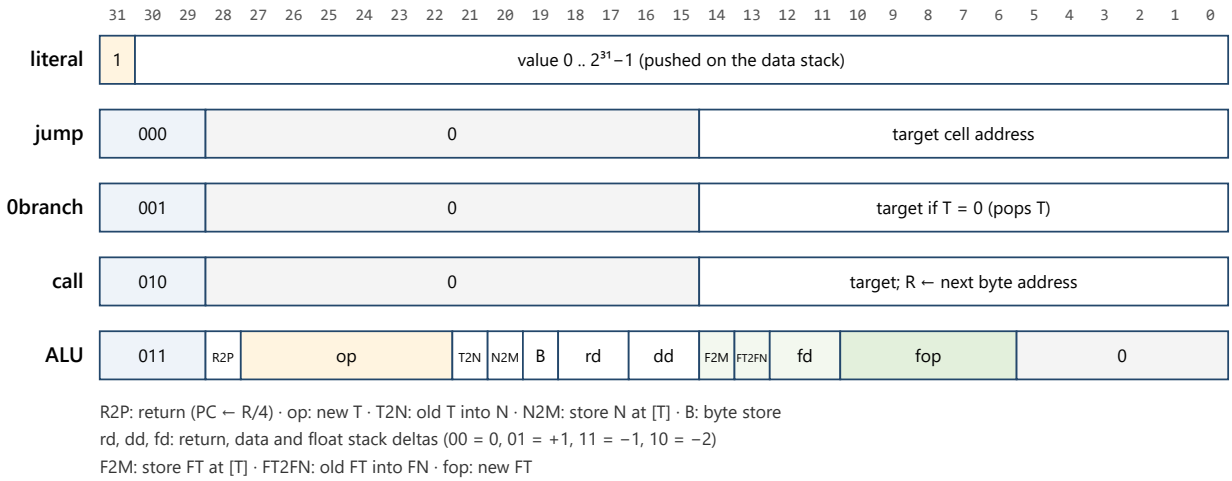


R2P: return (PC ← R/4) · op: new T · T2N: old T into N · N2M: store N at [T] · B: byte store
rd, dd, fd: return, data and float stack deltas (00 = 0, 01 = +1, 11 = −1, 10 = −2)
F2M: store FT at [T] · FT2FN: old FT into FN · fop: new FT

| Bits 31..29 | Instruction | Effect |
|---|---|---|
| `1xx` | literal | push `insn[30:0]` (0 to 2,147,483,647) |
| `000` | jump | PC ← `insn[14:0]` |
| `001` | 0branch | pop T; if it was 0, PC ← `insn[14:0]` |
| `010` | call | push the byte address of the next instruction on the return stack; PC ← `insn[14:0]` |
| `011` | ALU | the fields below, all in one clock |

A negative literal does not fit 31 bits; the compilers emit the inverted value followed by `invert` (two instructions). Jump, 0branch and call reach any cell of the 128 KB RAM.

ALU instruction fields:

| Bits | Field | Effect |
|---|---|---|
| 28 | R2P | return: PC ← R >> 2 (combined with rd = −1 to pop the address) |
| 27..22 | op | the new T (table in 3.3) |
| 21 | T2N | write the old T into N (`swap`; implied by a data push) |
| 20 | N2M | store N at address T (RAM or I/O) |
| 19 | BYTE | the store writes one byte (`c!`) |
| 18..17 | rd | return stack delta: 00 = 0, 01 = +1 (pushes T), 11 = −1, 10 = −2 |
| 16..15 | dd | data stack delta, coded like rd (+1 pushes the old T into N) |
| 14 | F2M | store FT at address T (`f!`) |
| 13 | FT2FN | write the old FT into FN (`fswap`; implied by a float push) |
| 12..11 | fd | float stack delta, coded like rd |
| 10..6 | fop | the new FT (table in 3.3) |
| 5..0 | – | 0 |

## 3.3 ALU and FALU functions

New T (`op`):

| op | new T | op | new T |
|---|---|---|---|
| 0 | T | 17 | T + 1 |
| 1 | N | 18 | T − 1 |
| 2 | N + T | 19 | T = 0 (−1 or 0) |
| 3 | N and T | 20 | T < 0 (−1 or 0) |
| 4 | N or T | 21 | N × T, low cell (multi-cycle) |
| 5 | N xor T | 22 | T >> 1, arithmetic |
| 6 | not T | 23 | −T |
| 7 | N = T (−1 or 0) | 24 | N × T unsigned, high cell (multi-cycle, for `um*`) |
| 8 | N < T, signed | 25 | N >> T, arithmetic |
| 9 | N < T, unsigned | 26 | FT's bits |
| 10 | N >> T, logical | 27 | FN < FT (−1 or 0) |
| 11 | N << T | 28 | FN = FT (−1 or 0) |
| 12 | R | 29 | FT < 0 (−1 or 0) |
| 13 | the cell at [T] | 30 | FT = 0 (−1 or 0) |
| 14 | the byte at [T] | 31 | FT to integer, toward zero (multi-cycle) |
| 15 | data stack depth | 32 | float stack depth |
| 16 | N − T | 33 | NN:N ÷ T unsigned, quotient (multi-cycle) |
| | | 34 | the remainder of the last divide |

New FT (`fop`):

| fop | new FT | fop | new FT |
|---|---|---|---|
| 0 | FT | 7 | FN / FT (multi-cycle) |
| 1 | FN | 8 | √FT (multi-cycle) |
| 2 | T's bits | 9 | T converted to float (multi-cycle) |
| 3 | the cell at [T] | 10 | −FT |
| 4 | FN + FT (multi-cycle) | 11 | \|FT\| |
| 5 | FN − FT (multi-cycle) | 12 | FT truncated toward zero (multi-cycle) |
| 6 | FN × FT (multi-cycle) | | |

Details of the single-cycle functions:

- **Shifts** by 32 or more give 0 (logical) or 32 copies of the sign bit (arithmetic); the hardware tests `T[31:5] ≠ 0` and uses `T[4:0]` as the shift count otherwise.
- **Byte loads** pick one of the four bytes of the cell at [T] with `T[1:0]` (little-endian).

- **Float compares** run in the ALU in one clock, without the FPU: an exponent field of 0 (zero or subnormal) compares as +0, a NaN makes every compare false, and otherwise the sign and the 31-bit magnitude decide. `fnegate` and `fabs` flip or clear the sign bit.
- **Depths** are the 5-bit stack pointers; with a wrapped pointer they are wrong by 32, which the kernel uses to detect underflow.

## 3.4 Primitives

Every Forth primitive is one ALU instruction (two for the stores and two compares). The encodings, as `tools/hf32.py` defines them:

| Word | Encoding | Fields |
|---|---|---|
| `dup` | `60008000` | T ← T, dd +1 |
| `drop` | `60418000` | T ← N, dd −1 |
| `swap` | `60600000` | T ← N, T2N |
| `over` | `60408000` | T ← N, dd +1 |
| `nip` | `60018000` | T ← T, dd −1 |
| `>r` | `60438000` | T ← N, rd +1 (pushes T), dd −1 |
| `r>` | `63068000` | T ← R, rd −1, dd +1 |
| `r@` | `63008000` | T ← R, dd +1 |
| `+` | `60818000` | T ← N + T, dd −1 |
| `*` | `65418000` | T ← N × T (multi-cycle), dd −1 |
| `(um/mod)` | `68410000` | T ← NN:N ÷ T, quotient (multi-cycle), dd −2 |
| `(urem)` | `68808000` | T ← the divider's remainder, dd +1 |
| `@` | `63400000` | T ← [T] |
| `c@` | `63800000` | T ← byte [T] |
| `!` | `60518000 60418000` | store N at [T], T ← N, dd −1; then `drop` |
| `c!` | `60598000 60418000` | the same with BYTE |
| `exit` | `70060000` | R2P, rd −1 |
| `fdup` | `60000800` | fd +1 |
| `fdrop` | `60001840` | FT ← FN, fd −1 |
| `fswap` | `60002040` | FT ← FN, FT2FN |
| `f+` | `60001900` | FT ← FN + FT (multi-cycle), fd −1 |
| `f*` | `60001980` | FT ← FN × FT (multi-cycle), fd −1 |
| `fsqrt` | `60000200` | FT ← √FT (multi-cycle) |
| `s>f` | `60418A40` | T ← N, dd −1, FT ← float(T), fd +1 |
| `f>s` | `67C09840` | T ← int(FT), dd +1, FT ← FN, fd −1 |
| `bits>f` | `60418880` | T ← N, dd −1, FT ← T, fd +1 |

| Word | Encoding | Fields |
|---|---|---|
| `f@` | `604188C0` | T ← N, dd −1, FT ← [T], fd +1 |
| `f!` | `6041D840 60000000` | store FT at [T], T ← N, dd −1, FT ← FN, fd −1; then a no-op |
| `f<` | `66C09840 60001840` | T ← FN < FT, dd +1, FT ← FN, fd −1; then `fdrop` |

The instructions that move values between the stacks show what one ALU instruction can do: `s>f` pops the data stack, converts the old T and pushes the result on the float stack, all in one instruction (which waits 4 clocks for the conversion). Because a data push writes the old T into N and a pop takes N into T, the "new T" of a pop is N and the value consumed is the old T.

## 3.5 Memory ports and timing

HF32 sits between the two ports of a synchronous dual-port RAM whose outputs are registered (the block RAM's read data appears one clock after the address). Two tricks give it single-cycle instructions with such a RAM:

- **Code port.** `code_addr` is the *next* PC, computed combinationally from the current instruction (PC + 1, a jump or call target, a taken 0branch, or R >> 2 on a return). The RAM registers it at the clock edge, and the instruction at the new PC is on `insn` during the next cycle. So there is no fetch stage: a jump, call or return costs nothing.
- **Data port.** `mem_addr` is the *next* T. Whatever T becomes at the end of this instruction, the RAM is reading the cell at that address meanwhile, so in the next instruction `mem_rdata` already holds [T]. That is why `@` (op 13: T ← [T]) takes one clock: the load was started speculatively by the instruction before it.

**The store hazard.** A store needs the data port to address the *current* T, so in a store cycle `mem_addr` is T instead of the next T. The instruction after a store therefore finds the stored address' data on `mem_rdata`, not [T]. The rule, kept by both compilers: the instruction directly after a store does not read memory (op 13/14, fop 3). `!` and `c!` end with a plain `drop`, `f!` with a no-op. The cost is one instruction per store, and nothing to schedule anywhere else.

**I/O reads with side effects.** Because loads are started speculatively, the I/O decoder may "read" a register just because T happens to hold its address. Reads are therefore free of side effects, with two exceptions that pop a FIFO: the terminal's RX data register (`$100000`) and the UARTs' data registers. Those pop only when the instruction actually consumes [T]: the CPU's `mem_rd` output is set by an ALU instruction with op 13 or 14 or fop 3, and the pop is qualified with the address in T (`mem_rd && T = $100000`).

**Returns** use byte addresses, so `>r` and `r>` can move return addresses as ordinary numbers: `execute` is `>r exit` (push the execution token on the return stack and return into it), and `(.")` reads the inline string after its call by taking its own return address, skipping the string and pushing the address back.

## 3.6 Stalls

The CPU has one freeze mechanism, `hold`, for two causes:

- **The multi-cycle unit is busy** (`u_wait`): the current instruction needs the multiplier or the FPU and the result is not valid yet.
- **The ARM pauses the CPU** or **the I/O bus is not ready** (`stall` from `forth_system`): CTRL bit 1 and one cycle after it, and `io_wait` while an I/O request waits and in the clock after an I/O read is served (section 5.2).

While held, no register changes, no stack is written, no store happens and no FIFO is popped. The code port re-reads the current instruction (`code_addr` = PC) and the data port re-reads the current T (`mem_addr` = T), so that one clock after the hold ends, both RAM outputs are valid again: this is why the system keeps the stall one cycle longer than the ARM's pause bit (section 6.3). The program cannot observe a hold, except through the timers.

## 3.7 Next-state logic

For each instruction class the next state is (from `hf32_cpu.v`):

| Class | T | Data stack | Return stack | PC |
|---|---|---|---|---|
| literal | value | push old T | – | PC + 1 |
| jump | – | – | – | target |
| 0branch | N | pop | – | target if T = 0, else PC + 1 |
| call | – | – | push (PC + 1) × 4 | target |
| ALU | `op` result | `dsp += dd`; write old T if T2N or dd = +1 | `rsp += rd`; write T if rd = +1 | R >> 2 if R2P, else PC + 1 |

and for ALU instructions also FT ← `fop` result, `fsp += fd`, write old FT if FT2FN or fd = +1. The stack register files are written at the *new* pointer: a push increments the pointer and writes the old top there in the same clock.

# 4 The multi-cycle unit and the FPU

`rtl/hf32_mcu.v` holds everything that takes more than one clock: the 32 × 32 multiplier and the floating-point unit. It is a single state machine with one operation in flight.

## 4.1 Interface to the CPU

The CPU decodes the instruction combinationally and, if `op` or `fop` names a multi-cycle operation, raises `u_need` with a 4-bit operation code and two operands (N and T for the multiplies, FN and FT for the binary float operations, FT or T for the unary ones). The handshake:

1. `start` (`u_need`, unit idle, no result waiting, not stalled): the unit latches the operation and the operands.
2. While the unit works, `u_wait` holds the CPU; the instruction stays on `insn`.
3. When the result is valid, the hold ends and the instruction commits: the ALU or FALU takes `u_result` as the new T or FT, and the stacks move as the instruction says. `consume` returns the unit to idle in the same clock.

If the ARM pauses the CPU while an operation runs, the operation finishes and its result waits in the `DONE` state until the CPU continues.

| Operation | Code | Operands | Clocks (decode included) |
|---|---|---|---|
| N × T, low cell (`*`) | 0 | N, T | 3 |
| N × T unsigned, high cell (`(um*)`) | 1 | N, T | 3 |
| FN + FT, FN − FT | 2, 3 | FN, FT | 6 |
| FN × FT | 4 | FN, FT | 5 |
| FN / FT | 5 | FN, FT | 31 |
| √FT | 6 | FT | 31 |
| T to float (`s>f`) | 7 | T | 4 |
| FT to integer (`f>s`) | 8 | FT | 2 |
| FT truncated (`ftrunc`) | 9 | FT | 2 |
| NN:N ÷ T unsigned (`(um/mod)`) | 10 | NN, N, and T as the third operand | 17 |

The divide is the only operation with three operands: the CPU reads NN through a second read port of the data stack, and passes T as the divisor. It is a restoring long division, two quotient bits per clock: the 32-bit partial remainder (starting as N) is shifted left by one with the next bit of NN, compared as 33 bits with the divisor, reduced if it is not smaller, and the quotient bit enters NN from the right. After 16 clocks NN holds the quotient, which becomes the result, and the remainder goes into a register of the unit (`div_rem`), which `(urem)`, a single-cycle instruction, reads. The register keeps the last remainder until the next divide, so `(um/mod) (urem)` belong together and nothing may divide between them.

The algorithm is the former Forth `um/mod` loop of firmware 3.x, so the results are the same bit for bit also where the quotient does not fit in 32 bits (its low 32 bits come out) and for a zero divisor (quotient all ones, remainder NN).

Operations whose result is decided by a special operand (a NaN, an infinity, a zero) finish in the unpack state, in 2 clocks.

## 4.2 Number format and semantics

IEEE 754 binary32: sign, 8-bit biased exponent, 23-bit fraction with a hidden leading one. The unit implements these semantics, which the kernel and the model share:

- **Rounding:** round to nearest, ties to even, for every operation.
- **Subnormals** are not supported: an input with exponent field 0 counts as zero (with its sign), and a result whose magnitude after rounding is below $2^{-126}$ becomes ±0 (flush to zero). This keeps the normalizer simple and costs nothing in practice for a laboratory Forth.
- **Overflow** gives ±∞.
- **NaN:** every NaN result is the quiet NaN `0x7FC00000`. 0/0, ∞ − ∞, 0 × ∞ and √(negative) produce it; any NaN operand propagates it.
- **Signed zeros:** x/0 is ±∞ with the XOR of the signs, −0 + −0 = −0, x − x = +0, √−0 = −0.
- **Conversions:** `f>s` truncates toward zero and saturates at −2,147,483,648 and 2,147,483,647; NaN gives 0. `s>f` rounds to nearest even (integers above $2^{24}$ do not all fit).

## 4.3 The datapath

Inside the unit, a finite value being worked on is `m × 2^(e − 127) / 2^48`: `m` is a 50-bit significand whose leading one belongs at bit 48, bit 49 catches a carry, and bit 0 is a **sticky** bit that collects the OR of all bits shifted out to the right. With the leading one at bit 48, bits 48..25 are the 24 bits of the result, bit 24 is the round bit and bits 23..0 (with the sticky bit) decide whether anything lies beyond it.

The states:

| State | Clocks | What it does |
|---|---|---|
| IDLE | – | waits for `start`; latches operation and operands |
| MUL, MULOUT | 2 | `prod ← a × b` (64 bits, DSP48 cascade), then the low or high cell |
| UNPACK | 1 | classifies the operands (zero/subnormal, infinity, NaN), resolves special cases, sets up the working registers |
| ALIGN | 1 | addition: shifts the smaller operand right by the exponent difference, ORing the bits shifted out into bit 0 (a difference of 50 or more leaves only the sticky bit) |
| ADD | 1 | adds or subtracts the aligned significands (effective subtraction when the signs differ) |
| FMUL | 1 | `m ← ma × mb` (24 × 24 = 48 bits), placed at bits 49..2 |
| DIV | 27 | restoring division, one quotient bit per clock |
| SQRT | 27 | restoring square root, one root bit per clock |
| NORM | 1 | a zero result (x − x) gives +0; a carry into bit 49 shifts right by one (keeping the sticky bit); otherwise a leading-zero count over bits 48..0 and one left shift |
| ROUND | 1 | rounds to nearest even, detects overflow and underflow, packs the result |
| DONE | – | the result waits for `consume` |

**Addition** puts the larger magnitude first (comparing the 31-bit magnitudes, which order correctly as integers), so the result takes its exponent and, for an effective subtraction, its sign. The aligned difference can cancel any number of leading bits, which the single normalization shift handles.

**Multiplication** adds the exponents (minus the bias) and multiplies the 24-bit significands with the hidden ones. The product of two values in [1, 2) is in [1, 4), so the leading one is at bit 47 or 46 of the product; placed at bits 49..2 of `m`, the normalizer sees it at bit 49 or 48 and needs at most a one-bit right shift.

**Division** subtracts the exponents and runs 27 steps of restoring division on the significands: the partial remainder starts as the dividend's significand; at each step, if it is at least the divisor, the divisor is subtracted and a 1 enters the quotient, and the remainder doubles. After 27 bits the quotient holds the 24 result bits, the round bit and two more; the sticky bit is "the remainder is not zero". Because the dividend's significand may be smaller than the divisor's, the first quotient bit can be 0, which the normalizer fixes.

**Square root** halves the exponent: with the unbiased exponent made even (the significand shifted one bit left if it is odd), √(X × 2^2k) = √X × 2^k. The radicand (the significand followed by 28 zero bits) is consumed two bits per step; each step compares the remainder, extended by the next two radicand bits, with the trial value `(q << 2) | 1` and, if it is not smaller, subtracts it and appends a 1 to the root `q`. 27 steps give 27 root bits and the final remainder's non-zero test is the sticky bit. The result is exact or correctly rounded, as IEEE requires.

**Rounding** adds one to bits 48..25 when the round bit is set and either the sticky bits (23..0) are not all zero or the result's lowest bit (25) is set: round half to even. A carry out of the 24 bits (1.111…1 rounding up to 10.000…0) increments the exponent and leaves a zero fraction. A biased exponent of 255 or more gives ±∞; 0 or less gives ±0.

**Conversions** bypass most of the datapath. `s>f` loads `|T| << 17` into `m` with the exponent of $2^{31}$ (158) and lets NORM and ROUND do the rest. `f>s` shifts the 24-bit significand by the exponent directly in UNPACK (for 127 ≤ e < 158; smaller magnitudes give 0, larger ones saturate). `ftrunc` clears the fraction bits below the binary point with a mask (for 128 ≤ e < 150; |x| < 1 gives ±0, e ≥ 150 is already integral).

## 4.4 Verification of the FPU


`tools/hf32.py` contains a Python model of the unit (`f_add`, `f_mul`, `f_div`, `f_sqrt`, `i_to_f`, `f_to_i`, `f_trunc`, `f_cmp`) that follows the same algorithms step by step: the same 50-bit significand, the same alignment with sticky bit, the same restoring loops. The instruction-set simulator uses it, so programs give the same bits in the simulator and on the board.

- `tools/test_fpu.py` checks the model against IEEE results computed with Python's doubles rounded to single precision, with this machine's rules applied (flush to zero, one NaN). For +, −, ×, / and √ a double has more than twice the precision of a single, so rounding the double result once more gives the correctly rounded single result. The script checks special values and boundaries and, by default, 200,000 random operand pairs.
- The same script writes test vectors; `sim/tb_mcu.v` (run with `sim/run_mcu.ps1`) feeds them to the RTL, compares every result bit for bit and reports the most cycles each operation took.

So the chain is: IEEE (through Python) → model → RTL, and the simulator that runs the kernel uses the model.

# 5 Memory and I/O

`rtl/forth_system.v` instantiates two cores (`rtl/hf32_node.v`: an HF32 with its RAM and its terminal FIFOs) and everything they share. All of it runs on the 50 MHz clock except the 200 MHz halves of the pattern generator and the DDS.

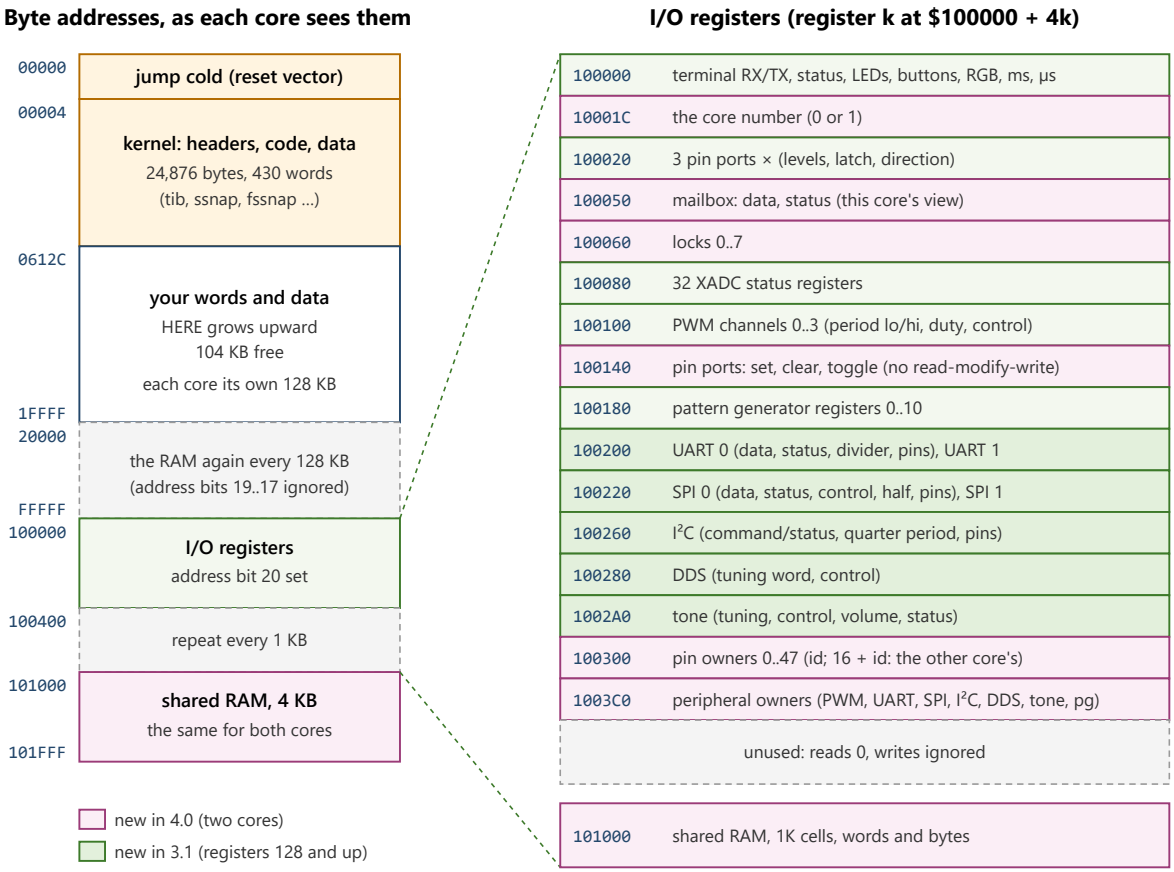


## 5.1 RAM

Each core has its own RAM of 32K × 32 bits (128 KB), inferred as true dual-port block RAM: 32 RAMB36 tiles per core. Neither core can reach the other's RAM, so neither ever waits for the other's memory accesses.

- **Port A** fetches instructions: address `code_addr`, registered output `insn`.
- **Port B** is the CPU's data port. While the CPU is held in reset (loading) or paused, it is given to the ARM: address `MEM_ADDR`, write data `MEM_DATA` (section 6.1).
- **Byte writes** use the block RAM's byte-write enables: for `c!` the byte is replicated into all four lanes and only lane `addr[1:0]` is enabled.
- **Decoding:** address bit 20 selects I/O. Below it, only bits 16..2 address the RAM, so the RAM repeats every 128 KB up to `$FFFFF`.

Code and data share the RAM. That is what allows the Forth compiler, running on HF32, to write new code with ordinary stores and then call it.

## 5.2 The I/O read path

I/O register *k* sits at `$100000 + 4k`; address bits 9..2 select one of 256 registers, so the map repeats every 1 KB. Registers 0..127 are the board I/O of the 16-bit design; registers 128 and up (`$100200`...) are the 3.1 peripherals.

**The I/O bus and its register stage.** Both cores reach the I/O through one bus, and it is one clock behind the cores. A core makes a request whenever its data address (the next T, or T in a store) is in the I/O space: address, store flag and data go into its request register (`rv`, `ra`, `rwe`, `rwd`). In the next clock the bus serves one request (the arbiter's `owner`): the decoder works from that register, a store lands in the addressed block, and a read's result is registered (`io_rdata`) and reaches the core one clock later. The data port's read data is `io_sel ? io_rdata : ram_doutb`, where `io_sel` remembers that the core's address was I/O. Unused registers read 0 and ignore writes.

So an I/O read cannot come one clock after its address, as a RAM read does. The core is stalled (`io_wait`, section 3.6) while its request waits to be served, and in the clock after a read is served, in which it repeats the same request; the served read sets `dn`, so that repetition is not served again. A store does not wait unless the other core's request is served first. Every I/O access therefore costs one clock more than a RAM access, also the reads the CPU makes ahead of an instruction that then does not use them. When both cores wait, they take turns (`pr1` passes to the one that waited), so neither waits more than one extra clock for the other. All stalls come from registers, so the CPU's hold never loops back into the bus, and the decode has the whole clock: the cores' next-T logic ends at the request registers.

Registers `$100000` and `$100004` (the terminal), `$10001C` (the core number) and the mailbox and lock registers answer for the core on the bus; all other registers are shared. A read that removes what it reads (a terminal, mailbox or UART byte) happens when the instruction consumes the value, and belongs to that instruction's core.

**Working together.** Three things on the bus exist only for the two cores:

- **Mailboxes:** a 32-word FIFO in each direction. A core writes `$100050` to send a word to the other core, and reads `$100050` to take the oldest word sent to it; `$100054` says whether a word is waiting (bit 0) and whether there is room to send (bit 1). A word sent into a full mailbox is lost, and a read of an empty one gives 0 and takes nothing, so programs check the status first (as with the terminal). A core's reset clears the mailbox it reads from.
- **Locks:** 8 at `$100060 + 4n`. Writing 1 takes the lock if it is free, writing 0 releases it (only the core that holds it can); reading gives 0 (free), 1 (held by the reading core) or 2 (held by the other). Taking a lock is therefore a store followed by a check: `begin 1 over ! dup @ 1 = until`. A read alone never takes one, because the CPU reads the next T ahead whether or not an instruction will use it. A core's reset releases its locks.
- **Shared RAM:** 4 KB (one block RAM) at `$101000..$101FFF`, words and bytes, with the data one clock after the address like the cores' own RAM. It is the only memory both cores can reach; what it holds is up to the programs, guarded by the locks where it matters.

## 5.3 I/O map

| Address | Read | Write |
|---|---|---|
| `$100000` | next received byte (pops the RX FIFO) | send a byte (pushes the TX FIFO) |
| `$100004` | bit 0 = a received byte is waiting, bit 1 = the TX FIFO has room | – |
| `$100008` | LD0..LD3 | LD0..LD3 |

| Address | Read | Write |
|---|---|---|
| `$10000C` | bits 3..0 = BTN3..BTN0 (debounced), bits 5..4 = SW1..SW0 | – |
| `$100010` | RGB LEDs: bits 2..0 = LD4 B, G, R; bits 5..3 = LD5 B, G, R | the same |
| `$100014` | millisecond counter (32 bits, free running) | – |
| `$100018` | microsecond counter (32 bits, free running) | – |
| `$10001C` | the core number: 0 or 1 (0 on the single-core 3.x) | – |
| `$100050` | the oldest word sent to this core (taken by the read; 0 if none) | send a word to the other core (lost if its mailbox is full) |
| `$100054` | bit 0 = a word is waiting, bit 1 = room to send | – |
| `$100058` | LD0..LD3 (as `$100008`) | LED change, in one clock: bits 3..0 switch LEDs on, bits 7..4 off, bits 11..8 toggle them (no read-modify-write, so both cores' changes are kept) |
| `$100060 + 4n` | lock n (0..7): 0 free, 1 held by this core, 2 by the other | 1 = take it if free, 0 = release it (holder only) |
| `$101000..$101FFF` | shared RAM, 4 KB, words and bytes | the same |
| `$100140 + 16p` | – | port p: +0 set latch bits, +4 clear latch bits, +8 set direction bits, +12 clear direction bits (no read-modify-write) |
| `$100170 + 4p` | – | port p: toggle latch bits |
| `$100300 + 4n` | pin n's owner: 0 free, 1..15 this core's (the id), 16 + id the other core's | an id 1..15 takes the pin if it is free or this core's; 0 releases this core's pin |
| `$1003C0 + 4u` | peripheral u's owner (1..4 PWM 0..3, 5/6 UART, 7/8 SPI, 9 I²C, 10 DDS, 11 tone, 12 pattern generator): 0 free, 1 this core's, 2 the other's | 1 takes it if free, 0 releases it (holder only) |
| `$100020 + 16p` | port p (0..2): pin levels, synchronized; pin n = bit n mod 16 of port n / 16 | – |
| `$100024 + 16p` | port p: output latch | the same |
| `$100028 + 16p` | port p: direction, 1 = output (all 0 after reset) | the same |
| `$100080 + 4r` | XADC status register r (0..31), result in bits 15..4 | – |
| `$100100 + 16c` | PWM channel c (0..3): period, low 16 bits | the same (held until the high half is written) |
| `$100104 + 16c` | PWM channel c: period, high 16 bits (clocks per cycle, at least 2) | the same (takes both halves) |
| `$100108 + 16c` | PWM channel c: duty in 1/65536 of the period, `$FFFF` = always high | the same |
| `$10010C + 16c` | PWM channel c: bit 15 on, bits 5..0 the pin | the same |
| `$100180 + 4r` | pattern generator registers 0..10, see PatternGenerator.md | |

| Address | Read | Write |
|---|---|---|
| `$100200 + 16u` | UART u (0, 1): +0 data (read pops a received byte, bit 8 = one was there; write sends), +4 status (bit 0 received, 1 room to send, 2 idle, 3 lost byte, 4 framing error; a write clears 3 and 4), +8 clocks per bit, +12 bit 15 on, bits 13..8 RX pin, bits 5..0 TX pin | |
| `$100220 + 32s` | SPI master s (0, 1): +0 data (a write starts a transfer, a read gives the last answer), +4 bit 0 busy, +8 control (bit 0 CPHA, 1 CPOL, 2 LSB first, bits 5..4 width 8/16/32), +12 clocks per half SCK period (at least 2), +16 bit 31 on, bits 21..16 MISO, 13..8 MOSI, 5..0 SCK pin | |
| `$100260` | $I^2C$ master: +0 command (write: bits 10..8 = 1 start, 2 stop, 3 write byte, 4 read + ACK, 5 read + NACK, bits 7..0 the byte; read: bit 31 busy, 9 timeout, 8 ACK received, 7..0 the byte read), +4 clocks per quarter SCL period, +8 bit 15 on, bits 13..8 SDA, 5..0 SCL pin | |
| `$100280` | DDS: +0 phase step per 200 MHz tick, +4 bit 0 on, bits 13..8 the pin (read: bit 31 = not yet taken over) | |
| `$1002A0` | tone generator: +0 phase step per 50 MHz clock, +4 bit 0 on, bits 2..1 waveform (sine, square, triangle, sawtooth), +8 volume 0..65535, +12 bit 0 sounding, bits 31..16 the current volume | |

The PWM and pattern generator modules are those of the 16-bit design; each of their 16-bit registers is one cell here (its low half).

## 5.4 Terminal FIFOs

Each core has two 32-byte first-word-fall-through FIFOs (`rtl/fifo.v`) to the ARM: RX (ARM to core) and TX (core to ARM). The core's side is the I/O register pair `$100000`/`$100004`; the ARM side is that core's `RX_PUSH`, `TX_POP` and `STATUS` on the AXI bus (section 6.1). The FIFOs are cleared with their core's reset. The 32 bytes only smooth out the AXI traffic: the real buffering is in the ARM's 64 KB input ring and 4 KB output ring.

## 5.5 LEDs, buttons, switches and timers

- **LEDs:** two output registers, LD0..LD3 and the RGB LEDs LD4/LD5 (on/off per colour).
- **Buttons and switches** pass a two-flop synchronizer and are then sampled every 10 ms (debouncing by sampling: a bounce shorter than 10 ms cannot produce two edges).
- **Timers:** a millisecond counter and a microsecond counter, 32 bits each, free running from the PL reset (dividers 50,000 and 50 of the 50 MHz clock). `ms@` and `us@` read them; `ms` waits by comparing differences, so it is correct across the wrap-around (49.7 days for the millisecond counter, 71.6 minutes for the microsecond counter).


## 5.6 Shield pins

The shield's digital pins form three 16-bit ports, `pin_out` (latch), `pin_dir` (direction) and `pin_sync` (levels, through a two-flop synchronizer), 48 bits each. Pin numbers follow the shield labels:

| Pin numbers | Port bits | Shield | FPGA port | Pull-up |
|---|---|---|---|---|
| 0..13 | port 0 bits 0..13 | IO0..IO13 | `ck_io[13:0]` | yes (XDC) |
| 14..19 | port 0 bits 14..15, port 1 bits 0..3 | A0..A5 as digital pins | `ck_a[5:0]` | no (the analog divider node) |
| 26..41 | port 1 bits 10..15, port 2 bits 0..9 | IO26..IO41 | `ck_ioh[15:0]` | yes (XDC) |
| 42..47 | port 2 bits 10..15 | SCL, SDA; the SPI header's MISO, MOSI, SCK, SS | `ck_x[5:0]` | SCL/SDA: board resistors; header: XDC |

Pins 20..25 do not exist (`PIN_EXISTS` masks them): they read 0, ignore writes and are never driven; the Forth word `pin` refuses them. All pins are inputs after reset. A pad is driven when its direction bit says so or a peripheral owns it (next section). The FPGA's weak internal pull-ups keep unconnected inputs from floating; they are far too weak for I²C, which is why the I²C default is the shield's SCL/SDA pair with its real pull-ups on the board.

## 5.7 Pin router

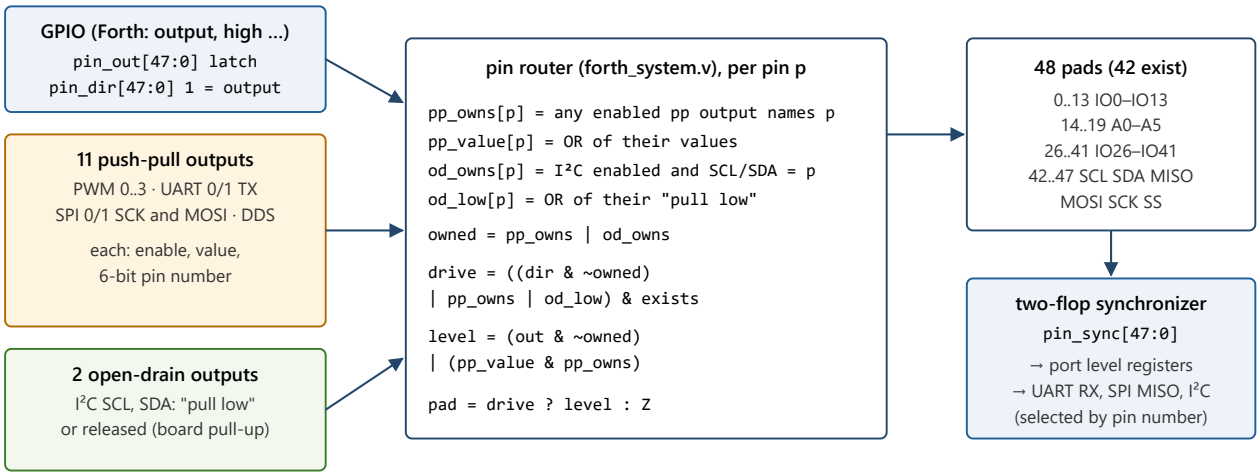


Since 3.1 every peripheral output names its pin with a 6-bit number. The router combines, for each of the 48 pin positions:

- **11 push-pull outputs:** PWM 0..3, UART 0/1 TX, SPI 0/1 SCK and MOSI, DDS. An enabled one *owns* its pin: the pad is driven, with the peripheral's level.
- **2 open-drain outputs:** I²C SCL and SDA. An enabled I²C master owns both pins; the pad is driven low when the master pulls the line low and released (high impedance, pulled up by the board) otherwise.
- **GPIO:** a pin that nobody owns follows its latch and direction.

In formulas, per pin: `drive = ((dir & ~owned) | pp_owns | od_low) & exists` and `level = (out & ~owned) | (pp_value & pp_owns)`. Several owners of one pin are ORed (the hardware does not arbitrate); the Forth words prevent that by keeping an ownership table and refusing a pin that is taken (section 7.12).

**Inputs** need no ownership: UART RX, SPI MISO and I²C SCL/SDA read `pin_sync[n]` for the pin number in their register, through the same synchronizer the ports use. The I²C master reads its own two lines back this way, to see a slave stretch the clock and to read ACK and data bits. A peripheral can also listen on a pin that something else drives, which the testbenches use for loopbacks.

**The board view.** The ARM can read the routing through the AXI register `FUNC` (0x38): a write selects one of 14 entries (UART0 TX/RX, UART1 TX/RX, SPI0 SCK/MOSI/MISO, SPI1 SCK/MOSI/MISO, I²C SCL/SDA, DDS, tone), a read returns bit 15 = enabled and bits 5..0 = the pin (63 for the tone: the audio jack). PWM pins come from the `PWM` register as before.

## 5.8 PWM

`rtl/pwm.v`, four channels. Each counts 50 MHz clocks from 0 to period − 1 and drives its output high for the first ⌊period × duty / 65536⌋ clocks of each cycle; the 32 × 16 product is pipelined in two stages on a DSP48 per channel. The period is 32 bits, written in two halves (the low half is held until the high half arrives, so a period never changes halfway). New period and duty values are taken at the end of the running cycle, so no pulse is ever cut short; enabling a channel starts a fresh cycle; duty `$FFFF` means always high. Frequency range: 25 MHz (period 2) down to 0.0116 Hz (period $2^{32} - 1$).

## 5.9 UART

`rtl/uart.v`, two instances. 8 data bits, no parity, one stop bit; the divider register holds clocks per bit (at least 8; 434 gives 115,207 Bd from 50 MHz, the reset value). Both directions have 64-byte FIFOs, so Forth can send a line without waiting and receive bursts while busy.

- **Transmitter:** takes a byte from the TX FIFO when idle, shifts out start bit, 8 data bits LSB first and the stop bit, each lasting one divider period.
- **Receiver:** a falling edge on the synchronized RX pin starts a byte; the counter is set to half a bit, so every bit is sampled in its middle. A start bit that is high again in its middle was a glitch and is ignored. A low stop bit sets the framing-error flag; a byte that arrives while the RX FIFO is full is dropped and sets the overrun flag. Writing the status register clears both flags.
- **Disabling** a UART (pins register bit 15 = 0) clears its FIFOs and resets both state machines, so a re-opened UART starts clean.

## 5.10 SPI

`rtl/spi.v`, two instances, master only. SCK = 50 MHz / (2 × half), half at least 2 (12.5 MHz maximum, 1 MHz after reset). A transfer is 8, 16 or 32 bits, MSB or LSB first, in any of the four modes (CPOL = idle level of SCK, CPHA = which edge samples). Writing the data register starts a transfer; the status bit says busy; the data register then holds the bits received. Chip selects are ordinary GPIO pins driven by Forth, which keeps the master simple and allows any number of devices and any select protocol.

Each bit has two halves. With CPHA = 0, MOSI changes at the start of the bit and SCK makes its leading edge in the middle; with CPHA = 1, SCK's leading edge starts the bit. **MISO is sampled at the end of each bit**, immediately before the next change edge, not at the nominal sampling edge: MISO comes through the two-flop synchronizer (2 clocks of delay), and sampling at the end leaves the slave 2 × half − 2 clocks (at least 2 clocks, 40 ns at 12.5 MHz) after its change edge. In every mode that point is after the slave has set the bit and before it changes it again, so the result is the same as sampling at the nominal edge.

## 5.11 I²C

`rtl/i2c.v`, one master. It executes one command at a time: start (also a repeated start), stop, write a byte (and read the slave's ACK), read a byte (and send ACK or NACK). The CPU writes a command and polls the busy bit; the status register then shows the ACK received or the byte read. Higher-level protocol (addresses, register access, scanning) is Forth (section 7.12).

Timing is in quarter periods of SCL (`quarter` clocks each, 125 = 100 kHz, at least 4). A data bit takes four quarters: SDA is set while SCL is low, SCL is released, the bit is sampled a quarter after SCL was *seen* high, and SCL is pulled low again. Waiting for SCL to read high implements **clock stretching**: a slave that holds SCL low simply delays the master. If SCL stays low for $2^{20}$ clocks (21 ms), the command ends with the timeout bit set and both lines released, so a stuck bus cannot hang Forth. After a byte the master keeps SDA low, ready for a stop condition.

## 5.12 DDS

`rtl/dds.v`: a 32-bit phase accumulator on the 200 MHz clock whose top bit is a square wave on any pin: f = tuning × 200 MHz / $2^{32}$, in steps of 0.047 Hz up to 100 MHz (a pin and its cable limit the useful range to a few tens of MHz). Edges fall on the 5 ns grid, so the period jitters by up to 5 ns unless the frequency divides 200 MHz.

The tuning word and the control register live on the CPU clock; the accumulator on the generator clock. A **toggle handshake** carries them across: the CPU side flips `req` after a write; the generator side sees the flip through a two-flop synchronizer, copies both registers (which are stable while a request is in flight) and returns the flip as `ack`. A write while a request is still in flight sets `dirty`, and the request is sent again after the acknowledgement, so the last value always arrives. The control register's read bit 31 is "busy or dirty"; `dds-sync` in Forth waits for it to clear. Turning the DDS on starts the phase at 0.

## 5.13 Tone generator

`rtl/tone.v` drives the board's audio jack. The signal chain, all on the 50 MHz clock:

1. **Phase:** a 32-bit accumulator, f = tuning × 50 MHz / $2^{32}$ (0.0116 Hz steps).
2. **Waveform** from the phase (16-bit signed sample): sine from a quarter-wave table of 256 15-bit entries (generated by `tools/make_sine.py`; the other three quarters by symmetry), square from the top bit, triangle and sawtooth from the top 16 phase bits.
3. **Volume ramp:** the gain (16.16 fixed point) moves linearly toward the target, the set volume while the tone is on, 0 when it is off, by 42,950 per clock: full scale in 2 ms. A tone therefore starts and stops without a click, and `tone-off` lets it fade out.
4. **Scaling:** sample × gain on a DSP48.
5. **Delta-sigma modulator:** first order, a 16-bit accumulator adds each offset-binary sample and its carry is the output bit, at 50 MHz on `AUD_PWM`. The board's fourth-order low-pass filter (about 17 kHz) turns the bit stream into the analog signal for the amplifier.
6. **Amplifier enable:** `AUD_SD` is on while there is sound (the tone is on or the gain is still above 0).

## 5.14 XADC

`rtl/xadc_scan.v` runs the XADC primitive in continuous sequence mode (ADCCLK = 12.5 MHz, 16-sample averaging, unipolar inputs, extended settling time on the auxiliary channels). A scanner reads the status registers 0x00..0x1F over the DRP port one after another into a 32 × 16 register file, so a CPU read never waits: it gets the newest result of any channel. A second read port serves the ARM's board view. The first DRP read is held back 4,096 clocks after configuration, because a request during the XADC's own reset is never answered.

| Forth channel | Shield | XADC input | Status register | Volts at the XADC |
|---|---|---|---|---|
| 0..5 | A0..A5 | VAUX 1, 9, 6, 15, 5, 13 | 0x11, 0x19, 0x16, 0x1F, 0x15, 0x1D | shield voltage / 3.32 (2.32 k / 1 k divider) |
| 6 | A6 (+), A7 (−) | VAUX 12 | 0x1C | A6 − A7, 0..1 V |
| 7 | A8 (+), A9 (−) | VAUX 0 | 0x10 | A8 − A9, 0..1 V |
| 8 | A10 (+), A11 (−) | VAUX 8 | 0x18 | A10 − A11, 0..1 V |

The on-chip sensors are in the sequence too: 0x00 temperature (°C = code × 503.975 / 4096 − 273.15), 0x01 VCCINT, 0x02 VCCAUX, 0x06 VCCBRAM, 0x0D VCCPINT, 0x0E VCCPAUX, 0x0F VCCO_DDR (volts = code × 3 / 4096). In simulation the Xilinx XADC model reads its inputs from `sim/xadc_stim.txt`; `tools/hf32.py` uses the same values.

## 5.15 Pattern generator

`rtl/patgen.v` plays 16 digital channels on the Pmod headers JA and JB in steps of 5 ns, from its own 200 MHz clock. Its full design is in PatternGenerator.md; in short:

- **Pattern memory:** 4,096 steps of 80 bits (9 block RAMs): the 16 output levels, a 32-bit duration in 5 ns ticks (5 ns to 21.4 s), an operation (step, loop, jump, wait for trigger, end), a target step and a repeat count. Loops nest four deep through a small counter stack in hardware.
- **Player and fetcher:** a fetcher reads steps ahead into a 16-step FIFO, one per clock; the player takes the next step at the last tick of the current one, so every step lasts exactly its duration and back-to-back one-tick steps play without gaps. A jump or repeat costs the fetcher one clock, which it makes up during longer steps.
- **Trigger:** a shield pin, a button or software, on a rising, falling or either edge.
- **Clock crossing:** the CPU side keeps the settings and sends them with the commands through a toggle handshake, one transfer at a time, so the generator applies them in order; a status snapshot comes back the same way. The pattern memory is written on the CPU clock and read on the generator clock, only while stopped.

## 5.16 Reset

A core's reset (`cpu_rst`: the PL reset or the ARM's hold bit for that core) returns the core to its start state: registers, stack pointers and its terminal FIFOs. The shared I/O (`per_rst`) is reset with the PL and whenever both cores are held: LEDs, pin latches and directions (all inputs), every PWM channel off, the UARTs, SPI masters, $I^2C$ master, DDS and tone generator disabled with their default settings, and the pattern generator stopped. The timers and the XADC scanner keep running. With core 1 held, as by a single-core ARM program, a restart of core 0 therefore begins on a quiet board as before.

When only one core is reset, the other keeps running, and only what the reset core held is undone (`pin_rst`, `unit_rst`): its peripherals in the owner table are reset to their start state (a PWM channel by its own reset input, `ch_rst`), and its pins become inputs with their latch 0; both are released. Pins and peripherals the core used without taking them (a `high` on a pin it never made an output, say) stay as they are.

# 6 The ARM side

The ARM program, `sw/src/main.c` with `mcnf_node.c` (MCNF framing) and `flash.c` (QSPI), is a bare-metal, polling program on Cortex-A9 core 0, built with Vitis 2023.2 against the standalone BSP. It contains the kernel image as a C array (`build/forth_image.h`, written by `tools/hf32.py`), so one boot image holds everything.

## 6.1 AXI-Lite registers (ARM side)

The registers of the 16-bit design, so the board view and the HASE board functions read the same values; only the loader and the PC field are wider, and `FUNC` is new in 3.1. The address has 7 bits: registers 0x00..0x14 belong to core 0, and the same registers at 0x40..0x54 to core 1 (CTRL1, MEM_ADDR1, MEM_DATA1, TX_POP1, RX_PUSH1, STATUS1). The board state (0x18..0x38) reads the same at both. Core 1 is held in reset after the PL reset until the ARM clears CTRL1, so an ARM program that knows only core 0 sees the single-core system.

| Offset | Register |
|---|---|
| 0x00 | CTRL: bit 0 = hold the CPU in reset (1 after the PL reset), bit 1 = pause the CPU |
| 0x04 | MEM_ADDR: RAM cell address (15 bits) for the loader and RAM reads |
| 0x08 | MEM_DATA: a write stores the cell at MEM_ADDR and increments MEM_ADDR (only while in reset); a read returns the cell at MEM_ADDR (while in reset or paused) |
| 0x0C | TX_POP: bit 8 = valid, bits 7..0 = a byte from the CPU; the read pops it |
| 0x10 | RX_PUSH: write a byte for the CPU |
| 0x14 | STATUS: bit 0 = RX FIFO full, bit 1 = TX FIFO not empty, bits 7..4 = BTN3..BTN0 and bits 9..8 = SW1..SW0 (debounced), bits 30..16 = the CPU's PC (cell address) |
| 0x18 | BOARD: bits 3..0 = LD3..LD0, bits 9..4 = RGB, bits 19..16 = BTN3..BTN0, bits 21..20 = SW1..SW0 |
| 0x1C, 0x20, 0x24 | PORT0..PORT2: bits 15..0 = pin levels, bits 31..16 = pins driven (direction, PWM or another owner) |
| 0x28 | PWM: bits 3..0 = channel enables, then the pin of channel c in bits 9 + 6c .. 4 + 6c |
| 0x2C | XADC: a write selects a status register 0..31; a read returns bits 20..16 = the selection, bits 15..0 = its value |
| 0x30 | PG_STATUS: bits 27..16 = the pattern generator's current step, bits 6..0 = its status |
| 0x34 | PG_OUT: bits 31..16 = the channel enable mask, bits 15..0 = the current output levels |
| 0x38 | FUNC: a write selects a pin-function entry 0..13; a read returns bits 19..16 = the selection, bit 15 = on, bits 5..0 = the pin |
| 0x3C | CORES: bits 7..0 = the number of cores (2; the register reads 0 on the single-core 3.x), bits 13..8 = words waiting in core 0's mailbox, bits 21..16 = in core 1's |
| 0x40..0x54 | core 1's CTRL, MEM_ADDR, MEM_DATA, TX_POP, RX_PUSH, STATUS |

The slave handles one transaction per direction at a time and always answers OKAY. Registers 0x18 to 0x38 only read state, so the app's board view never disturbs the CPU.

## 6.2 Boot and loading

The Zynq boots from QSPI flash when jumper JP4 is on QSPI (from JTAG when it is on JTAG). The boot image `BOOT.bin` (built by `sw/build_boot.ps1` with `bootgen`) holds three partitions:

1. the **FSBL** (first-stage boot loader, generated by Vitis), which initializes the PS (clocks, DDR, MIO pins) and loads the other two partitions;
2. the **bitstream** `forth.bit`, which configures the PL;
3. the **ARM program** `forth_app.elf`, which the FSBL starts.

The ARM program then:

1. reads CORES (0x3C): 2 on the dual-core logic; on a single-core bitstream (0) it runs core 0 only and never touches 0x40.., which there would reach core 0's registers;
2. waits 50 ms, so the debounced BTN3 is valid when it decides about the autostart;
3. reads each core's saved source header from flash (section 6.6);
4. `load_and_start` for each core: sets the core's CTRL = hold (the core and its FIFOs in reset), writes the kernel cells through its MEM_DATA (the address increments by itself), reads every cell back and compares, prints `[zynq-dual-forth32] 4.0, core n, kernel 6134 words loaded and verified` into that core's output (or `VERIFY FAILED`, leaving the core in reset), decides about the core's autostart and clears CTRL: the core starts at address 0, which holds a jump to `cold`. Both cores get the same image; `$10001C` tells each one which it is.

A restart (the `restart [skip] [core]` request, Ctrl-R for the core the input points at, HASE function 0x31 for core 0) runs `load_and_start` again for that core only: its RAM image is reloaded, so a crashed or overwritten kernel always recovers, and the other core keeps running (section 5.16: only what the restarted core held is reset).

## 6.3 Pause and RAM reads

Setting CTRL bit 1 freezes HF32 between two instructions (section 3.6) and switches RAM port B to the ARM's MEM_ADDR. The ARM can then read any RAM cell through MEM_DATA while a Forth program is in the middle of running. When the bit is cleared, the CPU stays stalled one more cycle, in which port B re-reads the CPU's [T] and port A the current instruction, and then continues as if nothing had happened, except that the timers kept counting and a running floating-point operation may have finished. The RTL testbench pauses at random moments during all of its sessions and checks that Forth's output does not change.

## 6.4 The main loop

```
for (;;) {
    while (UART has a byte) receive(byte);    // terminal, service request or MCNF
    receive_timeout();                        // drop unfinished requests after 2 s
    link_timeout();                           // end an MCNF probe after 2 s
    pump();                                   // ring -> RX FIFO, TX FIFO -> ring -> UART
}
```

`pump` does the byte transport for each core: input-ring bytes (64 KB per core, and the autostart source, fed after the kernel) into the core's RX FIFO while it has room; TX FIFO bytes into the core's 4 KB output ring; the rings into the UART as fast as it sends. Core 0's ring always goes to the UART, core 1's only with `mux on` (Protocol.md); otherwise core 1's output waits in its ring, the oldest bytes dropped when it is full. When the ring of a core whose output goes to the UART is full, the ARM stops popping its TX FIFO, the FIFO fills, and that

Forth waits in `emit`, so no output is ever lost on the terminal. With both cores going out, the sender puts a core marker (SOH `@n` LF) before a run of the other core's bytes, and changes cores at the end of a line or when the current core has nothing more. A byte 0x01 printed by Forth goes out doubled (0x01 0x01), so it cannot be mistaken for the start of an answer or a marker.

## 6.5 Terminal and service requests

The serial line carries Forth's terminal and service requests at the same time (Protocol.md). A request is SOH, one line of text, LF; the ARM collects it apart from the terminal bytes, executes it and answers SOH, `ok <request> <length>` LF and a payload, or `err <request> <reason>` LF. An answer first flushes the output ring and then goes out whole, so it never splits a piece of Forth's output and the reader can separate the two streams byte by byte. Requests: `echo`, `version`, `status`, `restart [skip]`, `words`, `stack`, `board`, `source`, `store`, `erase`, `autostart`, and for two cores `input n` and `mux on|off`; the requests about one Forth take a trailing core number (`status 1`). Forth never sees them and keeps running. Ctrl-R (0x12) typed at a terminal restarts the Forth the input points at, the way out of an endless loop.

## 6.6 Saved source

Each core has one Forth source of up to 65,520 bytes in a 64 KB flash sector, far above `BOOT.bin`: core 0 at `0xFE0000` (the single-core firmware's sector, so its source carries over), core 1 at `0xFD0000`. Behind a 16-byte header: magic `HF32`, length, CRC-32 of the text, autostart flag (little-endian). The 16-bit ZYNQ-FORTH keeps its own source at `0xFF0000` with magic `HF16`, so switching between the two firmwares loses neither. The `store` request receives the text with its CRC into a staging buffer, checks it, erases the sector and programs it, then reads it back. At power-up and at every restart, if autostart is on, the ARM feeds the source into Forth's input right after the kernel starts, as if it were typed (lines end in CR); holding **BTN3** during the start, or `restart skip`, skips it. While the flash is erased or programmed (up to about 3 s) the loop does not run, so Forth may wait on a full TX FIFO for that time.

## 6.7 Dictionary and stacks

**Dictionary (`words`).** The ARM pauses the CPU, reads `latest` and `dp` (their addresses are in `forth_image.h`), follows the header links downward from `latest`, collecting each word's code address, flags and name (at most 2,048 words), resumes the CPU and formats the answer. Forth stands still only for the walk itself.

**Stacks (`stack`).** The stacks are inside the CPU, so the ARM cannot read them directly. Instead, `quit` copies both into RAM before each line (`snap`, section 7.6): the data stack into `ssnap`, the float stack into `fssnap`, their depths into `sdepth` and `fsdepth`, with `sdepth` = −1 while it copies. The ARM pauses the CPU and reads the copies; if it caught the copy half-done (`sdepth` out of range), it lets the CPU run for 10 µs and tries again, up to 100 times, and otherwise answers `busy`. The stack view therefore shows the state at the last `ok`, exactly what `.s` and `f.s` would have printed there.

## 6.8 The HASE node

The same firmware is the Forth-Lab node of the HASE laboratory. A HASE host speaks MCNF: binary frames that start with a byte `0xA_` (`0xA1` connectivity test, `0xA4` node administration, `0xA5` device functions) with a checksum. Since a terminal sends Forth only printable ASCII and a few control bytes, the ARM can tell the two apart:

| Link state | Entered when | Behaviour |
|---|---|---|
| terminal | power-up; a probe fails; a terminal byte arrives in HASE mode | as described above |
| probe | a byte `0xA_` arrives between two terminal requests | Forth's output is held; the frame is parsed |
| HASE | a valid frame (checksum right, channel `0xA4` or `0xA5`) within 2 s | only MCNF is answered; Forth's output waits in the 4 KB ring until the host fetches it (the oldest bytes are dropped, and counted, when nobody does) |

In HASE mode a terminal byte between two frames (printable ASCII, CR, LF, Tab, Backspace, SOH, Ctrl-R) switches back at once, and what Forth printed meanwhile goes out first. So whichever program holds the serial port decides the mode.

The node has the type of the 16-bit Forth-Lab node, `AE.07.30.80`, and answers its functions: 0x15 version, 0x30–0x33 status, restart, input and output, 0x40–0x42 dictionary and data stack, 0x43 the board registers (84 bytes), 0x44 the pattern generator, 0x50–0x55 the saved source. Where those carry 16-bit values the node clips (stack cells to −32768..32767, addresses above `0xFFFF` to `0xFFFF`), so a HASE panel written for the 16-bit node keeps working. New functions carry the full values: 0x45 the 32-bit data stack, 0x46 the float stack, 0x47 and 0x48 the dictionary with 32-bit addresses, 0x49 the 14 pin functions. HASE-Lab's Forth-Lab family uses them since ADR-0092 (stacks and dictionary) and ADR-0093 (pin functions).

These functions concern core 0. From firmware 4.1 the node also serves core 1: a function that concerns one core (status, restart, input, output, dictionary, stacks, saved source) plus 0x80 is the same function for core 1 (`device()` maps it with `core_function()` and takes `cores[1]`); the version, board, pattern and pin functions concern the board. Each core has its own dictionary table (`dicts[]`). HASE-Lab's Forth-Lab family reads core 1 from firmware 4.1 (ADR-0094).

# 7 The Forth kernel

The kernel is one Forth source file, `forth/kernel.fs` (946 lines). It compiles to a 25,424-byte image with 439 words, and everything a user meets is in it: the interpreter, the compiler, number and float conversion, the elementary functions, the board words and the words for the two cores. Both cores get the same image; `core#` (`$10001C`) tells a program which one it runs on.

## 7.1 Two compilers that produce the same code

The kernel is written in Forth but has to exist before any Forth runs, so it is built in two stages:

- **At build time**, `tools/hf32.py` reads `kernel.fs` on the PC. Its compiler understands what the kernel needs and no more: outside definitions numbers, float literals, `:` `:inline` `variable` `fvariable` `constant` `fconstant` `create` `allot` `,` `f,` `c,` `immediate` and comments; inside definitions the primitives (compiled inline), calls, literals and the control structures `if else then begin until again while repeat do loop +loop i unloop recurse ." [char] ['] [op]`. Calls to words defined further down are allowed and patched at the end. It writes a 128 KB RAM image, sets cell 0 to a jump to `cold`, stores the final `dp` (HERE) and `latest` into their variables, and exports the addresses the ARM needs (`latest`, `dp`, `ssnap`, `sdepth`, `fssnap`, `fsdepth`) to `build/forth_image.h`.
- **At run time**, the kernel carries its own compiler (`:`, `;`, `literal`, `if`, ...) as ordinary Forth words. That compiler compiles everything typed later.

Both produce the same kind of code: inlined primitives, calls, literals and branches. A word compiled on the board and the same word in `kernel.fs` are bit-identical.

`[op]` is a host word that compiles a primitive's instruction as a literal number; the kernel uses it where it must *emit* an instruction rather than execute one, as in `: exit [op] exit , ; immediate`.

## 7.2 Memory layout

| Address | Content |
|---|---|
| `00000` | jump to `cold` (the reset vector) |
| `00004` | the kernel: headers, code and data, 24,876 bytes |
| `0612C` | HERE after a cold start: new words and data grow upward |
| `1FFFF` | the end of the RAM: 104 KB free for programs, on each core |

Data structures in the kernel's image: the input buffer `tib` (84 bytes, 80 used), `sbuf` (128 bytes, for `.s` and `f.s`), the stack copies `ssnap` and `fssnap` (20 cells each), the powers of ten `tens` and the scratch float variables of the conversion routines. (The pin owners, a 48-byte table in the kernel up to 3.1, are in the hardware since 4.0, so both cores see the same ones.)

## 7.3 Dictionary headers

```
header:  link      cell: address of the previous header (0 ends the list)
         count     byte: bits 4..0 = name length, $80 immediate, $40 hidden, $20 inline
         name      the name's bytes, padded with zeros to a cell boundary
xt:      code      the word's machine code
```

Words are found newest first by following the links from `latest`. `name>xt` is the header address + 4 + 1 + length, aligned. A `create`d word's code is a literal of its data address and an `exit`, so its data starts 8 bytes after its execution token. Names may be up to 31 characters and are compared without regard to case.

## 7.4 The layers

| Section of `kernel.fs` | Bytes | Words | What it holds |
|---|---|---|---|
| Primitives | 1,116 | 61 | `dup + @ f* s>f …`: one machine instruction each, as `:inline` words; `exit`, `execute` |
| Stack and arithmetic | 1,124 | 35 | `rot`, `min`, `abs`, `um*`, `(um/mod) (urem)` and the division words on them, `*/`, `within`, the `do` runtime |
| Variables | 528 | 17 | `dp latest state base >in #tib`, `tib`, `here allot , c,`, `hex decimal`, `fill` |
| Board I/O | 312 | 12 | `key? key emit`, LEDs, buttons, switches, RGB, `ms@ us@ ms` |
| Two cores | 340 | 10 | `core# send receive mail? lock try-lock unlock (lock) shared /shared` |
| Shield pins and ownership | 1,228 | 26 | `pin output input high low toggle pin@ pin!`, `(owner) owner (mine) (free) claim release`, `unit (unit) unit-free` |
| Durations | 96 | 1 | `d>ticks` |
| PWM | 696 | 8 | `pwm-hz pwm-khz pwm-duty pwm-pin pwm-off` |
| Serial interfaces | 2,668 | 33 | `uart-* spi-* i2c-*` |
| DDS and tone | 572 | 13 | `dds-hz dds-pin dds-off`, `tone tone-off wave volume beep` |
| Pattern generator | 868 | 22 | `ns us msec`, `pg-step pg-loop pg-jump pg-wait pg-end`, `pg-start pg-stop …` |
| Analog inputs | 504 | 9 | `xadc@ adc@ mv@ supply@ temp@ .temp volts@ ftemp@` |
| Output | 764 | 14 | `cr space spaces type (.") . u. .s ?` |
| Parsing | 388 | 4 | `parse-name parse` |
| Dictionary search | 488 | 6 | `find-name`, `name>xt` |
| Numbers | 388 | 3 | `digit? >number number?` |
| Floating point | 6,400 | 75 | float stack words, `fround floor`, `d>f f>d`, `>float`, `represent`, `f. fs. fe. f.s` |
| Elementary functions | 3,368 | 28 | `fsin fcos ftan fatan fatan2 fasin facos fexp fln flog falog f** fsinh …` |

| Section of `kernel.fs` | Bytes | Words | What it holds |
|---|---|---|---|
| Compiler | 1,400 | 39 | `header : ; literal fliteral create constant if then do loop ( \ ."` |
| Interpreter | 1,628 | 14 | `words abort ?stack interpret-word interpret accept-line snap quit cold` |

Floating point and the functions are 40 % of the kernel. That is not the arithmetic, which the hardware does in single instructions; it is the exactly rounded decimal conversion and the function polynomials.

## 7.5 Primitives, inlining and execute

The bottom layer turns machine instructions into words:

```
:inline dup dup ;    :inline + + ;    :inline f* f* ;    :inline i r@ ;
:inline unloop r> drop r> drop ;
```

A `:inline` word's body is copied into a new definition instead of being called: `inline,` copies instructions up to the first `exit`. That is why `: sq dup * ;` becomes three instructions (`dup`, `*`, `exit`), and it is essential for words that touch the return stack: `>r` inside a called word would push onto the wrong frame. `exit` itself cannot be inline (the copy would stop at once); it is an immediate word that compiles the return instruction.

HF32 has no instruction to call an address held in a register, so `execute` pushes the execution token on the return stack and returns into it:

```
: execute ( xt -- ) >r ;      \ ; compiles exit, which "returns" into xt
```

## 7.6 The interpreter

```
: quit ( -- )
  0 state !
  begin snap accept-line interpret state @ 0= if ."  ok" then cr again ;
```

- **`accept-line`** reads characters with `key` into `tib` until CR or LF, echoes them, handles backspace and DEL, and keeps at most 80.
- **`interpret`** loops `parse-name` → `interpret-word` → `?stack` until the line is used up.
- **`interpret-word`** decides what a name is:

```
: interpret-word ( a n -- )
  2dup find-name ?dup if
    nip nip dup name>xt swap 4 + c@      ( xt count )
    state @ if
      dup $80 and if drop execute                  \ immediate: run it now
      else $20 and if inline, else compile, then then   \ inline copy or call
    else drop execute then                         \ interpreting: run it
  else
    2dup number? if
      nip nip state @ if literal then              \ integer: push or compile
    else
      drop 2dup float? if
        2drop state @ if fliteral then             \ float: push or compile
      else
        type ."  ?" cr abort                       \ unknown
      then
    then
  then ;
```

- **Numbers** (`number?`): an optional `-`, an optional `$` for hex, digits in `base`. **Floats** (`float?` → `>float`) are tried only in decimal base, so `1E` stays a hex number in hex.
- **`?stack`** guards the 32-entry hardware stacks, which wrap silently. A dictionary search needs up to 9 data cells of its own (`find-name` → `same?` → `upper`), so more than 20 user items count as overflow, and a depth above 28 means the pointer wrapped below zero (underflow). The float stack is checked the same way.
- **`abort`** empties both stacks and calls `quit`. The return stack needs no clearing: `quit` never returns, and a stale return stack only wraps.
- **`snap`** copies both stacks for the app and HASE (section 6.7): it sets `sdepth` to −1, moves the data stack into `ssnap` (popping it into the buffer and pushing it back, bottom first), does the same with the float stack and `fssnap` (through `f>bits`/`bits>f`), and then writes the two depths.
- **`cold`** sets decimal, interpret state and 7 digits of precision, prints the banner, turns LD0 on and enters `quit`.

## 7.7 The compiler

The compiler words are short because the instruction encoding is simple:

```
: compile-call ( xt -- ) 2 rshift $40000000 or , ;     \ call = 010 + cell address
: literal ( n -- )
  dup 0< if invert $80000000 or , [op] invert , else $80000000 or , then ; immediate
: fliteral ( F: r -- ) f>bits literal ['] bits>f inline, ; immediate
: header ( a n -- ) align here >r latest @ , dup c, here swap dup allot cmove align r> latest ! ;
: : parse-name header hide ] ;
: ; [op] exit , reveal 0 state ! ; immediate
: create parse-name header here 8 + literal [op] exit , ;
: constant ( n -- ) parse-name header literal [op] exit , ;
```

- `:` builds the header, marks it **hidden** (so the word cannot find itself, and an aborted definition stays invisible) and enters compile state; `;` compiles `exit`, reveals the word and leaves compile state. `recurse` compiles a call to the hidden word.
- A literal holds 31 bits; a negative one costs two instructions, the inverted value and `invert`. A float literal is its bit pattern as an integer literal followed by `bits>f`.
- **Control structures** compile branch instructions with an empty target and resolve them later. A placeholder already carries its opcode (`$20000000` for 0branch, 0 for jump), so resolving is an OR of the target's cell address:

```
: >resolve ( orig -- ) dup @ here 2 rshift or swap ! ;
: if   here $20000000 , ; immediate          : then >resolve ; immediate
: else here 0 , swap >resolve ; immediate    : begin here ; immediate
: until 2 rshift $20000000 or , ; immediate  : again 2 rshift , ; immediate
: while here $20000000 , swap ; immediate    : repeat 2 rshift , >resolve ; immediate
```

- **`do … loop`** keeps the limit and the index on the return stack, index on top. `do` inlines `swap >r >r`; `loop` compiles a call to `(loop)` (which increments the index and returns a done flag), a 0branch back to the start of the body and an inlined `unloop`. `i` is therefore just `r@`, one instruction; `j` reaches past the inner loop's frame. `+loop` ends when the index reaches or passes the limit (for positive steps).
- `."` compiles a call to `(.")` followed by the counted string, aligned; `(.")` prints it and returns past it by adjusting its own return address.

## 7.8 What lands in RAM

Four definitions typed on the simulated HF32 (`tools/hf32.py run`), and the RAM after them:

```
: sq dup * ;
05DEC  00005D90             header: link = 05D90 (cold's header)
05DF0  00717302             count 2, "sq", padding
05DF4  60008000  dup        inlined primitive
05DF8  65418000  *          inlined; waits 3 clocks for the multiplier
05DFC  70060000  exit

: area ( F: r -- a ) fdup f* pi f* ;
05E0C  60000800  fdup
05E10  60001980  f*         FPU, 5 clocks
05E14  4000113C  call 044F0 pi (a float constant)
05E18  60001980  f*
05E1C  70060000  exit

: big? 1000 > if 1.5e else 0.5e then ;
05E2C  800003E8  literal 1000
05E30  4000013F  call 004FC >
05E34  20001791  0branch 05E44       resolved by else
05E38  BFC00000  literal $3FC00000   the bits of 1.5
05E3C  60418880  bits>f              moves them to the float stack
05E40  00001793  jump 05E4C          resolved by then
05E44  BF000000  literal $3F000000   the bits of 0.5
05E48  60418880  bits>f
05E4C  70060000  exit

: count5 5 0 do i . loop ;
05E5C  80000005  literal 5
05E60  80000000  literal 0
05E64  60600000  swap   ┐
05E68  60438000  >r     │ do
05E6C  60438000  >r     ┘
05E70  63008000  i = r@
05E74  40000960  call 02580 .
05E78  40000238  call 008E0 (loop)
05E7C  2000179C  0branch 05E70
05E80  63068000  r>     ┐
05E84  60418000  drop   │ unloop
05E88  63068000  r>     │
05E8C  60418000  drop   ┘
05E90  70060000  exit
```

A compiled Forth word is real machine code for HF32, not a list of addresses for an inner interpreter. One pass of `count5`'s loop is four instructions (`i`, two calls, the 0branch) plus the work of `.` and `(loop)`.

## 7.9 Integer arithmetic

The hardware multiplies (3 clocks) and divides (17 clocks):

- **`um/mod`** ( ud u -- rem quot ) is inline: `(um/mod) (urem) swap`, 19 clocks (0.38 µs).
- **`u/mod`** ( u d -- rem quot ) is inline: `0 swap (um/mod) (urem) swap`, 21 clocks. The Forth loop of firmware 3.x it replaces took about 650 instructions, 13 µs.
- **`/mod`**, **`/`**, **`mod`** divide the absolute values with `u/mod` and fix the signs afterwards: symmetric division, the quotient rounds toward zero, as in the 16-bit Forth.
- **`um*`** (32 × 32 → 64 bits) is two multiply instructions, the low cell (`*`) and the high cell (`(um*)`) of the unsigned product.
- **`*/`** uses `um*` and `um/mod`, so n1 × n2 never overflows in between.
- A double cell is ( low high ), high on top, as in Forth-2012.

## 7.10 Floating point: hardware and Forth

**In hardware**, one instruction each: `fdup fdrop fswap fover`, `f+ f- f* f/ fsqrt`, `fnegate fabs ftrunc`, `s>f f>s`, `f>bits bits>f`, `f@ f!`, `f0< f0= f< f=`, `fdepth`.

**In Forth**, on top of those: `frot fnip f> fmin fmax`, `floor fround` (round half to even: below $2^{23}$, adding and subtracting $2^{23}$ makes the FPU round), `u>f f>u d>f f>d`, `float+ floats` and the `sf` variants, `fvariable fconstant f,`, `>float`, `represent`, `f. fs. fe. f.s`, `precision set-precision`, and the elementary functions.

### Decimal to float: `>float`

`>float` parses `[sign] digits [. digits] [E|e [sign] digits]` with at least one digit. It collects up to 9 significant digits as an integer *m* (further digits only shift the decimal exponent) and a decimal exponent *e*, then builds *m* × 10^*e* in `(fbuild)`. Doing that with plain float multiplies would round at every step and miss the correctly rounded result by a unit in the last place. Instead the kernel carries every rounding error along:

1. *m* (up to 999,999,999, more than $2^{24}$) is split into a float and the exact remainder: `(rx) + (tl)` = *m* exactly.
2. **Dekker's exact product**, `(2prod)`: for two singles *a* and *b*, the rounded product *p* and its exact error *err* with *a* × *b* = *p* + *err*. `(split)` splits each factor into a 12-bit high and a 12-bit low half with the classic `4097e f*` trick; the four partial products are exact, and *err* is computed from them. Factors above $10^{30}$ or below $10^{-20}$ are first scaled by 2^±64 (exact), so that the half-products neither overflow nor flush to zero, and scaled back afterwards.
3. `(fmul10^)` and `(fdiv10^)` multiply or divide `(rx) + (tl)` by an exact power of ten $10^0$..$10^{10}$ (table `tens`; all eleven are exact in single precision), keeping the result as value + error. Division uses the quotient and the exact remainder (through `(2prod)`).
4. `(fbuild)` scales by $10^{10}$ steps while |*e*| > 20 (with a $2^{64}$ pre-scale for very small results, so nothing flushes on the way), lets `(scaled)` do the last −20..20 decades as value + error, and adds the two: **one final rounding**. If the product alone overflowed, it repeats at half the value and doubles at the end. Exponents above 38 give infinity, below −55 zero.

The result is correctly rounded across the normal range; `tools/test_float_words.py` checks it against Python on hundreds of random literals and on the boundary cases (the largest float 3.4028235e38, the smallest normal

1.1754944e-38, halfway cases).

### Float to decimal: `represent`

`represent ( a u -- n flag1 flag2 ) ( F: r -- )` writes the $u$ (1..9) most significant digits of $r$, correctly rounded, and returns the decimal exponent. It runs the same machinery in reverse:

1. Bring $|r|$ into $[10^{-10}, 10^{20})$ with exact $10^{10}$ steps, counting them.
2. Estimate the decade $k$ by comparing with the powers of ten.
3. `(digits)`: compute $r \times 10\text{^}(u-1-k)$ as value + error with `(scaled)`, and round that sum to an integer with `(round2)`, which rounds the two parts separately and corrects exact ties to even, so the integer is the correctly rounded significand.
4. If the integer has $u - 1$ or $u + 1$ digits, the estimate of $k$ was one off: correct it and repeat. If rounding carried to $10\text{^}u$, divide by 10 and increment $k$.

On top of it: `fs.` prints scientific notation (`1.234568E2`), `fe.` engineering notation (exponent a multiple of 3), and `f.` fixed notation for $10^{-7} \le |r| < 10^{9}$ and scientific otherwise, without trailing zeros. Exponents are always printed in decimal, whatever `base` is; NaN and infinities print as `NaN` and `Inf`.

### Elementary functions

Classic single-precision methods after the Cephes library. `tools/test_float_words.py` measures their error against Python's `math` in units in the last place (ulp): `fsqrt`, `fln`, `fexp` are within 0.65 ulp, `fsin`, `fcos`, `fatan`, `fsinh`, `ftanh` within 1 ulp, `ftan`, `flog`, `flnp1`, `fexpm1`, `facos`, `fcosh` within 1.6 ulp and `fasin` within about 2 ulp (a run with 200 random arguments per function, 2026-11-04):

- **`fsin fcos ftan fsincos:`** `(reduce)` computes $k$ = round($x \times 2/\pi$) and $r = x - k \cdot \pi/2$ with $\pi/2$ in three parts (1.5703125 + 4.8375e−4 + 7.55e−8, each product exact), so the reduction stays accurate up to $|x| \approx 10{,}000$. Short polynomials give sin and cos on $[-\pi/4, \pi/4]$; the quadrant $k$ mod 4 swaps and negates them.
- **`fatan:`** reduces $|x|$ with $\tan(3\pi/8)$ and $\tan(\pi/8)$ to $|r| \le 0.4142$, then a polynomial. **`fatan2`** handles the quadrants and the zero cases; **`fasin`** / **`facos`** go through `fatan2` with $\sqrt{((1-x)(1+x))}$.
- **`fexp:`** $x = n \cdot \ln 2 + r$ ($\ln 2$ in two parts), a polynomial for e^$r$, and 2^$n$ built directly from exponent bits (`2^n`, with `(f2^n)` stepping for the extremes). Overflow and underflow limits give ∞ and 0.
- **`fln:`** takes the exponent from the float's bits, reduces the significand to [√½, √2), and evaluates a polynomial; `flog` and `falog` scale by ln 10.
- **`flnp1, fexpm1:`** Kahan's forms, which cancel the rounding of $1 + x$ or e^$x$, so small arguments keep all their digits.
- **`f**:`** $\exp(y \ln x)$, with the cases of IEEE `pow` for zero and negative bases (a negative base needs an integral exponent; odd exponents keep the sign).
- **`fsinh fcosh ftanh:`** a polynomial near 0, exponentials elsewhere.

## 7.11 Board words

Every board word is a few accesses to the I/O registers:

```
: led! ( n -- ) $100008 ! ;
: led-mask ( n -- mask ) dup 4 u< 0= if ."  bad led" cr abort then 1 swap lshift ;
: led-toggle ( n -- ) led-mask 8 lshift $100058 ! ;   \ led-on: no shift, led-off: 4
: ms ( n -- ) ms@ + begin dup ms@ - 0< until drop ;
: pin ( n -- mask a )
  dup 0 20 within over 26 48 within or 0= if ."  bad pin" cr abort then
  dup 15 and 1 swap lshift swap 4 rshift 4 lshift $100020 + ;
: output ( n -- ) pin 8 + bset ;       : high ( n -- ) pin 4 + bset ;
: volts@ ( ch -- ) ( F: -- v ) dup adc@ s>f 4096e f/ 6 < if 3.32e else 1e then f* ;
```

`pin` checks the number and turns it into a bit mask and the port's level-register address; `output`, `high`, `low`, `toggle` read-modify-write the direction or latch register next to it. The XADC words convert codes with the formulas of section 5.14, `volts@` and `ftemp@` in floating point.

## 7.12 Pin ownership and the serial words

The owner of each pin is kept by the hardware for both cores (`$100300 + 4n`, section 5.3): 0 = free, 1..4 = PWM channel 0..3, 5/6 = UART 0/1, 7/8 = SPI 0/1, 9 = I²C, 10 = DDS, 15 = an output pin, and 16 more when the other core owns it. A write of an id takes the pin if it is free or already this core's; a write of 0 releases it. That makes a claim atomic between the cores: write, then read back.

```
: (owner) ( pin -- a ) cells $100300 + ;
: owner ( pin -- id ) dup pin 2drop (owner) @ ;
: (mine) ( pin -- pin ) dup owner 15 u> if ."  pin taken" cr abort then ;
: (free) ( pin id -- pin )
  over owner dup 0= over 15 = or if 2drop else <> if ."  pin taken" cr abort then then ;
: claim ( pin id -- ) 2dup (free) (owner) ! (mine) drop ;
: release ( id -- ) 48 0 do i (owner) @ over = if 0 i (owner) ! then loop drop ;
```

`output` takes a free pin as owner 15 and `input` gives it back; the GPIO words refuse the other core's pins and change latches and directions with the set/clear registers, so the cores never undo each other's changes to a port. A peripheral has an owner core too (`$1003C0 + 4u`, read like a lock): the open words take it with `(unit)`, the close words check it and let it go (`unit-free`), so one core cannot open, take over or switch off what the other opened. The settings words (`pwm-hz`, `spi-mode`, `uart-emit` ...) do not check, to stay as short as before; the hardware does not enforce ownership on register writes.

Every *open* word (`pwm-pin`, `uart-open`, `spi-open`, `i2c-open-pins`, `dds-pin`) first releases what its peripheral held, then checks **all** its pins with `(free)` before it claims any, so a refused pin leaves nothing half-claimed; then it claims them and writes the peripheral's pin register with the enable bit. The *close* words clear the enable bit and release the pins. A pin owned by one peripheral may be given to the same peripheral again (re-opening with other settings).

Each peripheral's words are thin layers over its registers:

- **UART:** `uart-open ( baud tx rx u -- )` writes the divider (50,000,000 / baud) and the pins; `uart-emit` waits for room, `uart-key` for a byte, `uart-type` sends a string, `uart-status` reads and clears the error flags.
- **SPI:** `spi-open ( sck mosi miso s -- )`, `spi-hz` (half = [25,000,000 / hz], at least 2, so the clock is never faster than asked), `spi-mode`, `spi-lsb`, `spi-bits`; `spi-xfer ( out s -- in )` writes the data, waits while busy and reads the answer; `spi-write` and `spi-read` move byte strings.
- **I²C:** `(i2c)` writes a command, waits while busy and aborts with `i2c timeout` on a stuck bus. `i2c-open-pins` first frees a bus that a slave still holds: a slave stopped in the middle of a read keeps driving its bits on

SDA. With the master disabled and the pins as GPIO in open drain (pull low = latch 0 and output, release = input), it gives SCL 9 clocks with SDA released, so the slave finishes its byte and reads a NACK, then makes a stop. Clocking only until SDA reads high is not enough: a 1 bit of the byte leaves SDA high with the slave still in the middle of it. `i2c-open ( hz -- )` uses SCL/SDA (pins 42/43) and sets the quarter period ([12,500,000 / hz] + 2 clocks, never faster than asked). On top: `i2c-start i2c-stop i2c-write i2c-read`, `i2c-addr` (start + address byte), `i2c! ( b reg addr -- )` and `i2c@ ( reg addr -- b )` for register-based devices (write the register number, repeated start, read), `i2c-probe` and `i2c-scan` (addresses 8..119, printed in hex).

- **DDS:** `dds-hz ( F: hz -- )` computes the tuning word in floating point, hz × $2^{32}$ / 200 MHz = hz × 21.47483648, rounded; `dds-pin` claims the pin and turns it on; both wait for the handshake (`dds-sync`).
- **Tone:** `tone ( F: hz -- )` sets the tuning word hz × $2^{32}$ / 50 MHz = hz × 85.89934592 and turns the tone on; `wave`, `volume` (percent), `tone-off`, `beep ( ms -- ) ( F: hz -- )`.

## 7.13 Compatibility with the 16-bit Forth

The names and stack effects are those of ZYNQ-FORTH 2.3, so 16-bit sources run unchanged. The one subtle point is **durations**. On the 16-bit Forth they were double cells with 16-bit halves, and the HASE panel still generates them that way. `d>ticks` therefore reads a double ( lo hi ) as lo + hi × 65536, which gives the right value in both styles (with this Forth's own words hi is 0 and lo holds the whole value). To keep that unambiguous, `us` and `msec` refuse durations of $2^{32}$ ticks (21.47 s) and more.

## 7.14 What is left out

To keep the kernel small, some standard Forth is not there: `does>`, `postpone`, `s"`, `evaluate`, `?do` and `leave`, `case`, `value` and `to`, `defer`, `marker` and `forget`, `see` and `dump`. Chapter 7 of the manual lists the differences. Each would be a few hundred bytes of Forth with no hardware change.

# 8 Tools and verification

## 8.1 `tools/hf32.py`

One Python file (about 1,230 lines) with three parts:

- **The cross-compiler** (`Compiler`): reads `kernel.fs` and writes `build/forth.hex` (for `$readmemh` in the testbenches), `build/forth_image.h` (for the ARM program) and `build/forth.map` (every word's address). `python tools/hf32.py build forth/kernel.fs`.
- **The instruction-set simulator** (`Machine`): executes HF32 instructions exactly as the RTL does (same encodings, same stack wrap-around, same store semantics) with models of the I/O: the terminal FIFOs, LEDs, timers, the shield ports, PWM registers, the XADC with the values of `sim/xadc_stim.txt`, the pattern generator registers and, simply, the 3.1 peripherals (UART 0 and 1 wired to each other, SPI as a MOSI–MISO loopback, an $I^2C$ bus without devices). `python tools/hf32.py run forth/kernel.fs -i "2 3 + ."` runs a session in a fraction of a second, which is how the kernel is developed.
- **The FPU model** (section 4.4), used by the simulator for every float instruction.

## 8.2 Checks of the models

| Check | What it compares |
|---|---|
| `tools/test_fpu.py` | the FPU model against IEEE single precision (through Python's doubles), 200,000 random operand pairs plus special values; writes vectors for `tb_mcu.v` |
| `tools/test_float_words.py` | the kernel's float words in the simulator: `>float` against correctly rounded singles, `fs.` against the exact decimal value rounded to `precision` digits, the elementary functions against Python's `math` in units in the last place |
| `python tools/hf32.py run … -f sim/smoke.txt` | quick sessions of ordinary Forth |

## 8.3 RTL testbenches

All run in the Vivado simulator (xsim) through PowerShell scripts in `sim/`:

| Testbench | Script | What it checks |
|---|---|---|
| `tb_forth.v` | `run_sim.ps1 -InputFile <session> [-InputFile1 <session>]` | the whole system: preloads the kernel, releases the CPU over AXI-Lite like the ARM, feeds a session into the RX FIFO and prints the TX FIFO; pauses the CPU at random moments to read RAM, and walks the dictionary at the end. Its output is the same as the simulator's for the same session. With a second session, core 1 runs it at the same time (output in `build/sim/core1.txt`); `run_dual.ps1` compares both cores with the simulator's two-core run (`hf32.py run -f <core 0> --input-file1 <core 1>`), with `sim/dual0.txt`/`dual1.txt` (both cores read the core number and write the LEDs 3,000 times each) and `sim/mail0.txt`/`mail1.txt` (100 words through the mailboxes, the lock states, a byte through the shared RAM, and a shared counter both cores increment 1,000 times under a lock). A simulated-time limit (200 ms) ends a session that waits forever |

| Testbench | Script | What it checks |
|---|---|---|
| `tb_mcu.v` | `run_mcu.ps1` | the multi-cycle unit against the vectors of `test_fpu.py`, bit for bit |
| `tb_periph.v` | `run_periph.ps1` | UART 0 → 1 at 1 MBd and 115,200 Bd with all byte values, overrun and framing errors; SPI loopback in modes 0..3, 8/16/32 bits, both bit orders, fastest clock; I²C against a 24Cxx-style slave model that stretches SCL; DDS frequency over 1 ms; the tone modulator's duty: 563 checks |
| `tb_patgen.v` | `run_patgen.ps1` | the pattern generator, tick by tick against a model of the step semantics |

The sessions in `sim/` (`smoke.txt`, `float.txt`, `shield.txt`, `pwm.txt`, `patgen.txt`, `periph.txt`, `board31.txt`, `manual_examples.txt` ...) are plain Forth input. In `tb_forth.v` a few shield pins are wired together (IO26–IO29 and the SPI header's MISO/MOSI), so the serial interfaces, the DDS and the PWM can be checked from Forth through loopbacks.

## 8.4 Checks on the board

- `tools/board_session.py -p COMx <session>` types a session into the real board and compares every answer with the simulator's; lines with live values (temperature, voltages, timers) are reported but not compared.
- `tools/mcnf_check.py -p COMx` talks to the board as a HASE host would and prints the node's answers, including both stack views, the float stack and the dictionary in 16 and 32 bits.
- For 3.1 the peripherals were tested with jumper wires on the board: UART 0 ↔ 1 with all 256 byte values in both directions at 115,200 Bd and 1 MBd (no errors), SPI MOSI → MISO in all four modes at 12.5 MHz, an Si5351 clock generator found by `i2c-scan` at `$60` and its registers read back, DDS and PWM frequencies counted by Forth on a second pin, and the tone generator's four waveforms checked by ear.
- For 4.0, on the board over JTAG and then from flash: both cores give the simulator's transcript, line by line, on `smoke`, `divide`, `float` and `manual_checks` (the divider's board test); mailboxes, locks and the shared RAM between the cores; PWM on core 0 and the DDS on core 1 at once, refusals across cores, and a restart of one core while the other runs; core 1's saved source; the HASE node with firmware 4.0. With the 3.1 jumper wires (IO26–IO27, IO28–IO29, IO30–IO31, MOSI–MISO): `board31.txt` gives the simulator's transcript on each core (UART 0 ↔ 1 at 115,200 Bd and 1 MBd, SPI in all modes), the DDS and PWM edge counts on IO31 are right on each core (100, 990, 3,309–3,331, 0 and 100 in 100 ms), 100 bytes go from core 0's UART 0 to core 1's UART 1 and back (sum 4,950 each way), core 1's SPI 1 loopback passes 1,000 transfers while core 0's PWM runs, and `i2c-scan` finds the Si5351 at `$60` from either core. The first two scans after the flash boot found nothing: a slave left in the middle of a read keeps driving SDA, and then no start works. Reproduced on purpose (set the Si5351's register pointer to 0, start a read and stop): SDA stays low and `$60 i2c-probe` fails. Since then `i2c-open` frees the bus first (section 7.12), and the probe and the scan succeed after every such stuck read.

So every layer is checked against the one above it: IEEE → FPU model → FPU RTL; simulator → system RTL (same output for the same session, on one core or both) → board (same output again).

# 9 Building and booting

## 9.1 The build chain

```
rtl/*.v, constr/pins.xdc   --hw/build_hw.tcl (Vivado)-->   build/hw/forth.bit, forth.xsa
forth/kernel.fs            --tools/hf32.py------------>    build/forth_image.h
forth.xsa, forth_image.h,
sw/src/*.c                 --sw/build_sw.tcl (Vitis)--->   fsbl.elf, forth_app.elf
fsbl.elf, forth.bit,
forth_app.elf              --sw/build_boot.ps1 -------->   build/boot/BOOT.bin
                             (bootgen)
```

The `.xsa` gives Vitis the hardware platform (the PS configuration from which the FSBL and `ps7_init` are generated).

| Step | Command | Output |
|---|---|---|
| hardware | `vivado -mode batch -source hw/build_hw.tcl` | `build/hw/forth.bit`, `forth.xsa`, utilization and timing reports |
| software | `xsct sw/build_sw.tcl` | platform with FSBL, `forth_app.elf` (runs `hf32.py build` first) |
| boot image | `sw/build_boot.ps1` | `build/boot/BOOT.bin` |

`hw/build_hw.tcl` creates a block design with the Zynq PS (FCLK0 50 MHz, FCLK1 200 MHz, `M_AXI_GP0`) and the `forth_system` module as an RTL reference with `CLK_HZ` = 50,000,000, lets Vivado's block automation add the AXI connection, maps the slave at `0x43C00000`, synthesizes, implements and writes the bitstream and the `.xsa`. A kernel change needs no new bitstream: only `sw/build_sw.tcl` and a new boot image.

## 9.2 Getting it onto the board

- **JTAG, for development** (until power-off): JP4 on JTAG, power on, `xsct sw/run.tcl`. It programs the PL (`fpga`), initializes the PS (`ps7_init`), downloads the ARM program (`dow`) and starts it. With JP4 on QSPI the flashed boot loader would run first and the PS initialization fails.
- **Flash, permanent:** JP4 on JTAG, power on, `sw/program_flash.ps1` (writes `BOOT.bin` to the QSPI flash from address 0 and verifies it), then JP4 on QSPI and power-cycle. The saved source's sector is not touched.

The 16-bit ZYNQ-FORTH and this design use the same board and the same flash layout for the boot image, so either can be flashed over the other; each keeps its own saved source.

## 10 The Windows app

`app/` holds the ZYNQ-DualCore-FORTH32 app, a C#/WPF program for .NET 10, published as one self-contained `ZynqDualForth32.exe`. It is the single-core app with a core switch: terminal, editor, stacks, dictionary and saved source per core, the board view and the pattern editor shared; it talks protocol 3 and still serves a single-core board. Settings are kept apart in `%LocalAppData%\ZYNQ-DualCore-FORTH32`.

| Part | Content |
|---|---|
| `ZynqForth.Core/Protocol` | `SerialTransport` (the COM port), `StreamSplitter` (separates terminal bytes from SOH answers, undoubles 0x01), `ForthLink` (requests and their answers) |
| `ZynqForth.Core/Board` | `BoardClient` and `BoardState`: parse the `board` answer into LEDs, buttons, pins, PWM, XADC, pattern generator and pin functions |
| `ZynqForth.Core/Patterns` | the pattern model and `PatternCompiler`, which turns a timing diagram into `pg-*` Forth lines |
| `ZynqForth/Views`, `Controls` | the main window (editor, terminal, data and float stack, dictionary, saved source), `BoardView` (a live drawing of the board with owned pins labelled `TX0`, `SDA`, `DDS` ...), `PatternView` (the pattern editor) |
| `ZynqForth/Themes` | five skins generated from one colour table (`app/tools/make_skins.py`) |
| `tests/ZynqForth.Core.Tests` | unit tests of the protocol, the board parsing and the pattern compiler |

The app never talks to Forth through anything but the serial protocol, so whatever it shows is also available to any other program (`tools/zforth.py` is a command-line example).

# 11 Design decisions and room for growth

## 11.1 Decisions

| Decision | Why |
|---|---|
| Forth CPU in the PL, ARM as service processor | Forth runs at a fixed, predictable speed with exact cycle timing for I/O; the ARM can answer requests while Forth loops for ever, and restart it |
| Stacks in LUT RAM inside the CPU | one-clock push, pop and swap; no memory traffic for stack operations |
| Load address = next T | single-cycle `@` with a synchronous block RAM; the only cost is the store hazard |
| 50 MHz, no pipeline | every primitive takes one clock and the compilers need no scheduling |
| Separate float stack | Forth-2012's model; integer and float code do not interfere; stack moves between them in one instruction |
| Single precision, flush to zero | a small, fast FPU without a subnormal shifter; 7 decimal digits are plenty for laboratory values |
| Decimal conversion in Forth, correctly rounded | exactness where it is visible (what is typed and printed) without hardware cost |
| Two independent Forths, not a main core and a helper | each core is a whole system: its own terminal, saved source and restart; the same kernel and the same programs on both |
| One shared I/O bus with a register stage | one copy of every peripheral, a simple arbiter (turn-taking) and no change to the CPU; the register stage keeps the bus out of the CPU's critical path for one clock per I/O access |
| Owners of pins and peripherals in the hardware | both cores see one table, a claim is atomic (write, then read back), and a core's restart can reset exactly what it held |
| A 64 / 32 divider, two bits per clock | `um/mod` and `u/mod` in one instruction each (plus the remainder); 17 clocks instead of 13 µs; the same algorithm as the former Forth loop, so 3.x sources give the same results |
| Any peripheral on any pin | the board's pins are few and fixed; routing in the fabric costs little and the ownership table keeps it safe |
| One firmware for terminal, app and HASE | no mode switches for the user; the byte values tell the protocols apart |
| Compatibility with the 16-bit design | sources, the app's protocol and the HASE panel keep working |

## 11.2 Room for growth

The design uses 25 % of the logic and 53 % of the block RAM. Possible extensions, none of which needs a change to what exists:

- **More RAM:** 66 free block RAMs, about 260 KB more, per core or as a bigger shared RAM (the address space has room up to 1 MB below the I/O).
- **Double precision** in the FPU, or a second float format on the same stack.

- **The missing Forth words** (`does>`, `postpone`, `evaluate`, `case`, `value`, `defer`, `see` …), each a few hundred bytes of kernel.
- **More cores:** the logic has room for several more; the arbiter would take turns among more requests, and each core would wait longer when all use the I/O at once.
- **A register stage** in the pattern generator's fetch path, for timing margin at 200 MHz.