CIM WIRING PINOUT

NI- 9223:

FPGA cMODULE

VMON SIGNAL → A0 BNC 0

ACCT SIGNAL → A1 BNC 1

NI-9401:

SOURCE-GATE → DIO0 PIN 0, COM

CHOPPER-GATE → DIO1 PIN 1, COM

*REF to COM pins. REFER TO NI-SPEC SHEET

Table 1. Signal Descriptions

Signal	Description
COM	Common reference connection to isolated ground
DIO	Digital input/output signal connection

NI- 9422:

CHOPPER_ON → DIO0 PIN 0+, PIN 1-

FARADAY_IN → DIO1 PIN 2+, PIN 3-

*NEEDS + AND – WIRING. REFER TO NI-SPEC SHEET

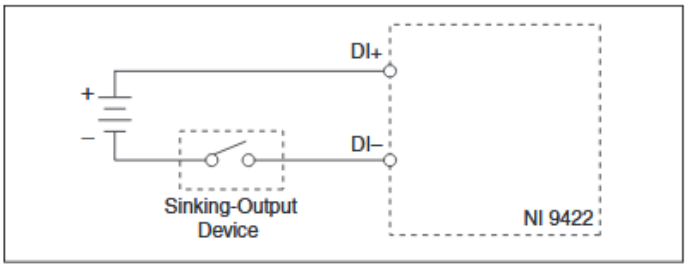



Figure 3. Connecting a Sinking-Output Device to the NI 9422

NI-9474:

FBI→ DIO0 PIN 0

*NEEDS Vsup AND GND WIRING. REFER TO NI-SPEC SHEET

Figure 1. Connecting an Industrial Device to the NI 9474

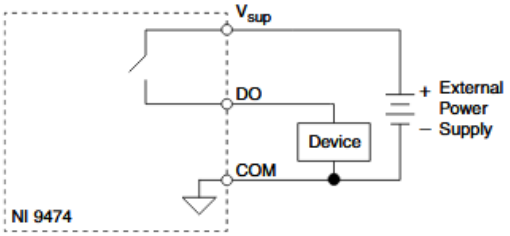

Caution Do not install or remove C Series modules from your system if the external power supply connected to the Vsup and COM pins is powered on.