# **Real-time Bridge Monitoring**

Guide to Inputs Conversion & Formulas calculation



## Index

1Type of Inputs	1
2Content of Inputs	2
2.1Analog files	
2.2Echo Sonar files	
3Conversion operations on inputs	3
3.1Anemometer	
3.2Hydrometer.	
3.3Sonar	
4What kind the calculations are there to do?	
4.1Anemometer (10min).	
4.2Hydrometer (10min)	
4.4Images	
4.4mages	
5Calculation of Forcing.	
5.1Stack / Cell compositions	
5.2Push of the wind	
Effective speed	
Push of the wind on the planking.	
Push of the wind on the traffic.	
5.3Hydrodynamic thrust (on the whole stack)	
Water speed.	
Scale of flow rates.	
2D AnalysisWater Thrust	
5.4Weight of the structure (o the whole stack)	
5.5Shifting weights / Mobile loads (traffic)	
5.6Brake of vehicles	
5.7Final remark on the forcing.	
5.8Reference system.	
•	
6Forcing: from planking to the single line of pylons	13
6.1Weight of the planking.	13
6.2Shifting loads (traffic combinations)	
6.3Vehicle braking	
6.4Wind	
6.5Water	13
7Load combinations on the stack	
7.1Combination.	17
8Stress to the joints	10
8.1numbering of the individual pylons	
8.2Introduction to the structural model	
(y direction): flat frame	
(x direction):	
8.3Geometry of the structural model (parameters from the parameters table)	
8.4Summary of kind of forces acting on the frame	

8.5Structure weight	22
8.6Vertical load N.	23
8.7Bending moment	
8.8Cutting force	
8.9Distributed Load (qy)	
8.10Cutting force Tx	28
8.11superposition of effects (effects overlapping)	28
9Verification of "Pressoflessione" (buckling)	34
10Table of parameters	36
11M-N DOMAIN	38

## 1 Type of Inputs

here are three inputs:

- $analog^{********}.txt \rightarrow$  in this txt file there are the values measured by the <u>Anemometer</u> and the <u>Hydrometer</u>
- sonar\*\*\*\*\*\*\*.txt  $\rightarrow$  in this file there are the values measured by the <u>Echo Sonar</u>
- $Modean[Mantova]^{*******}.jpg \rightarrow$  there are the pictures taken by the two camera

#### How to interpret the ID/timestamp of a file


analog\*\*\*\*\*\*\*\*.txt sonar\*\*\*\*\*\*\*\*.txt For this two kind of files the ID represents the Labview encoding and corresponds at the number of seconds that have elapsed sing 1th January 1904, without time zone so on the meridian of Greenwich (and at the same way for the timestamp of the all values in the file)

http://www.ni.com/white-paper/7900/en/

(there are 2 file (.xlsx & .ods) on GitHub [DSD/Data Source] that do this conversion automatically, just insert the number of seconds in the cell)

**Example** 

File: analog3383680299.txt

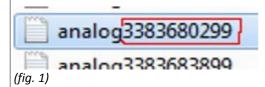

 $s = 3383680299 \leftarrow fig. 1$  m = (3383680299 / 60) = 56394671 h = (56394671 / 60) = 939911 d = (939911 / 24) = 39162y = (39162 / 365) = 107


rest of days = d - (y\*365)=107rest of hours = h - (d\*24)=23rest of minutes = m - (h\*60)=11rest of seconds = s - (m\*60)=39

The rest of days is 107, and it's corresponds at the month of April because 107 is between the sum of the days till March(that is 90) and the sum of days till April (that is 120). So mean that 107 days remaining corresponds at the month of April, the 4<sup>th</sup>.

How many days in April? Easily April begin after 90days so 107-90=17days elapsed.

Ok, here we are:

This is the "normal" conversion; then we have to consider the leap years and correct the result in the right one. In the xlsx this is implemented. At the end, just correct with the correct time zone that for Italy, Croatia and Sweden is UTC+1.

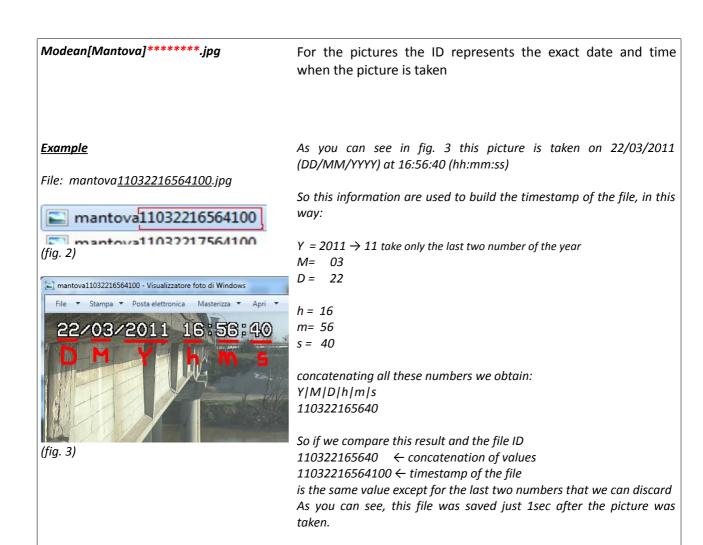

## 2 Content of Inputs


## 2.1 Analog files

The analog file contains 4 columns of values (fig.4):

- 1. Wind speed (unity measure mA)
- 2. Distance between the Hydrometer and the level of water (unity measure mA)
- 3. Wind direction (unity measure mA)
- Timestamp of the detection of the sample (Labview encode → see before)[decimals can be dropped]

just reading the file ID.


Concluding, we can extract the date&time when a picture was taken,

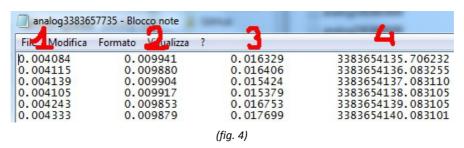

#### 2.2 Echo Sonar files

The sonar file contains 2 columns of values, offset of a line (fig.5):

- 1. Distance between the sonar and the bottom of the river (unity measure meters)
- 2. Timestamp of the detection of the sample (Labview encode  $\rightarrow$  see before)

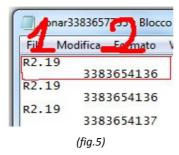

## 3 Conversion operations on inputs

Every hour the system receives a packet in which there are an analog file, a sonar file both with 3600 values and two images, one for camera. All these values are to be converted from the parser into the db, in the table of *Raw data(1sec)*. Each values has to fill one row of the table.

#### 3.1 Anemometer



- Speed  $\rightarrow$  V[m/s] = (((V[mA] \* 1000) 4) \* 3,75)
- Direction  $\rightarrow$  dir[°] = (((dir[mA] \* 1000) 4) \* 22,5)

## 3.2 Hydrometer



- Distance hydrometer-water  $\rightarrow h[m] = 20 + (((h[mA] * 1000) 4) * (-1,25))$
- Water height ightarrow  $h_{water}[m] = 29,86 h[m]$

#### 3.3 Sonar

For the sonar is a little bit more complicated because the sonar can produces five different kind of data.

- Correct data → Rxx.xx (can exist even one decimal)
   Uncertain data → Rxx.xxE (can exist even one decimal)
   Wrong data → xx.xx (can exist even one decimal)
- 4) Sonar out of water → R99.99E
- 5) Error → E1 or missing data



(fig.8)

The generic xx.xx is the distance in <u>meter</u> between the sonar and the height of the bottom.

• Height of the bottom  $\rightarrow h_{bottom}[m] = 12,3 - xx.xx[m]$ 

Data that are of type ① and ② can be convert in a real height; for the other types this conversion is not possible but is necessary to store these information anyway, to compute some statistics that will explain later.

#### 4 What kind the calculations are there to do?

To aggregate data for 10 minutes we have to manage 600 data as a single sample to calculate the needed information.

## 4.1 Anemometer (10min)

- [ANE1] mean wind speed
- [ANE2] maximum wind speed in the 10 minutes
- [ANE3] mean wind direction
- [ANE4] direction of the maximum wind speed in the 10 minutes

## 4.2 Hydrometer (10min)

• [IDRO1] mean water depth/water height

• [IDRO2] variance of the sample

## 4.3 Echo Sonar (10min)

- [SONAR1] mean value of the height of the bottom (only with data of type (1 + (2)))
- [SONAR2] variance of the sample (only with data of type (1 + 2))
- [SONAR3] % of data of type "(1) + (2)" used compared to the 600 elements of the sample
- [SONAR4] % of data of type "③" there are in the sample
- [SONAR5] % of data of type "4" there are in the sample
- [SONAR6] % of data of type "5" there are in the sample
- [SONAR7] % of data of type "(2)" there are, considering as sample the "(1) + (2)" set of data (so not all the 600 data)

### 4.4 Images


The images don't need any kind of elaboration, they have only to be displayed.

## 5 Calculation of Forcing

For the most of the formulas, is needed the use of parameters; these parameters are in a db table that only who have a high level of authorization can change. The change of parameters causes the re-elaboration of the all data in the grouped tables (customers know it and accept it).

## 5.1 Stack / Cell compositions

The bridge is supported by various stacks/cells (call as you want, we have to choose and agree on one word) and each stack is composed by two line of three pylons connected together by a "pulvino" (fig. 9).

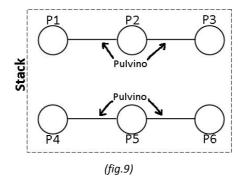

The system has to calculate the forces acting on the stack and after, if is possible, has to divide these forces on the two lines of the stack and divide again on the three pylons of each line.

#### 5.2 Push of the wind

The push of the wind is divided in two components:

- $S_{Vplank}$ : is the push of wind on the planking.
- S<sub>Vtraf</sub>: is the push of wind on the traffic.

Because the traffic is not monitored, we have to use a combinations of possible traffic scenarios; In this model were modeled three scenarios, named A1, A2 and A3.

#### 5.2.1 Effective speed

Before start to calculate the push of the wind on the whole bridge system, we must consider the real relevant value of the wind speed and not the general one. Is defined *effective speed (V<sub>EFFwind</sub>)* the wind component orthogonal to the bridge and to calculate it are needed:

- Measured wind speed → [ANE2]
- Measured wind direction → [ANE4]
- Planimetric inclination of the bridge from the north  $\rightarrow \alpha$  (parameter)

$$V_{EFFwind} = [ANE2] * \sin([ANE4] + \alpha)$$

#### 5.2.2 Push of the wind on the planking

For calculate this value are needed these information:

- "Drag planking" coefficient → C<sub>Dwi</sub> (parameter)
- Air density → ρ (parameter)
- Planking area → A<sub>PLANK</sub> (parameter)
- Effective wind speed → V<sub>EFFwind</sub> (see previous point)

$$S_{Vplank} = \frac{1}{2} * C_{Dwi} * \rho_{air} * A_{plank} * V_{EFFwind}^{2}$$

#### 5.2.3 Push of the wind on the traffic

For calculate this variable we must consider the three possible traffic scenarios, and also are needed:

- "Drag traffic" coefficient → C<sub>Dwi</sub> (the same of previous point)
- Air density  $\rightarrow \rho_{air}$  (the same of previous point)
- Surface of traffic → A<sub>TRAF</sub> (parameter)
- Aerial reduction coefficient  $\rightarrow \beta_1$  or  $\beta_2$  (parameters)
- Effective wind speed  $\rightarrow$  V<sub>EFFwind</sub> (see previous point)

For traffic combination A1:

$$S_{V(AI \ traf)} = \frac{1}{2} * C_{Dwi} * \rho_{air} * (\beta_1 * A_{traf}) * V_{EFFwind}^2$$

For traffic combination A2 (the same of A1):

$$S_{V(A2 \ traf)} = \frac{1}{2} * C_{Dwi} * \rho_{air} * (\beta_1 * A_{traf}) * V_{EFFwind}^2$$

For traffic combination A3:

$$S_{V(A3 \ traf)} = \frac{1}{2} * C_{Dwi} * \rho_{air} * (\beta_2 * A_{traf}) * V_{EFFwind}^2$$

#### 5.3 Hydrodynamic thrust (on the whole stack)

The water pressure on the stack depends on the presence or not of debris on the stack basement As the same way of the wind, will be calculate all the thrust and then choose at a later which consider.

#### 5.3.1 Water speed

The hydrometer measures the height of the water, then we have to find a relation between the height of water and the water speed. To do this are needed:

- Scale of flow rates: correlates univocally the water height ( $h_{water} \rightarrow [IDRO1]$ ) and the flow rate (Q).
- Bidimensional analysis: allow to know for some flow rate value (Q) the relative value of water speed (V<sub>water</sub>)

#### 5.3.1.1 Scale of flow rates

The following table show the relation between the flow rate (Q) and the water height ( $h_{water}$ ). Depending on the value of  $h_{water}$  the parameters  $a_i$ ,  $b_i$  and  $c_i$  changes.

- a<sub>1</sub>, b<sub>1</sub>, c<sub>1</sub> (parameters) for h<sub>water</sub> < 17m
- a<sub>2</sub>, b<sub>2</sub>, c<sub>2</sub> (parameters) for 17m < h<sub>water</sub> < 22m
- a<sub>3</sub>, b<sub>3</sub>, c<sub>3</sub> (parameters) for 22m < h<sub>water</sub> < h<sub>MAXwater</sub>

	Scale of estimate flow rates with fixed section					
Parameters	Parameters [IDRO1] < 17m   17m < [IDRO1] < 22m   22m < [IDRO1] < h <sub>MAXwater</sub>   h <sub>MA</sub>					
a <sub>i</sub>	46	60	96	96		
b <sub>i</sub>	-902	-1350	-2800	-2800		
Ci	4658	8000	22500	22500		

$$Q = a_i * h_{water}^2 + b_i * h_{water} + c_i$$

if  $h_{water} > h_{MAXwater}$  the river has overflowed.

#### 5.3.1.2 2D Analysis

The relation between the flow rate of water and its speed are in the following table. Depending on the flow rate of water, you can identify the range and interpolate linearly to get the speed of water.

$$V_{water} = a * h_{water}^3 + b * h_{water}^2 + c * h_{water}$$

2D analysis – fixed bottom				
h <sub>water</sub> [m]	Q [m³/s]	V <sub>water</sub> [m/s]		
3	510	0,24		
10,5	5400	2,73		
14	10000	3,54		

**N.B.**: the parameters a, b and c are different from the parameters  $a_i$ ,  $b_i$  and  $c_i$ 

#### 5.3.2 Water Thrust

To calculate the water thrust are needed these information:

- "Drag planking" coefficient → C<sub>Dwa</sub> (different parameter from that of the wind, see below)
- Water density  $\rightarrow \rho$  (parameter)
- Stack area → A<sub>stack</sub>
- Water speed → V<sub>water</sub> (see point before)

The "Drag planking" coefficient depends on the presence (D=1) or not (D=0) of debris on the stack base. So the Drag Planking coefficient is splitted in:

- "Drag planking" coefficient (D=0) → C<sub>D0wa</sub> (parameter)
- "Drag planking" coefficient (D=1) → C<sub>D1wa</sub> (parameter)

The area of the stack invested by the flow of water depends on three factors:

- Presence (D=1) or not (D=0) of debris on the stack basement
- Height of the water → [IDRO1]
- Height of the bottom of the river -> [SONAR1]
- Shape of the stack; with presence of debris the shape of the stack changes, because the debris offer a greater surface on which the water can push.

The area of the stack is calculated using always the same formula, but depending on the scenario the coefficients involved change.

$$A_s = B_s * h_s$$

The  $h_s$  is calculated independently by the presence or not of debris:

- [SONAR1] < bottom\_ref → h<sub>s</sub> = [IDRO1] bottom\_ref
- [SONAR1] > bottom\_ref  $\rightarrow$  h<sub>s</sub> = [IDRO1] [SONAR1]

The *bottom ref* is a parameter.

The **B**<sub>s</sub>, depends instead on the presence or not of debris:

- D=0  $\rightarrow$  B<sub>s</sub> = B<sub>s0</sub> = c
- D=1  $\rightarrow$  B<sub>s</sub> = B<sub>s1</sub> = 2\*D<sub>pylon</sub>

c and  $D_{pile}$  are parameters

At the end we have this formulas:

$(\mathbf{D} = 0)$	(D = 1)	
$A_s = B_{s\theta} * h_s$	$A_s = B_{sI} * h_s$	
$S_{water} = \frac{1}{2} * C_{D0} * \rho_{water} * A_s * V_{water}^2$	$S_{water} = \frac{1}{2} * C_{D1} * \rho_{water} * (A_s * \beta_A) * V_{water}^2$	

### 5.4 Weight of the structure (o the whole stack)

In this case we have to calculate the weight of the stack and the portion of palking which is competence of the stack. Most of the weight that will be considered are constant, the only variable is related about the portion of the stack exposed, so that portion that is above the height of bottom of the river measured as [SONAR1].

To calculate this value, are needed these information:

• Load on the stack  $\rightarrow P_P$  (parameter)

Weight of pulvino → P<sub>pu</sub> (parameter)

• Weight of trunk pylon  $\rightarrow P_{tp}$  (parameter)

• Weight of the beam  $\rightarrow P_b$  (parameter)

• Weight per meter of the single pylon  $\rightarrow P_{py}$  (parameter)

Height of the beam  $\rightarrow h_{beam}$  (parametro)

• Height of stack portion exposed → to be evaluated with [SONAR1]

$$PP_{structure} = P_P + [(2 * P_{pu} + 6 * P_{tp} + 2 * P_b) + 6 * (P_{pv} * (h_{beam} - [SONAR1]))]$$

## 5.5 Shifting weights / Mobile loads (traffic)

As said before in point 5.2, the traffic is not monitored so we have to use combinations of load, to suite the common possible scenarios. In this case we have 3 combinations that are A1, A2 and A3. At each combination was assigned a different contribute in terms of forces.

- A1 → N(A1), Mxx(A1) and Myy(A1)
- A2  $\rightarrow$  N(A2), Mxx(A2) and Myy(A2)
- A3 → N(A3), Mxx(A3) and Myy(A3)

The load combinations generate three kind of different forces: N is a vertical load, Mxx is a moment on the x axes and Myy is a moment on the y axes. The direction of the axes will be define later.

#### 5.6 Brake of vehicles

In presence of traffic, there is the possibility of hard brakes by the vehicles that induce additional forces on the planking.

F<sub>R</sub> → vehicles braking (parameter)

### 5.7 Final remark on the forcing


The forcing that act on the stack 30 are:


- · Push of wind
- · Hydrodynamic thrust
- Weight of the structure
- · Shifting weight / Mobile loads
- Brake of vehicles

The descriptions and the formulas presented until here allow to value the generic force but say nothing about where this force is applied, if to the planking or directly to the stack or to both. The mainly purpose in to calculate the safety coefficient of the stack, all these generic forces must be transfer to the stack. During this "transferring" could born some new forces or some forces could transform in other forces and so on. At the end, all these forces and moments must be transferred also to the two lines of pylons that compose the single stack.

### 5.8 Reference system

Below will be present a schema of the reference system and the naming of forcing still transferred to the single line of pylon.

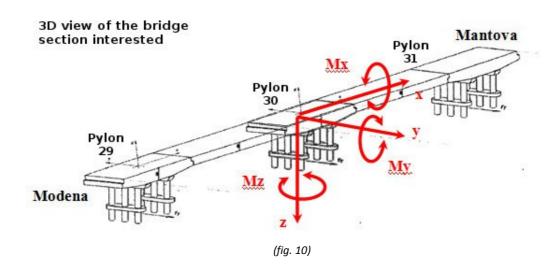

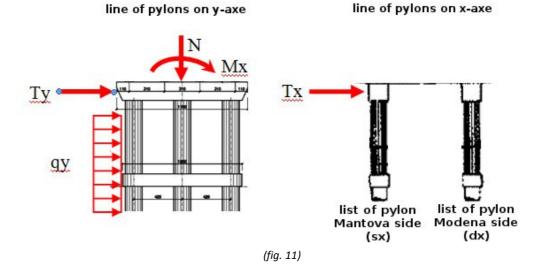

In these pictures, fig.10 and fig.11, are represented the generic forces acting on the stack, then each generic force contains the contributes of many forces. The following table explain how the contributes are distributed into the generic force.

Chassis	Forces						
Action	Weight	Weight Shifting weight Brake Wind W					
N	Х	Х	Х				
Ту				Х			
Tx			Х				
qy					X		
Mx		Х		Х			
Му							
Mz							

(table 1)

To clarify this concept, for example think about the shifting weights. Before was said that the shifting weights, independently from the combination of traffic, exercise three kind of forces: N, Mxx and Myy. These three forces are applied to the planking and in their transfer to the single line of pylon, become N and Mx.

## 6 Forcing: from planking to the single line of pylons

Now we will take a look at each force acting on the bridge and how these forces are transferred from the planking to the single line of pylons.

The signs of the values are all related with the reference system described in the previous chapter (*fig.10* and *fig.11*).

### 6.1 Weight of the planking

The weight of the structure is composed by the weight of the planking that are on the stack ( $P_P$ ) and the weight of the stack itself. For calculate how the weight of the structure is split on the two lines of pylons we consider only the weight of the planking on the stack. The own weight of the stack will be added at the end.

In the following table there are the value of the forces resulting from the analysis.

Description		Line of pylons Mantova side (sx)	Line of pylons Modena side (sx)	Unity measure
[N]	$R1 = P_P / 2$	+5355	+5355	kN
[N]	$R2 = Mt/c_{span}$	+1023	-1023	kN
	[N]	+6378	+4332	kN

*Mt*, *c*<sub>span</sub> are both parameters

## 6.2 Shifting loads (traffic combinations)

For the traffic combinations are reported the three final tables in which are described the decomposition of the forces in the three components as mentioned in the paragraph 5.5.

Each combination will be duplicated in the next calculations due to the fact that the specific combination represents a double scenario because the traffic can be symmetrical (for example cars in left lane and trucks in right lane, but also the vice versa so trucks in left lane and cars in right lane). This stuff is represented by the possibility to the variables to change their sign.

ID Combination		N (Wsl)	Мхх	Муу
		[kN]	[kNm]	[kNm]
A1 1-a		4024	4024 4368	
	Description	Line of pylon Mantova side (sx)	Line of pylon Modena side (dx)	Unity Measure
[N]	R1 = (N/2)	+ 2012	+ 2012	kN
[N]	$R2 = (Myy/c_{span})$	+ 411	- 411	kN
[Mx]	M1 = (Mxx/2)	± 2184	± 2184	kNm

ID Combination		N (Wsl)	Мхх	Муу	
Combination	[kN]	[kNm]	[kNm]		
A2 1-b		3166	8077	3015	
	Description	Line of pylon Mantova side (sx)	Line of pylon Modena side (dx)	Unity Measure	
[N]	R1 = (N/2)	+ 1583	+ 1583	kN	
[N]	$R2 = (Myy/c_{span})$	± 317	∓ 317	kN	
[Mx]	M1 = (Mxx/2)	± 4038.5	± 4038.5	kNm	

ID Combination		N (WsI)		Муу
Combination	[kN]	[kNm]	[kNm]	
A3 2-a		1979	2121	25756
Description		Line of pylon Mantova side (sx)	Line of pylon Modena side (dx)	Unity Measure
[N]	R1 = (N/2)	+ 989.5	+ 989.5	kN
[N]	$R2 = (Myy/c_{span})$	± 2711	<b>∓ 2711</b>	kN
[Mx]	M1 = (Mxx/2)	± 1060.5	± 1060.5	kNm

## 6.3 Vehicle braking

At the same way of the shifting loads, we can't know the direction the brake, then we have report the values in the following table with the corresponding signs.

Description		Line of pylons Mantova side (sx)	Line of pylons Modena side (sx)	Unity measure
[Tx]	$T1 = F_R / 2$	± 103	± 103	kN
[N]	$R1 = F_R * n/c_{span}$	± 72	∓ 72	kN

#### **6.4** Wind

For the wind are still valid the considerations made before on the direction. The only different is that the wind direction is a value measured by monitoring, so we can know if its contribution is positive or negative.

Description		Line of pylons Mantova side (sx)	Line of pylons Modena side (sx)	Unity measure
[Ty]	Fv = (Sv / 2)	± Fv	± Fv	kN
[Ty]	$Rav = (S_{Vplank} * r/c_{span})$	± Rav	∓ Rav	kN
[Mx]	$Mxv = [(S_{Vplank} * e_{plank} + S_{Vtraf} * e_{traf}) / 2]$	± Mxv	± Mxv	kNm

For the [Ty] the Sv is the sum of  $S_{Vplank} + S_{Vtraf}$ , while r,  $e_{plank}$  and  $e_{traf}$  are parameters.

#### 6.5 Water

The water thrust acts only on the stack, since the planking is at a higher level of riverbank; that is to say that the water can never reach the planking, so this force don't need to be transferred to from the planking to the pylons. The only operation is to transform a concentrated force on a distributed load, and split it equally on the two lines of pylons. The values sign is defined because the water can flow only in one direction.

Description		Line of pylons Mantova side (sx)	Line of pylons Modena side (sx)	Unity measure
[qy]	$qy = (S_{WATER} / h_s) / 2$	+ qy	+ qy	kN/m

#### 7 Load combinations on the stack

Since some forces are not monitored, is not possible to know their direction and then the verse of these forces, that depending on the situations can stabilize or destabilize the whole structure.

To define in each moment the maximum stress scenario, we have to define load combinations which enclose all the possible situations.

In this table is reported, for each force, its contribution to the four generic resultant forces.

	Line o	f pylo	ons MANTOV	A sid	e (sx)	Line	of pyl	ons MODENA	side	(dx)
	N	Tx	Ту	qy	Mx	N	Tx	Ту	qy	Mx
Pp	+R1 +R2	0	0	0	0	+R1 -R2	0	0	0	0
A110	+R1 +R2	0	0	0	+M1	+R1 -R2	0	0	0	+M1
A120	+R1 +R2	0	0	0	-M1	+R1 -R2	0	0	0	-M1
A210	+R1 +R2	0	0	0	+M1	+R1 -R2	0	0	0	+M1
A220	+R1 +R2	0	0	0	-M1	+R1 -R2	0	0	0	-M1
A311	+R1 +R2	0	0	0	+M1	+R1 -R2	0	0	0	+M1
A312	+R1 -R2	0	0	0	+M1	+R1 -R2	0	0	0	+M1
A321	+R1 +R2	0	0	0	-M1	+R1 -R2	0	0	0	-M1
A322	+R1 -R2	0	0	0	-M1	+R1 -R2	0	0	0	-M1
FR01	+R1	+T1	0	0	0	-R1	+T1	0	0	0
FR02	-R1	-T1	0	0	0	-R1	-T1	0	0	0
VT0	0	0	± (Fv0 + Rav)	0	± Mxv0	0	0	± (Fv0 - Rav)	0	± Mxv0
VT1A1	0	0	± (FvA1 + Rav)	0	± MxvA1	0	0	± (FvA1 - Rav)	0	± MxvA1
VT1A2	0	0	± (FvA2 + Rav)	0	± MxvA2	0	0	± (FvA2 - Rav)	0	± MxvA2
VT1A2	0	0	± (FvA3 + Rav)	0	± MxvA3	0	0	± (FvA3 - Rav)	0	± MxvA3
AQD0	0	0	0	qy	0	0	0	0	qy	0
AQD1	0	0	0	qy	0	0	0	0	qy	0

#### Notes:

In the combination VTO the bridge is ideally closed, so there is no traffic. The FvO identify the component of the wind force that acts only on the planking and the same thing with for the MxvO.

- -VTO: wind thrust without traffic on the bridge
- -VT1Ax: wind thrust with traffic of type A1 or A2 or A3 on the bridge
- -AQDx: water thrust in presence or not of debris.

## 7.1 Combination

comb_01A	$\rightarrow$	Рр	AQD0	VT0		
comb_01B	$\rightarrow$	Pр	AQD1	VT0		
comb_02A	$\rightarrow$	Pр	AQD0	VT1A1	A110	FR01
comb_02B	$\rightarrow$	Pр	AQD1	VT1A1	A110	FR01
comb_03A	$\rightarrow$	Pр	AQD0	VT1A1	A110	FR02
comb_03B	$\rightarrow$	Pр	AQD1	VT1A1	A110	FR02
comb_04A	$\rightarrow$	Pр	AQD0	VT1A1	A120	FR01
comb_04B	$\rightarrow$	Pр	AQD1	VT1A1	A120	FR01
comb_05A	$\rightarrow$	Pр	AQD0	VT1A1	A120	FR02
comb_05B	$\rightarrow$	Pр	AQD1	VT1A1	A120	FR02
comb_06A	$\rightarrow$	Pр	AQD0	VT1A2	A210	FR01
comb_06B	$\rightarrow$	Pр	AQD1	VT1A2	A210	FR01
Comb_07A	$\rightarrow$	Pр	AQD0	VT1A2	A210	FR02
comb_07B	$\rightarrow$	Pр	AQD1	VT1A2	A210	FR02
comb_08A	$\rightarrow$	Pр	AQD0	VT1A2	A220	FR01
comb_08B	$\rightarrow$	Pр	AQD1	VT1A2	A220	FR01
comb_09A	$\rightarrow$	Pр	AQD0	VT1A2	A220	FR02
comb_09B	<b>→</b>	Рр	AQD1	VT1A2	A220	FR02
comb_10A	$\rightarrow$	Pр	AQD0	VT1A3	A311	FR01
comb_10B	$\rightarrow$	Pр	AQD1	VT1A3	A311	FR01
comb_11A	$\rightarrow$	Pр	AQD0	VT1A3	A311	FR02
comb_11B	$\rightarrow$	Pр	AQD1	VT1A3	A311	FR02
comb_12A	$\rightarrow$	Pр	AQD0	VT1A3	A312	FR01
comb_12B	$\rightarrow$	Pр	AQD1	VT1A3	A312	FR01
comb_13A	$\rightarrow$	Pр	AQD0	VT1A3	A312	FR02
comb_13B	$\rightarrow$	Pр	AQD1	VT1A3	A312	FR02
comb_14A	$\rightarrow$	Pр	AQD0	VT1A3	A321	FR01
comb_14B	$\rightarrow$	Pр	AQD1	VT1A3	A321	FR01
comb_15A	$\rightarrow$	Pр	AQD0	VT1A3	A321	FR02
comb_15B	$\rightarrow$	Pр	AQD1	VT1A3	A321	FR02
comb_16A	$\rightarrow$	Pр	AQD0	VT1A3	A322	FR01
comb_16B	$\rightarrow$	Рр	AQD1	VT1A3	A322	FR01
comb_17A	$\rightarrow$	Рр	AQD0	VT1A3	A322	FR02
comb_17B	$\rightarrow$	Рр	AQD1	VT1A3	A322	FR02

Each of these combinations will provide a set of values N, Tx, Ty, qy and Mx with their specific signs that identify the forces direction.

At each combinations must be add the weight of the stack because, as said before, was "ignored" in the calculations of the force due by the weight of the structure.

This mean that the generic resultant force N must be increased to a N<sub>Ps</sub>.

Defined


$$PP_{s} = [(2 * P_{pu} + 6 * P_{tp} + 2 * P_{b}) + 6 * (P_{p} * (h_{beam} - [SONAR1]))] \rightarrow N_{Ps} = + \frac{PP_{s}}{2}$$

Now, using the structural model is possible to determine the stresses in the six pylons and be able to choose the most stressed pylon, identifying the load combination that generates it.

## 8 Stress to the joints


Before provide the formulas that allow to determine the stresses at the bases of the six pylons that compose the stack n.30, is needed to introduce some information and schemes.

## 8.1 numbering of the individual pylons

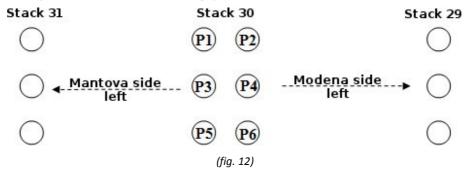


#### 8.2 Introduction to the structural model


### 8.2.1 (y direction): flat frame

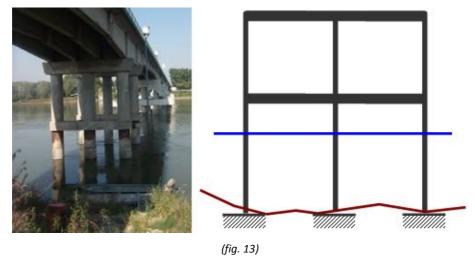

## 8.2.2 (x direction):

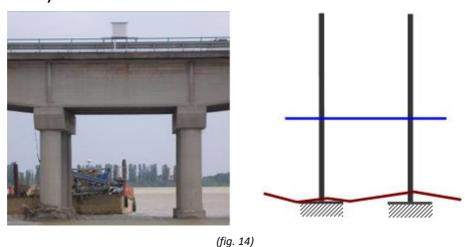

## 8.3 Geometry of the structural model (parameters from the parameters table)

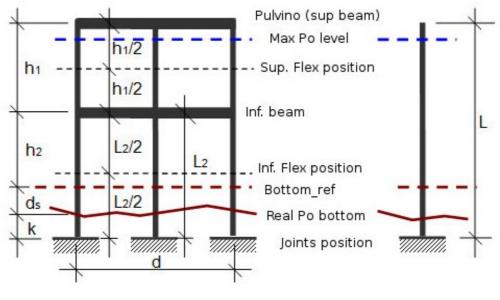

(fig. 15)


Distance	Value		Notes
L	varia	able	Depends by ds
L2	variable		Depends by ds
h1	7.30	[m]	Parameter
h2	7.50	[m]	Parameter
(h1)/2	3.65	[m]	Parameter
(L2)/2	varia	able	Depends by ds
ds	variable		Depends by the monitoring
d	8.5		Parameter (frame width)
k	0	[m]	Parameter (by hypothesis)

#### Notes:

The geometry provided in the pictures before, defined some distances that are present in the final formulas. All these parameters must be put into the parameters table.

The formulas reported below contain many parameters that up to day are set to zero (or to a default value) due to a lack of specific information.

## 8.4 Summary of kind of forces acting on the frame

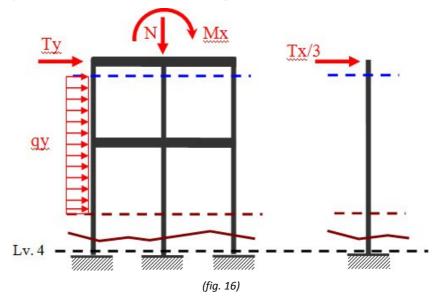


#### Notes:

... something that I don't understand xD ..

## 8.5 Structure weight

In the figure below are represented only the load external at the stack, so we can neglect the weight of the stack because is by own definition is not an external load on the stack.


The picture shows the weights of the frame split in pulvino weight (qpu), pylon weight (qp) and beam weight (qb). In the section at the base, naming "Level 4".

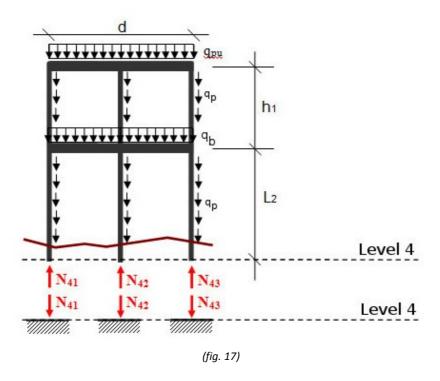

$$N_{41} = N_{42} = N_{43} = \frac{(q_{pu} + q_b) * d}{3} + q_p * (h_1 + L_2)$$


The weight of the truck stack (pts) is equal to qp\*h1

## 8.6 Vertical load N

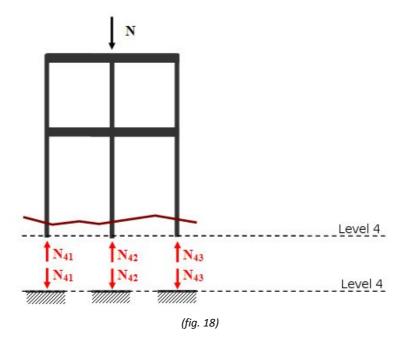

$$N_{41} = N_{42} = N_{43} = \frac{N}{3}$$


## 8.7 Bending moment

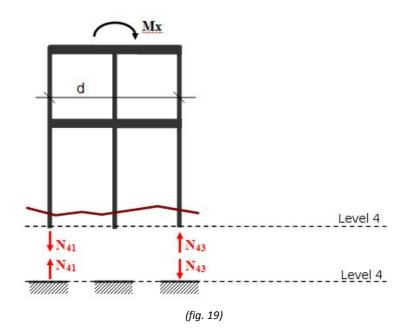

$$N_{41} = -N_{43} = \frac{M_x}{d}$$

$$N_{42}=0$$

## 8.8 Cutting force

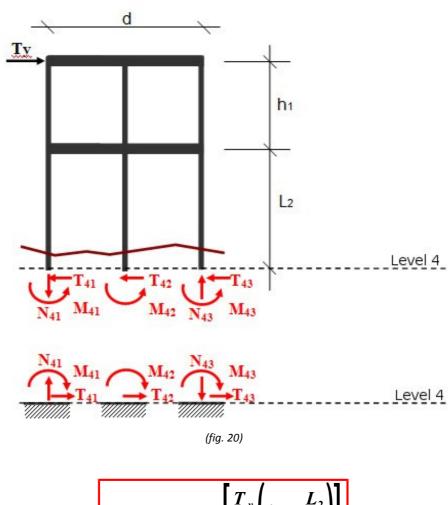


$$N_{41} = -N_{43} = \left[ \frac{T_y}{d} \left( h_1 + \frac{L_2}{2} \right) \right]$$

$$T_{41} = T_{42} = T_{43} = \frac{T_y}{3}$$


$$M_{41} = M_{42} = M_{43} = \frac{T_y * L_2}{6}$$

## 8.9 Distributed Load (qy)


This topic is not easy to discuss at the joints, because the area of interest is variable since depends on the level of the river. For simplicity are evaluated only two cases: case A in which the level of the river is higher than the inferior beam and case B in which the level of the river is lesser than the inferior beam, like in the figure below.

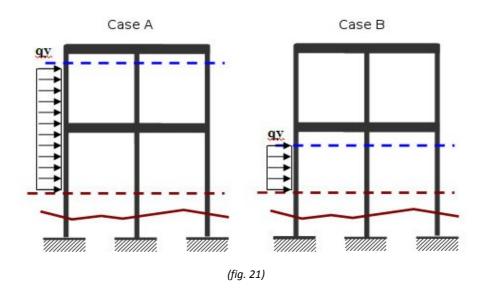

Later, is replaced the generic distributed load with a system of concentrated equivalent forces. For a better understanding, are reported the all steps to determine the equivalent concentrated forces.

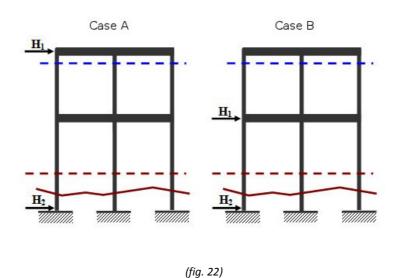


Once determined the resulting H, its moment is balanced respect a joint, point A fig23, with the component H1 that is the only component that generates a moment; the other component H2 is obtained by difference.

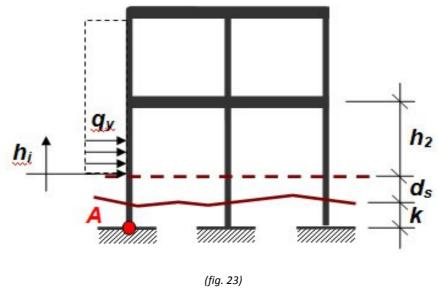

Case A $h_i >= h_2$	Case B h <sub>i</sub> < h <sub>2</sub>		
Calculation of	the resulting H		
$H = q_y * h_i$	$H = q_y * h_i$		
Calculation of the momer	nt of H, respect to point A		
$M_{(H)} = H * \left(\frac{h_i}{2} + d_s + k\right)$	$M_{(H)} = H * \left(\frac{h_i}{2} + d_s + k\right)$		
Calculation of H1, equ	aling the moment of H		
$H_1 = \frac{M_{(H)}}{h_1 + L_2}$	$H_1 = \frac{M_{(H)}}{L_2}$		
Calculation of H2 by difference			
$H_2 = H - H_1$	$H_2 = H - H_1$		


Even if the concentrated forces for both configurations have the same encoding (H1 and H2), their values are different, since derive from a different distribution of  $q_{\text{y}}. \label{eq:qy}$ 

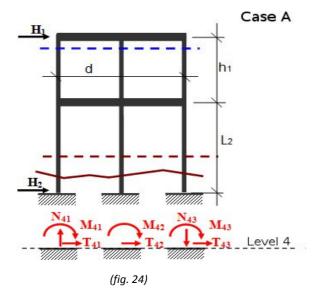

$$N_{41} = -N_{43} = \left[ \frac{H_1}{d} \left( h_1 + \frac{L_2}{2} \right) \right]$$

$$T_{41} = T_{42} = T_{43} = \frac{H_1 + H_2}{3}$$

$$M_{41} = M_{42} = M_{43} = \frac{H_1 L_2}{6}$$

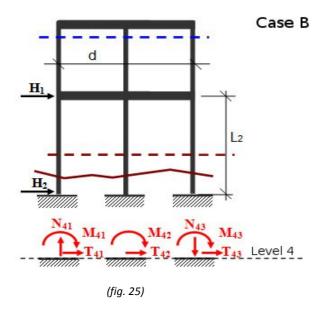

$$N_{41} = -N_{43} = \frac{H_1 * L_2}{2d}$$

$$T_{41} = T_{42} = T_{43} = \frac{H_1 + H_2}{3}$$


$$M_{41} = M_{42} = M_{43} = \frac{H_1 L_2}{6}$$

This note allow to define the case B as a particular case of case A: if the Po level was lower than the beam, the formula of the axial stress of case A should reset the h1 height. Next are identify the end formulas in their range of use.

	Case A (hi >= h2)	Case B (hi < h2)		
N	$N_{41} = -N_{43} = \left[ \frac{H_1}{d} \left( h_1 + \frac{L_2}{2} \right) \right]$	$N_{41} = -N_{43} = \frac{H_1 * L_2}{2d}$		
T	$T_{41} = T_{42} = T_4$	$_{13} = \frac{H_1 + H_2}{3}$		
M	$M_{41} = M_{42} = M_{43} = \frac{H_1 L_2}{6}$			

## 8.10 Cutting force $T_x$

The chassis subject to a force Tx, has a structural behaves like a "shelf". The figure below defines the stresses that this Tx force make on the joint. Remember that Tx/3 is the force that acts on the single pylon.

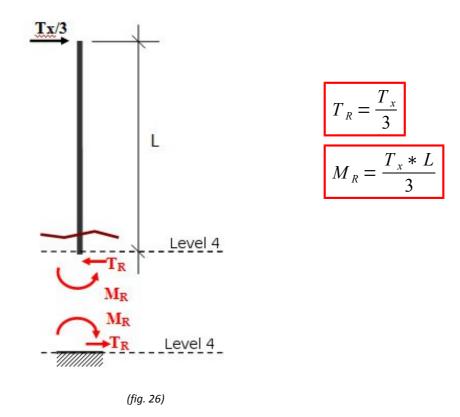

## 8.11 superposition of effects (effects overlapping)

The stresses that each force generates to the joints can be simply added, determining the total stresses. The representation of this process will be show separating the stresses to the joints and explaining this stress for each of the three pylons. To be general, the formulas will be refer to the three pylons of the generic line not with the encoding of page 19 (fig. 12) but with the simple encoding of 1, 2 and 3. So the formulas are valid for both of the lines of the stack. Moreover the generic stress will have a subscript that identify the direction (x or y) and the reference section, the number 4. In the following tables, from 2 to 6 are defined respectively the stresses to the joints: axial force N, cutting force Tx, cutting force Ty, bending moment Mx and bending moment My.

## **Axial stress N**

	Pylon 1	Pylon 2	Pylon 3
P.P.	$N_4 = \frac{(q_{pu} + q_b) * d}{3} + q_{pylon} * L$	$N_4 = \frac{(q_{pu} + q_b) * d}{3} + q_{pylon} * L$	$N_4 = \frac{(q_{pu} + q_b) * d}{3} + q_{pylon} * L$
N	$N_4 = -\frac{N}{3}$	$N_4 = -\frac{N}{3}$	$N_4 = -\frac{N}{3}$
Ту	$N_4 = -\left[\frac{T_y}{d}\left(h_1 + \frac{L_2}{2}\right)\right]$		$N_4 = \left[ \frac{T_y}{d} \left( h_1 + \frac{L_2}{2} \right) \right]$
Mc	$N_4 = -\frac{M_x}{3}$		$N_4 = \frac{M_x}{3}$
qy	$N_4 = -\left[\frac{H_1}{d}\left(h_1 + \frac{L_2}{2}\right)\right]$		$N_4 = \left[ \frac{H_1}{d} \left( h_1 + \frac{L_2}{2} \right) \right]$
Тх			

Tab.2: contributions of singles forces to the axial stress  ${\sf N}$ 

# **Cutting force Tx**

	Pylon 1	Pylon 2	Pylon 3
P.P.			
N			
Ту			
Мс			
qy			
Тх	$T_{x4} = \frac{Tx}{3}$	$T_{x4} = \frac{Tx}{3}$	$T_{x4} = \frac{Tx}{3}$

Tab.3: contributions of singles forces to the cutting action Tx

# **Cutting force Ty**

	Pylon 1	Pylon 2	Pylon 3
P.P.			
N			
Ту	$T_{y4} = \frac{Ty}{3}$	$T_{y4} = \frac{Ty}{3}$	$T_{y4} = \frac{Ty}{3}$
Мс			
qy	$T_{y4} = \frac{q_y * h_i}{3}$	$T_{y4} = \frac{q_y * h_i}{3}$	$T_{y4} = \frac{q_y * h_i}{3}$
Тх			

Tab.4: contributions of singles forces to the cutting action Ty

# **Blending stress Mx**

	Pylon 1	Pylon 2	Pylon 3
P.P.			
N			
Ту	$M_{x4} = \frac{T_y * L_2}{6}$	$M_{x4} = \frac{T_y * L_2}{6}$	$M_{x4} = \frac{T_y * L_2}{6}$
Мс			
qy	$M_{x4} = \frac{H_1 * L_2}{6}$	$M_{x4} = \frac{H_1 * L_2}{6}$	$M_{x4} = \frac{H_1 * L_2}{6}$
Тх			

Tab.5: contributions of singles forces to the stress Mx

# **Blending stress My**

	Pylon 1	Pylon 2	Pylon 3
P.P.			
N			
Ту			
Мс			
qy			
Тх	$M_{y4} = \frac{T_x * L}{3}$	$M_{y4} = \frac{T_x * L}{3}$	$M_{y4} = \frac{T_x * L}{3}$

Tab.6: contributions of singles forces to the stress My

## 9 Verification of "Pressoflessione"

<..."Pressoflessione" is the combination of compressive and bending stress..."

#### 9.1 M-N DOMAIN

#### 1) PARAMETER DATA

External radius	75	cm
Internal radius	0	cm
Number of identical bars	12	
Bars diameter	2,4	cm
Barycentric concrete cover	4,2	cm
Steel class	FeV44K	
Concrete class	C25/30	

tab. 7

These are other parameters (tab. 7) to add at the parameters tables in the DB. This parameters are used to calculated the M-N domains and is not important how is the calculation because we receive directly the table with the values to can draw the domain graph/graphs.

The value M of a pylon is easily calculated with:  $M = \sqrt{Mx^2 + My^2}$ 

The idea is that each pylon has at the end 2 resulting forces: N and M. Then we can "put" each pylon into the graph to see if the pylon is in or not into the domain. If the pylon is in, the pylon is "ok", but if the pylon is out it is in a very dangerous situation from a structural point of view.

So, pylon in  $\rightarrow$  ok, pylon out  $\rightarrow$  danger.

The risk factor (critical factor) is the expression of the pylon position into the domain, I mean that a pylon close to the axes origin represents a minor dangerous situation than a pylon that still is in the domain but is close to the domain bound because with a little variations of the conditions this pylon could cross the domain border and transforms in a dangerous situations.

So, the risk factor is a value that represents this "proximity" to the domain bounds, more a pylon is close to the domain bound more dangerous is the situation.

However, the calculation of this "proximity" is not an easy calculation and we proceed with two way in parallel:


- 1. Approximation thought linearization of the proximity
- 2. Representations of the six pylons of the worst load combination selected with the approximation at previews point, into the M-N domain as the EU 305/2011 Regulation requires.


The following table (*tab.8*) contains the values that describe the M-N domain, and also these values have to be stored into the db, maybe in another table. In this way also the View part can reads these value to be able to plot them.

Into graph M-N DOMAIN (1) is represented the more simple M-N domain with the values in tables, but we could add other M-N domain into DB to define different work areas of the structure. For instance the other graph M-N DOMAIN (2) represents two different domains: into the pink one all is "ok", between pink and blue  $\rightarrow$  "attention" and then if out of blue  $\rightarrow$  "fast reaction or good bye bridge".

#### 2) M-N DOMAIN VALUES

Point	N1 (kN)	M1 (kNm)
1	-2029,78	0
2	-1895,17	96,4807
3	-1673,87	254,95
4	-1401,65	446,55
5	-1078,88	660,403
6	-241,319	1188,31
7	3104,27	2887,33
8	4622,78	3468,79
9	7466,71	4210,28
10	13342,2	4572,35
11	15880,5	4222,35
12	18998,7	3480,02
13	22632,8	2136,98
14	24958,6	1016,27
15	26441	293,541
16	27023	0
17	26441	-293,541
18	24958,6	-1016,27
19	22632,8	-2136,98
20	18998,7	-3480,02
21	15880,5	-4222,35
22	13342,2	-4572,35
23	7466,71	-4210,28
24	4622,78	-3468,79
25	3104,27	-2887,33
26	-241,319	-1188,31
27	-1078,88	-660,403
28	-1401,65	-446,55
29	-1673,87	-254,95
30	-1895,17	-96,4807
31	-2029,78	0

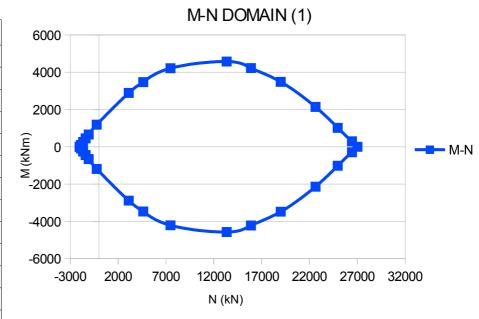

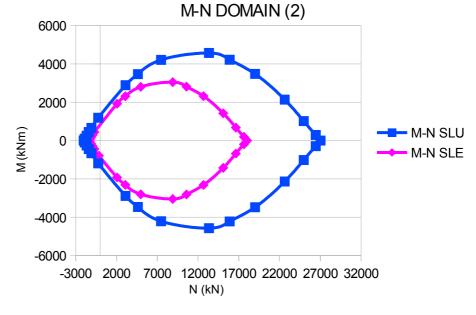

Tab.8

**OSS:** we don't know the formulas to calculate the domain values. We receive the tables already filled.

The M-N domain table in the database has this schema:

#### m\_n\_domain

+		Null   K	Gey   Default	Extra
ID   N   M	int(10)   float     float	NO P	PRI   NULL	auto_increment

#### 9.2 Explanation on how the web behavior of this information

The last database design changes are the following:

#### 9.2.1 Tables of "grouped data"

sensor data 10 min /sensor data 1 hour /sensor data 1 day

+	+	+	+	·	++
Field	Type	Null	Key	Default	Extra
ID	int(10)	NO	PRI	NULL	auto increment
wind speed	float	l NO		NULL	_ 
wind direction	float	l NO		NULL	l I
wind_speed_max	float	l NO		NULL	l I
wind_direction_max	float	l NO		NULL	l I
hydrometer	float	NO		NULL	l I
hydrometer_variance	float	NO		NULL	l I
sonar	float	NO		NULL	l I
sonar_variance	float	NO		NULL	l I
sonar_perc_correct	float	NO		NULL	
·	float	NO		NULL	l I
sonar_perc_outOfWater		NO		NULL	
sonar_perc_error	float	NO		NULL	
· — — —	float	NO		NULL	
safety_factor_00	float	NO		NULL	
stressed_pylon_00	int	NO		NULL	
safety_factor_01	float	NO		NULL	
stressed_pylon_01	int	NO		NULL	
safety_factor_10	float	NO		NULL	
stressed_pylon_10	int	NO		NULL	
safety_factor_11	float	NO		NULL	
stressed_pylon_11	int	NO		NULL	
water_speed	float	NO NO		NULL	
water_flow_rate	float	l NO		NULL	L CYPRENT TIMESTAND
timestamp	timestamp	l NO		CURRENT_TIMESTAMP	on update CURRENT_TIMESTAMP
+	+	+	+		++

- In these tables are stored the information about the safety factor in the whole four traffic combinations, so 00, 01, 10 and 11. For the web view this four columns are used to show the critical factor related to what the user has selected on the checkbox (or what you have choose to use as selection element). Also these four columns are used in the historical page, to show the trend of the safety factor in time.
- Other two new columns are added and are "water speed" and "water flow rate"; these two
  information are requested from the customer because can be useful to the engineers know those
  values.
- There are no more the four columns of the "stressed\_pylon\_xx" because these information can be associated in a univocally way to the safety factor, because we don't monitoring the traffic so we can't know what is the pylon that the worst combination between those of type XX is stressing more, because also into the same type of combinations the forces and their direction changes and then also change the more stressed pylon.
- To be able to represent this kind on information about the situation of the pylons we have to do a more general situation for each traffic combination; below is explained it.

#### 9.2.2 Table of "worst case"


Field	Type	Null   Key	Default	Extra
ID	int(10)	NO PRI	NULL	auto increment
pylon number	int	NO	NULL	
N —	float	NO	NULL	
Tx	float	NO	NULL	
Ty	float	NO	NULL	
Mx	float	NO	NULL	
Му	float	NO	NULL	
M	float	NO	NULL	
CS	float	NO	NULL	
comb number	float	NO I	NULL	
timestamp	timestamp	I NO I	CURRENT TIMESTAMP	on update CURRENT TIMESTAM

In these four new tables are stored the information about the worst case for each pylon for each kind of combination. This mean that in the table "worst\_case\_00" there are the information about all the six pylons, one pylon per row. In each row there is stored the information on the forces acting on that pylon in its worst case between the whole combination of kind 00 (there is only one combo for type 00 and 01, but the idea and the algorithm are the same). Then are stored the c.s. (safety factor) and the combo number that generate that c.s. .

These tables have to been used into the view part, in this simple way. Each row of a table represents the information about the worst situation of each pylon in this specific combination and the columns "**N**" and "**M**" are the coordinates of the specific pylon into the **M-N Domain** (see chapt. 9.1) so the view part can use these data to represent all the six pylons into the M-N Domain graph for the specific combination of *T-D* user selection.

As the same way the view change the showed safety factor value based on the selection of T-D checkbox (or anything you thought to use to let the user to make a selection), the view should change the M-N Domain graph based on this selection and read coordinates from the correct table of worst case.

In each table of worst case should be stored only the last useful data about pylons situation so the respective dao object used by the view module, has to do only a select \* from the correct table and then the view module has just to show in the graph the pylons (example in fig. 27)

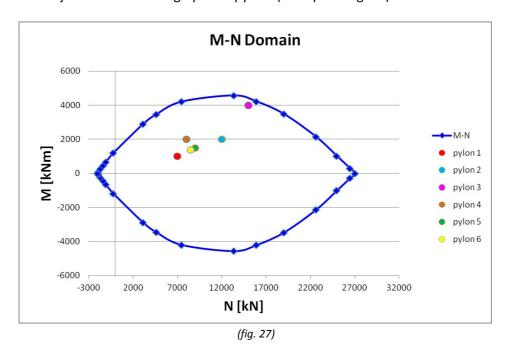

To draw the M-N domain has to be use the value into the M-N table into the database.

For the M-N domain information see the previous chapt. 9.1 on the M-N Domain.

#### **NOTE:**

For the moment there is and there will be a single M-N domain so what there is in the M-N domain table should not change and because for the point where we arrived in the development we have said to the customer that we develop the product with this requirements and to be able to conclude the product.

→ So for this project we will use only one domain, the N1-M1!!

# **10 Table of parameters**

GEOMETRY OF THE STACK N.30				
D <sub>pylon</sub>	1.5	m	Diameter of the pylon	
C <sub>span</sub>	9.5	m	Distance between two line of pylon	
h <sub>beam</sub>	17.5	m	Height of the lower beam	
bottom_ref	10	m	Height of the reference of the bottom of the river	
h1	7.3	m	Distance between the pulvino and the inferior beam	
h2	7.5	m	Distance between the inferior beam and the bottom_ref	
(h1)/2	3.65	m	Mean value of h1	
k	0	m	Sinking of the joints over the ground	
d	8.5	m	Width of the chassis	
R <sub>Ipylon</sub>	0	m	Internal radius	
numb_id_bar	12		Number of identical bars	
D <sub>bar</sub>	0,024	m	Bars diameter	
Ccb	0,042	m	Barycentric concrete cover	
Steel_class	FeV44K		Steel class	
Concrete_class	C25/30		Concrete class	
WIND THRUST				
α	6	0	Planimetric anticlockwise inclination of the bridge form the north	
C <sub>Dwi</sub>	2	-	"Drag planking" coefficient	
Pair	1.2	Kg/m <sup>3</sup>	Air density	
Astack	168	m²	Planking area exposed to the wind pressure	
A <sub>traf</sub>	177	m²	Surface of traffic exposed to the wind pressure	
β1	1	-	Coefficient of reduction for A1 and A2 traffic scenarios	
β <sub>2</sub>	0.5	-	Coefficient of reduction for A3 traffic scenario	
r	2.25	m	Thrust center due to longitudinal asymmetry, only of S <sub>Vplank</sub>	
e <sub>plank</sub>	1.91	m	"arm" for bending moment of S <sub>Vplank</sub>	
e <sub>traf</sub>	3.41	m	"arm" for bending moment of S <sub>Vtraf</sub>	
HYDRODYNAMIC THR	UST			
C <sub>D0wa</sub>	2.4	-	"Drag planking" coefficient (D=0)	
C <sub>D1wa</sub>	2	-	"Drag planking" coefficient (D=1)	
Pwater	1000	Kg/m³	Water density	
βΑ	0.5	-	Area reduction for D=1	
а	-0.0014	-	Coefficient for the relation V <sub>water(</sub> [IDRO1])	
b	0.0341	-	Coefficient for the relation V <sub>water(</sub> [IDRO1])	
С	0.052	-	Coefficient for the relation V <sub>water(</sub> [IDRO1])	

h <sub>water1</sub>	17	m	Height limit of the river for parameters a1,b1,c1	
a1	46	-	Coefficient for Q(h) when [IDRO1] < h <sub>water1</sub>	
b1	-902	-	Coefficient for Q(h) when [IDRO1] < h <sub>water1</sub>	
c1	4658	-	Coefficient for Q(h) when [IDRO1] < h <sub>water1</sub>	
h <sub>water2</sub>	22	m	Height limit of the river for parameters a2,b2,c2	
a2	60	-	Coefficient for Q(h) when [IDRO1] < h <sub>water2</sub>	
b2	-1350	-	Coefficient for Q(h) when [IDRO1] < h <sub>water2</sub>	
c2	8000	-	Coefficient for Q(h) when [IDRO1] < h <sub>water2</sub>	
h <sub>max</sub>	25.3	m	Max height level of river and limit for use parameter a3,b3,c3	
a3	96		Coefficient for Q(h) when h <sub>water2</sub> < [IDRO1] < h <sub>max</sub>	
b3	-2800		Coefficient for Q(h) when h <sub>water2</sub> < [IDRO1] < hmax	
с3	22500		Coefficient for Q(h) when h <sub>water2</sub> < [IDRO1] < hmax	
WEIGHT OF THE STACE	K			
Рр	10710	kN	Plank weight on the stack	
Ppu	1680	kN	Weight of single pulvino	
Ptp	1601	kN	Weight of the trunk of pylon	
Pb	1007	kN	Weight of the single beam	
Рру	44	kN/m	Weight per meter of pylon	
Mt	9720	kNm	Moment generated by asymmetry	
SHIFTING WEIGHTS				
N(A1)	4024	kN	Axial load for load combination A1	
Mxx(A1)	4368	kNm	Bending moment for load combination A1	
Myy(A1)	3908	kNm	Bending moment for load combination A1	
N(A2)	3116	kN	Axial load for load combination A2	
Mxx(A2)	8077	kNm	Bending moment for load combination A2	
Myy(A2)	3015	kNm	Bending moment for load combination A2	
N(A3)	1979	kN	Axial load for load combination A3	
Mxx(A3)	2121	kNm	Bending moment for load combination A3	
Муу(А3)	25756	kNm	Bending moment for load combination A3	
Vehicle braking				
F <sub>r</sub>	206	kN	Value of the force due to the vehicle braking	
n	3.3	m	"arm" for the vehicle braking moment	