

# Intelligent Infrared CO2 Module (Model: MH-Z19B)

**User's Manual** 

(Version: 1.2)

Valid from: 2017.03.22

Zhengzhou Winsen Electronics Technology Co., Ltd
ISO9001 certificated company

**Statement** 

This manual's copyright belongs to Zhengzhou Winsen Electronics Technology Co., LTD. Without

the written permission, any part of this manual shall not be copied, translated, stored in database

or retrieval system, also can't spread through electronic, copying, record ways.

Thanks for purchasing our product. In order to let customers use it better and reduce the faults

caused by misuse, please read the manual carefully and operate it correctly in accordance with the

instructions. If users disobey the terms or remove, disassemble, change the components inside of

the sensor, we shall not be responsible for the loss.

The specific such as color, appearance, sizes &etc., please in kind prevail.

We are devoting ourselves to products development and technical innovation, so we reserve the

right to improve the products without notice. Please confirm it is the valid version before using this

manual. At the same time, users' comments on optimized using way are welcome.

Please keep the manual properly, in order to get help if you have questions during the usage in the

future.

Zhengzhou Winsen Electronics Technology CO., LTD.

## MH-Z19B NDIR CO2 Module

### 1. Profile



MH-Z19B NDIR infrared gas module is a common type, small size sensor, using non-dispersive infrared (NDIR) principle to detect the existence of CO 2 in the air, with good selectivity, non-oxygen dependent and long life. Built-in temperature compensation; and it has UART output and PWM output. It is developed by the tight integration of mature infrared absorbing gas detection technology, precision optical circuit design and superior circuit design.

# 2. Applications

*HVAC refrigeration	*Air cleaner device	*Indoor air quality monitoring
TIVAC ICITISCIACION	All cicalici acvicc	indoor an quanty morntoning

\*Smart home \*Ventilation system \*School

## 3. Main Features

Chamber is gold plated, water-proof and anti-corrosion High sensitivity, low power consumption Good stability

Temperature compensation, excellent linear output


Multiple output modes: UART, DAC, PWM

Long lifespan

Anti-water vapor interference, anti-poisoning

## 4. Structure


## A. Pins connection type:

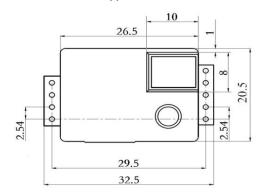


4,5


Unit: mm


# B. Terminal connection type:

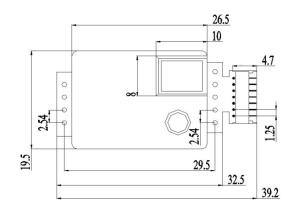

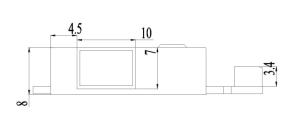

## Pins definition:

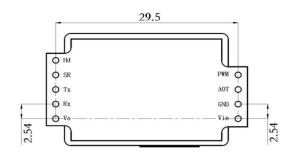



Pin	Definition
Vin (Pin4)	Positive pole of power (Vin)
GND (Pin3)	Negative pole of power (GND)
\/o (Bin2)	Analog output(0.4 $\sim$ 2 V)
Vo (Pin2)	(0~3V range could be customized)
PWM (Pin7)	PWM
HD (Bis1)	HD(zero point calibration, low level lasting
HD (Pin1)	for over 7s is effective)
Rx (Pin5)	UART(RXD)TTL Level data input
Tx (Pin6)	UART(TXD)TTL Level data output

# 5. Detection range and accuracy


Detection Gas	Formula	Detection Range	Accuracy		
Carbon Dioxide	CO2	0~2000ppm	± (50ppm+5% reading value)		
		0~5000ppm			
		0~10000ppm	± 10 reading value		

# 6. Main parameters

Model No.	MH-Z19B
Detection Gas	CO2
Working voltage	4.5 ~ 5.5 V DC
Average current	< 20mA (@5V power supply)
Peak current	150mA (@5V power supply)
Interface level	3.3 V (Compatible with 5V)
Detection Range	Please refer to Part5.
	Serial Port (UART) (TTL level 3.3V)
Output signal	PWM
Output signal	Analog output(DAC) (default 0.4~2V)
	(0~3V range could be customized)
Preheat time	3 min
Response Time	T <sub>90</sub> < 120 s
Working temperature	0 ~ 50 °C
Working humidity	0 ~ 90% RH (No condensation)
Weight	5 g
Lifespan	> 5 years

# 7. Output

PWM output	
Take 0~2000ppm for example	
CO <sub>2</sub> output range	0~2000ppm
Cycle	1004ms±5%
Cycle start high level output	2ms(theoretical value)
The middle cycle	1000ms±5%
cycle end low level output	2ms(theoretical value)
CO <sub>2</sub> concentration: C <sub>ppm</sub> =2000×(T <sub>H</sub> -2ms)/(T <sub>H</sub> +T <sub>L</sub> -4ms)	
C <sub>ppm:</sub> CO2 concentration could be calculated by PWM output T <sub>H</sub> high level output time during cycle T <sub>L</sub> low level output time during cycle  O PPM  4 PPM  4 PPM  8 PPM	2 m6  2 m6  4 m8  4 m8  4 m8  4 m8  4 m8

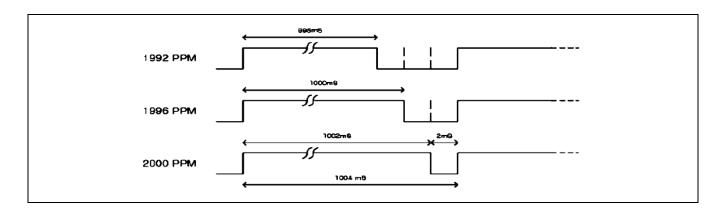

# Serial port output (UART)

## **Hardware connection**

Connect module's Vin-GND-RXD-TXD to users' 5V-GND-TXD-RXD. (Users must use TTL level. If RS232 level, it must be converted.)

# **Software setting**

Set serial port baud rate be 9600, data bit 8 bytes, stop bit 1byte, parity bit null.

Commands							
0x86	Read CO2 concentration						
0x87	Calibrate Zero Point (ZERO)						
0x88	Calibrate Span Point (SPAN)						
0x79	ON/OFF Self-calibration function for zero point						
0x99	Detection range setting						

<b>0x86</b> - Rea	0x86- Read CO2 concentration									
Sending command										
Byte0	Byte1	Byte2	Byte3	Byte4	Byte5	Byte6	Byte7	Byte8		
Start Byte	Reserved	Command	-	-	-	-	-	Checksum		
0xFF	0x01	0x86	0x00	0x00	0x00	0x00	0x00	0x79		
Return valu	е									
Byte0	Byte1	Byte2	Byte3	Byte4	Byte5	Byte6	Byte7	Byte8		
Start Byte	Command	Concentration (High 8 Byte)	Concentration (Low 8 Byte)	-	-	-	-	Checksum		
0xFF	0x86	HIGH	LOW	-	-	-	-	Checksum		

CO2 concentration = HIGH \* 256 + LOW

For example:

Send command FF 01 86 00 00 00 00 00 79, Return value FF 86 02 20 00 00 00 05 58

How to calculate concentration: convert hexadecimal 02 into decimal 2, hexadecimal 20 into decimal 32, then 2\*256+32=544ppm

0x87-ZERO POINT CALIBRATION									
Send command									
Byte0	Byte1	Byte2	Byte3	Byte4	Byte5	Byte6	Byte7	Byte8	
Start Byte	Reserved	Command	-	-	-	-	-	Checksum	
0xFF	0x01	0x87	0x00	0x00	0x00	0x00	0x00	0x78	

### For example:

Put the module in 400ppm standard CO2 gas or clean outdoor environment for at least 20 min;

Send command FF 01 87 00 00 00 00 00 78 for zero point calibration.

Caution: Forbid sending this command in other environment except above.

0x88- SPAN POINT CALIBRATION									
Send command									
Byte0	Byte1	Byte2	Byte3	Byte4	Byte5	Byte6	Byte7	Byte8	
Start Byte	Reserved	Command	Span	Span	-	-	-	Checksum	
			(High 8 Byte)	(low 8 Byte)					
0xFF	0x01	0x88	HIGH	LOW	0x00	0x00	0x00	Checksum	

#### For example:

Put the module in 2000ppm CO2 gas, stability for 20 min at least.

Send command FF 01 88 07 D0 00 00 00 A0 for span calibration

Caution: Zero calibration should be done before span calibration.

Forbid sending this command while the module is not in standard gas environment.

0x79- ON/OFF Self-calibration for zero point									
Send command									
Byte0	Byte1	Byte2	Byte3	Byte4	Byte5	Byte6	Byte7	Byte8	
Start Byte	Reserved	Command	-	-	-	-	-	Checksum	
0xFF	0x01	0x79	0xA0/0x00	0x00	0x00	0x00	0x00	Checksum	

## For example:

ON this function, send command: FF 01 79 A0 00 00 00 00 E6 OFF this function, send command: FF 01 79 00 00 00 00 86

NOTE: This function is on when Byte3 is 0xA0 while this function is off when Byte3 is 0x00.

Default status is that this function is on.

0x99- Detection range setting									
Send command									
Byte0	Byte1	Byte2	Byte3	Byte4	Byte5	Byte6	Byte7	Byte8	
Start	Reserved	Command	Reserved	Detection	Detection	Detection	Detection	Checksum	
Byte				range 24~32	range	range	range 0~7		
				bit	16~23 bit	8~15 bit	bit		
0xFF	0x01	0x99	0x00	Data 1	Data 2	Data 3	Data 4	Checksum	

Note: Detection range should be  $0^2000$ ,  $0^5000$ ,  $0^10000$ ppm.

For example: set 0~2000ppm detection range, send command: FF 01 99 00 00 00 07 D0 8F set 0~10000ppm detection range, send command: FF 01 99 00 00 00 27 10 2F



Checksum o	alculation me	ethod							
Checksum =	(Negative (B	yte1+Byte2+Byte3	3+Byte4+Byte5+Byt	te6+Byte7))+1					
For example	2:								
Byte0	Byte1	Byte2	Byte3	Byte4	Byte5	Byte6	Byte7	Byte8	
Start Byte	Reserved	Command	-	-	-	-	-	Checksum	
0xFF	0x01	0x86	0x00	0x00	0x00	0x00	0x00	Checksum	
Calculating	Checksum:								
1, 0x01 + 0	)x86 + 0x00 +	0x00 + 0x00 + 0x0	00 + 0x00 = 0x87						
2、Negative	e: 0xFF - 0x87	' = 0x78							
3、Then+1	0x78 + 0x0	1 = 0x79							
C language	2								
char getC	CheckSum	(char *packet)							
{									
char	i, checksu	ım;							
for( i	= 1; i < 8;	i++)							
{									
	checksum += packet[i];								
}									
chec	ksum = 0x	rff – checksum	;						
chec	ksum += 1	;							

# 8.ZERO point calibration

## About zero point calibration:

return checksum;

This module has three methods for zero point calibration: hand-operated method, sending command method and self-calibration. All the zero point is at 400ppm CO2.

**Hand-operated method**: Connect module's HD pin to low level(0V), lasting for 7 seconds at least **Sending command method**: See the command above.

#### Self-calibration:

After the module works for some time, it can judge the zero point intelligently and do the zero calibration automatically. The calibration cycle is every 24 hours since the module is power on. The zero point is 400ppm. This method is suitable for office and home environment, not suitable for agriculture greenhouse, farm, refrigerator. If the module is used in latter environment, please turn off this function.

#### 9. Notes

- 9.1 Please avoid the pressure of its gilded plastic chamber from any direction, during welding, installation, and use.
- 9.2 When placed in small space, the space should be well ventilated, especially for diffusion window.
- 9.3 The module should be away from heat, and avoid direct sunlight or other heat radiation.
- 9.4 The module should be calibrated termly, the suggested period is not longer than 6 months.
- 9.5 Do not use the sensor in the high dusty environment for long time.

9.6 To ensure the normal work, the power supply must be among  $4.5V^{\sim}5.5V$  DC rang, the power current must be not less than 150mA. Out of this range, it will result in the failure of the sensor. (The concentration output is low, or the sensor can not work normally.)

9.7 During the zero point calibration procedure by manual, the sensor must work in stable gas environment (400ppm) for over 20 minutes. Connect the HD pin to low level (0V) for over 7 seconds.

Zhengzhou Winsen Electronics Technology Co., Ltd

Add: No.299, Jinsuo Road, National Hi-Tech Zone,

Zhengzhou 450001 China **Tel:** +86-371-67169097/67169670

Fax: +86-371-60932988

E-mail: sales@winsensor.com
Website: www.winsen-sensor.com