Laboratory Exercise 11

Interrupts & IO programming

Goals

After this laboratory exercise, you should understand the basic principles of interrupts and how to use interrupts in your program. You should also know the difference between the polling method and the interrupt method in communicating with the processor.

Literature

■ Patterson and Hennessy: Chapter 2.7, 2.9, 2.10, 2.13, 5.7, Appendix A.6, A.7, A.10

Polling or Interrupts

A computer can respond to external events either by using the polling method or by using the interrupts. The first method is simple compared to the second method, which, however, is more systematic and efficient. You can study the similarities and differences of these two methods using a simple "toy" example program.


A pheriperal connects to the CPU via a I/O ports. Therefore, the CPU must find out the respective port of the peripherial before it could read/write a value from/ to the port to get/control the device.

Sample Codes and Assignments

Sample Code 1 - POLLING

Write an assembly program to detect the key pressed in the keyboard and then print the key number to the console.


The program has a forever loop to read the ASCII code of the pressed key. This method is called POLLING.

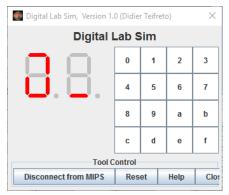

In order to use the key matrix⁴, you should

- 1. assign expected row index into the byte at the address 0xFFFF0012, and
- 2. read byte at the address 0xFFFF0014, to detect which key button was pressed.

⁴ Key matrix animation: http://hackyourmind.org/public/images/keypad12keys_anim.gif

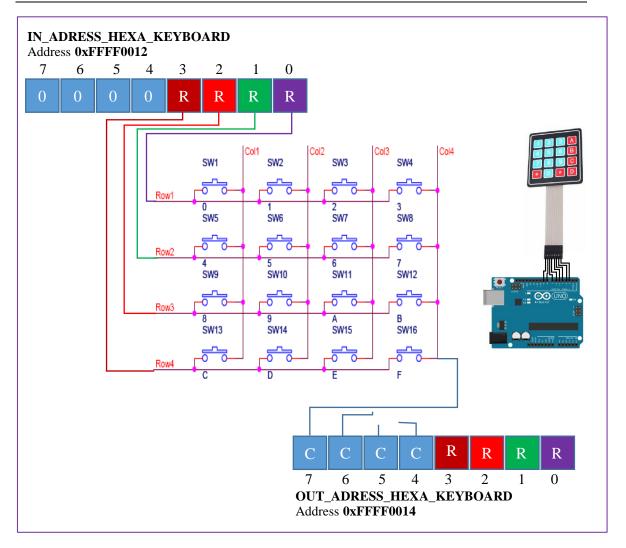

#										
#			col 0x1	col 0x2	col 0x4	col 0x8				
#	row	0x1	0	1	2	3				
##			0x11	0x21	0x41	0x81				
#	row	0x2	4	5	6	7				
##			0x12	0x22	0x42	0x82				
#	row	0×4	8	9	a	b				
#			0x14	0x24	0x44	0×84				
#	row	0x8	С	d	е	f				
# # #			0x18	0x28 	0x48	0x88				
<pre># command row number of hexadecimal keyboard (bit 0 to 3) # Eg. assign 0x1, to get key button 0,1,2,3 # assign 0x2, to get key button 4,5,6,7 # NOTE must reassign value for this address before reading, # eventhough you only want to scan 1 row .eqv IN_ADRESS_HEXA_KEYBOARD</pre>										
<pre># receive row and column of the key pressed, 0 if not key pressed # Eg. equal 0x11, means that key button 0 pressed. # Eg. equal 0x28, means that key button D pressedeqv OUT_ADRESS_HEXA_KEYBOARD 0xFFFF0014</pre>										

```
.text
                 li
                       $t1,
                              IN ADRESS HEXA KEYBOARD
main:
                              OUT ADRESS HEXA KEYBOARD
                 li
                       $t2,
                                       # check row 4 with key C, D,
                 li
                        $t3,
                              0x08
E, F
                              0($t1) # must reassign expected row
polling:
                 sb
                       $t3,
                 1b
                              0($t2)
                                         # read scan code of key button
                       $a0,
                 li
                       $v0,
                                         # print integer (hexa)
    print:
                 syscall
                       $a0,
                              100
                                         # sleep 100ms
    sleep:
                 li
                              32
                 li
                       $v0,
                 syscall
back to polling: j
                       polling
                                         # continue polling
```

Sample Code 2 - INTERRUPT

Study the following assembly program, which waits for an interrupt from the keyboard, and prints out a simple message. Read the code carefully to make sure you understand how to write and install an interrupt routine, how to enable an interrupt, and what happens when an interrupt is activated.

Vietnamese support:

Cũng như các bộ xử lý khác, MIPS có 3 service với cùng một nguyên lý, nhưng khác nhau về mục đích sử dụng

- Exception: xảy ra khi có lỗi trong quá trình chạy, chẳng hạn tham chiếu bộ nhớ không hợp lệ.
- Trap: xây ra bởi cách lệnh kiểm tra
- Interrupt: do các thiết bị bên ngoài kích hoạt

Cả 3 cơ chế trên đều được gọi chung là Exception.

Cách thức hoạt động: khi một Exception xảy ra

- Khi có một Exception xảy ra, MIPS sẽ luôn nhảy tới địa chỉ cố định 0x80000180 để thực hiện chương trình con phục vụ ngắt. Để viết chương trình con phục vụ ngắt, sử dụng chỉ thị .ktext để viết code ở địa chỉ 0x80000180 nói trên.
- Bộ đồng xử lý C0, thanh ghi \$12 (status) sẽ bật bit 1
- Bộ đồng xử lý C0, thanh ghi \$13 (cause) sẽ thay đổi các bit 2~6 cho biết nguyên nhân gây ra ngắt
- Bộ đồng xử lý C0, thanh ghi \$14 (epc) sẽ chứa địa chỉ kế tiếp của chương trình chính, để quay trở về sau khi xử lý các đoạn mã Exception xong. (giống như thanh ghi \$ra)
- Trường hợp thanh ghi \$13 (cause) cho biết nguyên nhân làm tham chiếu địa chỉ bộ nhớ không hợp lệ, thanh ghi \$8 (vaddr) sẽ chứa địa chỉ lỗi đó.
- Nếu không có mã lệnh nào ở địa chỉ 0x80000180 (.ktext), chương trình sẽ hiện thông báo lỗi và tự kết thúc.
- Sau khi kết thúc chương trình con, sử dụng lệnh để quay trở lại chương btrình chính. Lệnh **eret** sẽ gán nội dung thanh ghi PC bằng giá trị trong thanh ghi \$14 (epc).

Tuy nhiên, lưu ý rằng, trong MARS, thanh ghi EPC vẫn chứa địa chỉ của lệnh mà ngắt xảy ra, tức là lệnh đã thực hiện xong, chứ không chứa địa

chỉ của lệnh kế tiếp. Bởi vây phải tự lập trình để tăng địa chỉ chứa trong thanh ghi epc bằng cách sử dụng 2 lệnh mfc0 (để đọc thanh ghi trong bộ đồng xử lý C0) và mtc0 (để ghi giá trị vào thanh ghi trong bộ đồng xử lý C0)

- Các bit 8-15 của thanh ghi Cause, \$13 được sử dụng để xác định nguyên nhân gây ra ngắt. Hãy đọc thanh ghi này, kết hợp với thông tin chi tiết trong hướng dẫn sử dụng của từng thiết bị giả lập để biết được nguồn gốc gây ra ngắt.

Cách thức viết chương trình phục vụ ngắt: để viết chương trình con phục vụ ngắt khi có sự kiện ngắt xảy ra, có thể dùng một trong các phương pháp sau:

- 1. Viết chương trình con phục vụ ngắt trong cùng một file nguồn.
- 2. Viết chương trình con phục vụ ngắt trong file nguồn độc lập, và lưu trữ trong cùng một thư mục với chương trình chính. Sau đó, sử dụng tính năng trong mục Setting là "Assemble all files in directory".
- 3. Viết chương trình con phục vụ ngắt trong file nguồn độc lập, và lưu trữ trong cùng một thư mục bất kì. Sau đó, sử dụng tính năng trong mục Setting là "Exception Handler..".

BUG: Ghi nhận các lỗi của công cụ MARS

- 1. Giữa 2 lệnh syscall và lệnh jump, branch cần bổ sung thêm lệnh nop. Nếu không việc ghi nhận giá trị của thanh ghi PC vào EPC sẽ bị sai.
- 2. Với các công cụ giả lập, nên bấm nút "Connect to MIPS" trước khi chạy giả lập. Nếu không, việc phát sinh sự kiện ngắt sẽ không xảy ra.

```
.eqv IN ADRESS HEXA KEYBOARD 0xFFFF0012
.data
Message: .asciiz "Oh my god. Someone's presed a button.\n"
# MAIN Procedure
.text
main:
       # Enable interrupts you expect
       # Enable the interrupt of Keyboard matrix 4x4 of Digital Lab
Sim
       li
             $t1, IN_ADRESS_HEXA_KEYBOARD
       li
            $t3, 0x80 # bit 7 of = 1 to enable interrupt
            $t3, 0($t1)
       # No-end loop, main program, to demo the effective of
interrupt
Loop:
```

```
nop
    b
       Loop
                # Wait for interrupt
end main:
# GENERAL INTERRUPT SERVED ROUTINE for all interrupts
.ktext 0x80000180
    #----
    # Processing
syscall
    #-----
    # Evaluate the return address of main routine
    # epc <= epc + 4
return: eret
                # Return from exception
```

Sample Code 3 – INTERRUPT & STACK

Study the following assembly program, in which

- 1. the main program enables 1 interrupt: from the keyboard in Data Lab Sim,
- 2. the main program only prints a sequence number to the console,
- 3. the main program is connected to Data Lab Sim. Whenever the user presses a key button C, D, E, or F, an interrupt raises and prints key scancode to console

```
.eqv IN ADRESS HEXA KEYBOARD
                       0xFFFF0012
.eqv OUT ADRESS HEXA KEYBOARD
                         0xFFFF0014
.data
Message: .asciiz "Key scan code "
# MAIN Procedure
main:
      # Enable interrupts you expect
      # Enable the interrupt of Keyboard matrix 4x4 of Digital Lab
          $t1, IN ADRESS HEXA KEYBOARD
      li $t3, 0x80 # bit 7 = 1 to enable
      sb $t3, 0($t1)
      # Loop an print sequence numbers
     xor $s0, $s0, $s0 # count = $s0 = 0
          $s0, $s0, 1 # count = count + 1
Loop: addi
           $v0,$zero,1
prn seq:addi
     add $a0,$s0,$zero # print an auto sequence number
     syscall
```

```
prn_eol:addi $v0,$zero,11
            $a0,'\n'
                         # print endofline
      syscall
            $v0,$zero,32
sleep: addi
                        # sleep 300 ms
      li
           $a0,300
      syscall
                        # WARNING: nop is mandatory here.
      nop
                        # Loop
            Loop
end main:
# GENERAL INTERRUPT SERVED ROUTINE for all interrupts
.ktext 0x80000180
      #-----
      # SAVE the current REG FILE to stack
      #-----
IntSR: addi $sp,$sp,4
                    # Save $ra because we may change it later
          $ra,0($sp)
      sw
      addi $sp,$sp,4
                    # Save $ra because we may change it later
           $at,0($sp)
      addi $sp,$sp,4
                    # Save $ra because we may change it later
           $v0,0($sp)
      addi $sp,$sp,4
                     # Save $a0, because we may change it later
           $a0,0($sp)
      addi $sp,$sp,4
                     # Save $t1, because we may change it later
          $t1,0($sp)
      addi $sp,$sp,4
                    # Save $t3, because we may change it later
          $t3,0($sp)
      # Processing
prn_msg:addi $v0, $zero, 4
            $a0, Message
      la
      syscall
get_cod:li $t1, IN_ADRESS_HEXA_KEYBOARD
li $t3, 0x88  # check row 4 and re-enable bit 7
sb $t3, 0($t1)  # must reassign expected row
           $t1, OUT_ADRESS_HEXA KEYBOARD
      1i
           $a0,
      1b
                  0($t1)
            $v0,34
prn_cod:li
      syscall
            $v0,11
      li
            $a0,'\n'
                        # print endofline
      li
           ______
      # Evaluate the return address of main routine
      # epc <= epc + 4
#-----
      # RESTORE the REG FILE from STACK
restore: lw $t3, 0($sp) # Restore the registers from stack
      addi $sp,$sp,-4
           $t1, 0($sp)
      lw
                        # Restore the registers from stack
      addi $sp,$sp,-4
      lw
           $a0, 0($sp)
                        # Restore the registers from stack
      addi $sp,$sp,-4
           $v0, 0($sp)
                        # Restore the registers from stack
      lw 
      addi $sp,$sp,-4
```

```
lw $ra, 0($sp) # Restore the registers from stack
addi $sp,$sp,-4

return: eret # Return from exception
```

Sample Code 4 - MULTI INTERRUPT

Vietnamese support:

Thanh ghi số 13, status trong bộ đồng xử lý C0, chứa các thiết lập về tình trạng ngắt.

1 1 0 1 0 0

	15	14	13	12	11	10			6	5	4	3	2	1	0
					KM	TC			Exception Code K/U						IE
IE = 1 cho phép ngắt. $IE = 0$ vô hiệu hóa mọi hoạt động ngắt															
K/U=1 hoạt động ở chế độ Kernel. $K/U=0$ hoạt động ở chế độ User															
Ngoại lệ do syscall, overflow, lệnh tạo ngắt mềm như teq teqi															
Time Counter bộ đếm thời gian															
Key Matrix															

Study the following assembly program, in which

- 1. the main program enables 2 interrupts simultaneously: from key matrix and time counter in Data Lab Sim,
- 2. the main program does nothing with a deadloop,
- 3. the main program is connected to Data Lab Sim. Whenever the user presses any key or a time interval reaches, an interrupt raises and prints key scan-code to the console.

```
IN ADRESS HEXA KEYBOARD
                                    0xFFFF0012
.eqv
.eqv COUNTER
                     0xFFFF0013
                                    # Time Counter
.eqv MASK_CAUSE_COUNTER 0x00000400 # Bit 10: Counter interrupt
.eqv MASK CAUSE KEYMATRIX 0x00000800 # Bit 11: Key matrix
interrupt
msg keypress: .asciiz "Someone has pressed a key!\n"
msg counter: .asciiz "Time inteval!\n"
# MAIN Procedure
.text
main:
        # Enable interrupts you expect
        # Enable the interrupt of Keyboard matrix 4x4 of Digital Lab
Sim
        li
              $t1, IN_ADRESS_HEXA_KEYBOARD
        li $t3, 0x80 # bit 7 = 1 to enable
        sb $t3, 0($t1)
        # Enable the interrupt of TimeCounter of Digital Lab Sim
        li $t1, COUNTER
        sb $t1, 0($t1)
        # Loop an print sequence numbers
```

```
#-----
Loop:
     nop
     nop
     nop
sleep: addi $v0,$zero,32 # BUG: must sleep to wait for Time
Counter
     li
         $a0,200
                   # sleep 300 ms
     syscall
                   # WARNING: nop is mandatory here.
     nop
         Loop
end main:
# GENERAL INTERRUPT SERVED ROUTINE for all interrupts
.ktext 0x80000180
    #-----
IntSR:
     # Temporary disable interrupt
     #-----
# no need to disable keyboard matrix interrupt
            -----
     # Processing
get_caus:mfc0 $t1, $13 # $t1 = Coproc0.cause
IsCount:li $t2, MASK_CAUSE_COUNTER# if Cause value confirm
Counter..
     and $at, $t1,$t2
     beq $at,$t2, Counter Intr
IsKeyMa:li
        $t2, MASK CAUSE KEYMATRIX # if Cause value confirm Key..
     and $at, $t1,$t2
     beq $at,$t2, Keymatrix_Intr
                      # other cases
others: j end_process
Keymatrix Intr: li $v0, 4
                      # Processing Key Matrix Interrupt
       $a0, msg keypress
     syscall
     j end process
Counter_Intr: li $v0, 4 # Processing Counter Interrupt
     la $a0, msg_counter
     syscall
     j end_process
end process:
    mtc0 $zero, $13  # Must clear cause reg
en int: #-----
     # Re-enable interrupt
     li $t1, COUNTER
     sb $t1, 0($t1)
     # Evaluate the return address of main routine
     # epc <= epc + 4
     #-----
# Return from exception
return: eret
```

Sample Code 5 - KEYBOARD

Vietnamese support:

- Bộ xử lý MIPS cho phép tạo ra ngắt mềm, bằng lệnh teq, hoặc teqi
- Thiết bị Keyboard không tự động tạo ra ngắt khi có một phím được bẩm, mà người lập trình phải tự tạo ngắt mềm.

```
.eqv KEY_READY 0xFFFF0000 # =1 if has a new keycode ?
# Auto clear after lw
.eqv DISPLAY READY 0xFFFF0008 # =1 if the display has already to do
                      # Auto clear after sw
.eqv MASK CAUSE KEYBOARD 0x0000034
                            # Keyboard Cause
.text
         li $k0, KEY CODE
         li $k1, KEY READY
         li $s0, DISPLAY CODE
         li $s1, DISPLAY READY
loop: nop
WaitForKey: lw $t1, 0($k1) $t1 = [$k1] = KEY READY
        beq $t1, $zero, WaitForKey \# if $t1 == 0 then Polling
MakeIntR: teqi $t1, 1 # if $t0 = 1 then raise an Interrupt
         j loop
#-----
# Interrupt subroutine
#-----
.ktext 0x80000180
get_caus: mfc0 $t1, $13 # $t1 = Coproc0.cause
        li $t2, MASK CAUSE KEYBOARD# if Cause value confirm
IsCount:
Keyboard..
        and $at, $t1,$t2
        beq $at,$t2, Counter_Keyboard
        j end process
Counter Keyboard:
ReadKey: lw $t0, 0($k0) # $t0 = [$k0] = KEY CODE
                     # $t2 = [$s1] = DISPLAY_READY
WaitForDis: lw $t2, 0($s1)
        beq $t2, $zero, WaitForDis # if $t2 == 0 then Polling
Encrypt: addi $t0, $t0, 1 # change input key
ShowKey: sw $t0, 0($s0) # show key
        nop
end process:
return: eret
                        # Return from exception
```

Assignment 1

Create a new project, type in, and build the program of Sample Code 1. Upgrade the source code so that it could defect all 16 key buttons, from 0 to F.

Assignment 2

Create a new project, type in, and build the program of Sample Code 2. Upgrade the source code so that it could defect all 16 key buttons, from 0 to F.

Assignment 3

Create a new project, type in, and build the program of Sample Code 3. Upgrade the source code so that it could defect all 16 key buttons, from 0 to F.

Assignment 4

Create a new project, type in, and build the program of Sample Code 4. Upgrade the source code so that it could defect all 16 key buttons, from 0 to F.

Assignment 5

Create a new project, type in, and build the program of Sample Code 5.

Questions

Before you finish the laboratory exercise, think about the questions below:

- What is polling?
- What are interrupts?
- What are interrupt routines?
- What are the advantages of polling?
- What are the advantages of using interrupts?
- What are the differences between interrupts, exceptions and traps?