Introduction to Linux kernel driver programming

The Linux kernel device model





Authors and license

Authors

 Michael Opdenacker,
 Thomas Petazzoni,
 Bootlin: kernel and embedded Linux engineering company https://bootlin.com

License

- Creative Commons Attribution Share Alike 4.0 https://creativecommons.org/licenses/by-sa/4.0/
- Document sources: https://github.com/e-ale/Slides





Need for a device model

- For the same device, need to use the **same device driver** on multiple CPU architectures (x86, ARM...), even though the hardware controllers are different.
- Need for a single driver to support multiple devices of the same kind.
- This requires a clean organization of the code, with the *device* drivers separated from the *controller drivers*, the hardware description separated from the drivers themselves, etc.






Driver: between bus infrastructure and framework

In Linux, a driver is always interfacing with:

- a framework that allows the driver to expose the hardware features in a generic way.
- a bus infrastructure, part of the device model, to detect/communicate with the hardware.

Let's focus on the bus infrastructure for now

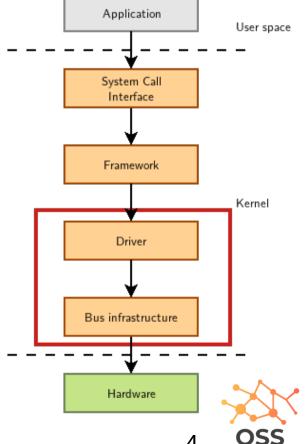



Device model data structures

The device model is organized around three main data structures:

- The struct bus_type structure, which represent one type of bus (USB, PCI, I2C, etc.)
- The struct device_driver structure, which represents one driver capable of handling certain devices on a certain bus.
- The struct device structure, which represents one device connected to a bus

The kernel uses inheritance to create more specialized versions of struct device_driver and struct device for each bus subsystem.






The bus driver

- Example: USB. Implemented in drivers/usb/core/
- Creates and registers the bus_type structure
- Provides an API to register and implement adapter drivers
 (here USB controllers), able to detect the connected devices and allowing to
 communicate with them.
- Provides an API to register and implement device drivers (here USB device drivers)
- Matches the device drivers against the devices detected by the adapter drivers.
- Defines driver and device specific structures, here mainly struct usb_driver and struct usb_interface





USB bus example

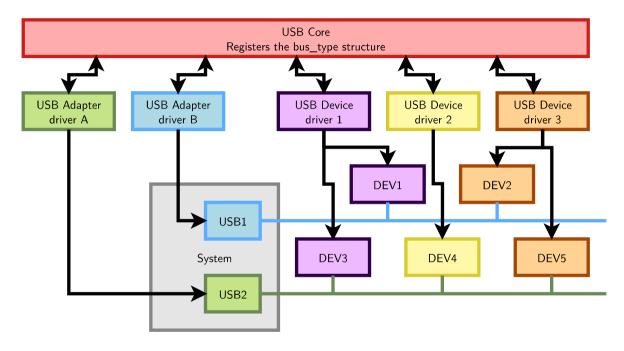

A single driver for compatible devices, though connected to buses with different controllers.





Device drivers (1)

Need to **register supported devices** to the bus core.

```
Example: drivers/net/usb/rtl8150.c

static struct usb_device_id rtl8150_table[] =
    {{ USB_DEVICE(VENDOR_ID_REALTEK, PRODUCT_ID_RTL8150) },
    { USB_DEVICE(VENDOR_ID_MELCO, PRODUCT_ID_LUAKTX) },
    { USB_DEVICE(VENDOR_ID_MICRONET, PRODUCT_ID_SP128AR) },
    { USB_DEVICE(VENDOR_ID_LONGSHINE, PRODUCT_ID_LCS8138TX) },[...]
    {}
    };
    MODULE DEVICE TABLE(usb, rtl8150 table);
```





Device drivers (2)

Need to register **hooks to manage devices** (newly detected or removed ones), as well as to react to power management events (suspend and resume)

```
static struct usb_driver rtl8150_driver = {
.name = "rtl8150",
.probe = rtl8150_probe,
.disconnect = rtl8150_disconnect,
.id_table = rtl8150_table,
.suspend = rtl8150_suspend,
.resume = rtl8150_resume
};
```





Device drivers (3)

The last step is to register the driver structure to the bus core.

```
static int __init usb_rtl8150_init(void)
{
return usb_register(&rtl8150_driver);
}
static void __exit usb_rtl8150_exit(void)
{
usb_deregister(&rtl8150_driver);
}
module_init(usb_rtl8150_init);
module_exit(usb_rtl8150_exit);
Note: this code has now been replaced by a shorter module_usb_driver() macro.
```

Now the bus driver knows the association between the devices and the device driver.





Work in the probe() function

probe() is called for each newly matched device


- Initialize the device
- Prepare driver work: allocate a structure for a suitable framework, allocate memory, map I/O memory, register interrupts...
- When everything is ready, register the new device to the framework.





At driver loading time


- The USB adapter driver that corresponds to the USB controller registers itself to the USB core
- The rt18150 USB device driver registers itself to the USB core
- The USB core now knows the association between the vendor/product IDs of rt18150 and the struct usb_driver structure of this driver

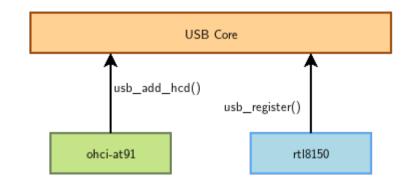




When a device is detected

Step 2: USB core looks up the registered IDs, and finds the matching driver

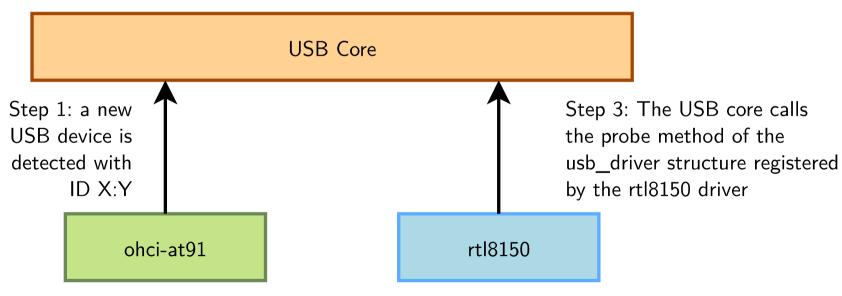



The model is recursive

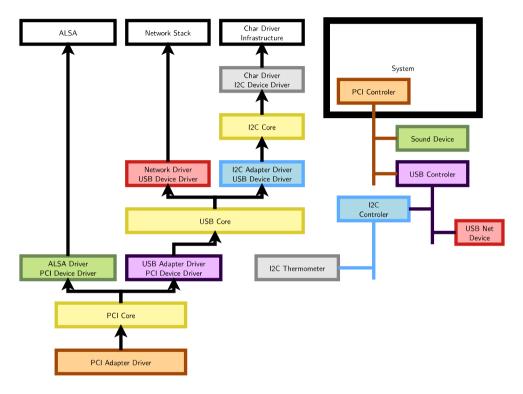

Adapter drivers are device drivers too!



Platform devices and drivers

- Want to use the Device Model for devices that are not on buses that can auto-detect devices (very frequent in embedded systems)
- Examples: UARTs, flash memory, LEDs, GPIOs, MMC/SD, Fthernet...
- Solution:
- 1) Provide a description of devices
- 2) Manage them through a virtual bus: the platform bus.
- 3) Drive the platform devices



Describing non-detectable devices

- Description through a Device Tree (on ARM, PowerPC, ARC...)
- In arch/arm/boot/dts/ on ARM
- Two parts:
 - Device Tree Source (.dts)
 One per board to support in the Linux kernel
 Advantage: no need to write kernel code to support a new board (if all devices are supported).
 - Device Tree Source Includes (.dtsi)
 Typically to describe devices on a particular SoC, or devices shared between similar SoCs or boards
- Other method for describing non-detectable devices: ACPI (on x86 platforms). Not covered here.



Declaring a device: .dtsi example

```
Node name
                      Label
                  i2c0: i2c@44e0b000 {
                      compatible = "ti,omap4-i2c";
                                                             Compatible drivers
                      #address-cells = <1>;
                      \#size-cells = <0>;
                      ti,hwmods = "i2c1";
Node
                                                             HW register start
                      reg = <0x44e0b000 0x1000>;
properties
                                                             address and range
                      interrupts = <70>;
                                                             Present but not
                      status = "disabled";
                                                             used by default
                  };
```



From arch/arm/boot/dts/am33xx.dtsi

Instantiating a device: .dts example


```
&i2c0 {
                                                                  Pin muxing configuration
                        pinctrl-names = "default";
                                                                  (routing to external package pins)
                        pinctrl-0 = <&i2c0 pins>;
Phandle
                                                                  Enabling this device, otherwise ignored
                        status = "okay";
(reference
                        clock-frequencv = <400000>;
                                                                  Node property: frequency
to label)
                        tps: tps@24 {
                                req = <0x24>;
                        };
                                                                                              List of devices on
                        baseboard_eeprom: baseboard_eeprom@50 {
                                                                                              i2c0
                                compatible = "at,24c256";
                                                               I2C bus identifier
                                req = <0x50>;
                                #address-cells = <1>;
                                #size-cells = <1>;
                                baseboard_data: baseboard_data@0 {
                                         req = <0 0x100>;
                                };
                        };
```



From arch/arm/boot/dts/am335x-boneblue.dts

Pin multiplexing

- Modern SoCs have too many hardware blocks compared to physical pins exposed on the chip package.
- Therefore, pins have to be multiplexed
- Pin configurations are defined in the Device Tree
- Correct pin multiplexing is mandatory to make a device work from an electronic point of view.

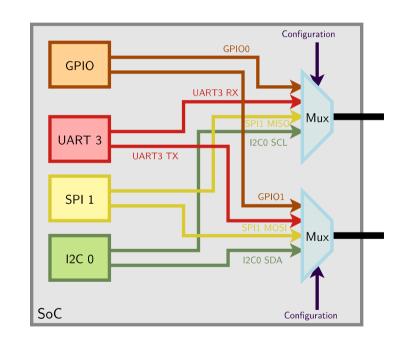



DT pin definitions

```
&am33xx_pinmux {
      i2c0_pins: pinmux_i2c0_pins {
           pinctrl-single,pins = <</pre>
                 AM33XX_IOPAD(0x988, PIN_INPUT_PULLUP | MUX_MODE0)
                                                                             /* (C17) I2C0_SDA.I2C0_SDA */
                 AM33XX_IOPAD(0x98c, PIN_INPUT_PULLUP |
                                                           MUX MODE0)
                                                                             /* (C16) I2C0 SCL.I2C0 SCL */
           >;
     };
                 Register offset corresponding
                                                                                           SoC signal
                                                          Allows to select
                                                                             Package pin
};
                 to a given package pin
                                                          a given SoC signal
                                                                                           name
                                                                             name
                                           Configures the pin:
. . .
                                           input, output, drive
&i2c0 {
                                           strengh, pull up/down...
        pinctrl-names = "default";
        pinctrl-0 = <&i2c0 pins>;
        status = "okay";
        clock-frequency = <400000>;
                                                   From arch/arm/boot/dts/am335x-boneblue.dts
        . . .
};
```



DT: matching devices and drivers

Platform drivers are matched with platform devices that have the same compatible

property.

```
static const struct of_device_id omap_i2c_of_match[] = {
                 .compatible = "ti,omap4-i2c",
                 .data = &omap4_pdata,
static struct platform_driver omap_i2c_driver = {
                         = omap_i2c_probe,
        .probe
                         = omap i2c remove,
        .remove
        .driver
                         = "omap_i2c",
                 .name
                         = OMAP_I2C_PM_OPS,
                .of_match_table = of_match_ptr(omap_i2c_of_match),
        },
};
```

From drivers/i2c/busses/i2c-omap.c



Usage of the platform bus

Like for physical buses, the platform bus is used by the driver to retrieve information about each device

```
static int omap_i2c_probe(struct platform_device *pdev)
     struct device node *node = pdev→dev.of node;
     struct omap i2c dev
                             *omap;
     irq = platform_get_irq(pdev, 0);
     omap = devm_kzalloc(&pdev->dev, sizeof(struct omap_i2c_dev), GFP_KERNEL);
     mem = platform_get_resource(pdev, IORESOURCE_MEM, 0);
     omap->base = devm_ioremap_resource(&pdev->dev, mem);
     u32 freg = 100000; /* default to 100000 Hz */
     of property read u32(node, "clock-frequency", &freq);
     return 0;
```




From drivers/i2c/busses/i2c-omap.c

Device tree bindings

- Device tree bindings provide a specification of properties that a driver expects in a DT
- Bindings are available in Documentation/devicetree/bindings in kernel sources.
- To know how to set device properties, look for a binding for the same compatible string:
- \$ git grep "ti,omap4-i2c" Documentation/devicetree/bindings/



Another bus example: I2C

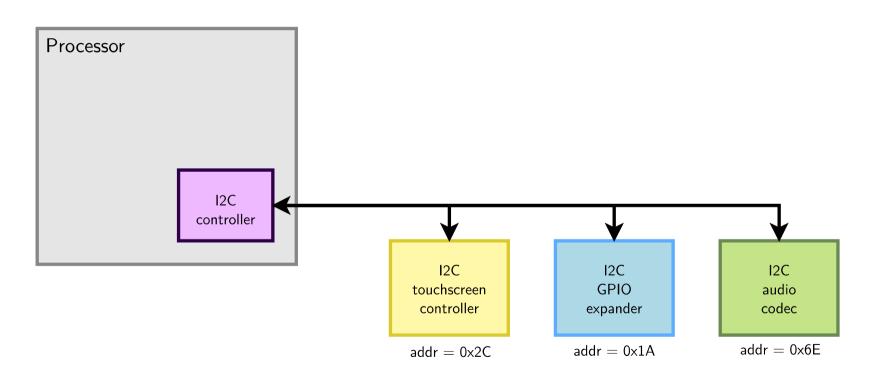





I2C drivers: probe() function

```
static int mma7660_probe(struct i2c_client *client,
                        const struct i2c device id *id)
        int ret;
        struct iio dev *indio dev:
        struct mma7660 data *data:
        indio dev = devm iio device alloc(&client->dev, sizeof(*data));
        if (!indio dev) {
                dev err(&client->dev, "iio allocation failed!\n");
                return -ENOMEM:
        data = iio priv(indio dev);
        data->client = client;
        i2c set clientdata(client, indio dev)
        mutex init(&data->lock);
        data->mode = MMA7660 MODE STANDBY:
        indio dev->dev.parent = &client->dev;
        indio dev->info = &mma7660 info;
        indio dev->name = MMA7660 DRIVER NAME;
        indio_dev->modes = INDIO_DIRECT_MODE;
        indio dev->channels = mma7660 channels:
        indio dev->num channels = ARRAY SIZE(mma7660 channels);
        ret = mma7660 set mode(data, MMA7660 MODE ACTIVE);
        if (ret < 0)
                return ret;
        ret = iio_device_register(indio_dev);
        if (ret < 0) {
                dev err(&client->dev, "device register failed\n");
                mma7660_set_mode(data, MMA7660_MODE_STANDBY);
```

device structure for the i2c bus needed to communicate with the device

Framework (here iio) structure for each device

Per device structure. Used by the driver to store references to bus and framework structures, plus its own data (locks, wait queues, etc.)

Allocation of the framework structure. This structure also contains the per device structure (data)

Reference to the bus structure stored in the framework structure.

Reference to the framework structure stored in the bus structure.

Enabling the device (i2c reading and writing)

Register a new framework device when everything is ready (device now accessible in user-space)

Disabling the device in case of failure

From drivers/iio/accel/mma7660.c





I2C drivers: remove() function



12C driver registration


```
static const struct i2c device id mma7660 i2c id[] = {
        {"mma7660", 0},
};
MODULE DEVICE TABLE(i2c, mma7660 i2c id);
static const struct of device id mma7660 of match[] = {
        { .compatible = "fsl, mma7660" },
};
MODULE DEVICE TABLE(of, mma7660 of match);
static const struct acpi_device_id mma7660_acpi_id[] = {
        {"MMA7660", 0},
};
MODULE DEVICE TABLE(acpi, mma7660 acpi id);
static struct i2c_driver mma7660_driver = {
        .driver = {
                .name = "mma7660".
                .pm = MMA7660 PM OPS,
                .of match table = mma7660 of match,
                .acpi_match_table = ACPI_PTR(mma7660_acpi_id),
        .probe
                        = mma7660_probe,
                        = mma7660 remove,
        .remove
                        = mma7660 i2c id,
        .id table
};
module_i2c_driver(mma7660_driver);
```





Matching by ACPI ID (for ACPI systems - x86)





Driver development advise

- Look for code for devices similar to yours
- Read the code.
 You can use Elixir (https://elixir.bootlin.com/)
- Always read code from the bottom up. You see the big picture first, and then progressively how the details are implemented.



Further reading

 Bootlin's kernel and driver development training materials for full details

https://bootlin.com/training/kernel/

 Device Tree for Dummies presentation Thomas Petazzoni (Apr. 2014) http://j.mp/1jQU6NR

