**Understanding and managing hardware affinities
on hierarchical platforms
With Hardware Locality (hwloc)**

Brice Goglin – Runtime Team-Project – Inria Bordeaux Sud-Ouest

Agenda

- Quick example as an Introduction
- Bind your processes
- What's the actual problem?
- Introducing hwloc (Hardware Locality)
- Command-line tools
- C Programming API
- Conclusion

Inria

1
Quick example
as an Introduction

Machines are increasingly complex

Machines are increasingly complex

- Multiple processor sockets

- Multicore processors

- Simultaneous multithreading

- Shared caches

- NUMA

- GPUs, NICs, …

  - Close to some sockets (NUIOA)

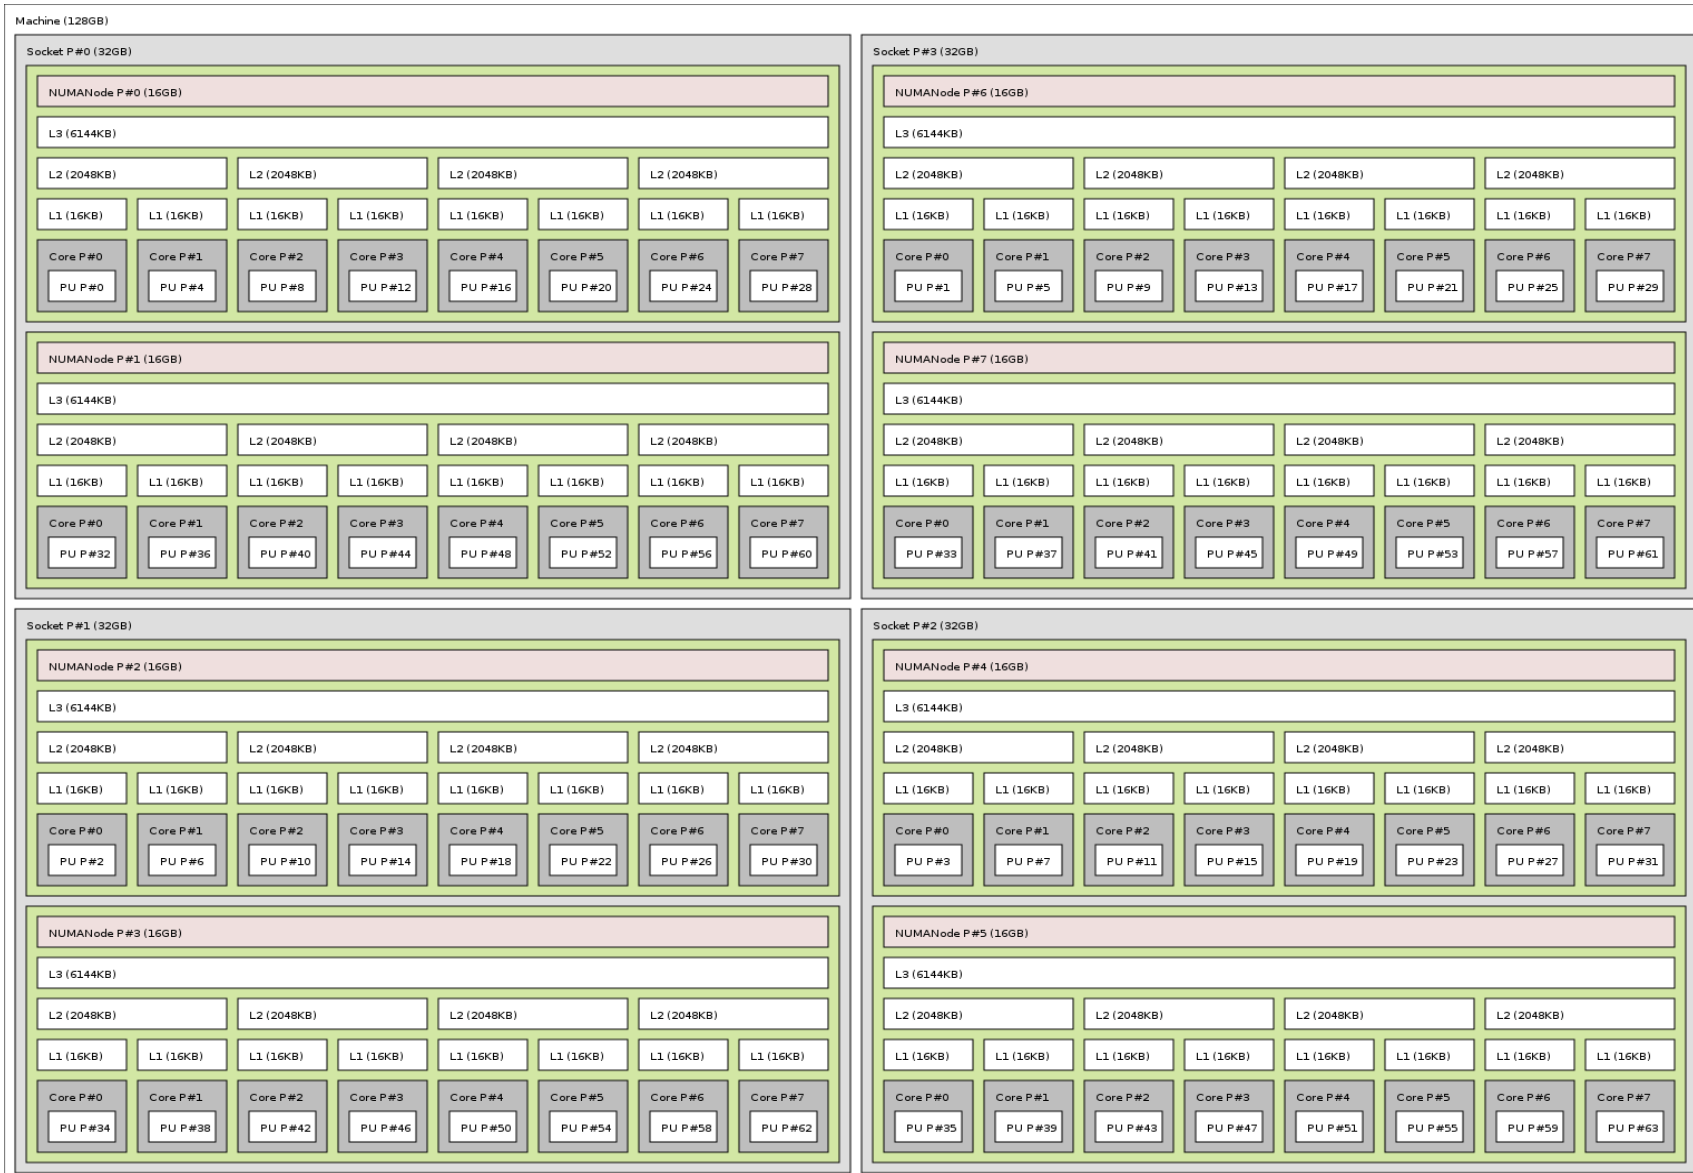# Example with MPI

- Let's say I have a 64-core AMD machine
  - Not unusual (about 6000$)
- I am running a MPI pingpong between pairs of cores
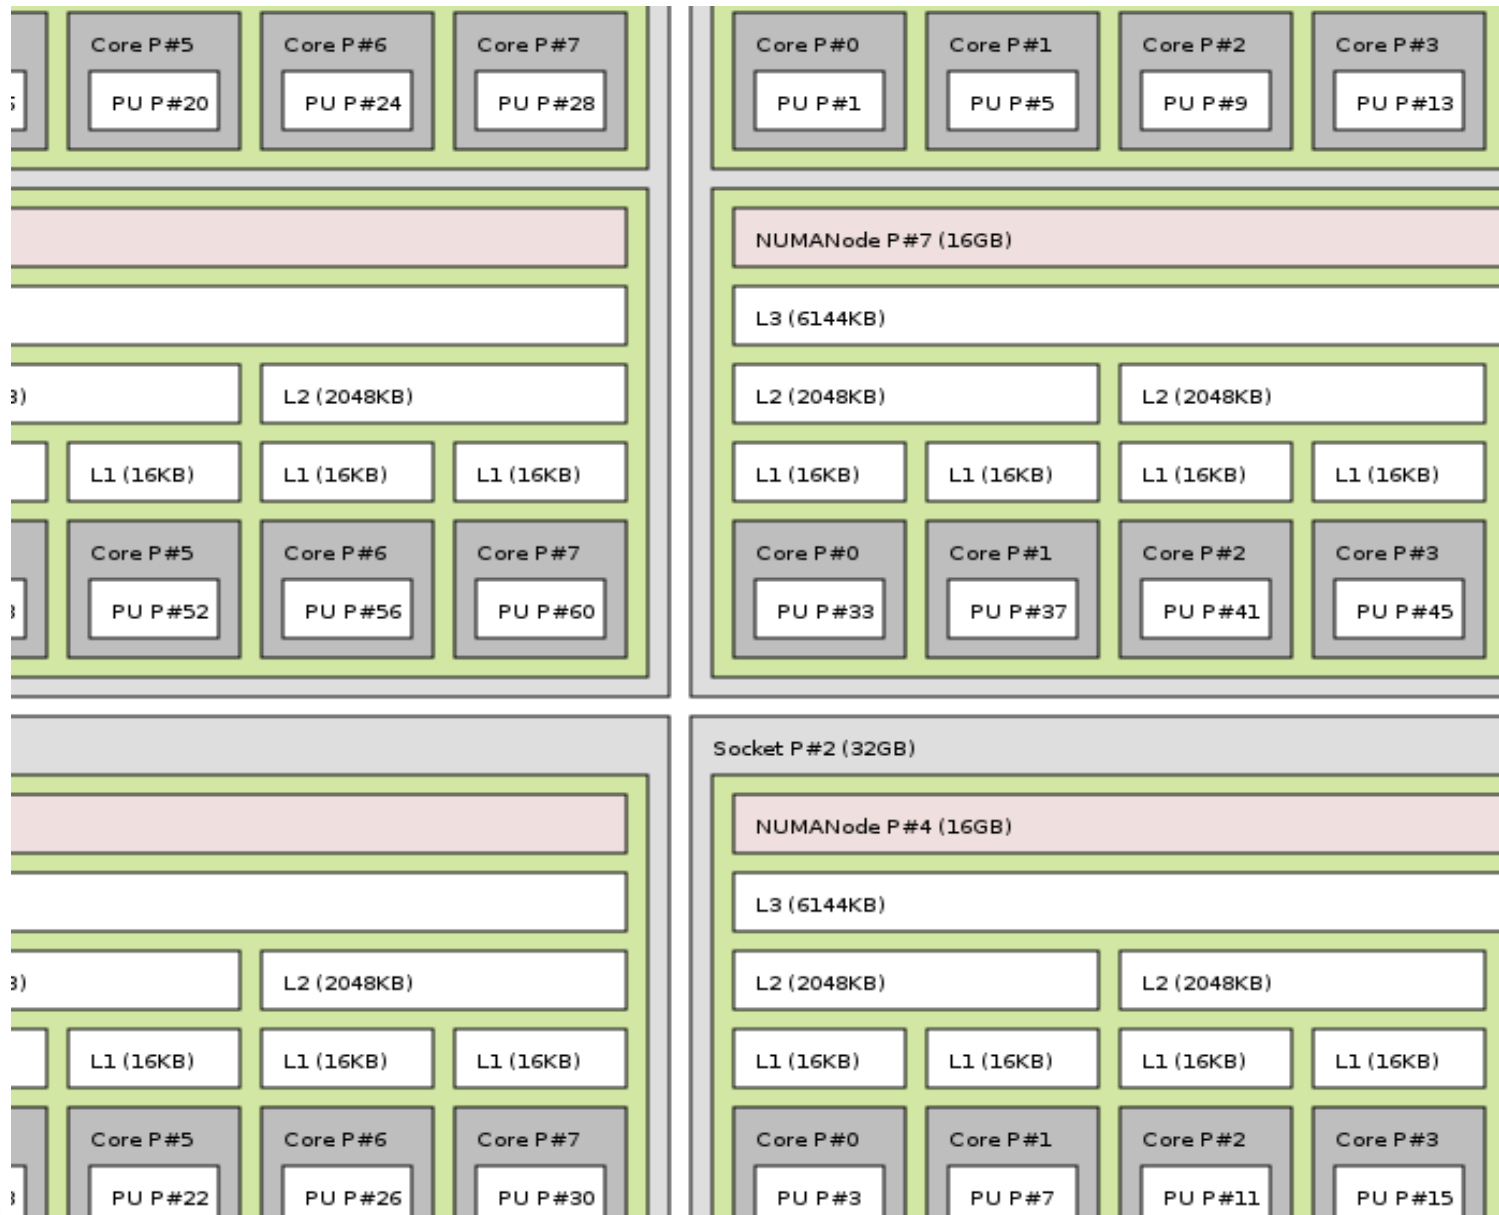 - Open MPI 1.6
  - Intel MPI Benchmarks 3.2

Example with MPI (2/3)

- Between cores 0 and 1

  - 1.39 µs latency – 1900MB/s throughput

- Between cores 0 and 4

  - 1.63 µs – 1400 MB/s – Interesting !

- Between cores 0 and 5

  - 0.68 µs – 3600 MB/s – What ?!

- Between cores 0 and 8

  - 1.24 µs – 2400 MB/s
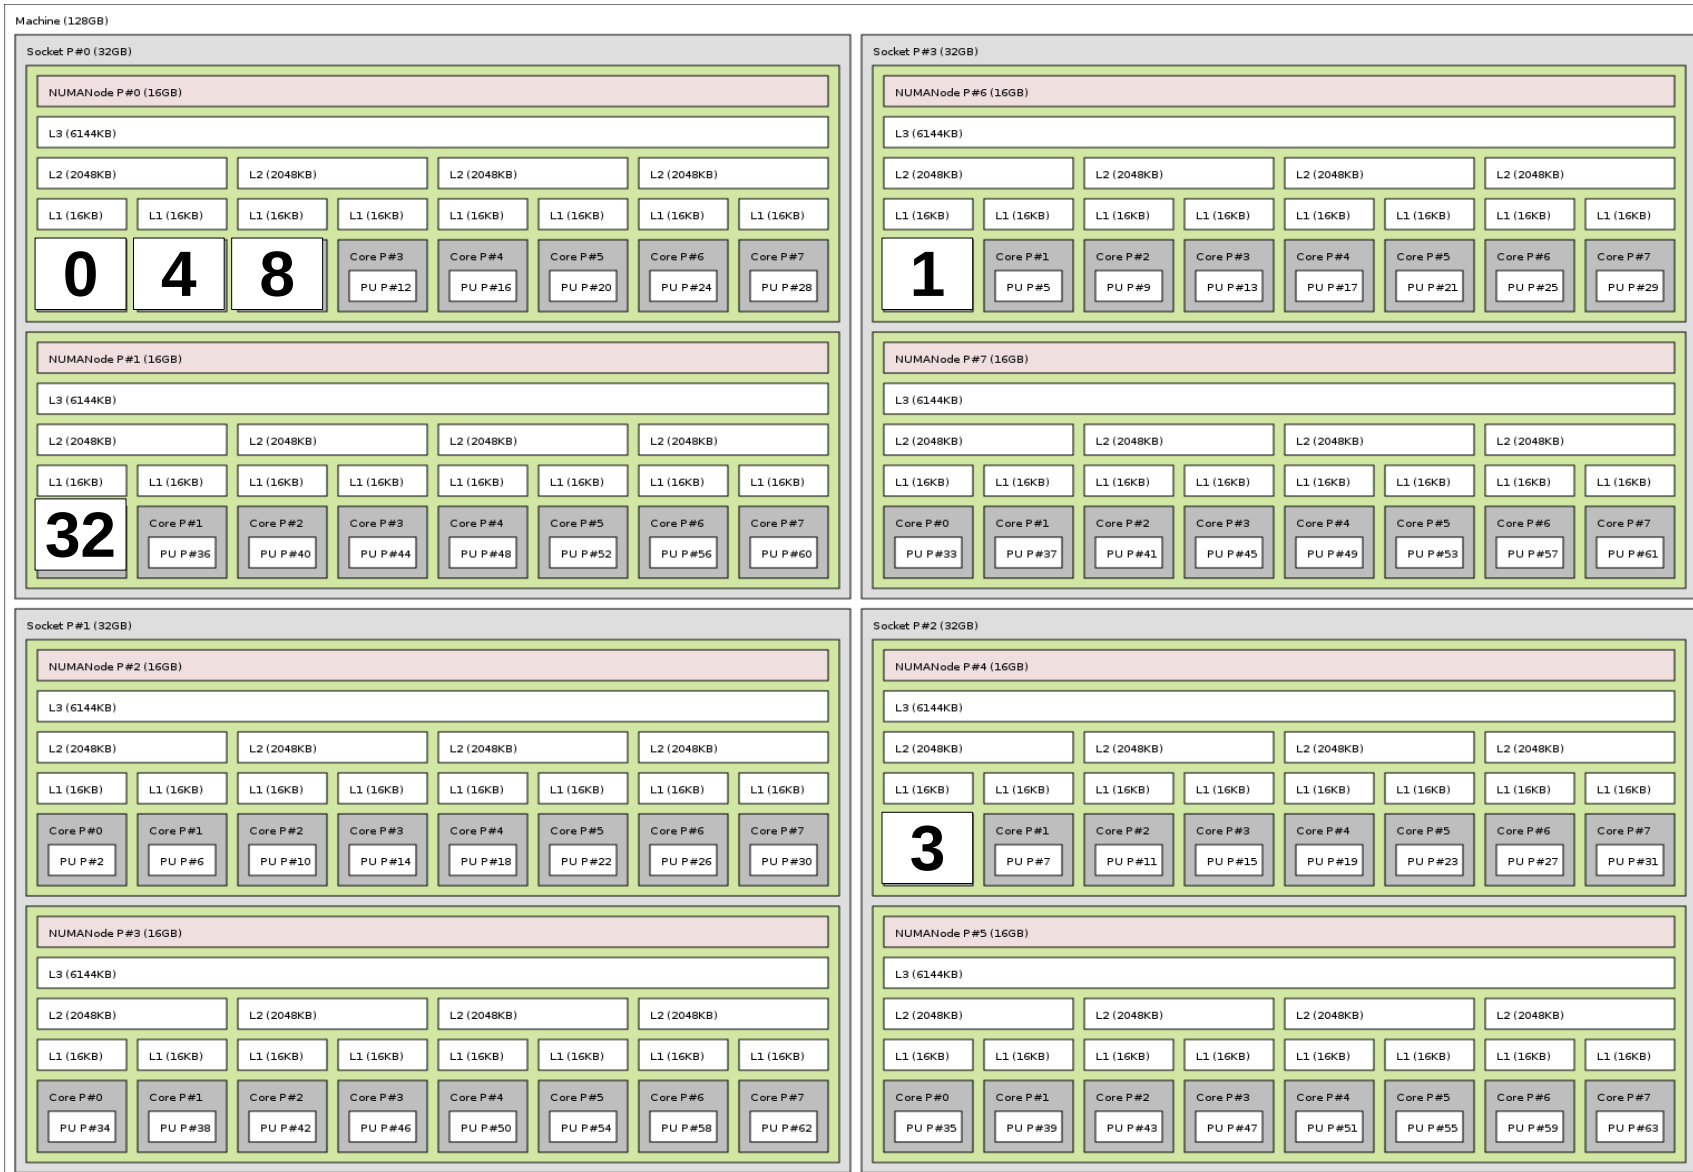
- Between cores 0 and 32

  - 1.34 µs – 2100 MB/s

What is going on

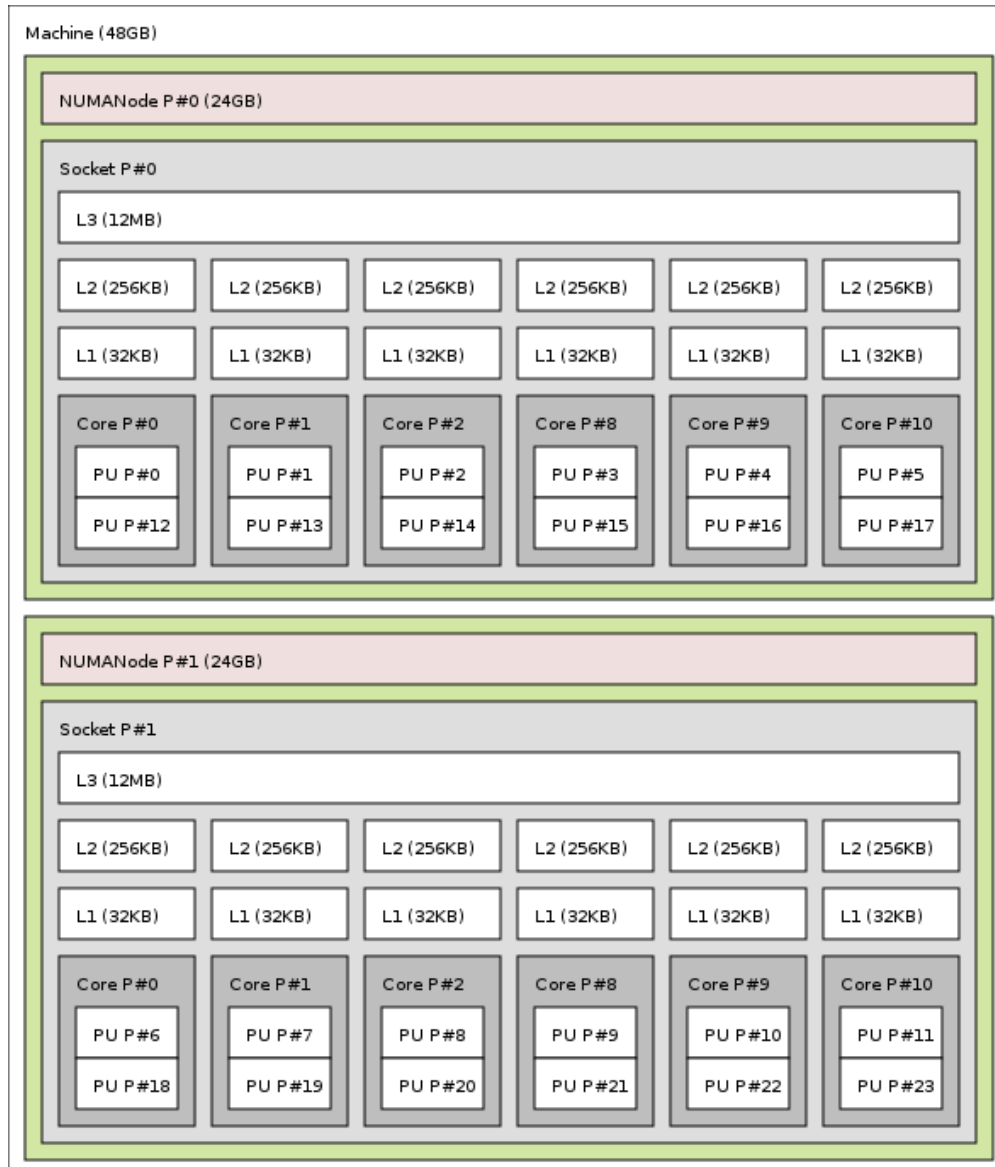# What is going on (2/3)

What is going on (3/3)

Example with MPI (3/3)

- Between cores that share a L2 cache

  - 0.68 µs – 3600 MB/s

- Between cores that only share a L3 cache

  - 1.24 µs – 2400 MB/s

- Between cores inside the same socket

  - 1.34 µs – 2100 MB/s

- Between cores of another socket

  - 1.39 µs – 1900MB/s

- Between cores of another socket further away

  - 1.63 µs – 1400 MB/s

Ok, what about Intel machines?

- Less hierarchy levels
  - 4 vs 3
  - HyperThreading?

- But same problems

First take away messages

- Locality matters to communication performance

  – Machines are really far from flat

- Cores/processors numbering is crazy

  – Never expect anything sane here

2 Bind your processes

Where does locality actually matter?

- MPI communication between processes on the same node

- Shared-memory too (threads, OpenMP, etc)

  - Synchronization

    - Barriers use caches and memory too

  - Concurrent access to shared buffers

    - Producer-consumer, etc

- 10 years ago, locality was mostly an issue for large NUMA SMP machines (SGI, etc)

  - Today it's **everywhere**

   - Because multicores and NUMA are everywhere

What to do about locality?

- Place processes/tasks according to their affinities

  - If two tasks communicate/synchronize/share a lot, keep them close

- Adapt your algorithms to the locality

  - Adapt communication/synchronization implementations to the topology

    - Ex: hierarchical barriers

Process binding

- Some MPI implementations bind processes by default (Intel MPI, Open MPI 1.8)
  - Because it's better for reproducibility
- Some don't
  - Because it may hurt your application
    - Oversubscribing?
- Binding doesn't guarantee that your processes are optimally placed
  - It just means your process won't move
    - No migration, less cache issues, etc

To bind or not to bind ?

Zeus MHD Blast. 64 Processes/Cores. Mvapich2 1.8. + ICC
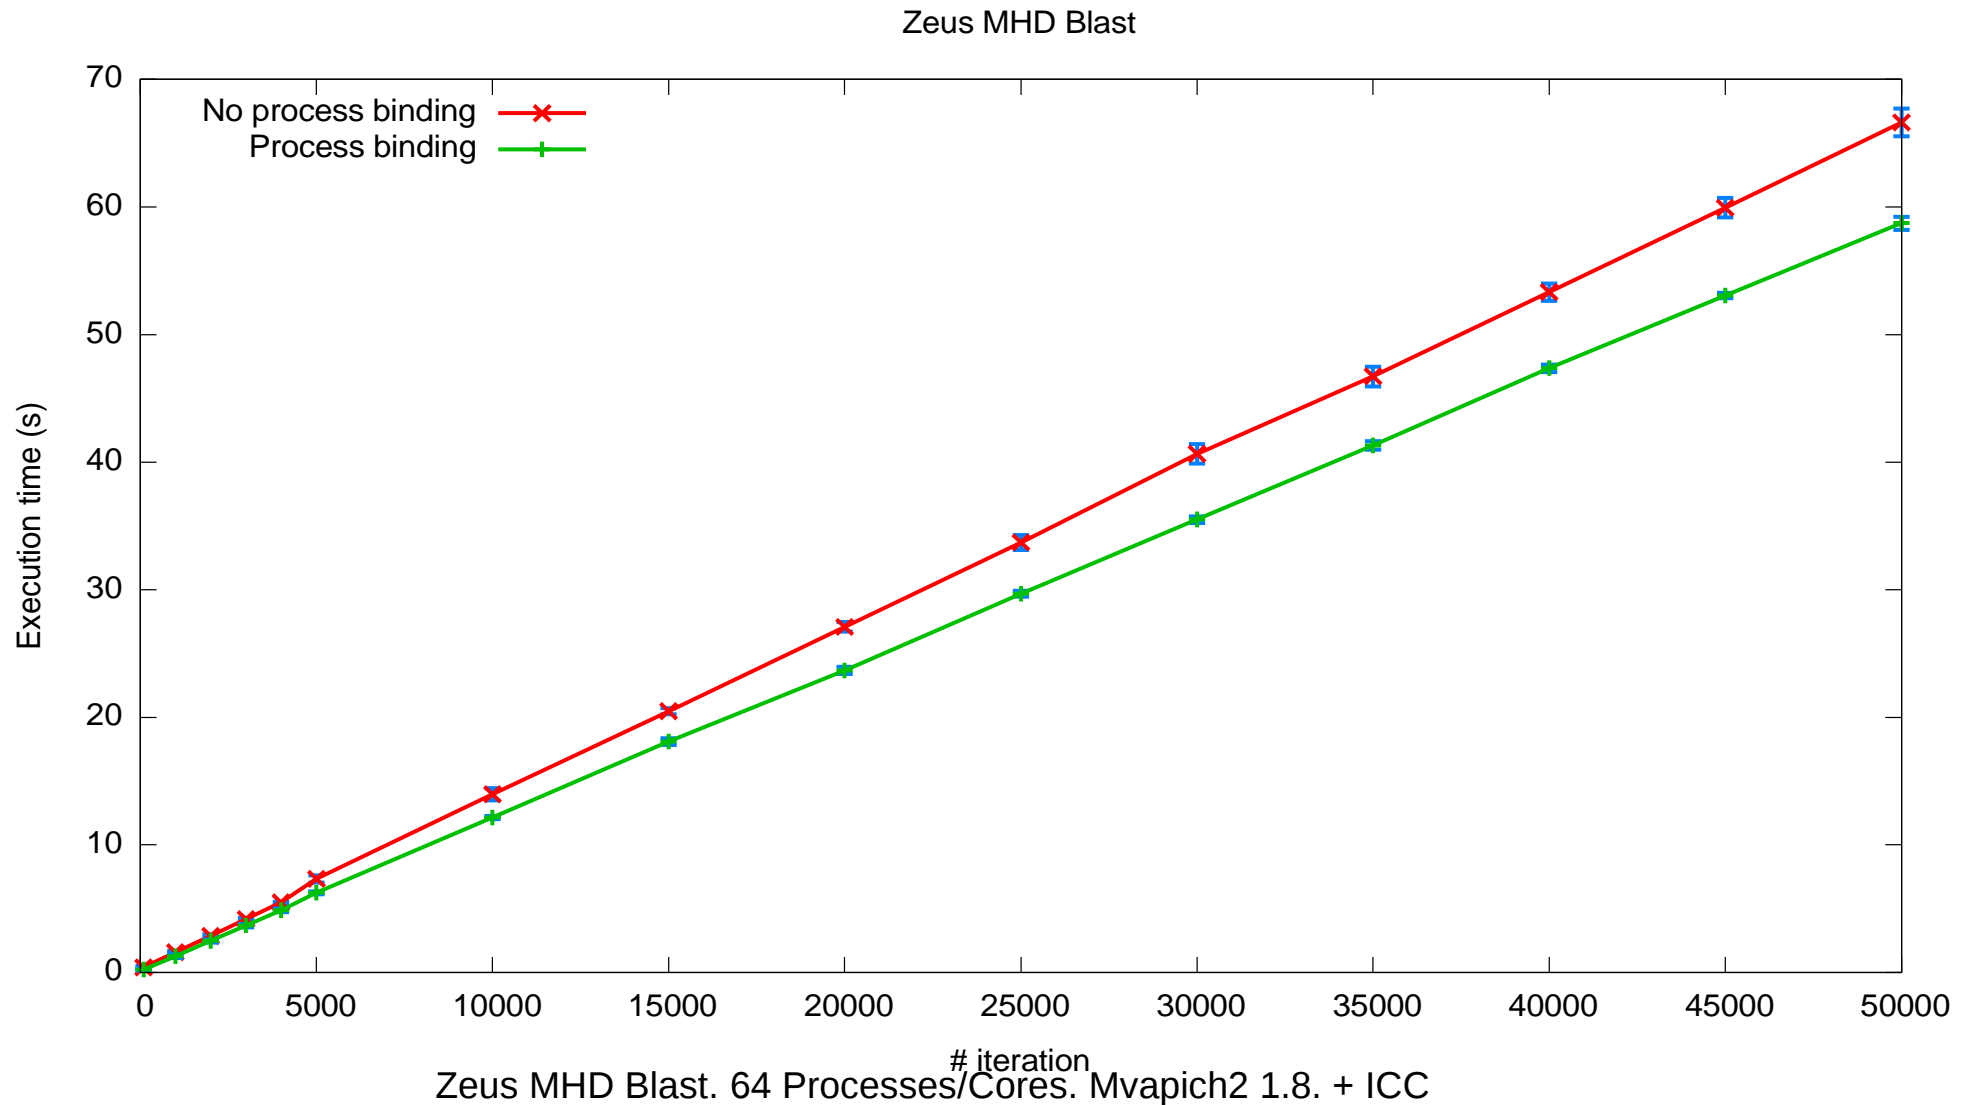
Where to bind ?

- Default binding strategies ?
  - By core first :
    - One process per core on first node,
      then one process per on second node, …
  - By node first :
    - One process on first core of each node,
      then one process on second core on each node, …
- Your application likely prefers one to the other
  - Usually the first one
    - Because you often communicate with nearby ranks

Inria

Binding strategy impact
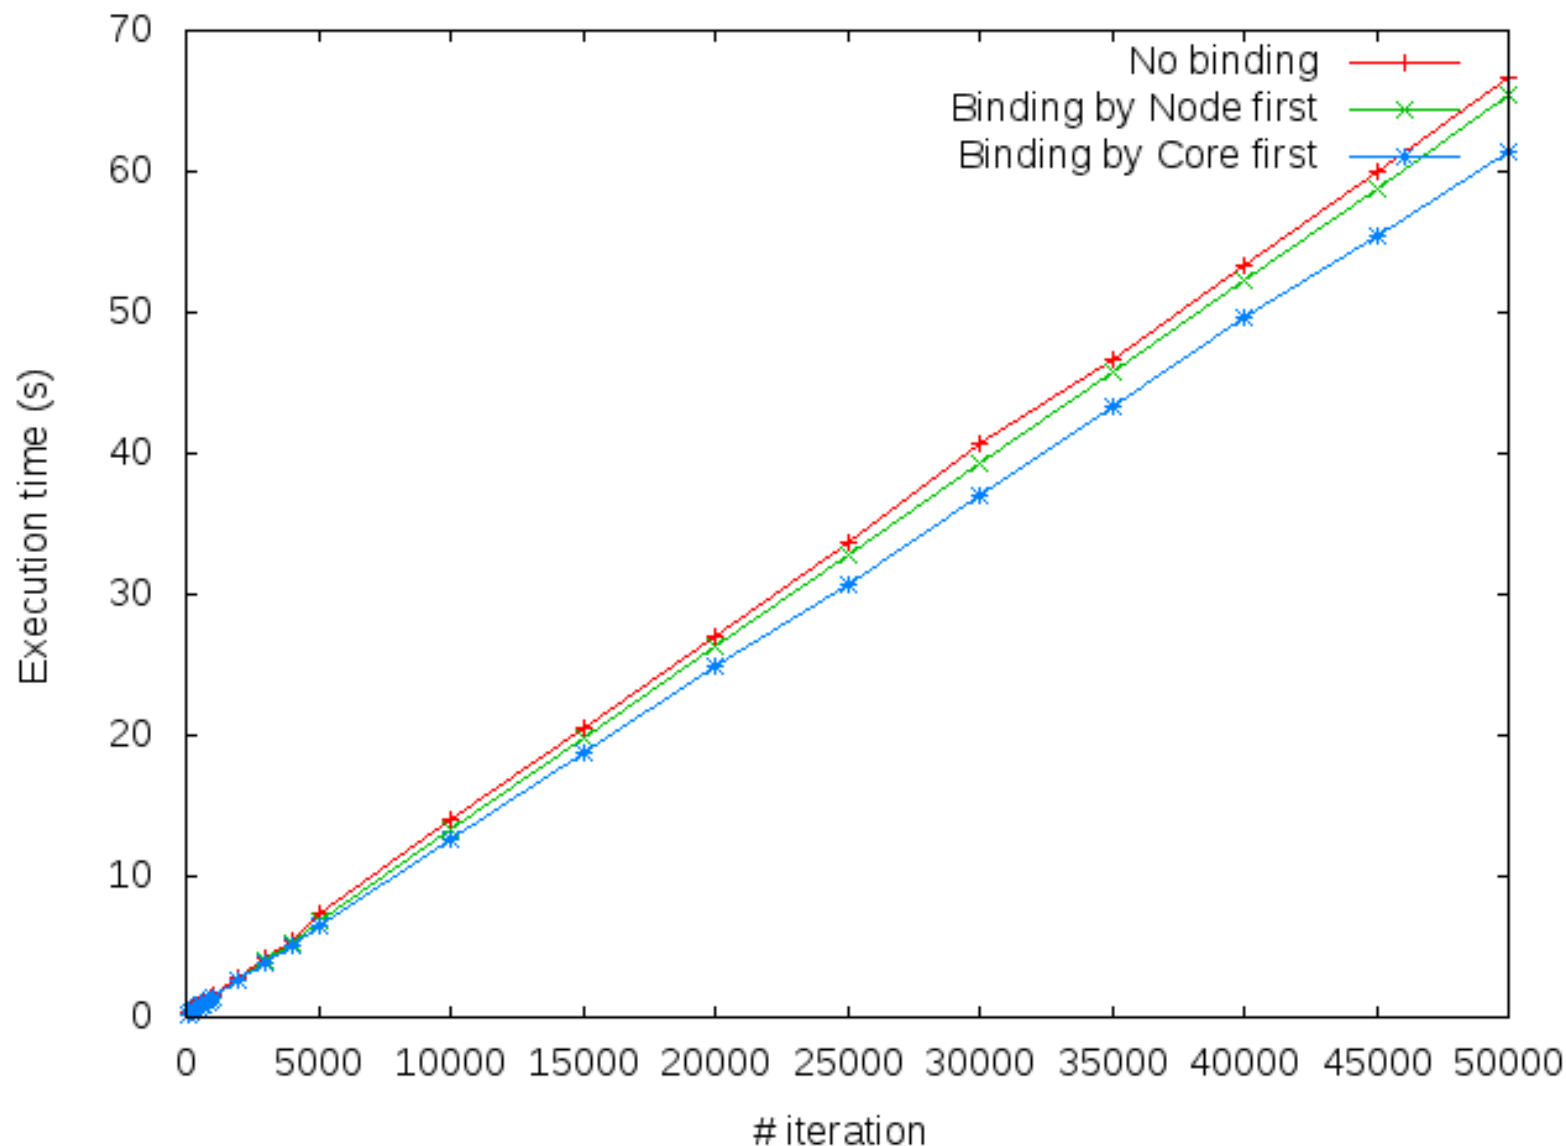
How to bind in MPI?

- MPI standard says nothing

- Manually

  - mpiexec
    -np 1 -H node1 numactl --physcpubind 0 ./myprogram :
    -np 1 -H node1 numactl --physcpubind 1 ./myprogram :
    -np 1 -H node2 numactl --physcpubind 0 ./myprogram

  - Rank files, etc

How to bind in MPI? (2/2)

- Open MPI

  - mpiexec --bind-to core --map-by core ...

    - Map by core

  - Mpiexec --bind-to-core --mca rmaps_lama_map nsc …

    - Map by node, then by socket, then by core

  - See mpiexec --help

- MPICH

  - mpiexec -bind-to core -map-by BSC ...

    - Map by node (Board), then by socket, then by core

  - See mpiexec -bind-to help

How to bind in OpenMP?
(more later)

- Intel Compiler

  - KMP_AFFINITY=scatter or compact

- GCC

  - GOMP_CPU_AFFINITY=1,3,5,2,4,6

How do I choose?

- Dilemma
  - Use cores 0 & 1 to share cache and improve synchronization cost ?
  - Use core 0 & 2 to maximize memory bandwidth ?
- Depends on
  - The machine structure
  - The application needs
- Locality-aware is very active research topic
  - TreeMatch for MPI process placement
    - Based on communication pattern
  - StarPU for task-based scheduling
    - Based on history
  - Many others

Machine (2048MB)

NUMANode P#0 (1024MB)

Socket P#0

L2 P#0 (4096KB)

Core P#0
PU P#0

Core P#1
PU P#1

NUMANode P#1 (1024MB)

Socket P#1

L2 P#1 (4096KB)

Core P#2
PU P#2

Core P#3
PU P#3
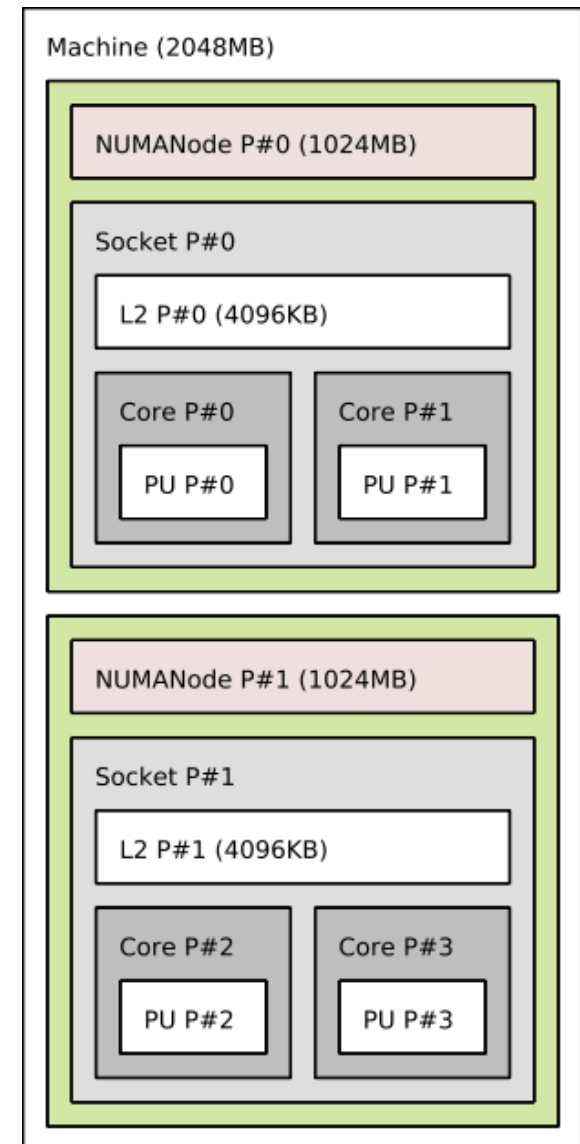
3 What's the actual problem ?

Example of dual Nehalem Xeon machine

Machine (48GB)

NUMANode P#0 (24GB)

Socket P#0

L3 (8192KB)

| L2 (256KB) | L2 (256KB) | L2 (256KB) | L2 (256KB) |

| L1d (32KB) | L1d (32KB) | L1d (32KB) | L1d (32KB) |

| L1i (32KB) | L1i (32KB) | L1i (32KB) | L1i (32KB) |

| Core P#0 | Core P#1 | Core P#2 | Core P#3 |
| PU P#0 | PU P#1 | PU P#2 | PU P#3 |

NUMANode P#1 (24GB)

Socket P#1

L3 (8192KB)

| L2 (256KB) | L2 (256KB) | L2 (256KB) | L2 (256KB) |

| L1d (32KB) | L1d (32KB) | L1d (32KB) | L1d (32KB) |

| L1i (32KB) | L1i (32KB) | L1i (32KB) | L1i (32KB) |

| Core P#0 | Core P#1 | Core P#2 | Core P#3 |
| PU P#4 | PU P#5 | PU P#6 | PU P#7 |

Another example of dual Nehalem Xeon machine
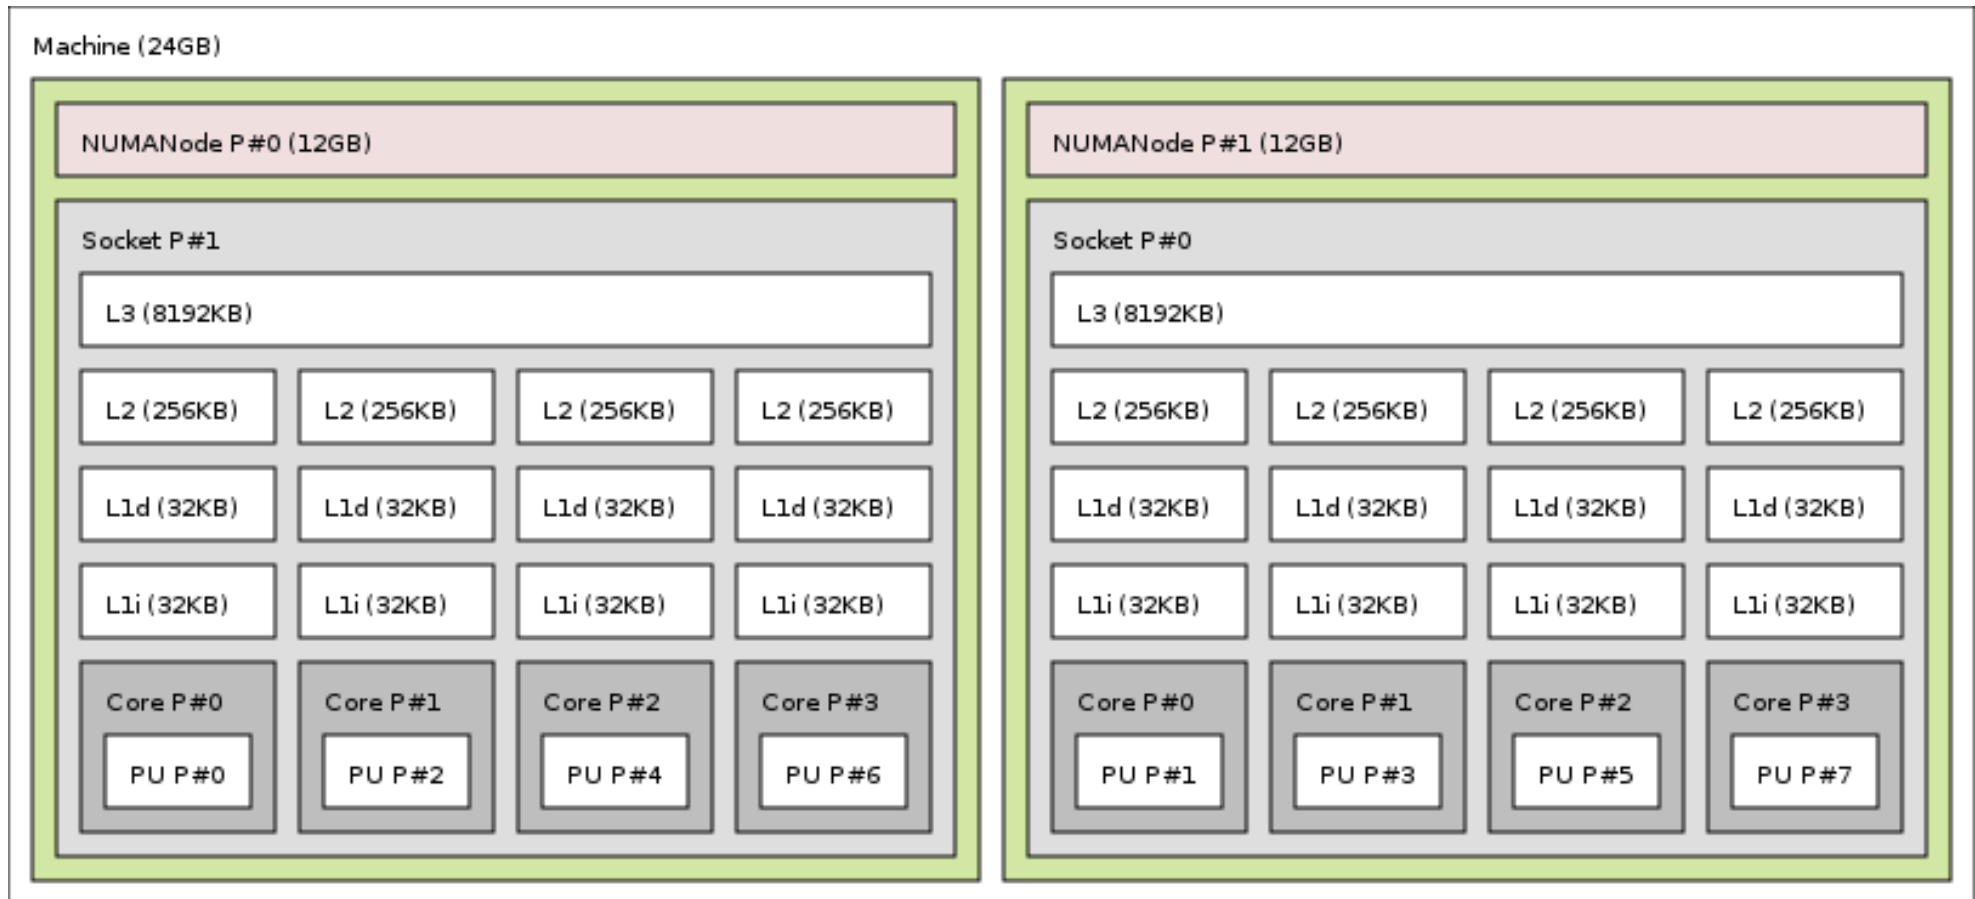
Processor and core numbers are crazy

- Resources ordering is unpredictable
  - Ordered by any combination of NUMA/socket/core/hyperthread
  - Can change with the vendor, the BIOS version, etc
- Some resources may be unavailable
  - Batch schedulers can give only parts of machines
    - Core numbers may be non-consecutive, non starting at 0, etc
- Don't assume anything about indexes
  - Don't use these indexes
    - Or you won't be portable

Level ordering isn't much better
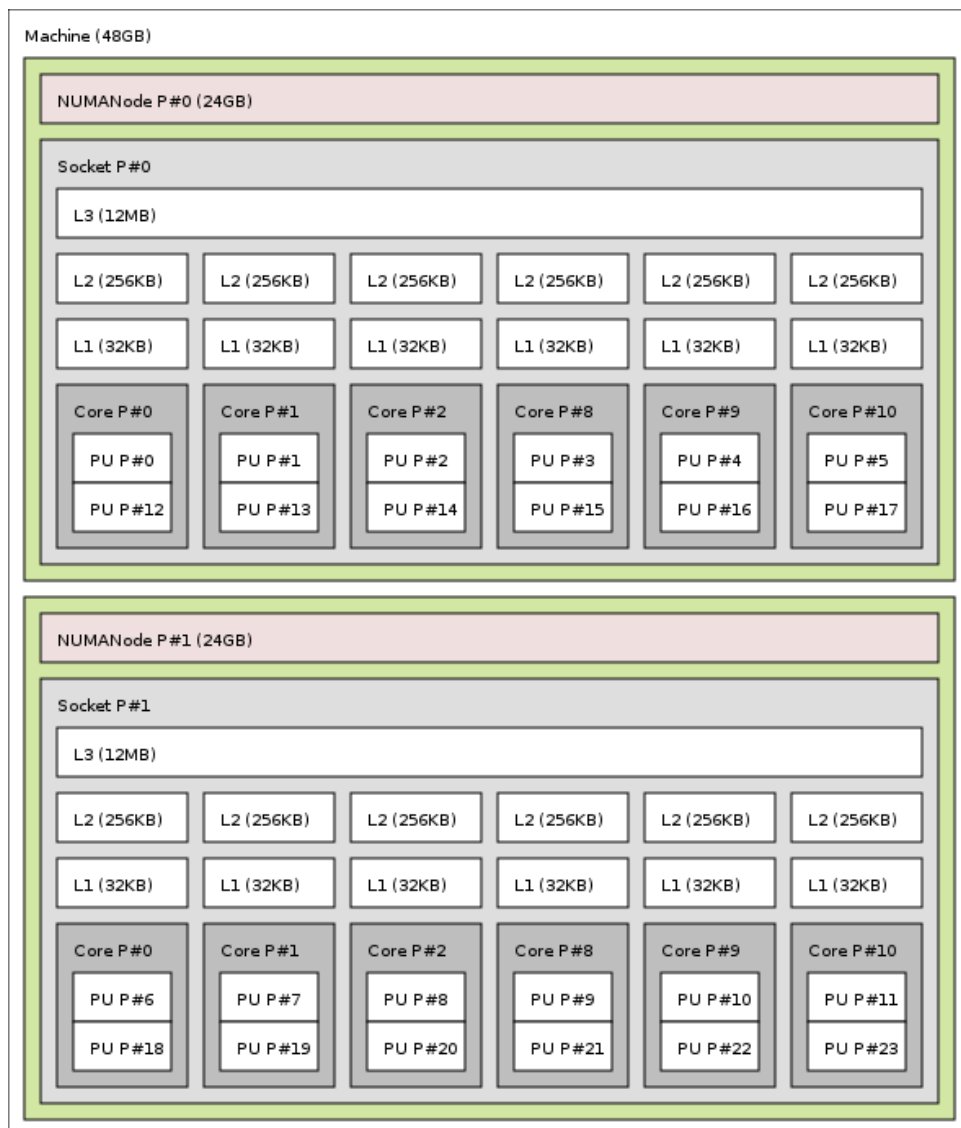
- Intel is usually
  - Machine
  - Socket = NUMA = L3
  - Core = L1 = L2
  - Hyperthread (PU)

Level ordering isn't much better (2/3)

- AMD is different
  - Machine
  - Socket
  - NUMA = L3
  - L2 = L1i
  - Core = L1d

Level ordering isn't much better (3/3)

- Sometimes there are multiple sockets per NUMA nodes

  - And different levels of caches

- Don't assume anything about level ordering

  - Or (again) you won't be portable

  - e.g.: Intel Compiler OpenMP binding may be wrong on AMD machines

Gathering topology information is difficult

- Lack of generic, uniform interface
  - Operating system specific
    - /proc and /sys on Linux
    - rset, sysctl, lgrp, kstat on others
  - Hardware specific
    - x86 cpuid instruction, device-tree, PCI config space, ...
- Evolving technology
  - AMD Bulldozer dual-core compute units
    - It's not two real cores, neither a dual-threaded core
  - New levels? New ordering?

Binding is difficult too

- Lack of generic, uniform interface, again
  - Process/thread binding
    - sched_setaffinity API changed twice on Linux
    - rset, ldom_bind, radset, affinity_set on others
  - Memory binding
    - mbind, migrate_pages, move_pages on Linux
    - rset, mmap, radset, nmadvise, affinity_set on others
  - Different constraints
    - Bind on single core only, on contiguous set of cores, on random sets ?
  - Many different policies

4 Introducing hwloc (Hardware Locality)

What hwloc is

- **Detection of hardware resources**
  - **Processing units (PU), logical processors, hardware threads**
    - Everything that can run a task
  - **Memory nodes, shared caches**
  - **Cores, Sockets, … (things that contain multiple PUs)**
  - **I/O devices**
    - PCI devices and corresponding software handles
- **Described as a tree**
  - **Logical resource identification and organization**
    - Based on locality

What hwloc is (2/2)

- API and tools to consult the topology
    - Which cores are near this memory node ?
    - Give me a single thread in this socket
    - Which memory node is near this GPU ?
    - What shared cache size between these cores ?
- Without caring about hardware strangeness
    - Non portable and crazy numbers, names, …
- A portable binding API
    - No more Linux sched_setaffinity API breakage
    - No more tens of different binding API with different types

What hwloc is **NOT**

- A placement algorithm

  - hwloc gives hardware information

  - You're the one that knows what your software does/needs

  - You're the one that must match software affinities to hardware localities

    - We give you the hardware information you need

- A profiling tool

  - Other tools (e.g. likwid) give you hardware performance counters

    - hwloc can match them with the actual resource organization

History

- Runtime Inria project in Bordeaux, France
  - Thread scheduling over NUMA machines (2003...)
    - Marcel threads, ForestGOMP OpenMP runtime
    - Portable detection of NUMA nodes, cores and threads
      - Linux wasn't that popular on NUMA platforms 10 years ago
        - Other Unixes have good NUMA support
    - Extended to caches, sockets, … (2007)
  - Raised questions for new topology users
    - MPI process placement (2008)

History

- Marcel's topology detection extracted as standalone library (2009)

- Noticed by the Open MPI community

  - They knew their PLPA library wasn't that good

- Merged both libraries as hwloc (2009)

- BSD-3

- Still mainly developed by Inria Bordeaux

  - Collaboration with Open MPI community

  - Contributions from MPICH, Redhat, IBM, Oracle, ...

Alternative software
with advanced topology knowledge

- PLPA (old Open MPI library)
  - Linux specific, no NUMA support, obsolete, dead
- libtopology (IBM)
  - Dead
- Likwid
  - x86 only, needs update for each new processor generation, no extensive C API
    - It's more kind of a performance optimization tool
- Intel Compiler (icc)
  - x86 specific, no API

hwloc's view of the hardware

- **Tree of objects**
  - Machines, NUMA memory nodes, sockets, caches, cores, threads
    - Logically ordered
  - Grouping similar objects using distances between them
    - Avoids enormous flat topologies
  - Many attributes
    - Memory node size
    - Cache type, size, line size, associativity
    - Physical ordering
    - Miscellaneous info, customizable

Using hwloc for this tutorial

- On **PlaFRIM**, just use

  $ module load hardware/hwloc

- (and for GPU-related tests)

  $ module load gpu/cuda

- You may also install it on your local machine
  - It will make remote machine consulting easier

Installing hwloc

- Packages available in Debian, Ubuntu, Redhat, Fedora, CentOS, ArchLinux, NetBSD

- You want the development headers too
    - libhwloc-dev, hwloc-devel, …

Manual installation

- Take a recent tarball at
  http://www.open-mpi.org/projects/hwloc

- Dependencies

  - On Linux, numactl/libnuma development headers

  - Cairo headers for lstopo graphics

- ./configure --prefix=$PWD/install

  - Very few configure options

- Check the summary at the end of configure

Manual installation

- make

- make install

- Useful environment variables

  - export PATH=$PATH:<prefix>/bin

  - export LD_LIBRARY_PATH=$LD_LIBRARY_PATH:<prefix>/lib

  - export PKG_CONFIG_PATH=$PKG_CONFIG_PATH:<prefix>/lib/pkgconfig
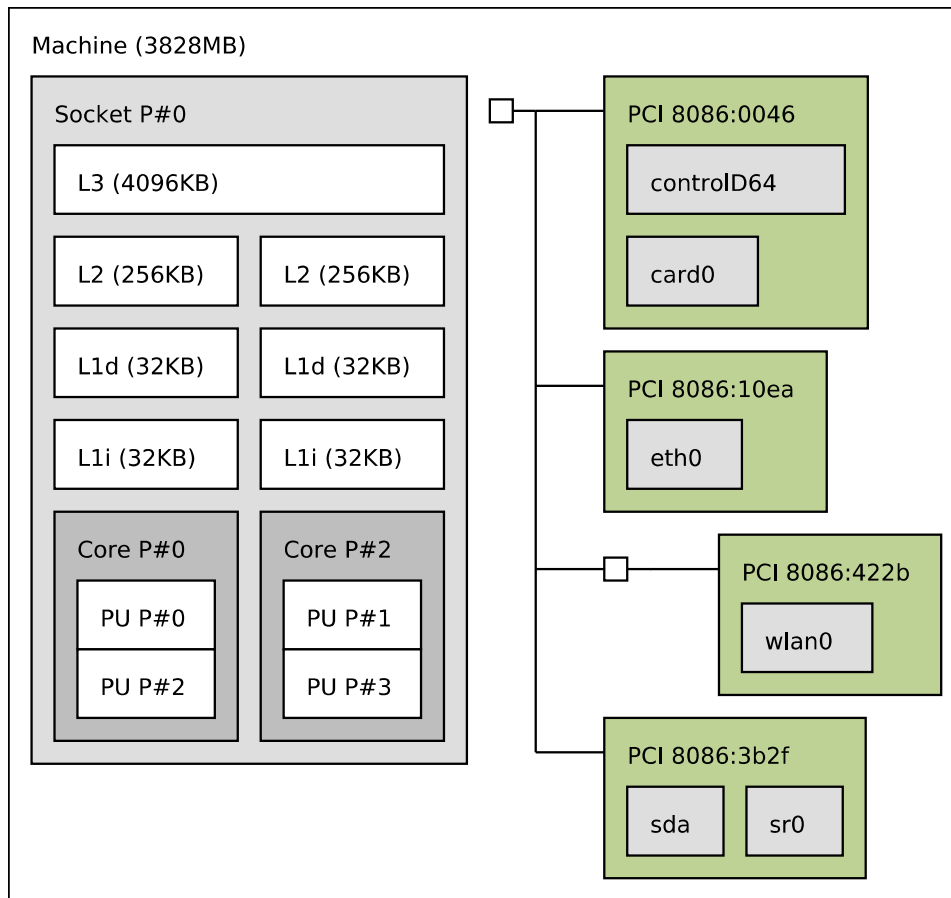
  - export MANPATH=$MANPATH:<prefix>/share/man

Using hwloc

- Many hwloc command-line tools
    - lstopo and hwloc-*
- … but the actual hwloc power is in the C API
- Perl and Python bindings

5 Command-line Tools

lstopo
(displaying topologies)


```
Machine (3828MB)
    Socket L#0 + L3 L#0 (4096KB)
        L2 L#0 (256KB) + Core L#0
            PU L#0 (P#0)
            PU L#1 (P#2)
        L2 L#1 (256KB) + Core L#1
            PU L#2 (P#1)
            PU L#3 (P#3)
    HostBridge L#0
        PCI 8086:0046
            GPU L#0 "controlD64"
        PCI 8086:10ea
            Net L#2 "eth0"
        PCIBridge
            PCI 8086:422b
                Net L#3 "wlan0"
        PCI 8086:3b2f
            Block L#4 "sda"
            Block L#5 "sr0"
```

lstopo

- Many output formats
  - Text, Cairo (PDF, PNG, SVG, PS), Xfig, ncurses
    - Automatically guessed from the file extension
- XML dump/reload
  - Faster, convenient for remote debugging
- Configuration options for nice figures for papers
  - Horizontal/Vertical placement
  - Legend
  - Ignoring things
  - Creating fake topologies

lstopo

$ lstopo

$ lstopo --no-io -

$ lstopo myfile.png

$ ssh host lstopo saved.xml

$ lstopo -i saved.xml

$ ssh myhost lstopo -.xml | lstopo --if xml -i -

$ lstopo -i "node:4 socket:2 core:2 pu:2"

hwloc-bind
(binding processes, threads and memory)

- Bind a process to a given set of CPUs

  $ hwloc-bind socket:1 -- mycommand myargs...

  $ hwloc-bind os=mlx4_0 -- mympiprogram ...

- Bind an existing process

  $ hwloc-bind --pid 1234 node:0

- Bind memory

  $ hwloc-bind --membind node:1 --cpubind node:0 …

- Find out if a process is already bound

  $ hwloc-bind --get --pid 1234

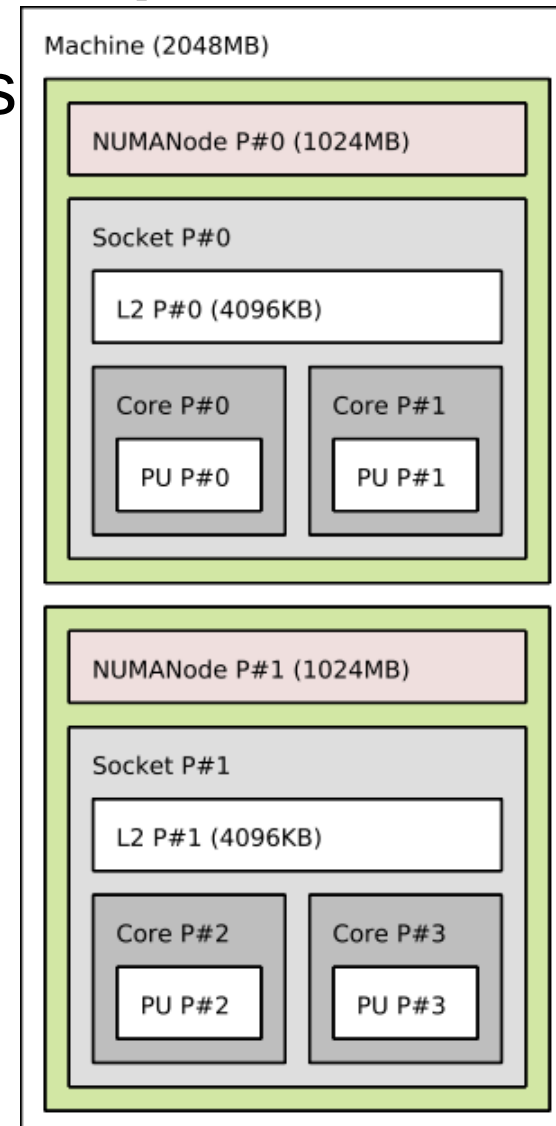 $ hwloc-ps

hwloc-calc
(calculating with objects)

- Convert between ways to designate sets of CPUs, objects... and combine them

  $ hwloc-calc socket:1.core:1 ~pu:even
  0x00000008
  $ hwloc-calc --number-of core node:0
  2
  $ hwloc-calc --intersect pu socket:1
  2,3
- The result may be passed to other tools
- Multiple invocations may be combined
- I/O devices also supported
  $ hwloc-calc os=eth0

Machine (2048MB)

NUMANode P#0 (1024MB)

Socket P#0

L2 P#0 (4096KB)

Core P#0 | Core P#1

PU P#0 | PU P#1

NUMANode P#1 (1024MB)

Socket P#1

L2 P#1 (4096KB)

Core P#2 | Core P#3

PU P#2 | PU P#3

Other tools

- Get some object information
  - hwloc-info (v1.7+)

- Generate bitmaps for distributing multiple processes on a topology
  - hwloc-distrib

- Save a Linux node topology info for debugging
  - hwloc-gather-topology

- Manipulating multiple topologies, etc.

Hands-on lstopo

- Gather the topology of one server

- Display it on another machine

- Hide caches

- Remove the legend

- Restrict the display to a single socket

- Export to PDF

Hands-on hwloc-bind and hwloc-calc

- Bind a process to a core and verify its binding

- Find the DMA difference between a GPU and both NUMA nodes

  - Measured with /opt/cluster/gpu/cuda/latest/sdk/C/bin/linux/release/bandwidthTest –memory=pinned --device=N

- Find out how many cores are in the second NUMA node

- Find out which cores are close to InfiniBand

- Find out the physical numbers of all non-first hyperthreads

6 C Programming API

API basics

- A hwloc program looks like this

#include <hwloc.h>

hwloc_topology_t topo;

hwloc_topology_init(&topo);
/* ... configure what topology to build … */
hwloc_topology_load(topo);

/* … play with the topology … */

hwloc_topology_destroy(topo);

Major hwloc types

- The topology context : hwloc_topology_t

  - You always need one

- The main hwloc object : hwloc_obj_t

  - That's where the actual info is

  - The structure isn't opaque

    - It contains many pointers to ease traversal

- Object type : hwloc_obj_type_t

  - HWLOC_OBJ_PU, _CORE, _NODE, …

Object information

- Type
- Optional name string
- Indexes (see later)
- cpusets and nodesets (see later)
- Tree pointers (*cousin, *sibling, arity, *child*, parent)
- Type-specific attribute union
  - obj->attr->cache.size
  - obj->attr->pcidev.linkspeed
- String info pairs
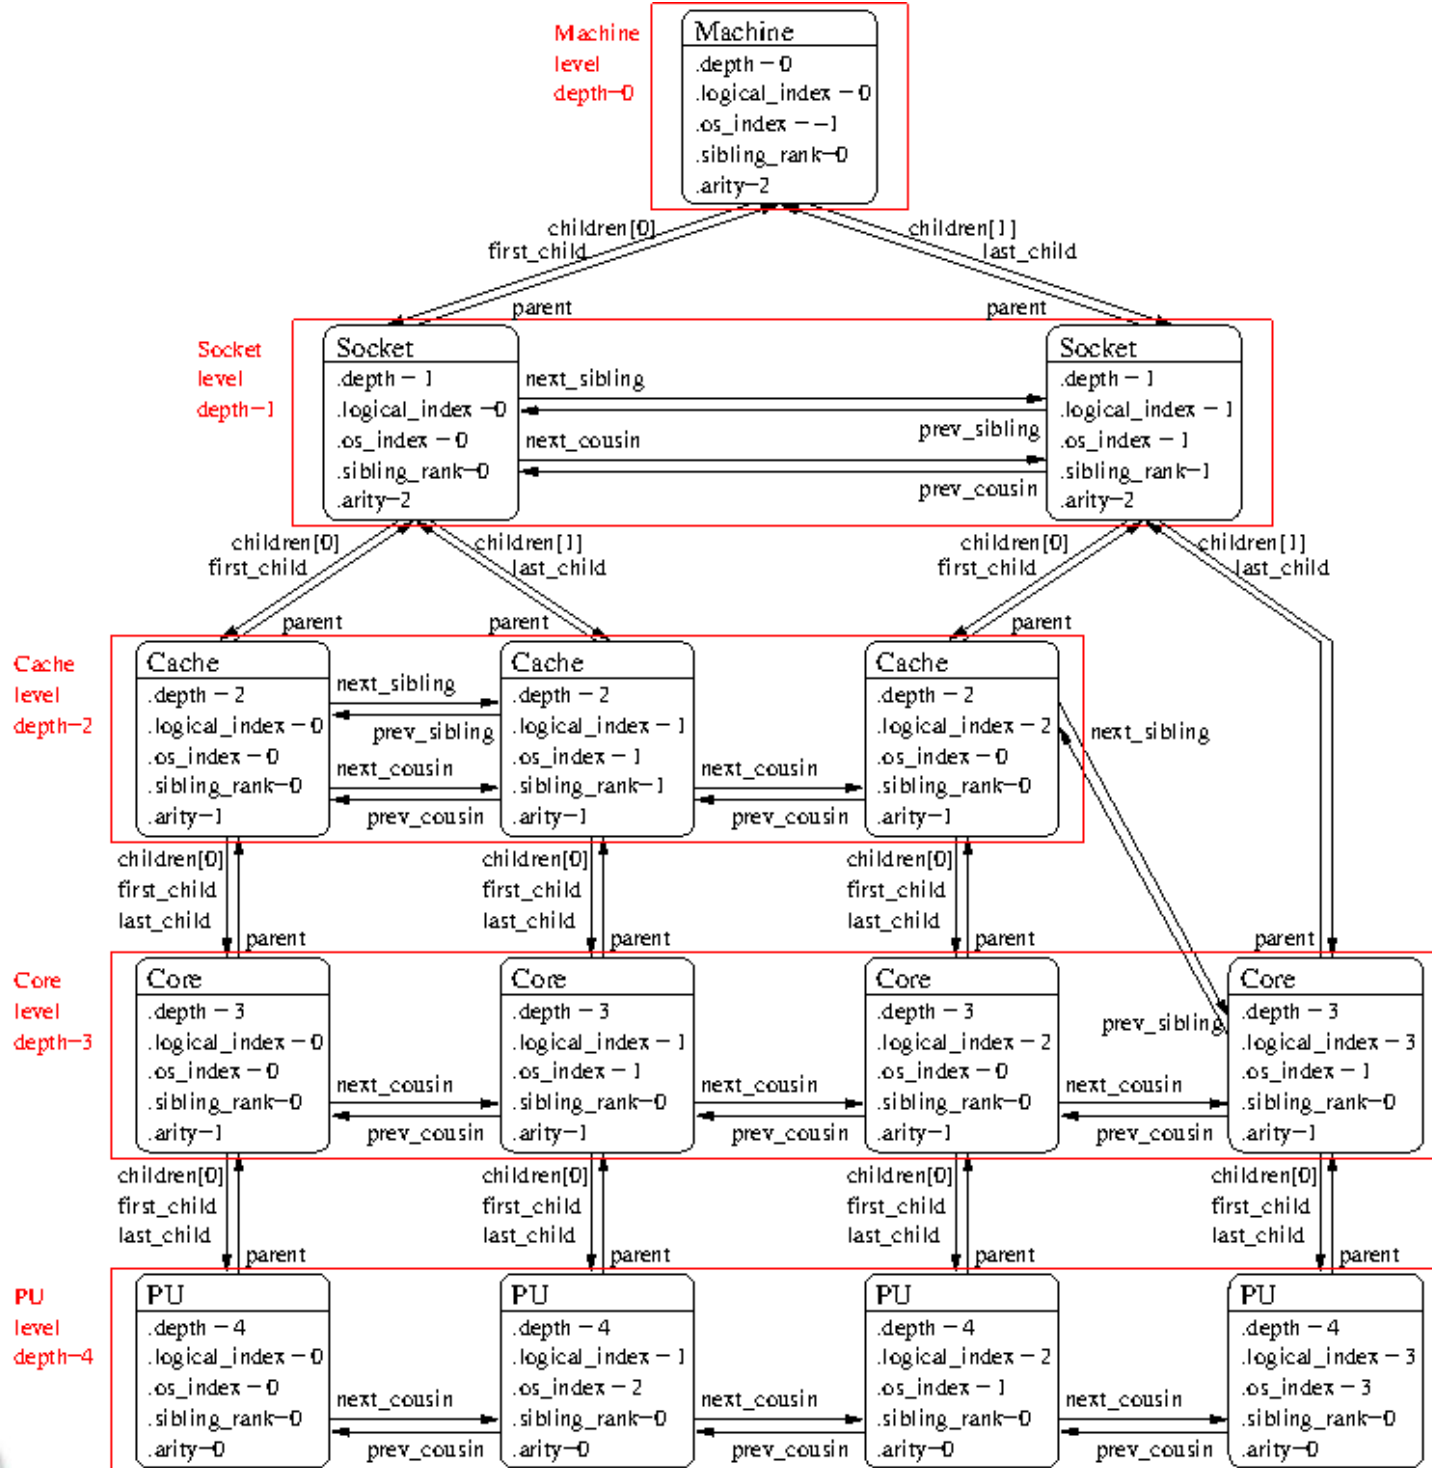
Browsing as a tree

- The root is hwloc_get_root_obj(topo)

- Objects have children

  - obj->arity is the number of children

  - The array of children is obj->children[]

  - They are also in a list

    - obj->first_child, obj->last_child

    - child->prev_sibling, child->next_sibling

    - NULL-terminated

- The parent is obj->parent (or NULL)

Browsing as levels

- The topology is also organized as levels of identical objects

  - Cores, L2d Caches, …

  - All PUs at the bottom

- Number of levels hwloc_topology_get_depth(topo)

- Number of objects on a level
  hwloc_get_nbobjs_by_type(topo, type)
  hwloc_get_nbobjs_by_depth(topo, depth)

- Convert between depth and type using
  hwloc_get_type_depth() or hwloc_get_depth_type()

Browsing as levels

- Find objects by level and index
    - hwloc_get_obj_by_type(topo, type, index)
    - There are variants taking a depth instead of a type
        - Note : the depth of my child is not always my depth + 1
            - Think of asymmetric topologies
- Iterate over objects of a level
    - Objects at the same levels are also interconnect by prev/next_cousin pointers
        - Don't mix up siblings (children list) and cousins (level)
    - hwloc_get_next_obj_by_type/depth()

Hands-on browsing the topology

Starting from basic.c

- Print the number of cores

- Print the type of the common ancestor of cores 0 and 2

- Print the memory size near core 0

- Iterate over all PUs and print their physical numbers

Physical or OS indexes

- obj->os_index
  - The ID given by the OS/hardware
- P#3
  - Default in lstopo graphic mode
  - lstopo -p
- NON PORTABLE
  - Depend on motherboards, BIOS, version, …
- DON'T USE THEM

Logical indexes

- obj->logical_index
  - The index among an entire level
- L#2
  - Default in lstopo except in graphic mode
  - lstopo -l
- Always represent proximity (depth-first walk)
- PORTABLE
  - Does not depend on OS/BIOS/weather
- That's what you want to use

But I still need OS indexes when binding ?!

- NO !

- Just use hwloc for binding, you won't need physical/OS indexes ever again

- If you want to bind the execution to a core

  - hwloc_set_cpubind(core->cpuset)

    - Other API functions for binding entire processes, single thread, memory, for allocating bound memory, etc.

Bitmap, CPU sets, Node sets

- Generic mask of bits : hwloc_bitmap_t
  - Possibly infinite
  - Opaque, used to describe object contents
    - Which PU are inside this object (obj->cpuset)
    - Which NUMA nodes are close to this object (obj->nodeset)
  - Can be combined to bind to multiple cores, etc.
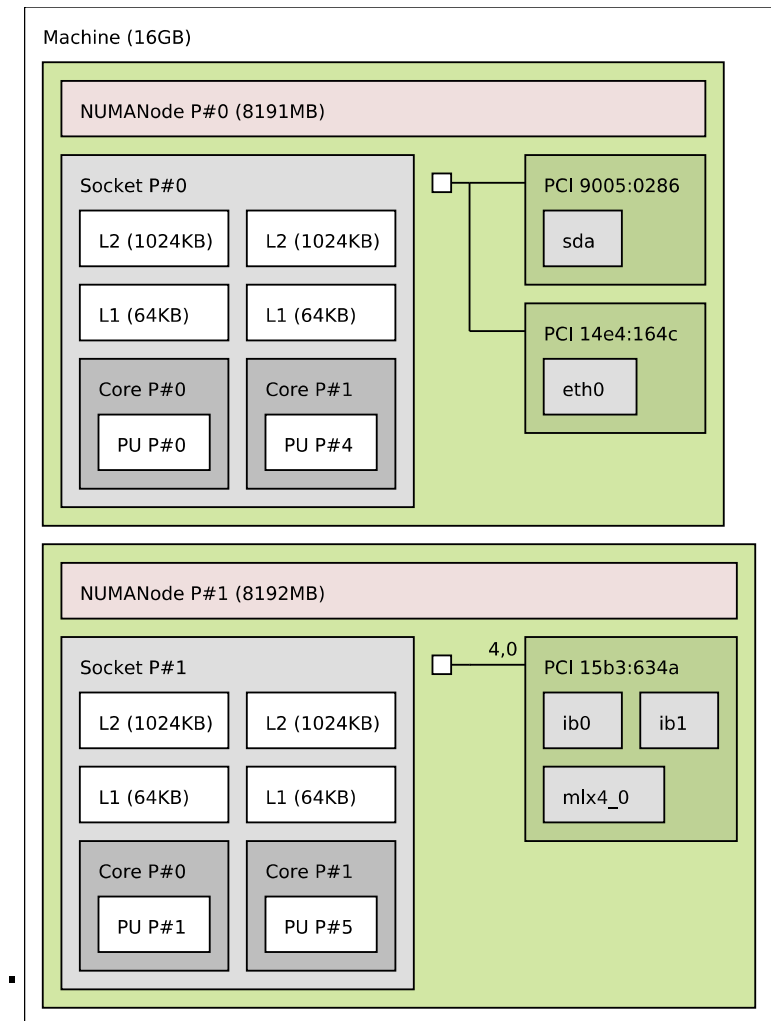   - and, or, xor, not, ...

Hands-on bitmaps and binding

- Bind a process to cores 2 and 4

- Print its binding

- Print where it's actually running

  - Repeat

- Rebind to avoid migrating between cores

  - hwloc_bitmap_singlify()
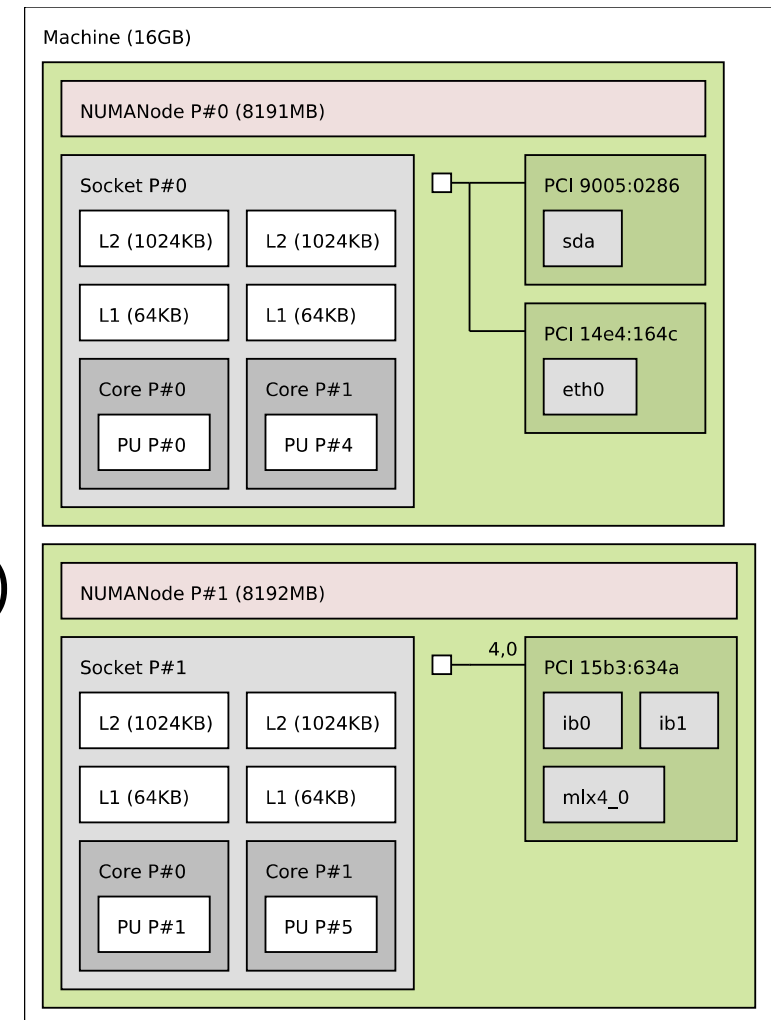
I/O devices

- **Binding tasks near the devices they use improves their data transfer time**
  - GPUs, high-performance NICs, InfiniBand, …
- **You cannot bind tasks or memory on these devices**
  - But these devices may have interesting attributes
    - Device type, GPU capabilities, embedded memory, link speed, …

Machine (16GB)

NUMANode P#0 (8191MB)

Socket P#0

L2 (1024KB) L2 (1024KB)

L1 (64KB) L1 (64KB)

Core P#0 Core P#1

PU P#0 PU P#4

PCI 9005:0286

sda

PCI 14e4:164c

eth0

NUMANode P#1 (8192MB)

Socket P#1

L2 (1024KB) L2 (1024KB)

L1 (64KB) L1 (64KB)

Core P#0 Core P#1

PU P#1 PU P#5

4,0 PCI 15b3:634a

ib0 ib1

mlx4_0

I/O objects

- Some I/O trees are attached to the object they are close to

- PCI device objects

  - Optional I/O bridge objects

- How to match your software handle with a PCI device ?

  - OS/Software devices (when known)

    - sda, eth0, ib0, mlx4_0

- Disabled by default

  - Except in lstopo

Machine (16GB)

NUMANode P#0 (8191MB)

Socket P#0

L2 (1024KB)   L2 (1024KB)

L1 (64KB)   L1 (64KB)

Core P#0   Core P#1

PU P#0   PU P#4

PCI 9005:0286

sda

PCI 14e4:164c

eth0

NUMANode P#1 (8192MB)

Socket P#1

L2 (1024KB)   L2 (1024KB)

L1 (64KB)   L1 (64KB)

Core P#0   Core P#1

PU P#1   PU P#5

4,0

PCI 15b3:634a

ib0   ib1

mlx4_0

Hands-on I/O

$ module load gpu/cuda

Starting from cuda.c

- Find the NUMA node near each CUDA device

Extended attributes

- obj->userdata pointer
  - Your application may store whatever it needs there
  - hwloc won't look at it, it doesn't know what's it contains

- (name,value) info attributes
  - Basic string annotations, hwloc adds some
    - HostName, Kernel Release, CPU Model, PCI Vendor, ...
  - You may add more

Configuring the topology

- Between hwloc_topology_init() and load()
  - hwloc_topology_set_xml(), set_synthetic()
  - hwloc_topology_set_flags(), set_pid()
  - hwloc_topology_ignore_type()

- After hwloc_topology_load()
  - hwloc_topology_restrict()
  - hwloc_topology_insert_misc_object...

Helpers

- hwloc/helpers.h contains a lot of helper functions

  - Iterators on levels, children, restricted levels

  - Finding caches

  - Converting between cpusets and nodesets

  - Finding I/O objects

  - And much more

- Use them to avoid rewriting basic functions

- Use them to understand how things work and write what you need

8 Conclusion

More information

- The documentation
  - http://www.open-mpi.org/projects/hwloc/doc/
  - Related pages
    - http://www.open-mpi.org/projects/hwloc/doc/v1.9/pages.php
  - FAQ
    - http://www.open-mpi.org/projects/hwloc/doc/v1.9/a00028.php
- 3-4 hours tutorials with exercises on the webpage
- README and HACKING in the source
- hwloc-users@open-mpi.org for questions
- hwloc-devel@open-mpi.org for contributing
- hwloc-announce@open-mpi.org for new releases
- https://git.open-mpi.org/trac/hwloc/ for reporting bugs

Thanks!

Questions?

http://www.open-mpi.org/projects/hwloc

informatics / *mathematics*

Inria

Brice.Goglin@inria.fr