


TOWAC (Table Organizer With Any Color) paper insert assembly guide and instructions:


Link to printout (print on A4 Sheet): <https://www.canva.com/design/DAHKdBJnmHM/u614wGAJIQYq9egVqMdZCg/edit>


I am using a different printout in the model, but they both work the same.

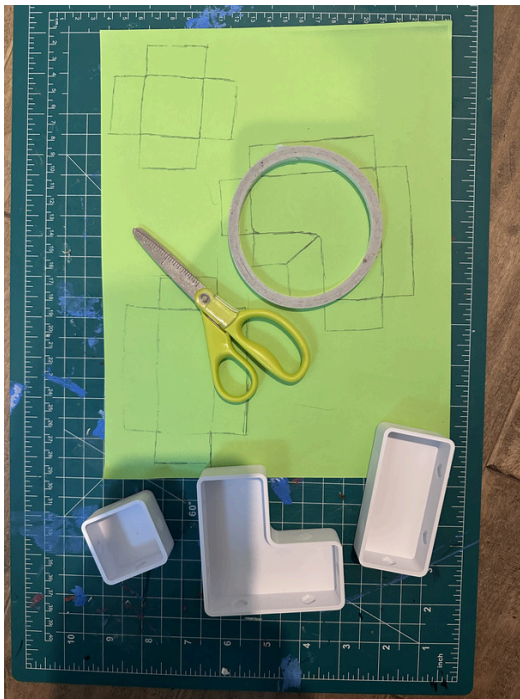

To start, you need the printout of the paper, double sided tape (you can roll single sided tape too), the printed boxes, the correct number of magnets (2 for each connection), and a pair of scissors.


Start of by cutting the shapes ot as seen in the picture. Be very careful to not cut where you are not supposed to, only cut around the border and for the L insert, make the extra cut seen in the picture.

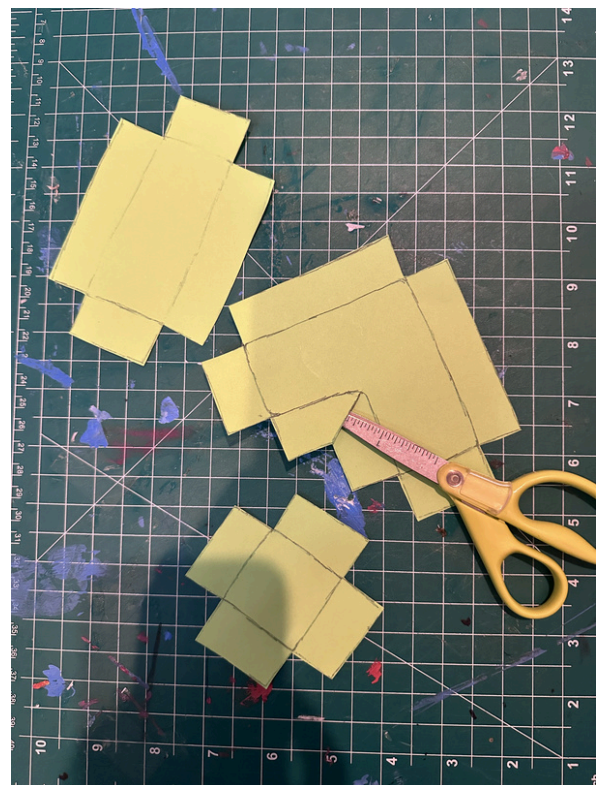

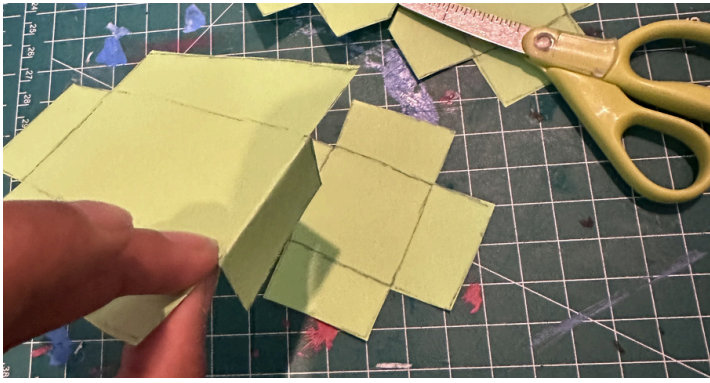


Fold as shown in the picture, with the print on the outside.

Should look like this:

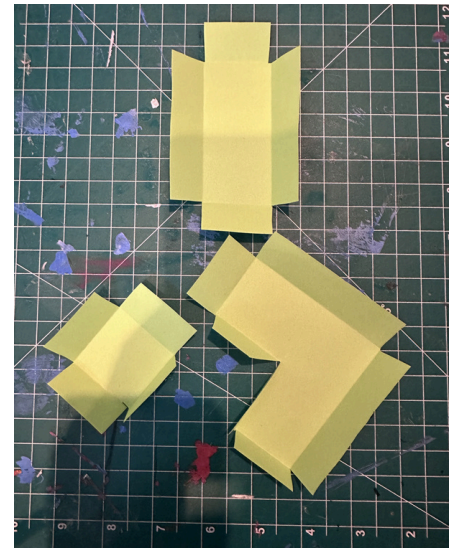

Line only the bottom of the 3D print with double sided tape being careful to not get any tape on the sides.

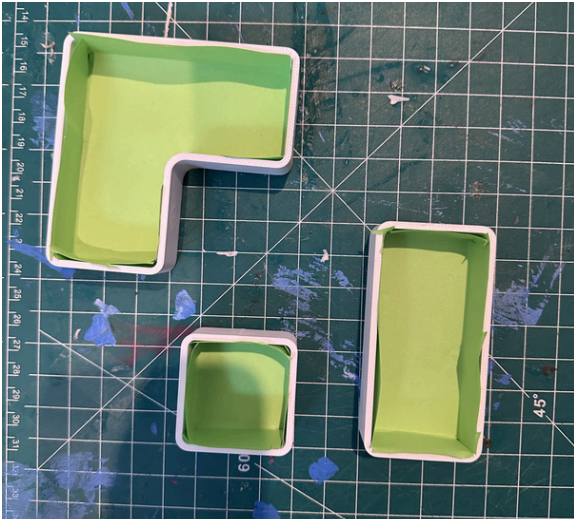

Place inserts down into the bin carefully for no wrinkles. If an insert is too large, fold a bit closer to the inside.

Lift up the flaps where you want the magnet to go:



The magnet is very easy to put it, just put one in and as you hold it with you finger, bring the other one close to where it needs to go and it should snap in place because they are magnetic



Done!

