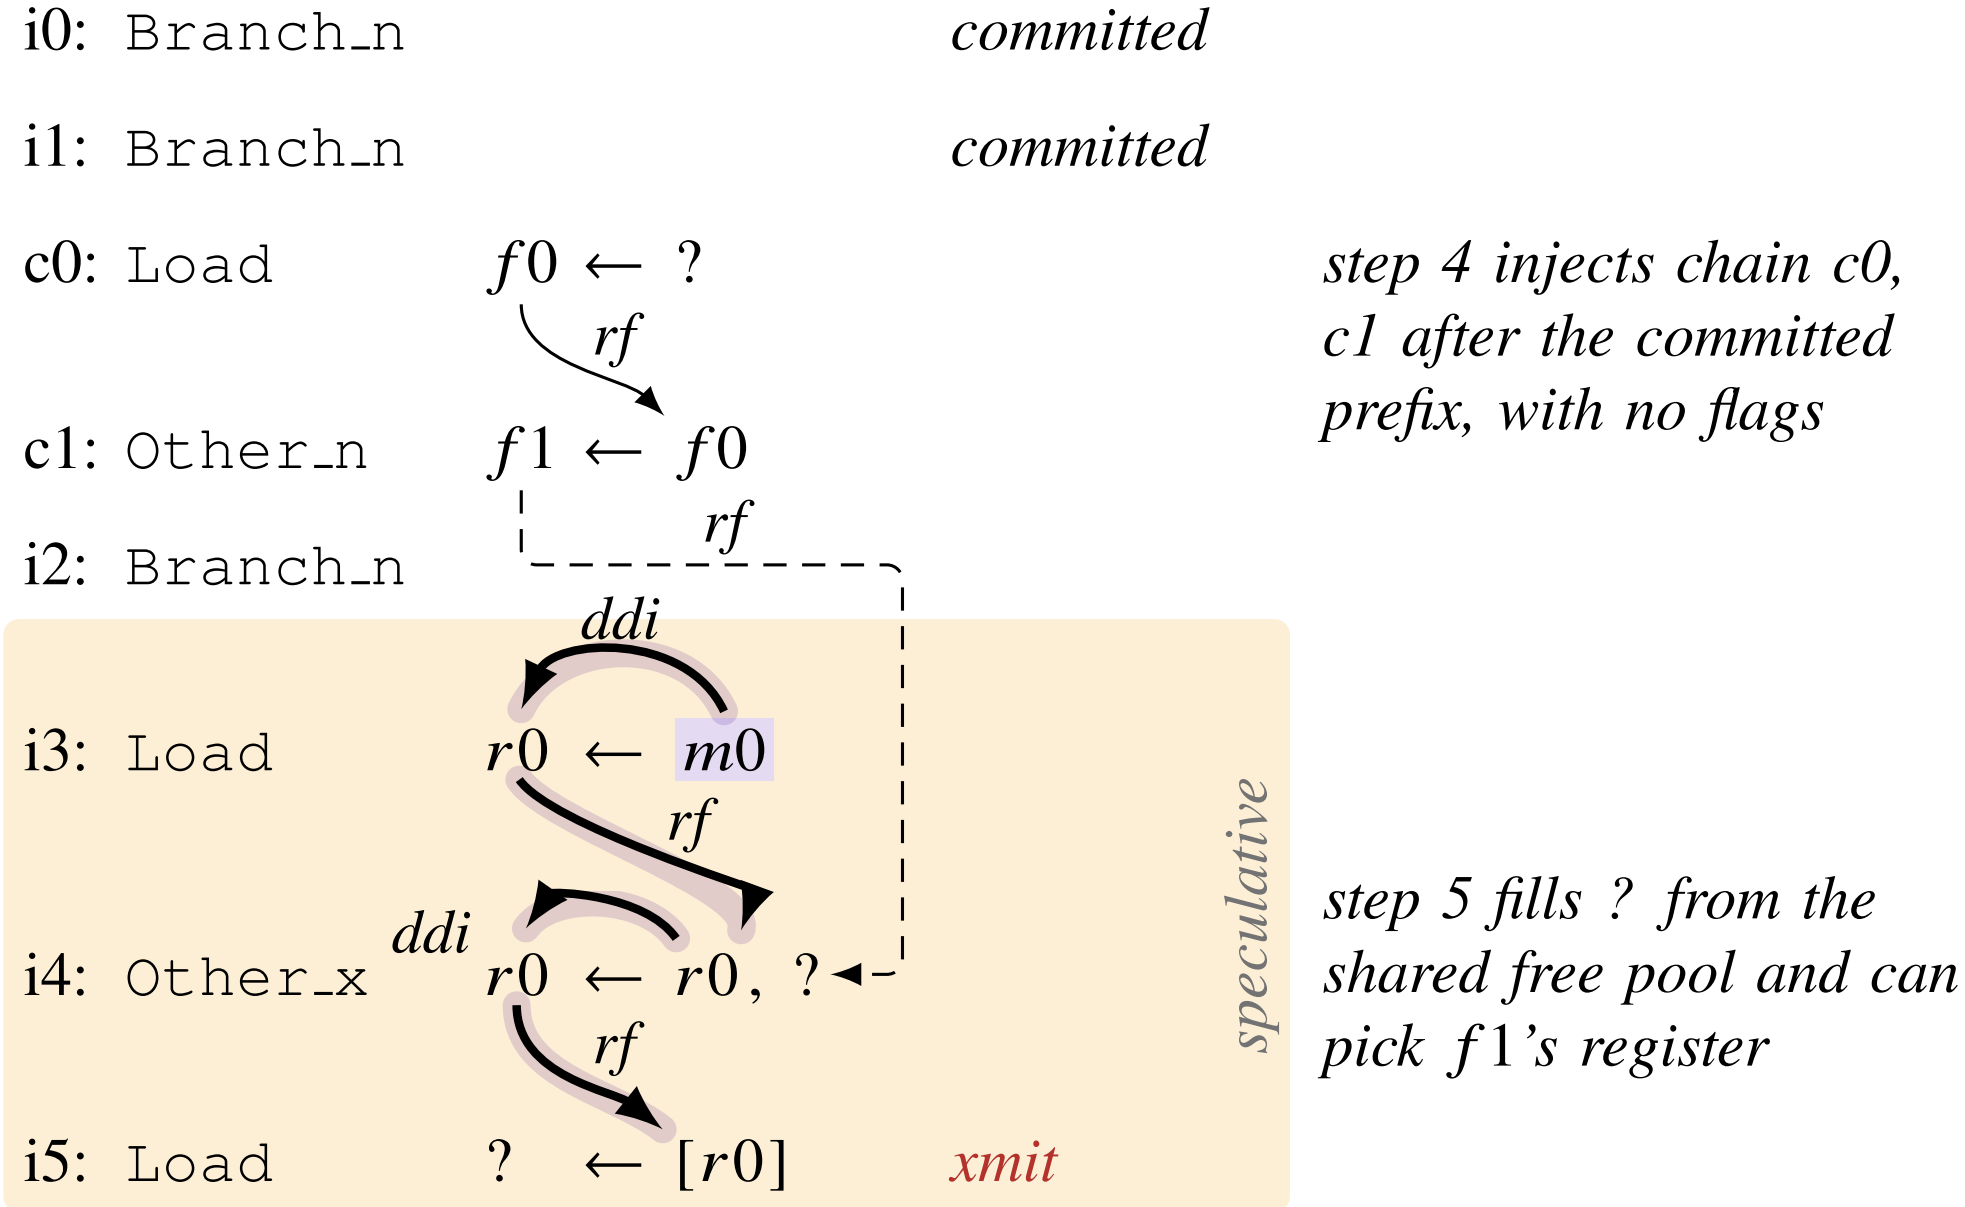

i0: Branch_n
committed
i1: Branch_n
committed
c0: Load
f0 ← ?
rf
c1: Other_n
f1 ← f0
rf
i2: Branch_n
ddi
i3: Load
r0 ← m0
rf
ddi
i4: Other_x
r0 ← r0, ?
rf
i5: Load
? ← [r0]
xmit
speculative
step 4 injects chain c0, c1 after the committed prefix, with no flags
step 5 fills ? from the shared free pool and can pick f1's register