
TOS Arno Puder

Device Drivers


Device Drivers

- Code that manages the details of interacting with a particular piece of hardware
- Interacting with hardware includes handling I/O and interrupts
- Linux kernel (2.6.x):
 - 2.3 million lines of code in device drivers
 - < 1 million lines of code for everything else!</p>

Example: Network Drivers

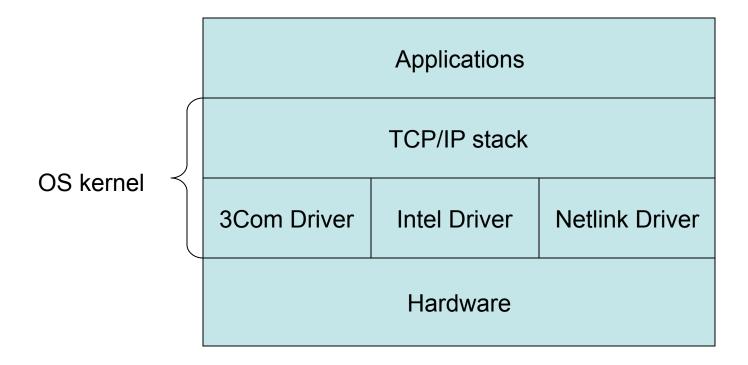

Example: Disk Controller Drivers

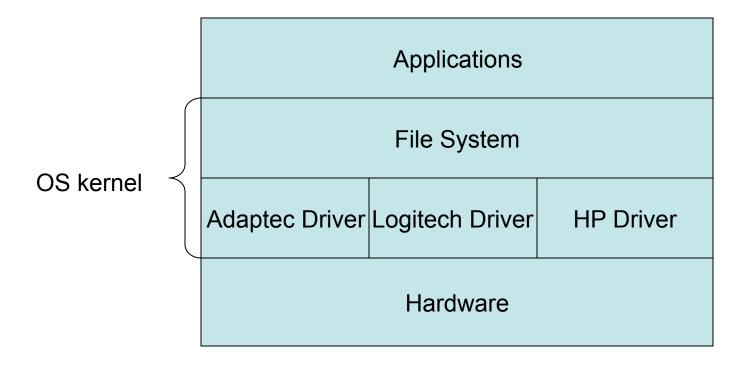

Handling I/O

- There are three major ways to perform I/O:
 - Memory mapped: a range of physical memory addresses correspond to the device (e.g., the video display)
 - Programmed I/O: Special instructions to move data to/from external devices
 - Direct Memory Access (DMA): a device transfers memory to/from regular memory (note the difference with memory mapped I/O)

Handling I/O

- DMA is very efficient but complex to set up and manage
- Many high-speed devices (e.g., network, disk controller) use DMA for efficiency
- Slower devices (e.g., keyboard, serial port)
 often use memory-mapped or
 programmed I/O for simplicity (and
 historical compatability)

Programmed I/O

- x86 implements programmed I/O via ports
- I/O ports have their own address space (0..2¹⁶-1)
- Two x86 instructions to access I/O ports:
 - in port, location: reads from I/O port port
 - out data, port: writes data to I/O port port
- TOS provides C functions that read and write bytes from I/O ports. These functions are in tos/kernel/inout.c

inportb()

```
/*
* Reads a byte from the I/O port designated by port
unsigned char inportb (unsigned short port)
  unsigned char _v;
  asm ("inb %w1,%0" : "=a" (_v) : "Nd" (port));
  return _v;
    'a' : %EAX register
    'd' : %EDX register
    'N' : constant between 0 and 255
```

outportb()


```
/*
 * Writes the byte value to I/O port port
 */
void outportb (unsigned short port, unsigned char value)
{
   asm ("outb %b0,%w1" : : "a" (value), "Nd" (port));
}
```

Serial Port Device Driver

- Our next goal: add a device driver for the serial port to TOS
- Like the timer service, we develop a new process that interacts directly with the serial port and communicates with other processes via IPC
- The eventual goal is to write an application that uses the serial port to control a model train
- First: details about the serial port

Data Communication

- Goal: physically transmit data between two systems
- Data is as a sequence of bytes
- Two ways to transmit a sequence of bytes:
 - Parallel: send one byte at a time
 - Serial: send one bit at a time

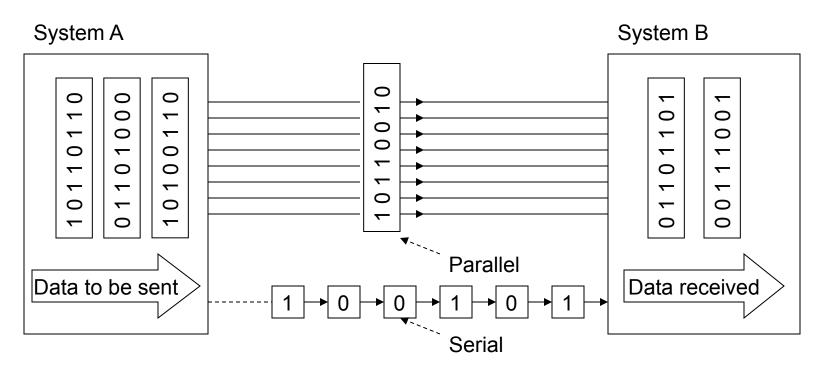

RS 232 Overview


- RS 232 is a standard for transmitting data over a serial line
- Defines a serial line connection between a DCE and a DTE
 - DCE (Data Communications Equipment), e.g. modem, printer
 - DTE (Data Terminal Equipment), e.g. computer
- RS 232 does not specify how data is transmitted between two DCEs
- Maximum transfer rate is 115,200 BPS




RS 232 Continued

- Standard covers details such as electronic representation of signals:
 - TRUE: -3V to -25V; FALSE: 3V to 25V
- Flow control:
 - Software: sending special flow control characters Xon and Xoff
 - Hardware: flow control via extra cables (RTS/CTS; see next slides)
- The RS 232 protocol is implemented by a chip called a UART (Universal Asynchronous Receiver/Transmitter)

Serial Pinouts for D9 and D25 Connectors

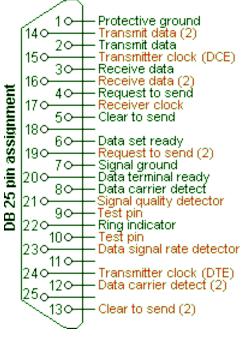

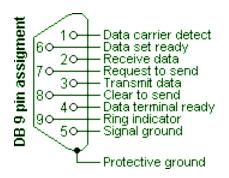

D-Type-25 Pin No.	D-Type-9 Pin No.	Abbreviation	Full Name
Pin 2	Pin 3	TD	Transmit Data
Pin 3	Pin 2	RD	Receive Data
Pin 4	Pin 7	RTS	Request To Send
Pin 5	Pin 8	CTS	Clear To Send
Pin 6	Pin 6	DSR	Data Set Ready
Pin 7	Pin 5	SG	Signal Ground
Pin 8	Pin 1	CD	Carrier Detect
Pin 20	Pin 4	DTR	Data Terminal Ready
Pin 22	Pin 9	RI	Ring Indicator

Pin Functions

DB9 Pin Number	Name	Function
3	Transmit Data (TD)	Serial Data Output
2	Receive Data (RD)	Serial Data Input
8	Clear to Send (CTS)	Modem is ready to exchange data
1	Data Carrier Detect (DCD)	Modem has detected a "carrier" from the other end.
6	Data Set Ready (DSR)	Modem is ready to establish a link
4	Data Terminal Ready (DTR)	Tells the modem the DTE is on
7	Request To Send (RTS)	Tells the modem the DTE is ready to send
9	Ring Indicator (RI)	Phone ring detected

RS-232 Cabling

- Notice that transmit/receive are on specific pins
- A DCE (e.g., a modem) thus receives data on the transmit line and sends data on the receive line
- What if we want to directly connect two DTEs (i.e., connect two computers via the serial ports)

Null Modem Wiring

D9 3	D25 2	TD	→ RD	D25 3	D9 2
2	3	RD ←	TD	2	3
5	7	SG ←	→ SG	7	5
4	20	DTR —	_ DTR	20	4
6	6	DSR ←	→ DSR	6	6
1	8	CD ←	└→ CD	8	1
7	4	RTS —	┌─ RTS	4	7
8	5	CTS ←	└→ CTS	5	8

 Null modem wiring connects two DTEs. No flow control necessary since both DTEs send at the same speed.



Serial port in Bochs

- Bochs has various ways to handle the emulated serial port -- for TOS we need to have data sent/ received on the serial port sent to a network socket
- This requires a recent version of Bochs -- if you are using a version we provided, you are set.
- Must be enabled with the following lines in .bochsrc:

```
com1: enabled=1, mode=socket, dev=localhost:8888
com2: enabled=1, mode=socket, dev=localhost:8899
```

Loop Back Plug

D9	D25		
3	2	TD	
2	3	RD ←	
5	7	SG	
4	20	DTR	DTE
6	6	DSR ◆	
1	8	CD ←	
7	4	RTS	
8	5	CTS ←	

The loop back plug has the receive and transmit lines connected together, so that anything transmitted out of the serial port is immediately received by the same port. Useful for debugging purposes. TOS contains a simulation of a loop back plug in tos/tools/serial/loopback.pyw

Serial Port Interface

- X86 communicates with the UART via programmed I/O
- COM1 can be accessed via I/O ports
 0x3F8 to 0x3FF
 - 8 ports for various purposes (see next slide)
- The base address 0x3F8 is defined as COM1_PORT in tos/include/kernel.h

Initializing the UART

```
void init_uart()
  int divisor;
  divisor = 115200 / 1200:
  /* LineControl disabled to set baud rate */
  outportb (COM1_PORT + 3, 0x80);
  /* lower byte of baud rate */
  outportb (COM1_PORT, divisor & 255);
  /* upper byte of baud rate */
  outportb (COM1_PORT + 1, (divisor >> 8) & 255);
  /* LineControl 2 stop bits */
  outportb (COM1_PORT + 3, 2);
  /* Interrupt enable*/
  outportb (COM1_PORT + 1, 1);
  /* Modem control */
  outportb (COM1 PORT + 4, 0x0b);
  inportb (COM1 PORT);
```

Sending to the UART

- Reading from port 0x3fd retrieves the Line Status Register
- Bit 5 in this register tells us if the UART send buffer is full or empty
- Before sending, we must first wait until the send buffer is empty:

```
while (!(inportb(COM1 PORT+5) & (1<<5)));
```

• To write a byte, it is simply sent to port 0x3f8:

```
outportb(COM1_PORT, byte_to_be_written);
```

Receiving from the UART

- Whenever data is received, interrupt COM1_IRQ (0x64) is raised
- The interrupt signals the arrival of a byte ready to be read from the I/O port:


```
byte_to_be_read = inportb(COM1_PORT);
```

 If multiple bytes are received, an interrupt is raised for each byte

TOS Serial Driver

- Now, we know everything we need to write a driver for the serial port in TOS!
- Goal: processes send a message to the "COM service" asking to read/write data
- Problem: reader wants to block waiting for interrupts, writer wants to poll the ready bit for sending
- As with the timer service, we fix this by splitting the COM service into two processes

TOS Serial Driver Architecture

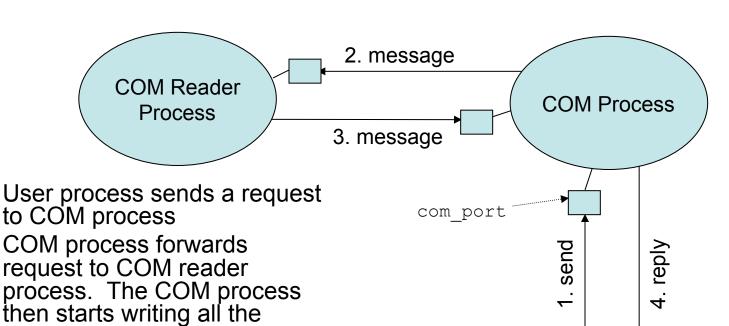

3. COM reader process reads the number of requested bytes and then sends a message to COM process

output data

1.

2.

4. COM process replies to the user process to signal end of I/O

User Process

COM Service Message

```
typedef struct _COM_Message
{
    char* output_buffer;
    char* input_buffer;
    int len_input_buffer;
} COM_Message;
```

- Defined in tos/include/kernel.h
- Members:
 - output_buffer: zero-terminated string to be output
 - input buffer: buffer where input will be stored
 - len_input_buffer: number of bytes to be read

COM1 I/O Example

Using the loopback device, this program will print "Hello World!" Global variable <code>com_port</code> is initialized in <code>init_com()</code> and is owned by the COM process.

COM Process

```
void com process (PROCESS self, PARAM param)
  while (1) {
       - receive message from user process.
       - forward message to COM reader process
       - write all bytes contained in COM Message.output buffer
        to COM1
       - wait for message from COM reader process that signals that
        all bytes have been read
       - reply to user process to signal that all I/O has been completed
```

COM Reader Process

```
void com_reader_process (PROCESS self, PARAM param)
  while (1) {
       - receive message from COM process.
        This message contains the number of bytes to read in
         COM Message.len input buffer
       - read as many bytes requested from COM1 using
         wait for interrupt (COM1 IRQ) and
        inportb(COM1 PORT)
       - send message to COM process to signal that all bytes have
         been read
```

Serial Line Interface

- void init_com()
 Initialize the serial line device driver.
 - After initialization the global variable
 com_port should point to the port that is
 owned by the COM process.
 - The COM process should accept messages of type COM Message (defined in kernel.h) as explained on earlier slides.
 - The priority of the COM process should be 6.
 - The priority of the COM reader process should be 7.



Assignment 9

- Implement the function located in tos/ kernel/com.c:init_com()
- Note that you will have to implement and register an appropriate ISR (com1_isr()).
- Note that you have to run the loopback plug simulator located in tos/tools/serial/ loopback.pyw before running Bochs
- Test case:

```
- test_com_1
```

test_com_1

