
# 成品尺寸: 190\*135mm

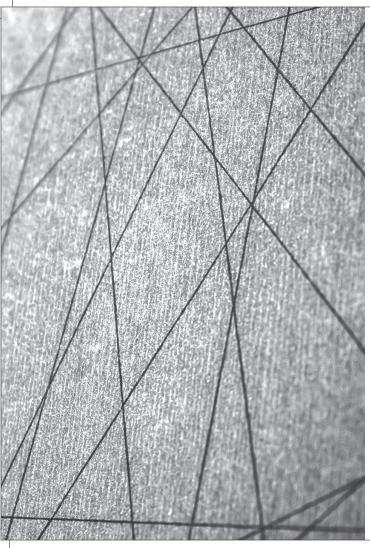

1. Material type: PVC

2. Size: width 106cm x length 15.6m



**GENERAL INSTRUCTIONS**Before cutting the rolls ensure that they are all from the same lot no. and that they are in good condition with no color variation or other defects. For each claim, please enclose the label which indicates the lot no. After hanging 3 drops check the result. No claim is accepted for more than one roll.

Make sure that the walls are smooth, solid and absolutely dry. Remove all old wallpaper, waterpaint or whitewash and especially any traces of ballpoint ink, aniline pencil or crayon marks. Fill up holes and smooth down.

## **CUTTING OF LENGTHS**

Cut the sheets to size: height of wall + 5 cm.

This oversize will cover any differences caused by slanting floors or ceilings. When patterned designs are used, make sure that the design matches correctly. Only cut the second and following lengths, after they have been put "in register" besides the sheets already cut.

## ADHESIVE

Only use a good quality paste following manufacturer's instructions.

Soaking time: about 5 minutes.

Apply wallpaper, but joint, using a soft smoothing brush or roller. Do not use a seam roller. Remove surplus pasts by dabbing with a damp sponge or cloth. Avoid excessive heat or draughts while the paper is drying.

Product No.:

Lot No. :

