
## **Engine electrical**

## Central electric (main fuse and relay panel)

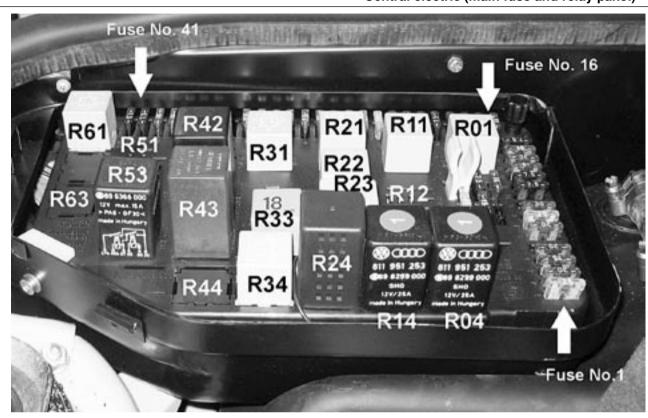

- 1 25A LH & RH front blower fans.
- 2 30A Oil cooler blower fan.
- 3 15A Dual (two tone) horn.
- 4 30A Power windows, outside mirror heating.
- 5 Not used.
- 6 30A Right power seat.
- 7 25A Cigar lighter (LHD).
- 8 30A Left power seat.
- 9 Not used.
- 10 7.5A Cordless phone (1996).
- 11 7.5A Interior lights.
- 12 15A OBC, rear window wiper, warning flashers, clock
- 13 30A Sunroof, Cabriolet roof, Targa glass roof (1) and sunblind motor.
- 14 15A Fog lights, reverse (back-up) lights.
- 15 7.5A Back up light Tiptronic.
- 16 15A ABS.
- 17 7.5A Heater, rear spoiler.
- 18 7.5A Instruments, Diagnostic connector, Central informer, Catalytic converter control (Japan only).
- 19 15A Stop lights, cruise control, Park & Neutral lock.
- 20 7.5 A High beam left.
- 21 7.5 A High beam right.
- 22 15A Low beam left.

- 23 15A Low beam right.
- 24 25A Windshield wipers/washer, headlight washer.
- 25 25A Seat heater and cigar lighter (RHD).
- 26 25A Fuel pump, O2 sensor.
- 27 15A Tiptronic control unit.
- 28 15A Mobile phone, rear window defogger (demister), outside mirror adjustment, rear window wiper.
- 29 Not used.
- 30 7.5A Turn signals left rear, left side.
- 31 7.5A Turn signal left front.
- 32 7.5A Turn signal right front
- 33 7.5A Turn signal right rear, right side.
- 34 Not used.
- 35 30A Targa Glass roof (2) (1996).
- 36 7.5A Licence plate lights.
- 37 15A Rear spoiler.
- 38 15A Radio, amplifier or booster.
- 39 30A Condenser blower fan.
- 40 7.5A Left side marker light.
- 41 7.5A Right side marker light.

## Relays:

- R01 Manual backup/rear fog lights.
- R03 not used.
- R04 Oil cooler blower fan.
- R11 Terminal 15E.
- R12 Bridge adapter.

- R13 Not used.
- R14 Oil cooler blower fan.
- R21 Powered roof system installed.
- R22 Power windows.
- R23 Two tone horn.
- R24 Control unit Park/Neutral lock (Tiptronic only).
- R24 Control unit lights (manual 1996).
- R31 Front fog lights standard.
- R32 Daytime running lights (1996).
- R33 Terminal X.
- R34 Front fog lights M193/M533 only.
- R41 Not used.
- R42 Wiper intermittent control.
- R43 Headlight washing.
- R44 Catalytic converter control (Japan only).
- R51 Tiptronic backup light.
- R52 Not used, pins bridged for Mobile.
- R53 DME and fuel pump relay.
- R61 Start relay (Terminal 61) Fitted with options M249, M529 & M530 only.
- R63 Day time running lights (Canada only).

## Notes:

Fuses 10 and 35 not used 94 & 95. Fuse 35 only for Targa.

Relay R32 not used for model years 1994 and 1995.