SOLAR LIGHTS LITE / REV C - FIT SHEET (matches the regenerated board)

Board overlay 1:1

Lay the real modules on this sheet. Pin holes are centred on cross-hairs. Square = pin 1.

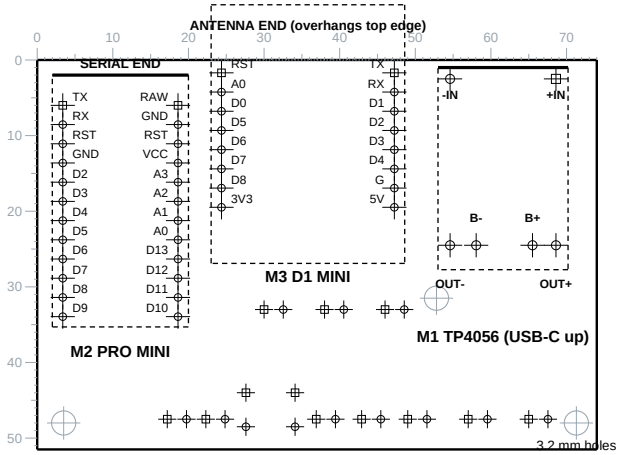

SOLDER ROW: LED, LDR, SW1 button, U3 IN, U3 OUT, S1, CELL, PV | links JP3 JP2 JP1 above it

Not drawn: ISP header, RV1, C2, C3 and the resistors / Q2 / C4 under the modules (positions move when regenerated).

Board 74 x 51.5 mm; origin is the upper-left corner, x right, y down.

Dashed boxes are true module bodies. M3 sticks out above the top edge: its antenna is off the board.

M1 TP4056: USB-C end flush with the top edge; IN holes at the top, OUT/B holes at the bottom.

AMBER ASSUMPTIONS (mark them as you check): Pro Mini pin 1 at 4.0 mm from the serial end (photo estimate);

D1 Mini pin 1 at 9.0 mm from the antenna end; rows 15.24 and 22.86 mm; TP4056 hole 1.2 mm.

Mark any hole that does not line up and send me the offset.

PRINT AT 100% (Actual size, Scale: None, no fit-to-page). The bar below must measure exactly 100 mm.

100 mm

SOLAR LIGHTS LITE / REV C - FIT SHEET (matches the regenerated board)

Module templates 1:1

Lay each real module on its template. Holes sit on cross-hairs; record any offset.

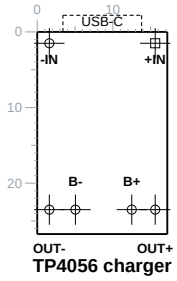

TP4056 charger

17.2 x 26.73, USB end up

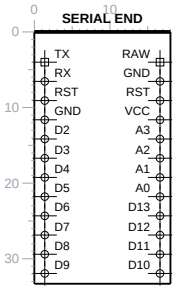

Pro Mini

33.3 x 18.0, serial end up

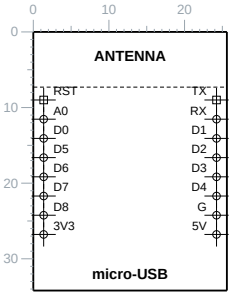

D1 Mini

34.2 x 25.6, antenna end up

TP4056 hole centres (mm): u from the USB end, v from the +IN / OUT+ edge

+IN u 1.50 v 1.60
-IN u 1.50 v 15.60
OUT+ u 23.50 v 1.60
B+ u 23.50 v 4.70
B- u 23.50 v 12.15
OUT- u 23.50 v 15.60

Pin pitch 2.54 mm; Pro Mini pin 1 4.0 mm from the serial end; D1 Mini pin 1 9.0 mm from the antenna end.

Rulers along the left and top edges are in mm from each module corner.

PRINT AT 100% (Actual size, Scale: None, no fit-to-page). The bar below must measure exactly 100 mm.